

Daihatsu Terios fuse box diagram

Passenger Compartment Fuse Box




Daihatsu Terios – fuse box diagram –

passenger compartment

Number	Fuse	Ampere rating [A]	Description
1	FOG	10	Fog lamp SW
2	TAIL	10	Tail lamp, Clearance lamp, Meter illumination, Heater illumination, Warning buzzer (Reverse SW, Courtesy SW, Turn SW, Key SW, Flasher relay socket (Turn SW, Hazard SW))
3	DEFOG	15	Defogger SW, Power window SW
4	POWER	30	Power window SW
5	GAUGE/BACK	10	Meter, Cowl, Back lamp SW, Warning buzzer (Reverse SW, Courtesy SW, Turn SW, Key SW, Flasher relay socket (Turn SW, Hazard SW))

6	ENGINE	10	Ignition coil, Diagnosis check, Air bag ECU
7	SPARE	10	Spare fuse
8	SPARE	15	Spare fuse
9	—	—	—
10	WIPER/TURN	20	Front wiper motor, Hazard SW, Rear wiper SW, Rear wiper motor
11	HEATER	20	Heater
12	ACC	15	Cigarette lighter, Radio, Electric mirror, ACC (Sub), Power supply (Option)
13	H/L LH	10	Left-hand headlight
14	H/L RH	10	Right-hand headlight
15	STOP	10	Stop SW, Room lamp
16	ECU IG	10	EFI Main relay, EPS ECU
17	AIR BAG	10	Air bag ECU, IG SW (IG2)
18	DOORLOCK	15	Door lock relay
19	—	—	—

Engine Compartment Fuse Box

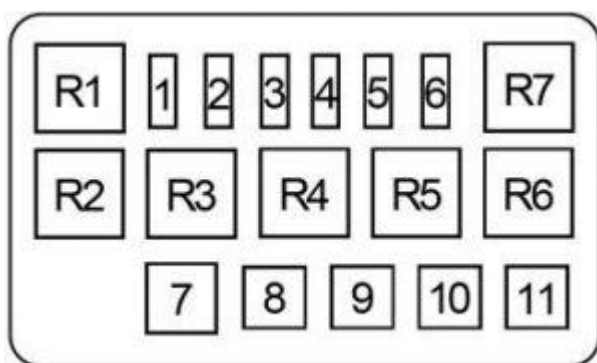

Daihatsu Terios – fuse box diagram –

engine compartment

Number	Fuse	Ampere rating [A]	Description
1	HTR	20	Heater relay
2	BACK UP	10	EFI ECU
3	—	—	—
4	EFI	15	EFI main relay, Fuel pump relay
5	HORN-HAZ	15	Horn, Hazard
6	MGC	10	Magnet clutch relay
7	AM	60	Ignition switch, Starter relay
8	ABS	50	ABS relay
9	TAIL	40	Tail switch

11	—	—	—
Relay			
R1	Fuel pump		
R2	Starter (for A/T)		
R3	Engine control unit		
R4	Heater		
R5	—		
R6	Air conditioner compressor clutch		
R7	Electric cooling fan		