


Buick Park Avenue 1996 fuse box diagram

Driver 's Side Fuse Panel

The left side fuse panel is located under the instrument panel, next to the parking brake.

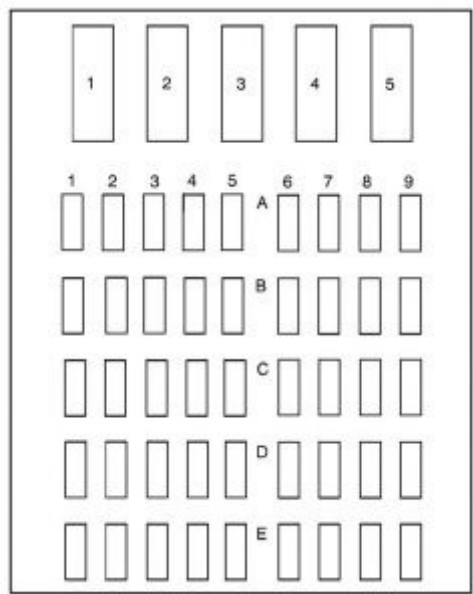


Buick Park Avenue – fuse box – left side fuse panel

Position	Circuitry
1	Circuit Breaker-Power Windows, Astroroof
2	—
3	Circuit Breaker-Power Seats
4	—
5	—
1A	Start-up Signal – Air Bag. PASS-Key™ I1
2A	Spare
3A	—
4A	Interior Lamps
5A	Base Cluster, Automatic A/C, Lamp Monitors – Low Coolant, Oil Level
6A	Courtesy Lamps, Power Mirrors, Memory Seat Switch
7A	Not Used
8A	Perimeter Lighting
9A	Front Ashtray Cigar Lighter
1B	Turn Signal, Back-up Lamps Cornering Lamps, Brake-Transaxle Shift Interlock
2B	Spare
3B	—
4B	—
5B	Anti-Lock Brake System
6B	Brake and Hazard Lamps

7B	—
8B	Interior Lighting
9B	Electronic Level Control
1C	Air Bag
2C	Spare
3C	—
4C	—
5C	Cooling Fans, Transaxle
6C	Parking Lamps
7C	—
8C	—
9C	Chime, Radio, Cluster
1D	Ignition (RunKrank), Chime, Cluster
2D	Spare
3D	Heated Mirror
4D	—
5D	Base A/C
6D	—
7D	—
8D	Radio
9D	Rear Cigar Lighters
1E	—
2E	Air Bag/PASS-Key II
3E	Ignition (Off/Unlock)
4E	—
5E	—
6E	—
7E	—
8E	Wipers, Washer
9E	Rear Defog

Passenger's Side Fuse Panel

Additional fuses are located in the relay center, on the far right side, below the instrument panel.

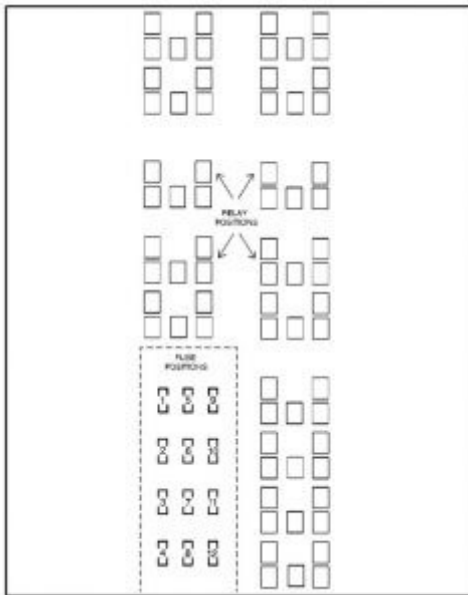

Buick Park Avenue – fuse box – right side fuse panel

Position	Circuitry
1	Door Locks. Trunk Pull-Down. Fuel Door Release
2	Power Antenna. Lock Switch. Trunk Release
3	Horns
4	—
5	Cruise Control. Misc. Engine Controls
6	Fuel Pump
7	Injectors
8	Powertrain Control Module, PASS-Key II
9	—
10	—
11	A/C Proglamrner
12	—