

Vauxhall Cascada 2013 fuse box diagram

Engine compartment fuse box

The fuse box is in the front left of the engine compartment. Disengage the cover and fold it upwards until it stops. Remove the cover vertically upwards.



Vauxhall Cascada – fuse box – engine compartment

Number	Circuit
1	Engine control module
2	Lambda sensor
3	Fuel injection, ignition system
4	Fuel injection, ignition system
5	—
6	Mirror heating


7	Fan control
8	Lambda sensor, engine cooling
9	Rear window sensor
10	Vehicle battery sensor
11	Trunk release
12	Adaptive forward lighting, auto- matic light control
13	ABS Valves
14	—
15	Engine control module
16	Starter
17	Transmission control module
18	Heated rear window
19	Front power windows
20	Rear power windows
21	Rear electrical centre

22	Left high beam (Halogen)
23	Headlamp washer system
24	Right low beam (Xenon)
25	Left low beam (Xenon)
26	Front fog lights
27	Diesel fuel heating
28	System start-stop
29	Electric parking brake
30	ABS pump
31	—
32	Airbag
33	Adaptive forward lighting, auto- matic light control
34	Exhaust gas recirculation
35	Power windows, rain sensor, exterior mirror
36	Climate control

37	—
38	Vacuum pump
39	Fuel system control module
40	Windscreen washer system
41	Right high beam (Halogen)
42	Radiator fan
43	Windscreen wiper
44	—
45	Radiator fan
46	—
47	Horn
48	Radiator fan
49	Fuel pump
50	Headlamp levelling, adaptive forward lighting
51	—

52	Auxiliary heater, diesel engine
53	Transmission control module, Engine control module
54	Vacuum pump, instrument panel cluster, heating ventilation, air conditioning system

Instrument panel fuse box

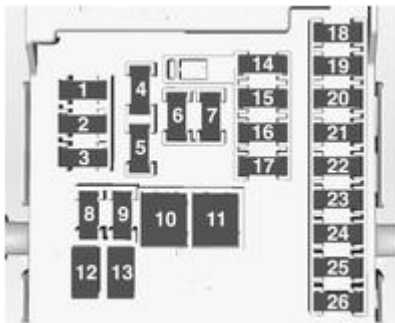

Vauxhall Cascada – fuse box – instrument panel

In left-hand drive vehicles, the fuse box is behind the storage compartment in the instrument panel. Open the compartment and push it to the left to unlock. Fold the compartment down and remove it.


In right-hand drive vehicles, the fuse box is located behind a cover in the glovebox. Open the glovebox, then open the cover and fold it down.

Number	Circuit
1	Displays
2	Body control unit, exterior lights
3	Body control unit, exterior lights
4	Infotainment system
5	Infotainment system, instrument

6	Power outlet, cigarette lighter
7	Power outlet
8	Body control module, left low beam
9	Body control module, right low beam
10	Body control module, door locks
11	Interior fan
12	Driver power seat
13	Passenger power seat
14	Diagnostic connector
15	Airbag
16	Boot lid relay
17	Air conditioning system
18	Service diagnose
19	Body control module, brake lights, tail lights, interior lights
20	—

21	Instrument panel
22	Ignition system
23	Body control module
24	Body control module
25	—
26	Trunk power outlet accessory

Load compartment fuse box

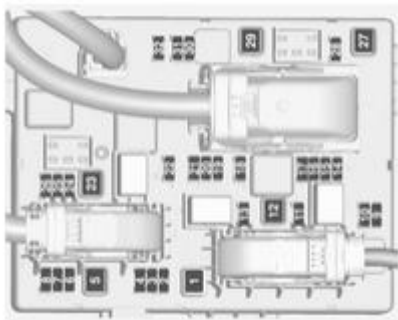

Vauxhall Cascada – fuse box – load compartment

The fuse box is on the left side of the load compartment behind a cover

Number	Circuit
1	Soft top control module, power rail right
2	—
3	Parking assist
4	Selective catalytic reduction system

5	—
6	—
7	Power seat
8	Soft top control module
9	Selective catalytic reduction system
10	Selective catalytic reduction system
11	Trailer module, tyre pressure monitor and rear view camera
12	Soft top control module, tail lights
13	—
14	Rear seat electrical folding
15	—
16	Seat ventilation, rear view camera, soft top control module
17	—
18	—
19	Steering wheel heating

20	—
21	Seat heating
22	—
23	Soft top control module, power rail left
24	Selective catalytic reduction system
25	—
26	Jumper fuse for non logistic mode
27	Passive entry
28	—
29	Hydraulic unit
30	—
31	—
32	Flex Ride