



F RELAY LOCATIONS


[Engine Compartment]

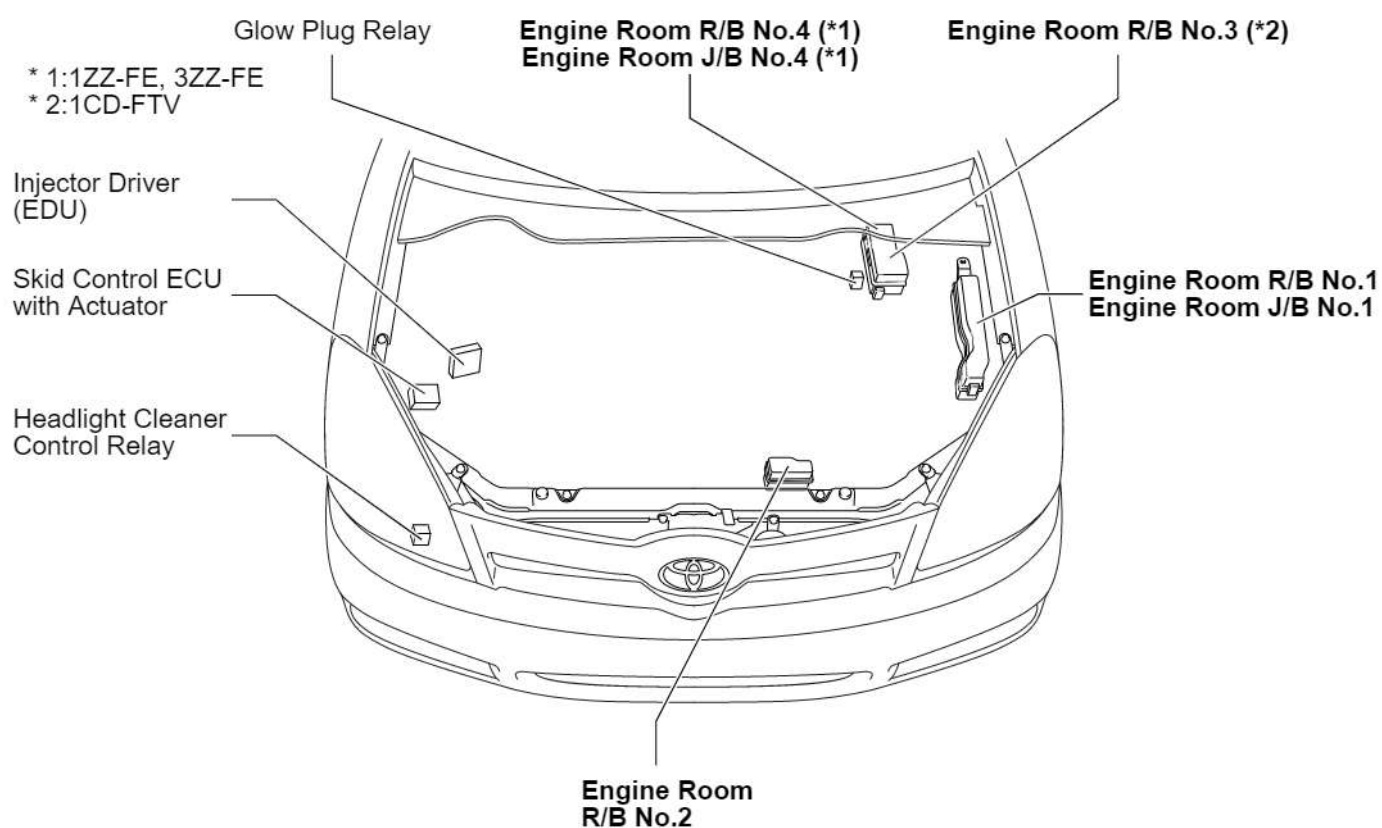

[Instrument Panel] (LHD)

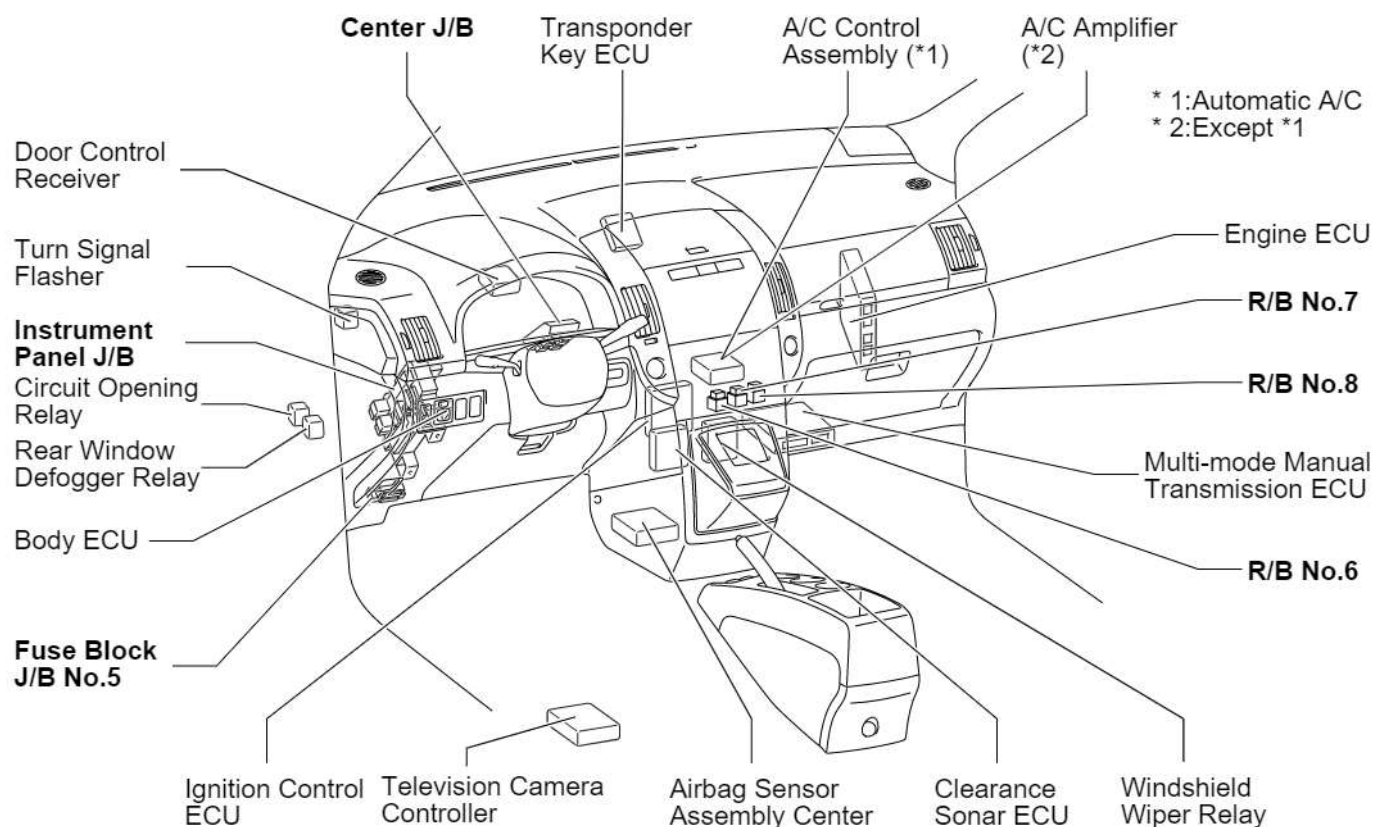


(RHD)

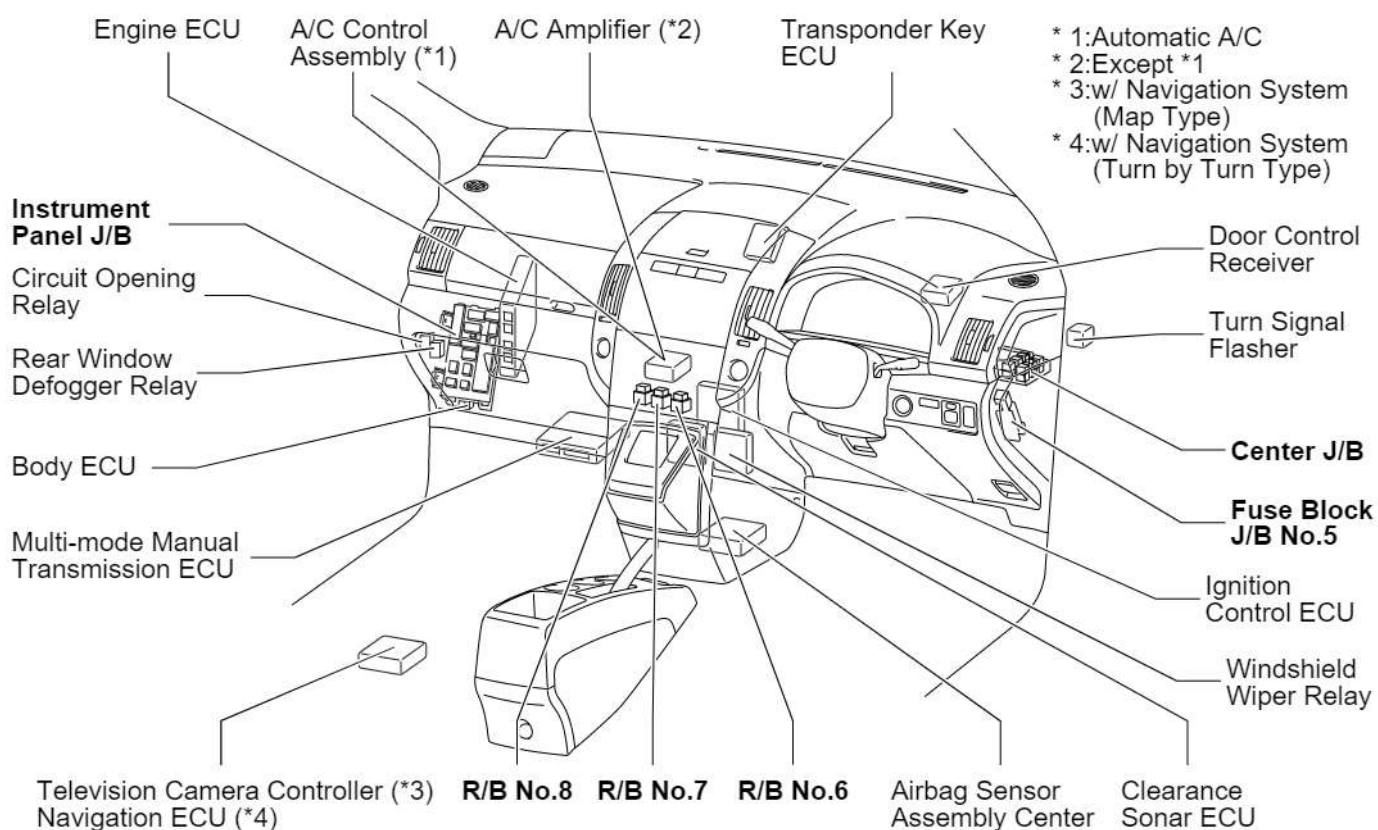

F RELAY LOCATIONS


[Body]

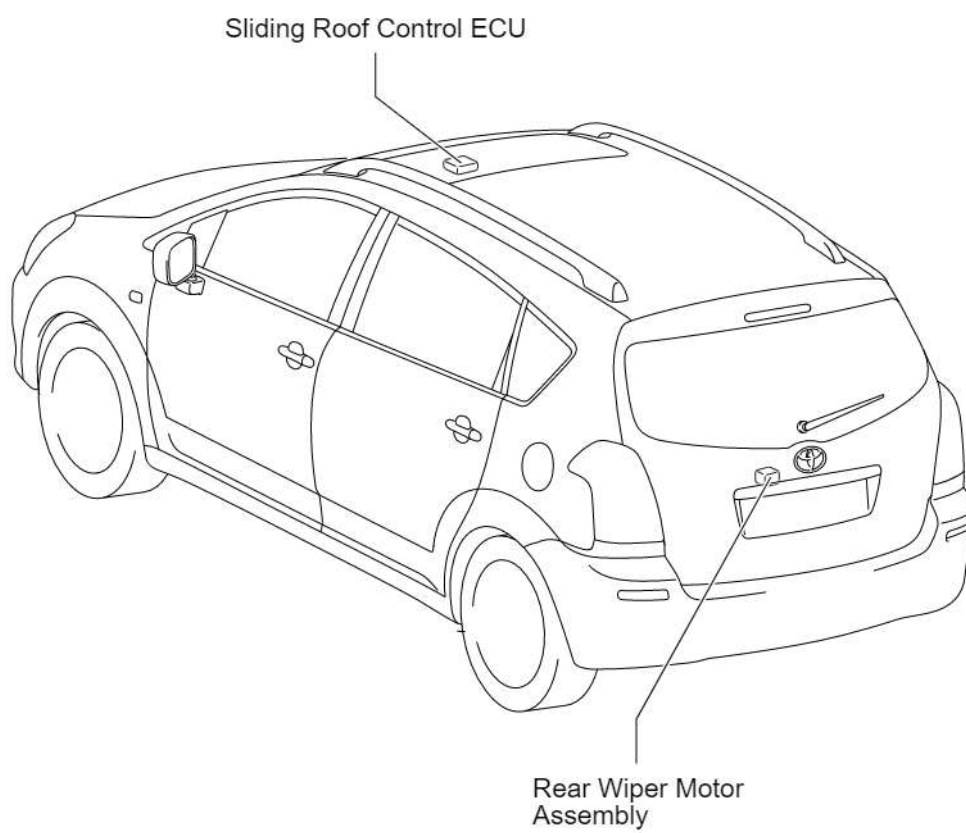

F RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Left (See Page 20)
○ : Engine Room J/B No.1	

(1ZZ-FE, 3ZZ-FE)

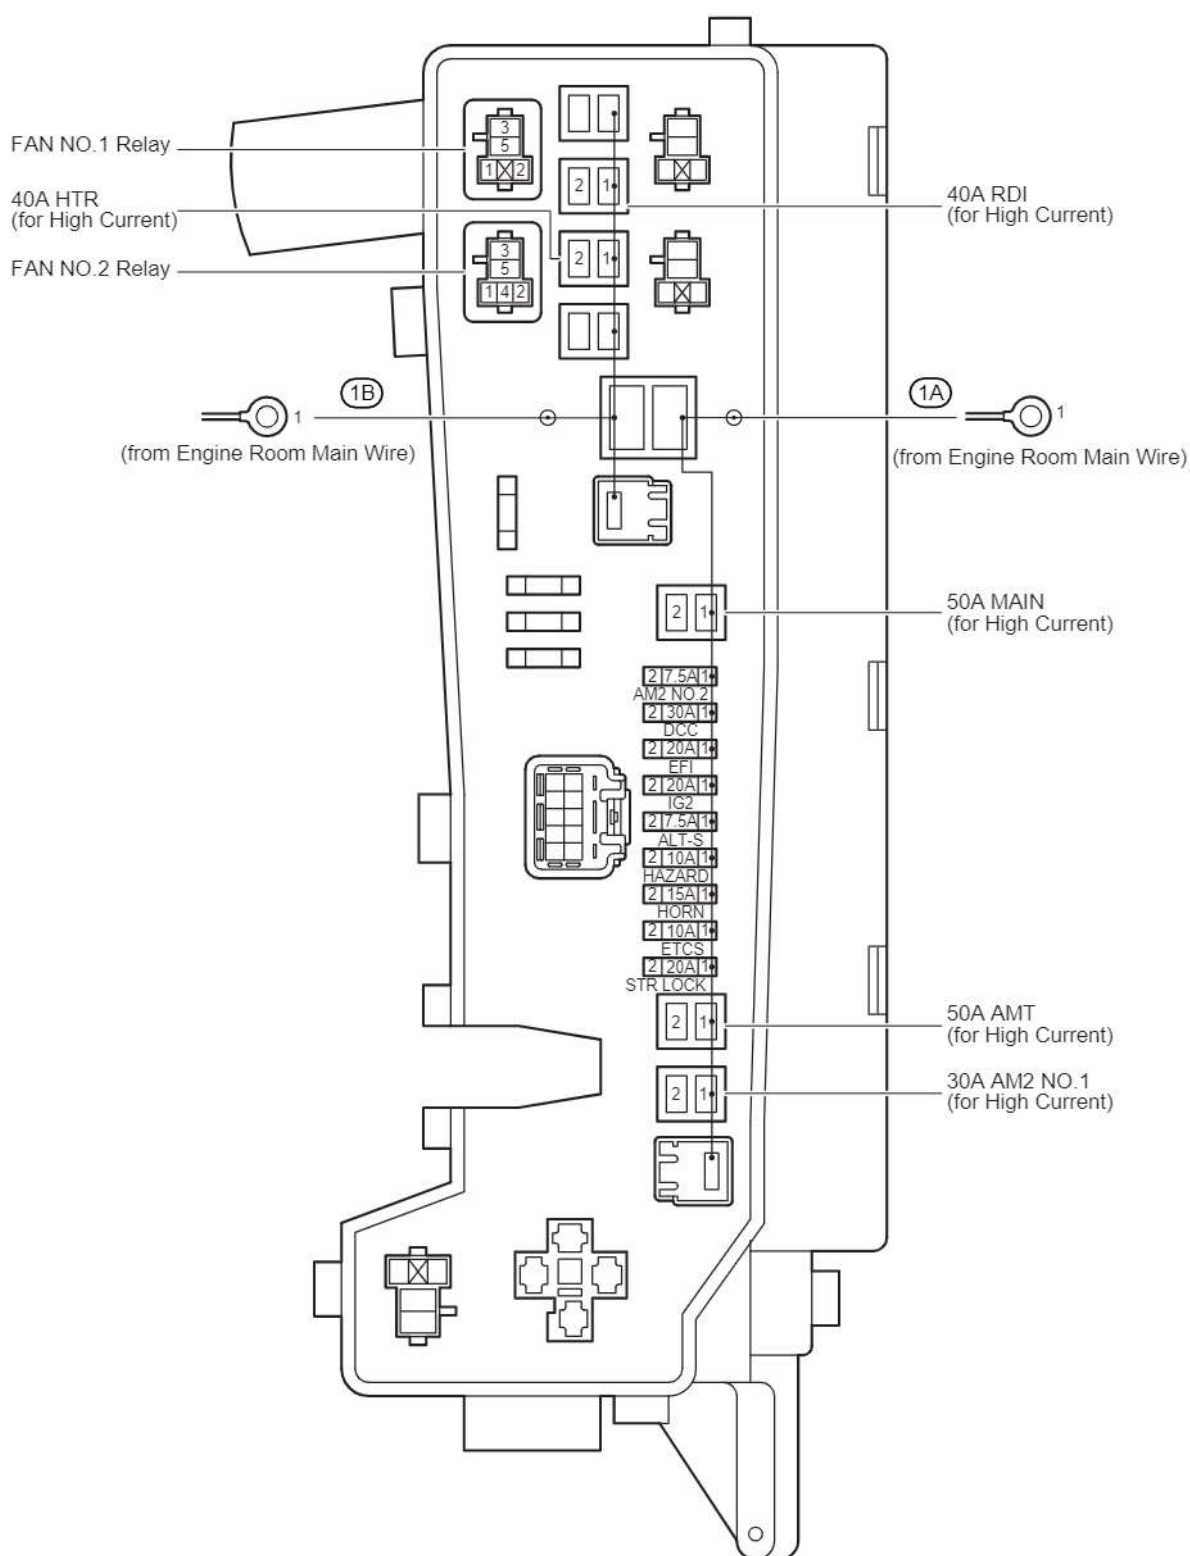


① : Engine Room R/B No.1

○ : Engine Room J/B No.1


Engine Compartment Left (See Page 20)

(1CD-FTV)

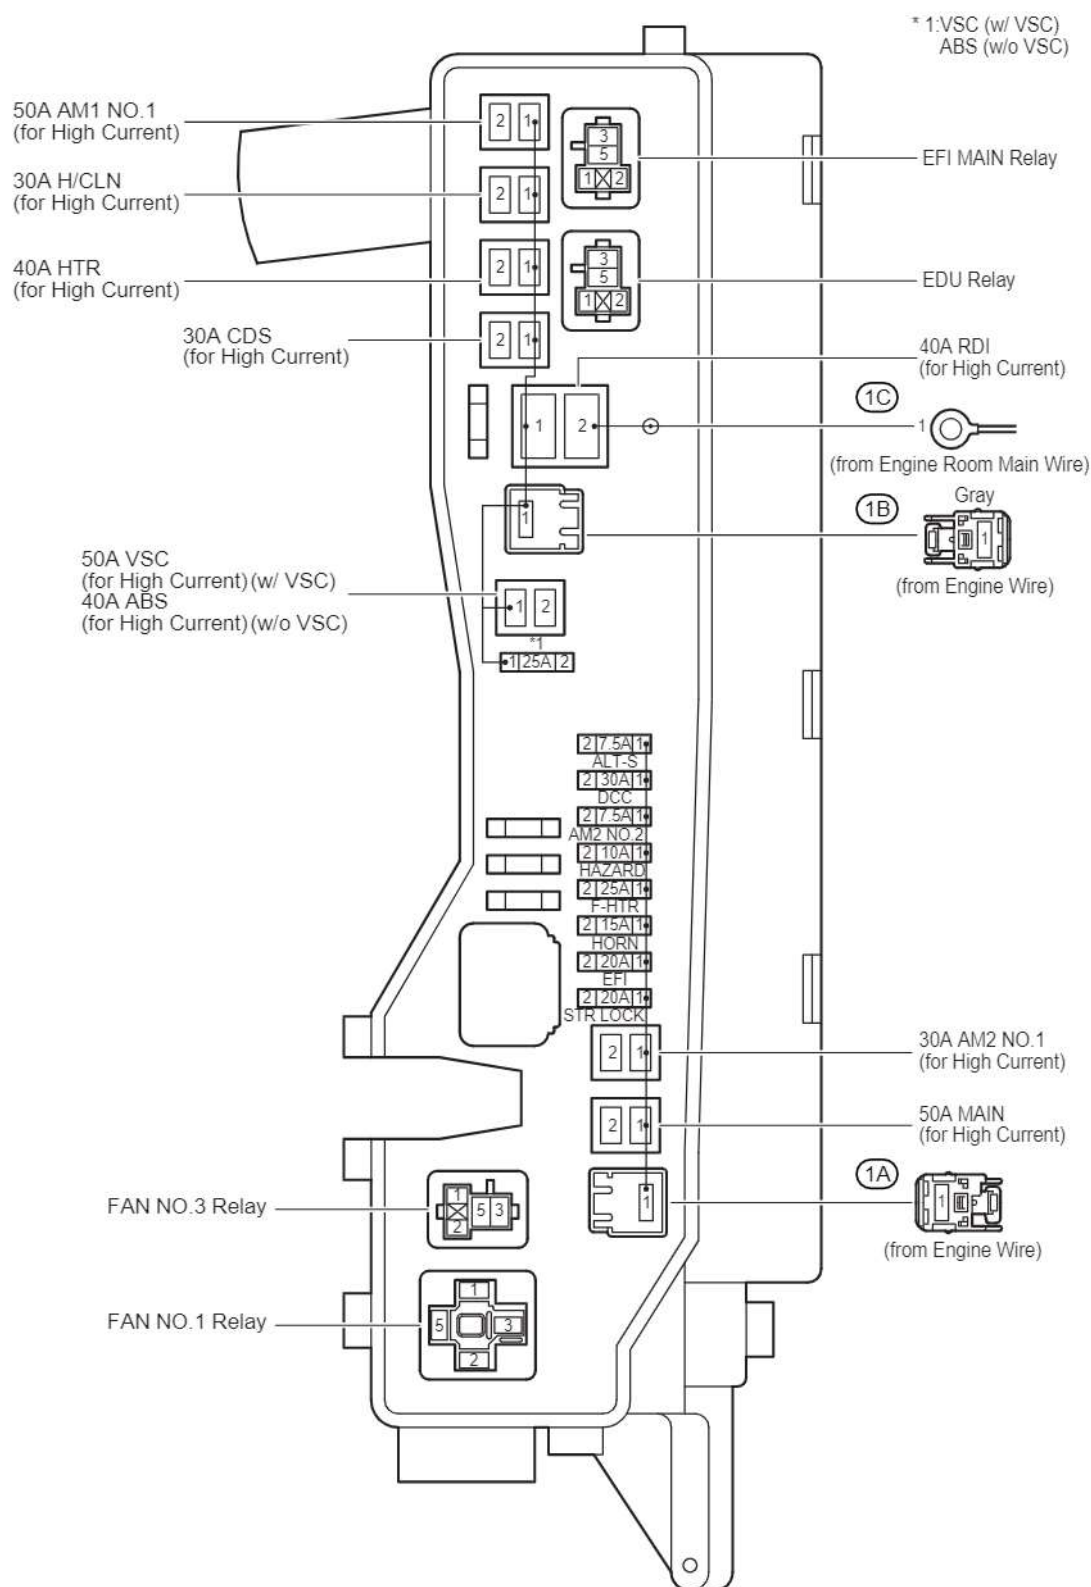


F RELAY LOCATIONS

② : Engine Room R/B No.2 Near the Radiator Fan (See Page 20)

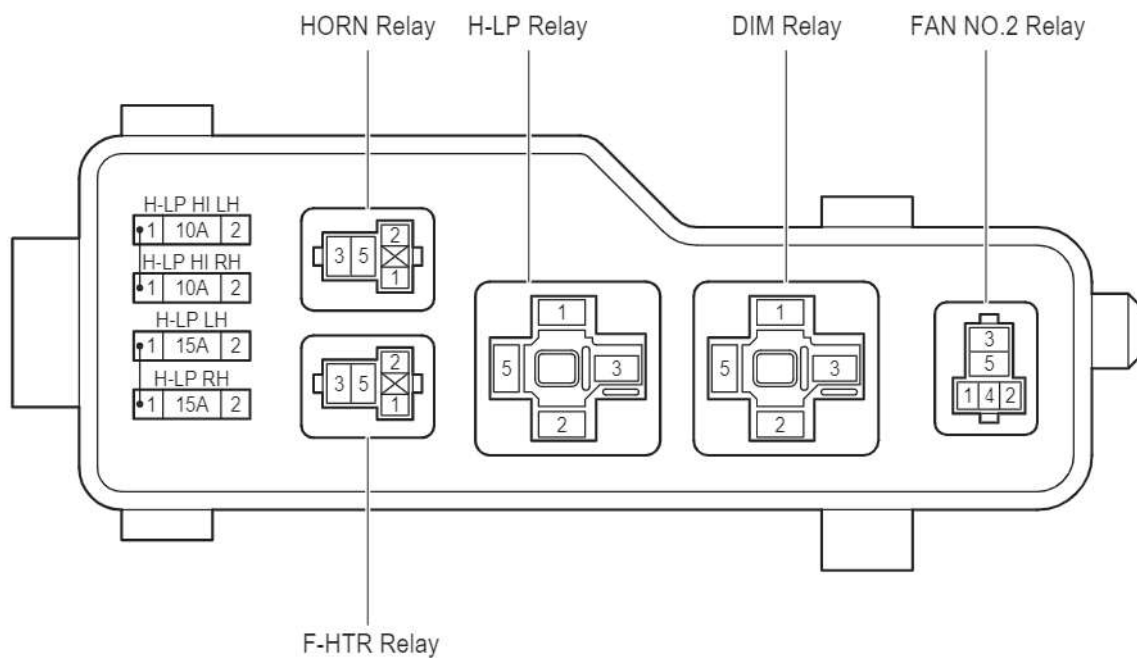

③ : Engine Room R/B No.3 Left Side of the Suspension Tower (See Page 20)
(1CD-FTV)

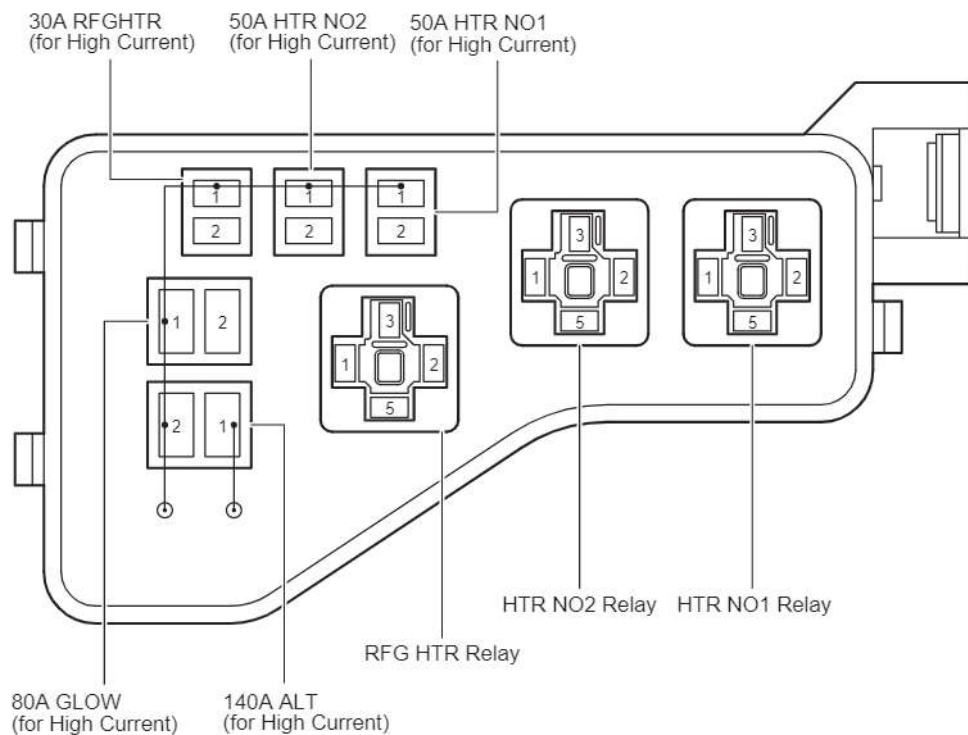


④ : Engine Room R/B No.4

○ : Engine Room J/B No.4

Left Side of the Suspension Tower (See Page 20)


(1ZZ-FE, 3ZZ-FE)


* 1:VSC (w/ VSC)
ABS (w/o VSC)

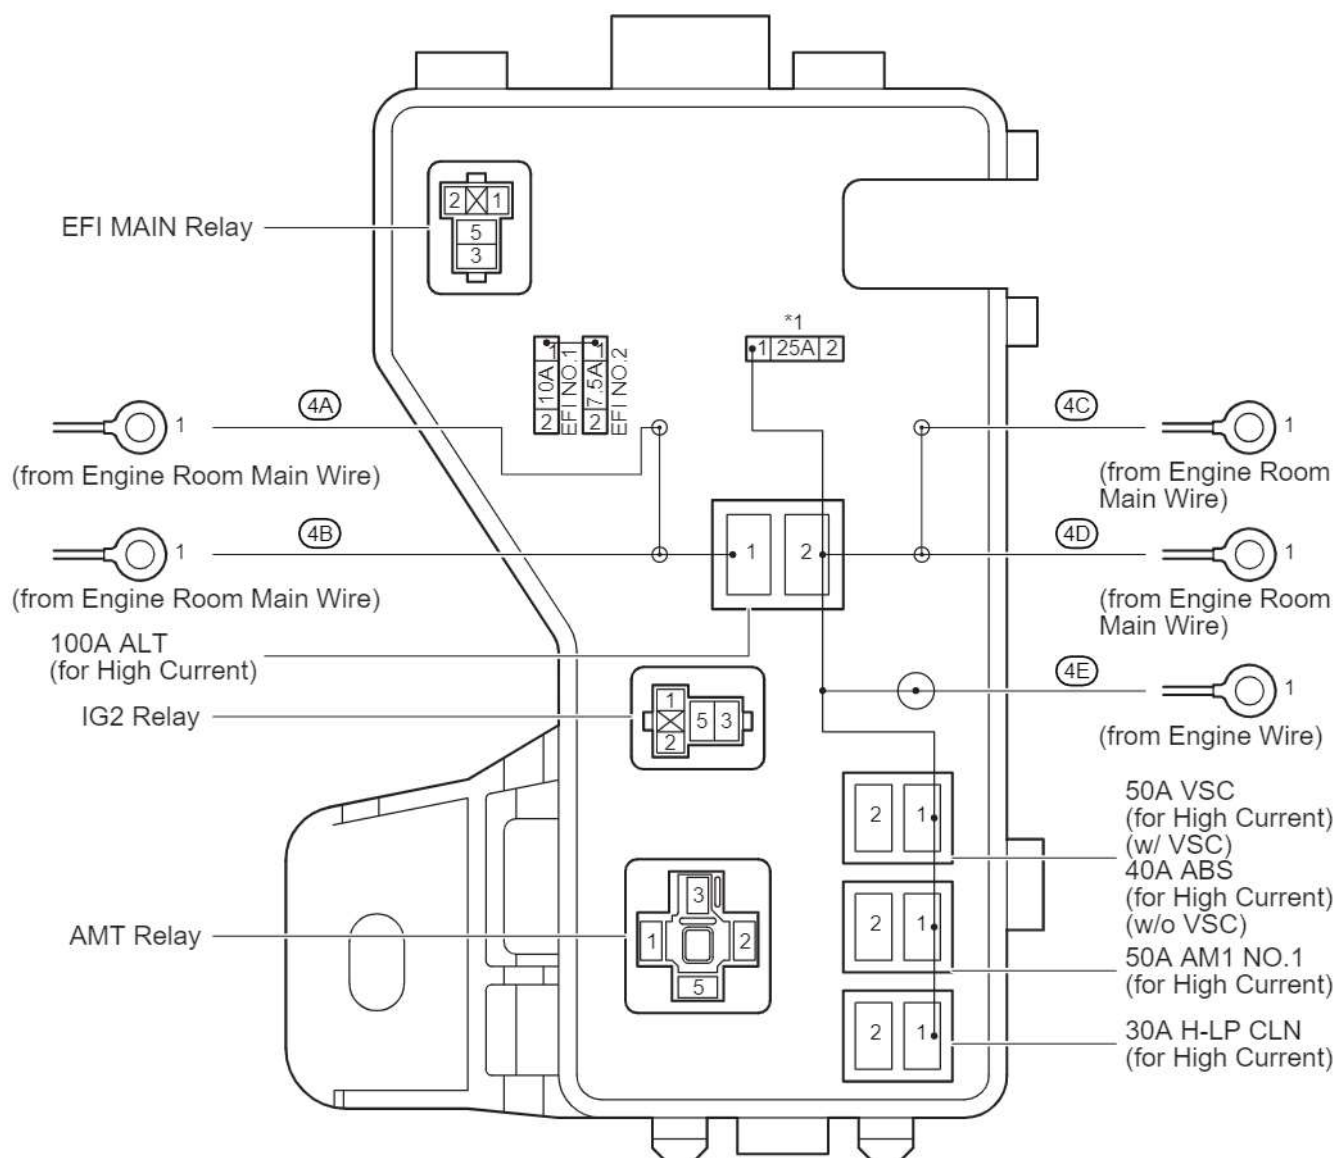

F RELAY LOCATIONS

⑤ : Fuse Block	Lower Finish Panel (See Page 21)
○ : J/B No.5	

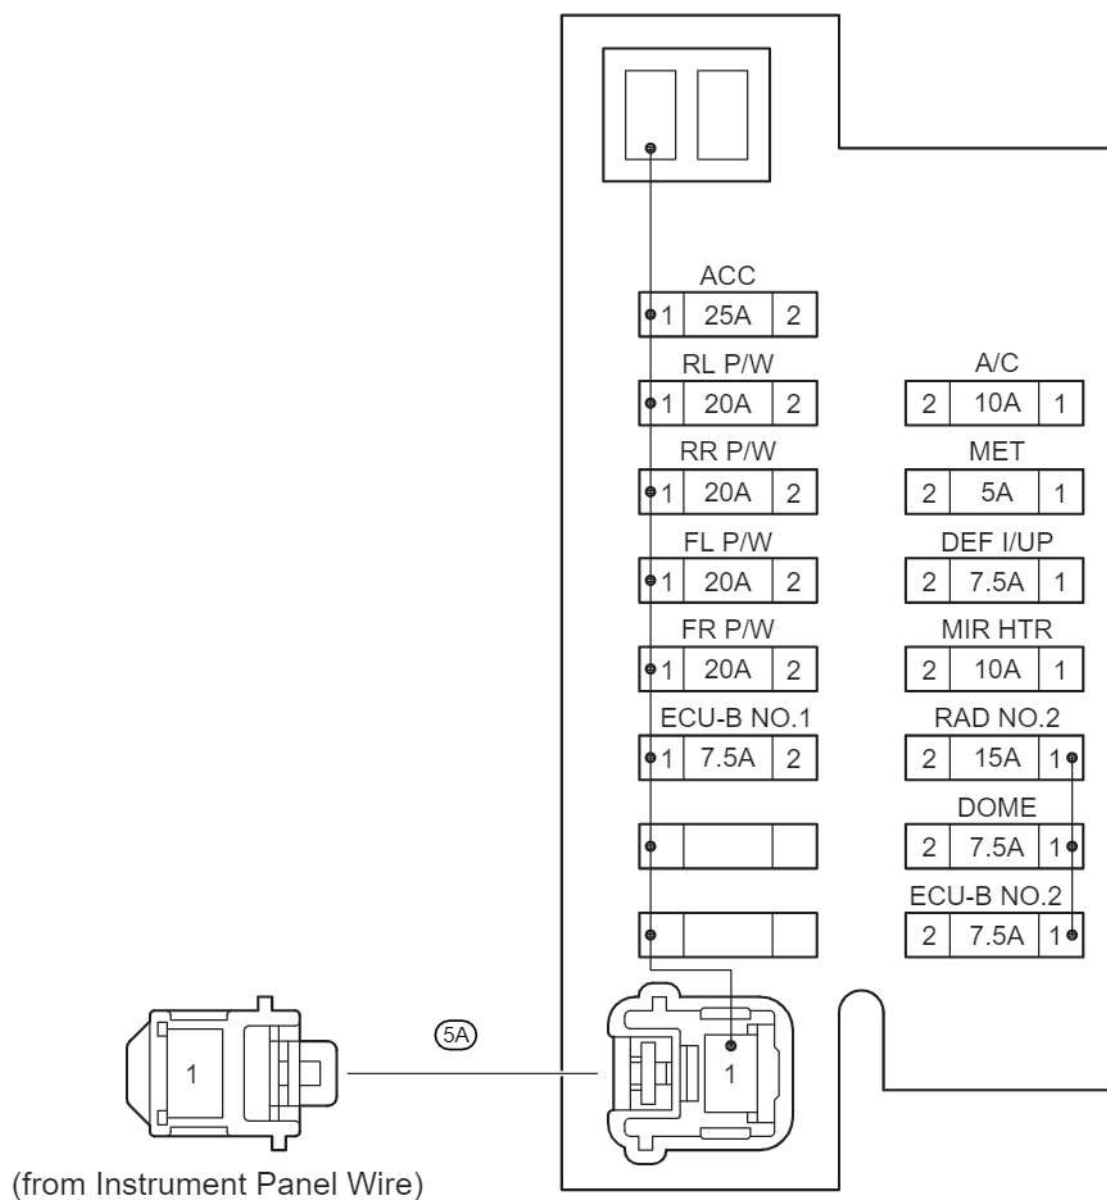


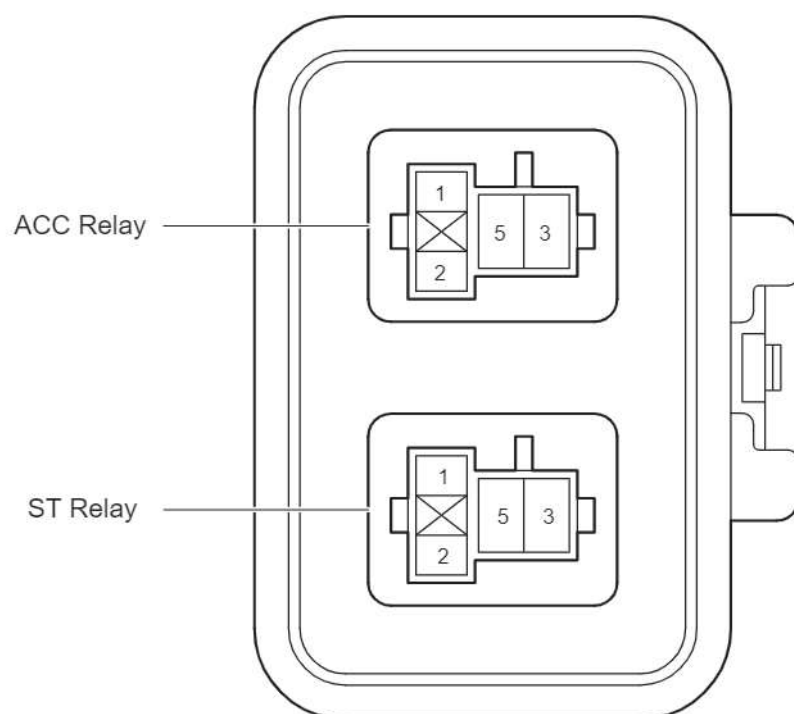


F RELAY LOCATIONS

⑦ : R/B No.7


Instrument Panel Center (See Page 21)

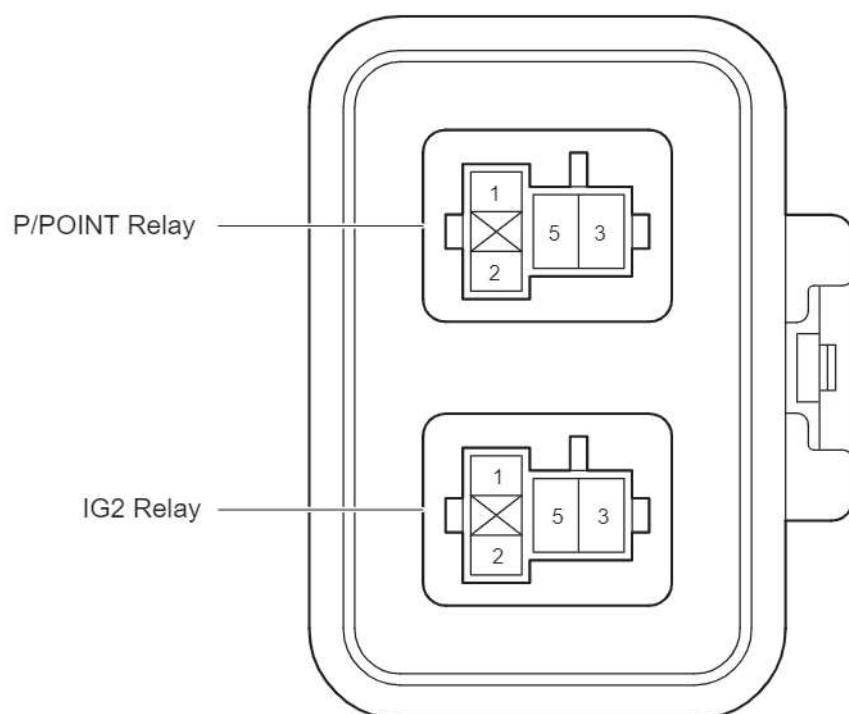


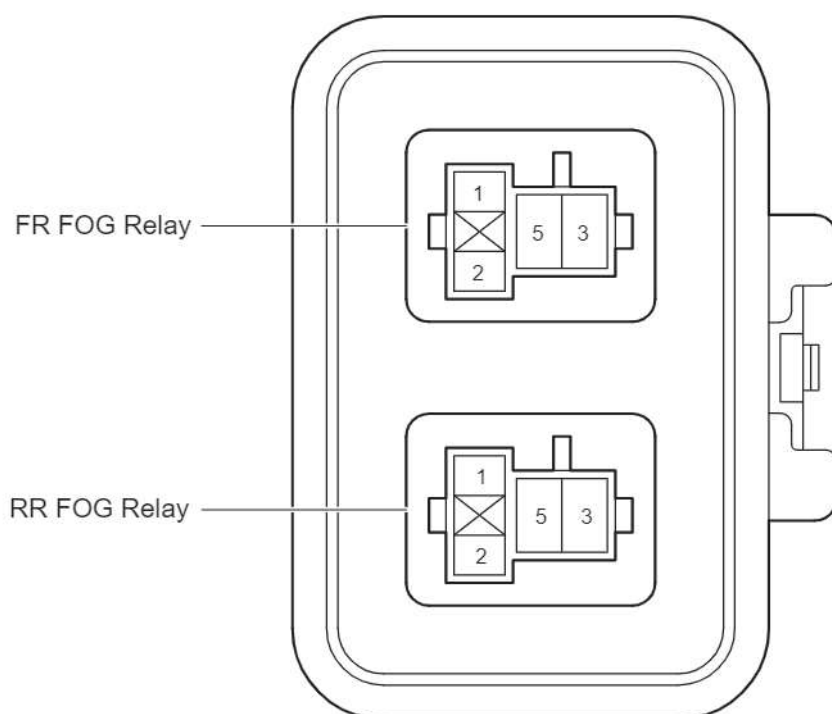

F RELAY LOCATIONS


○ : Instrument Panel J/B Left Side of the Instrument Panel (See Page 21)

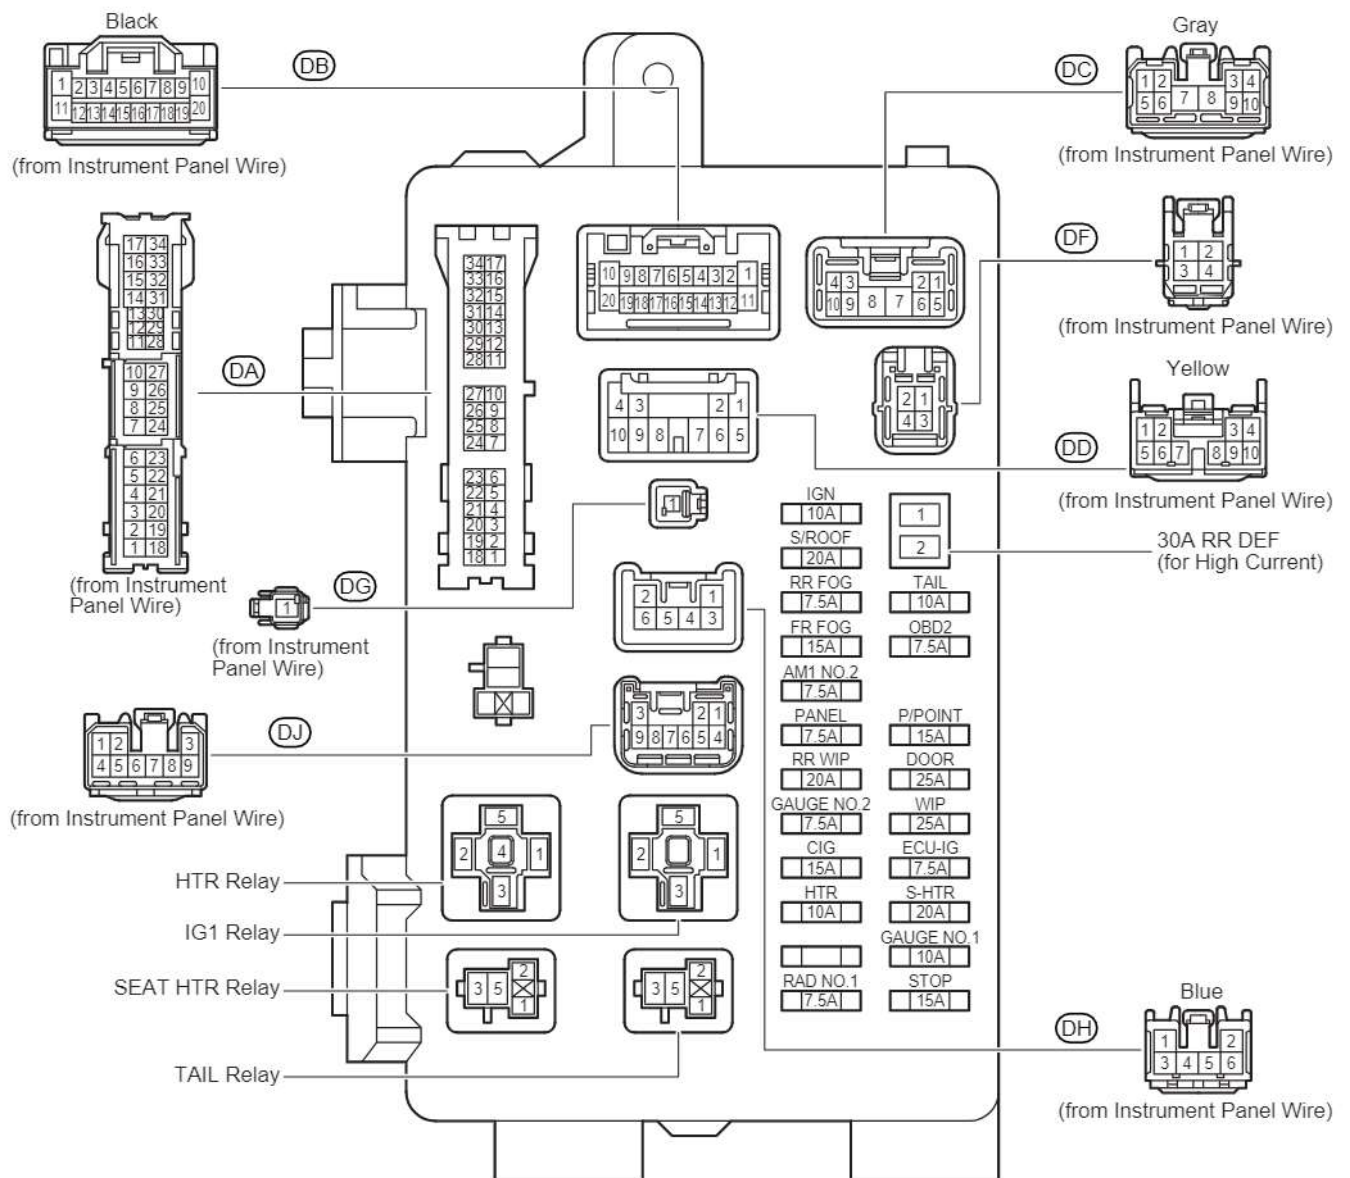

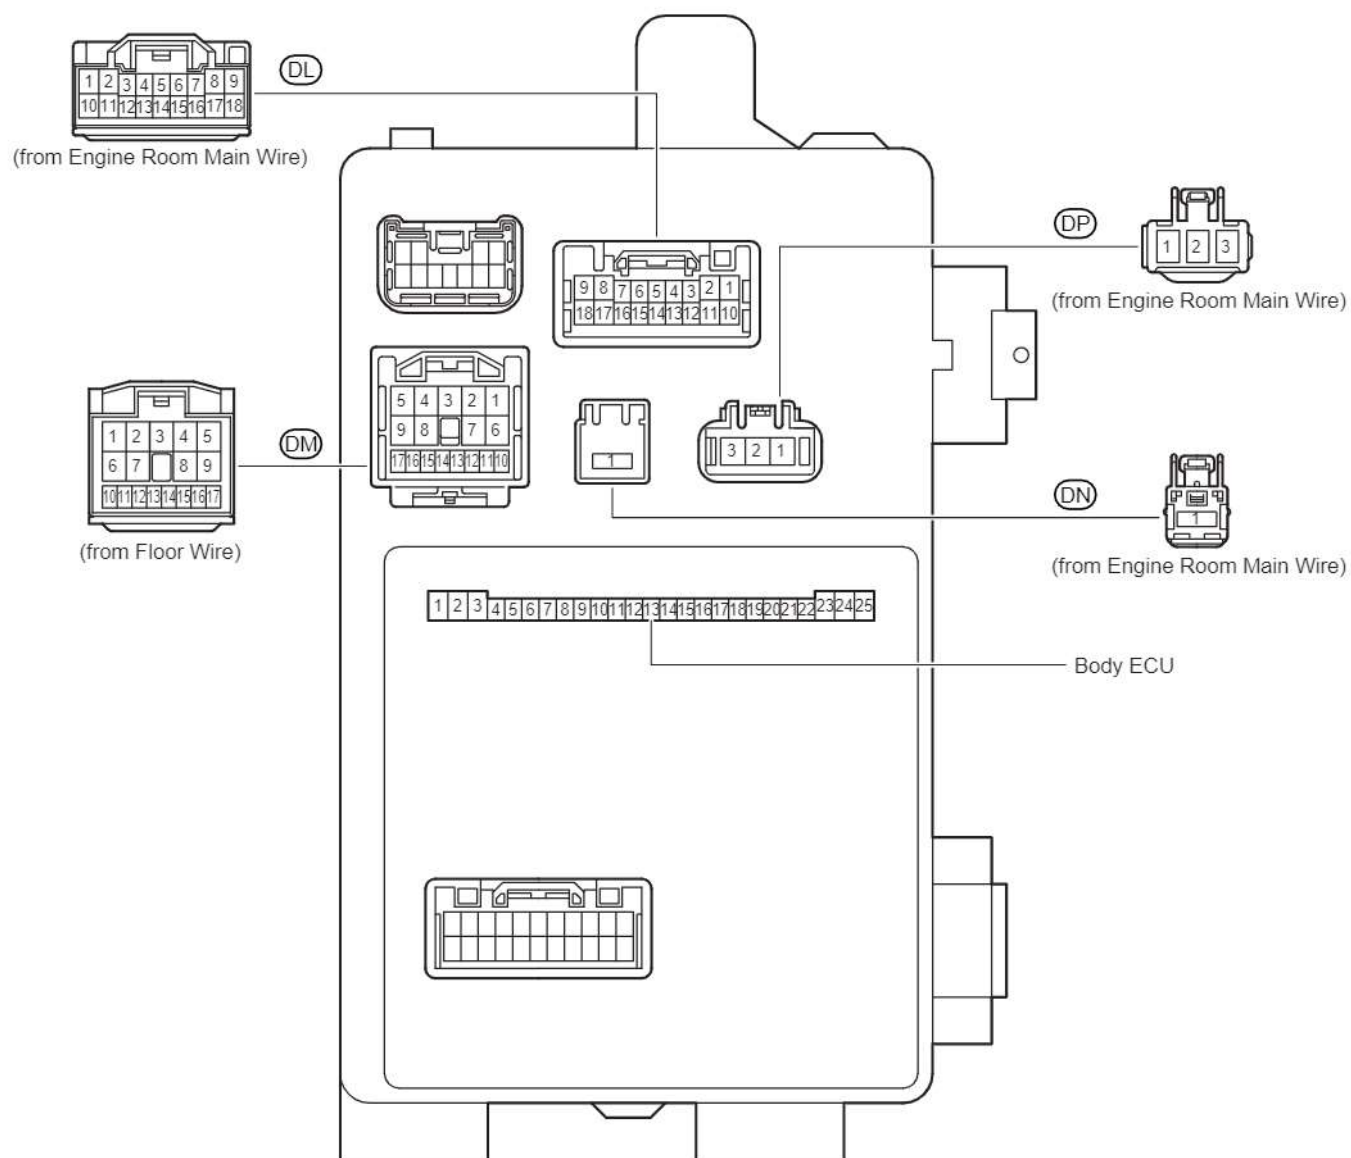


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

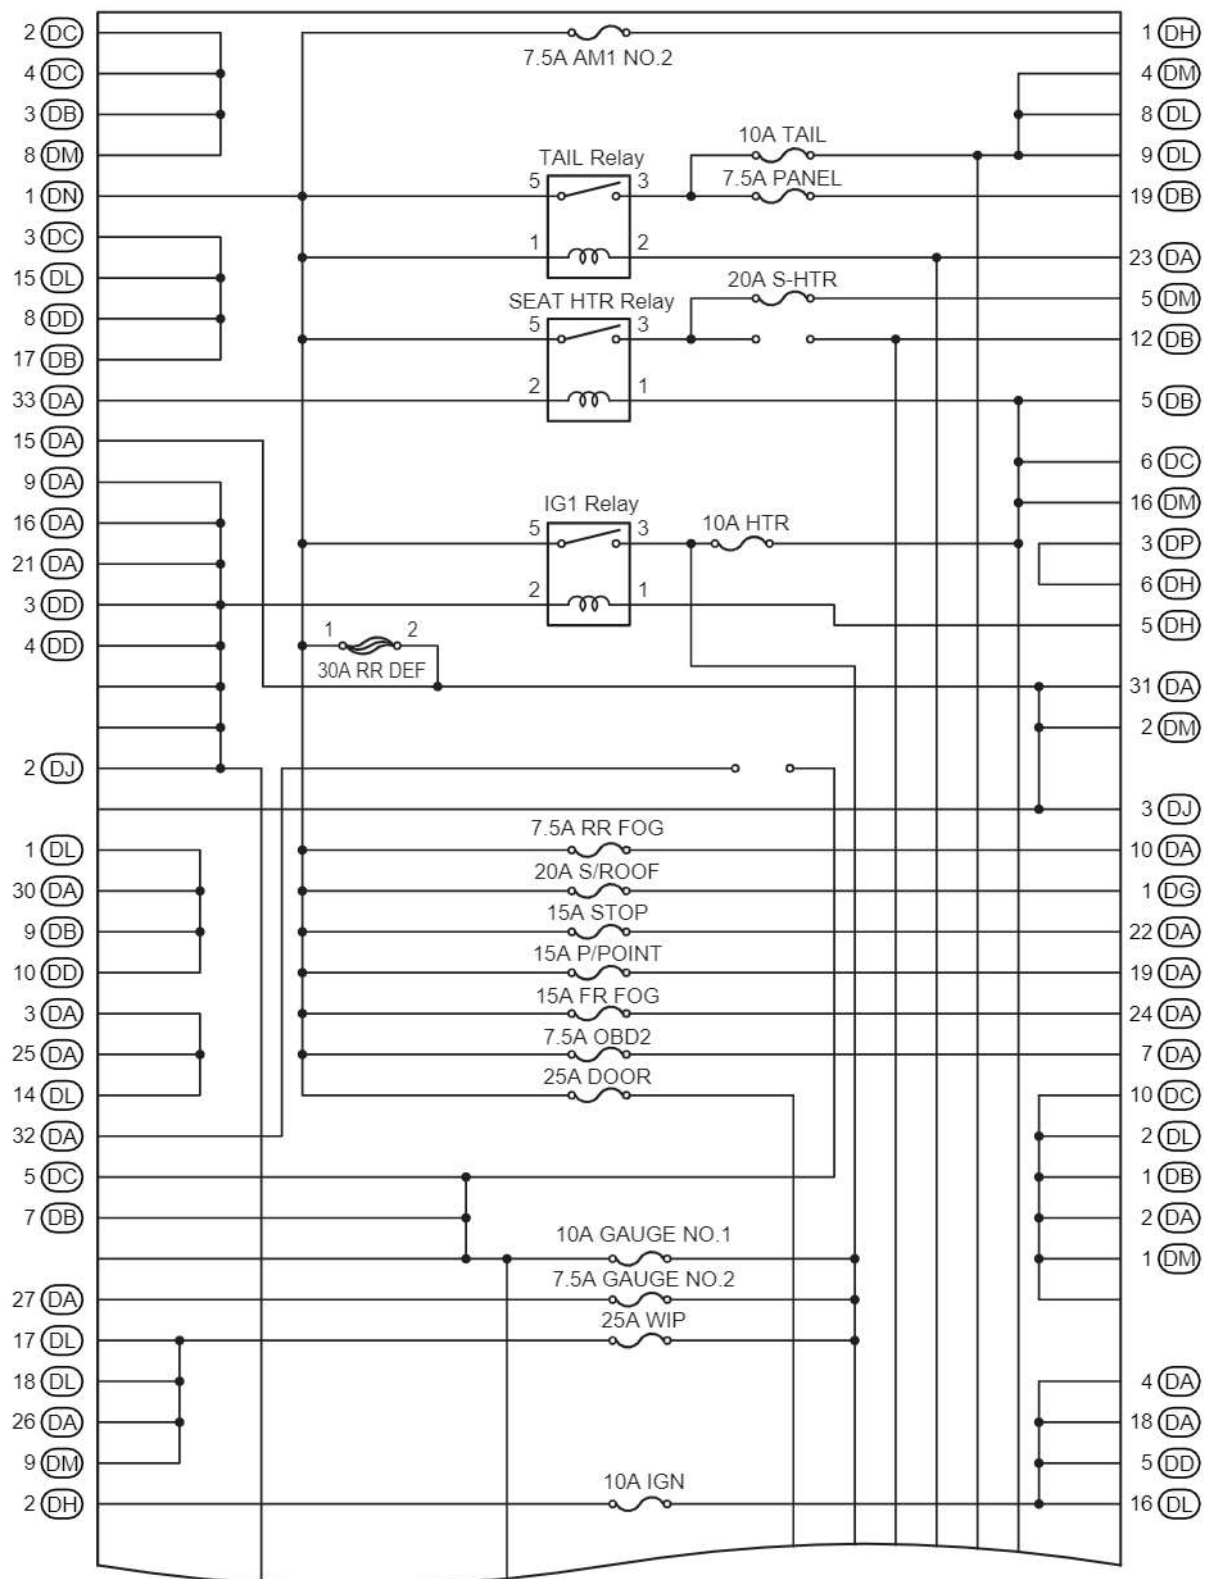



(Cont. Next Page)

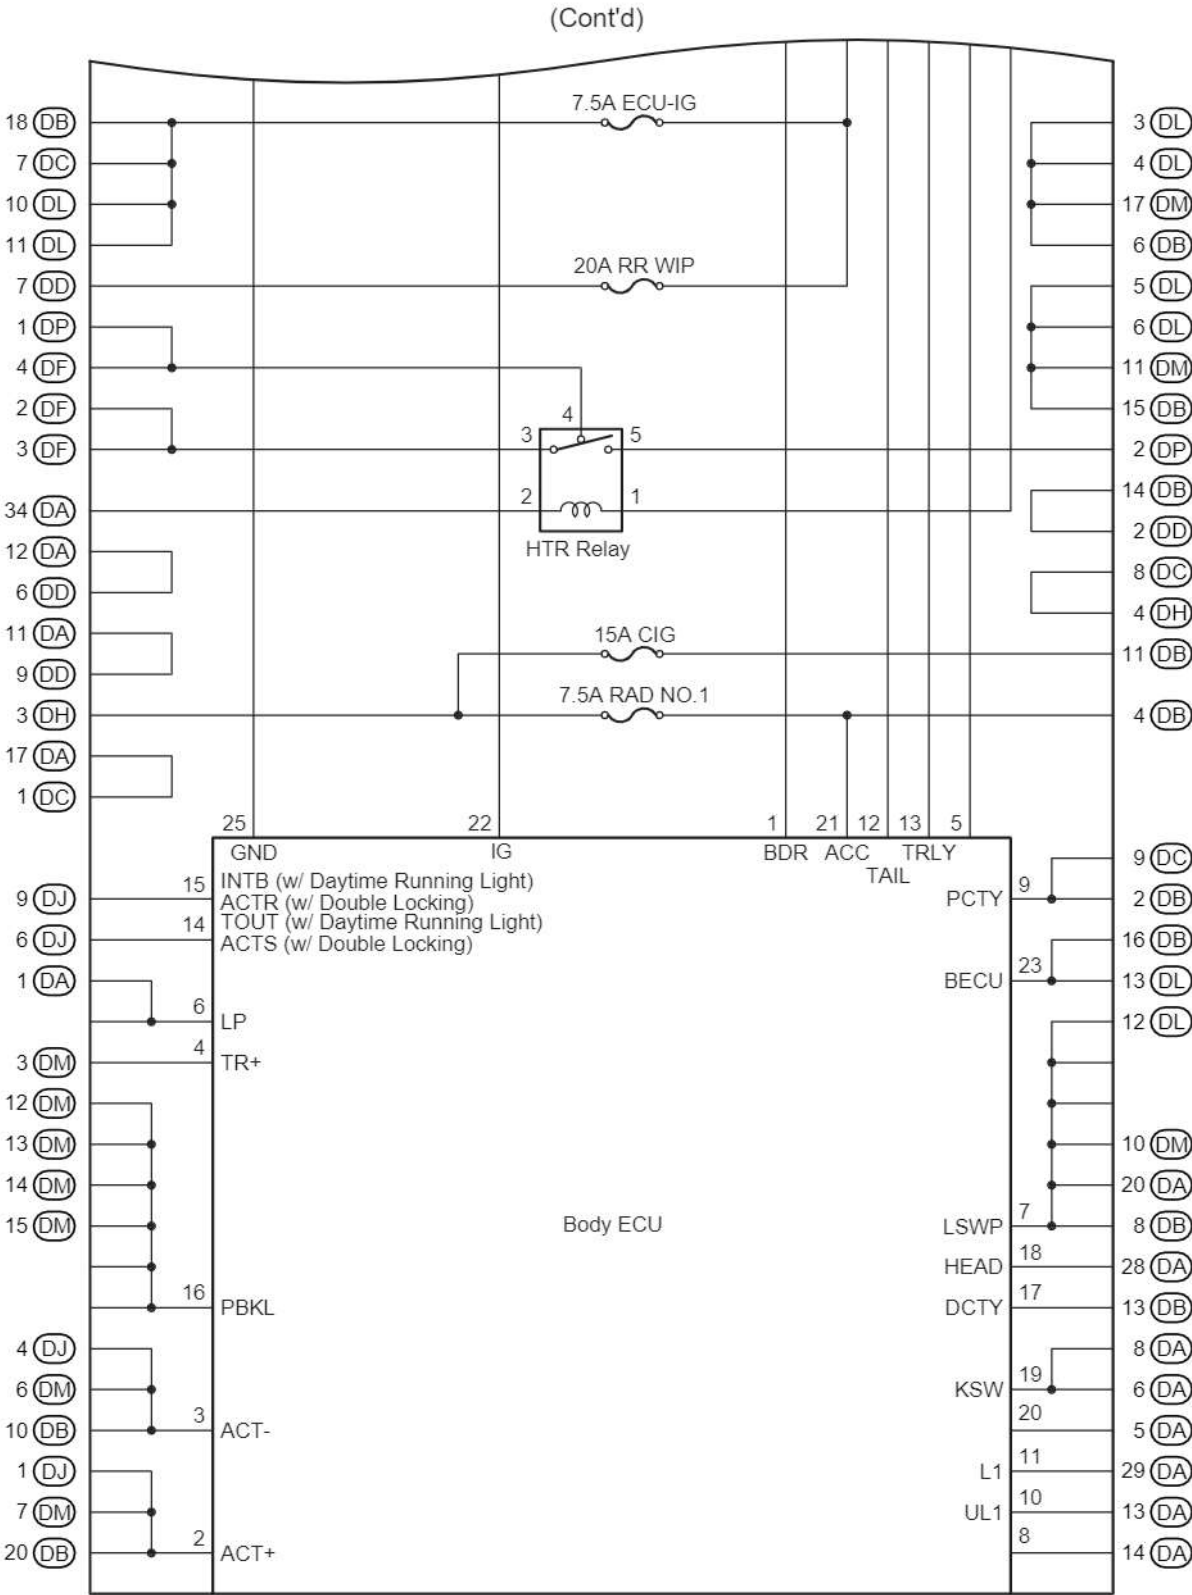

F RELAY LOCATIONS


 : Center J/B	LHD : Behind the Combination Meter (See Page 21)
	RHD : Instrument Panel Reinforcement RH (See Page 21)

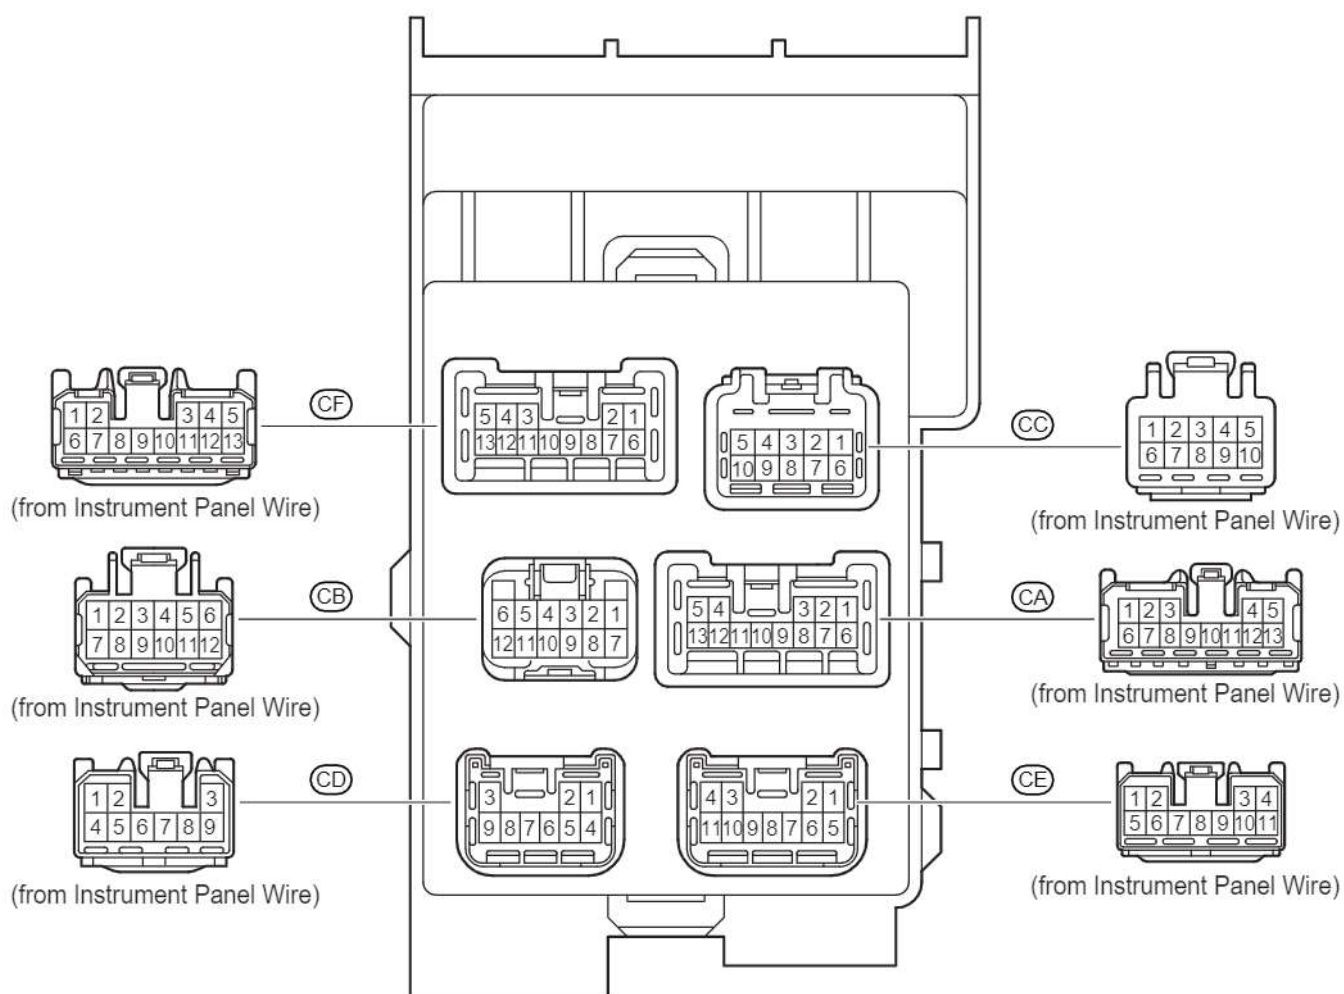

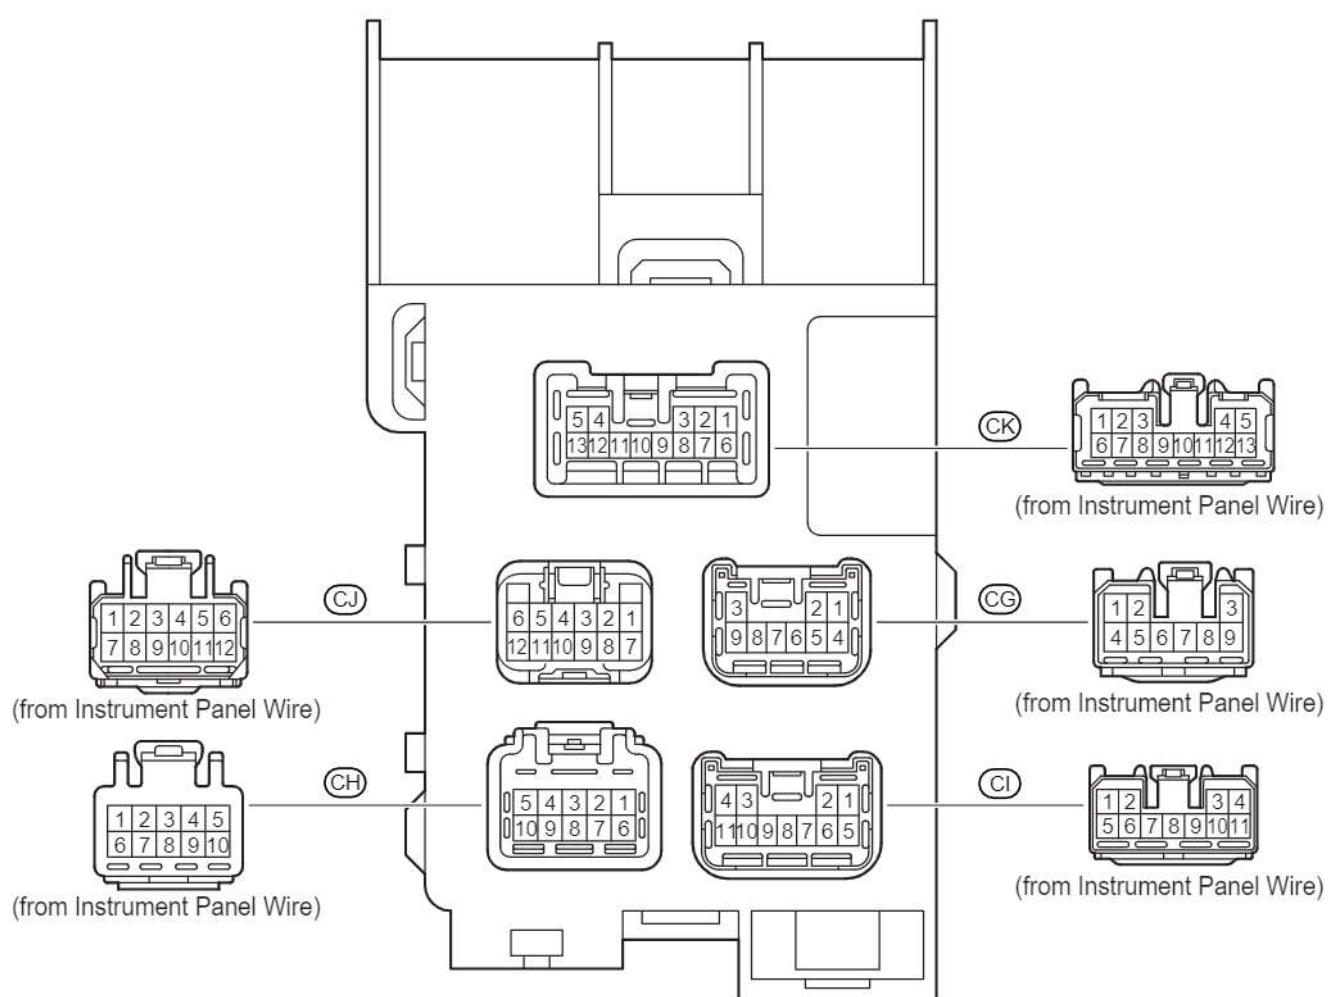

F RELAY LOCATIONS

[Center J/B Inner Circuit]

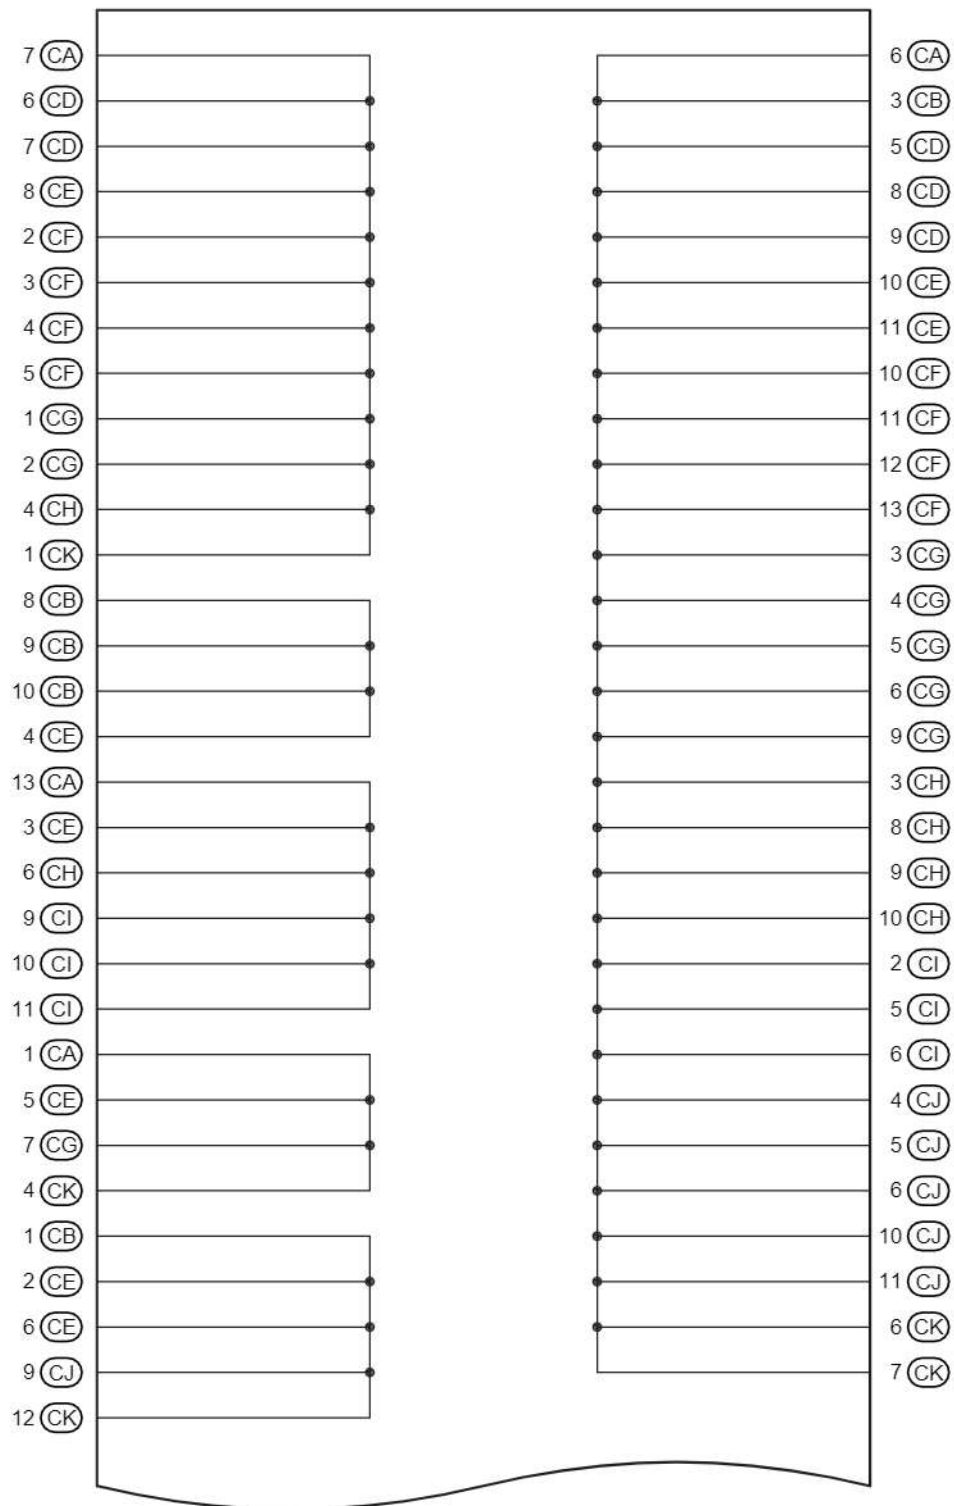

(Cont. Next Page)

(Cont'd)

