



Getting to Know Your 2009 G6



Table of Contents

REMOTE KEYLESS ENTRY SYSTEM

Remote Keyless Entry	2
Remote Vehicle Start System ...	2
RKE Transmitter Battery Replacement	4

COMFORT FEATURES

Adjusting the Power Seat	4
Adjusting Lumbar Support and Seatback Position	5
Easy Entry Seat	5
Heated Seat Controls	5
Shoulder Belt Height Adjuster ..	6
Tilt/Telescoping Steering Wheel	6
Power Mirrors	6

AUDIO SYSTEM FEATURES

Audio System	7
Audio Steering Wheel Controls ..	9
Bluetooth® System	9
XM® Radio	9

INSTRUMENT PANEL FEATURES

Instrument Panel	10
Instrument Panel Cluster	11
Driver Information Center	12

CONVENIENCE FEATURES

Automatic Transmission Operation	14
Traction Control	14
Automatic Door Locks	15
Speed-Sensitive Wipers	15
Cruise Control	15

Climate Controls	16
Exterior Lamps	17
Sunroof	17
60/40 Split Rear Seat	18
Retractable Hardtop Convertible	18
Window Indexing	18

MAINTENANCE FEATURES

Tire Pressure Monitor	19
Securing the Fuel Cap	19
Resetting the Oil Life System ..	19

OWNER INFORMATION

Roadside Assistance	20
Pontiac Owner Center	20

Congratulations on your purchase of a Pontiac G6. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

Remote Keyless Entry



The features of the Remote Keyless Entry (RKE) transmitter include:

Ⓢ (Remote Start) (if equipped): This feature can be used to start the engine. (See Remote Vehicle Start System.)

🔒 (Lock): Press this button to lock all the doors. The interior lamps will turn off after a short delay once all doors are closed. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

🔓 (Unlock): Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. The interior lamps will illuminate and remain on for 10 seconds or until the ignition is turned on. If enabled through the DIC, the parking lamps will flash twice and the horn will chirp twice to indicate unlocking has occurred.

🚗 (Trunk Release): The trunk will unlatch when this button on the transmitter is pressed and held for approximately one second. You can open the trunk with the transmitter when the vehicle is stationary.

The trunk may also be opened using the Trunk Release button located on the driver-side door.

📡 (Vehicle Locator/Panic Alarm): Press and hold this button for approximately one second to locate your vehicle. The horn will sound three times and the headlamps and parking lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will sound and the headlamps and parking lamps will flash for two minutes. Press the button again to cancel the panic alarm.

See Section 2 of your Owner Manual.

Remote Vehicle Start System (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. The remote start capability must be turned on using the Driver Information Center. (See the Driver Information Center section.)

During a remote start, the manual climate control system will operate at its last setting before the vehicle was turned off. With automatic climate control (if equipped), the system will default to a heating or cooling mode based on outside temperature.



Starting the Vehicle

1. Aim the RKE transmitter at the vehicle. (Transmitter range is within approximately 200 feet of the vehicle.)
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Start) button for about four seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, the ignition must be turned to the On position before driving.

Note: The Remote Vehicle Start feature will not operate if the key is in the ignition, the hood is open, or the Check Engine light is illuminated on the instrument panel cluster.

Canceling a Remote Start

To turn off the engine instead of driving after a remote start, do any of the following:

- Press and hold the  (Remote Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button. Press it again to turn off the flashers.
- Turn the key in the ignition switch to the On position and then off.

Note: Instructions for the Remote Vehicle Start System are provided on a tag that can be attached to your vehicle's key chain.

See Section 2 of your Owner Manual.

RKE Transmitter Battery Replacement

Under normal use, the battery in your Remote Keyless Entry (RKE) transmitter should last about two years. You can tell the battery is weak if the transmitter won't work at the normal range in any location. If you have to get close to your vehicle before the transmitter works, it's probably time to change the battery. Your Driver Information Center will also advise you when the battery is becoming weak.

Replace the Battery

1. Use a flat, thin object to separate the bottom half from the top half of the transmitter.
2. Remove the battery and replace it with a new one. Make sure the positive side of the battery faces up.
3. Put the two halves back together. Make sure they are tightly secured.

Note: When replacing the battery, use one 3-volt CR2032 or equivalent battery. Use care not to touch any of the transmitter circuitry. Static from your body transferred to these surfaces may damage the transmitter.

See Section 2 of your Owner Manual.

Adjusting the Power Seat

The power seat can be adjusted up or down using the power height adjuster located on the outboard side of the driver's seat. The seat can be manually adjusted forward or rearward.

Move the Seat Forward or Rearward

- Lift and hold the bar under the front of the seat to manually slide the seat.

Raise or Lower the Entire Seat

- Press and hold the height adjuster control up or down.



Raise or Lower the Front or Rear of the Seat Cushion (if equipped)

The 6-way power seat also features seat cushion adjustment.


- Press and hold the front or rear of the control up or down.



See Section 1 of your Owner Manual.

Adjusting Lumbar Support and Seatback Position

Adjust the lumbar support using the manual lumbar handle (A) located on the outboard side of the driver's seatback. Ratchet the handle down to increase support and up to decrease support. You may need to ratchet the handle several times for the desired amount of support.

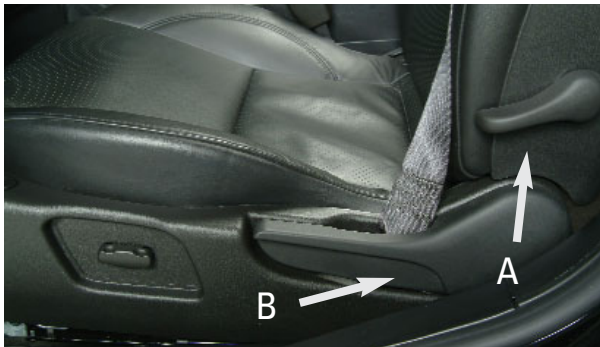

Adjust the seatback position by pulling up the recliner handle (B) and adjusting the seatback forward or rearward. Release the handle to secure the seatback in place.

See Section 1 of your Owner Manual.

Easy Entry Seat (if equipped)

Coupe and convertible models feature an easy entry front passenger seat that makes it easier to get in and out of the rear seat.



To use the easy entry seat, pull back on the top of the recliner lever and slide the seat forward. After the passenger enters the rear seat area, move the seat rearward until it locks in place and adjust the seat to a comfortable position. Make sure both the seat and seatback are locked.

See Section 1 of your Owner Manual.

Heated Seat Controls (if equipped)

The heated front seat controls are located on the outboard corner of the driver and front passenger seats. The seats have a high and low heat setting.



High Setting

- Press the top of the switch (I) once to turn on the heated seat. It will heat to the high setting (indicator light number 2).

Low Setting

- Press the top of the switch (I) twice to turn on the seat to the low setting (indicator light number 1).

Off

- Press the bottom of the switch (O) to turn the heated seat off.

See Section 1 of your Owner Manual.

Shoulder Belt Height Adjuster (sedan only)

The shoulder belt can be adjusted to the height that is right for you. Push the Release button up or down to move the height adjuster. Once in a comfortable position, try to move the height adjuster to make sure it is locked in place.

See Section 1 of your Owner Manual.

Tilt/Telescoping Steering Wheel



Adjusting the Steering Wheel

To adjust the position of the steering wheel:

1. Push down the lever located on the left side of the steering column.
2. Move the wheel up to a centered position or higher to telescope it in or out.
3. Tilt the wheel up or down to a comfortable position.
4. Pull the lever all the way up to lock the wheel in place.

See Section 3 of your Owner Manual.

Power Mirrors



The power outside rearview mirrors can be adjusted using the controls located on the driver's door.

Use the bottom switch to select the driver-side or passenger-side mirror; and then use the control pad to adjust the selected mirror up, down or side to side. The mirror will move only when the control pad is in the 12, 3, 6 or 9 o'clock position. Move the selector switch to the center position when not adjusting either mirror.

See Section 2 of your Owner Manual.

Audio System



While most of the common features on your radio operate in a familiar manner, some of the following are new. Basic features include:

(Power/Volume): Press this knob to turn the system on or off. Turn the knob to adjust the volume.

(Tune): Turn this knob to select radio stations or, when a CD is playing, to select a track or MP3 file.

i (Information): Press this button to display additional information related to the current FM-RDS or XM station, or MP3 file.

Tone and Speaker Control: Press the **(Tune)** knob to adjust the tone control (bass/treble) or speaker control (balance/fade) setting. Turn the knob or press the SEEK, FWD or REV button to adjust the selected setting.

FAV (Favorite): Press this button to go through up to six pages of any combination (AM, FM or XM) of preset favorite radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio display.

BAND: Press this button to switch to FM, AM or XM. When playing a CD or portable audio device, press this button to play the radio instead.

CD/AUX: Press this button to play a CD instead of the radio. Press again and the system will automatically search for a portable audio device connected to the auxiliary input jack.

EQ (Equalization): Press this button to select preset equalization settings.

CAT (Category): Press this button to find XM stations within a desired category.

Auxiliary Input Jack: A portable audio device (such as an iPod® or MP3 player) can be connected to the auxiliary input jack located on the radio. Press the CD/AUX button to begin playing audio from the portable device over the vehicle speakers. To optimize speaker volume, fully increase the volume level of the portable device.

Using the USB Port (if equipped)

The USB port is located on the front of the radio. A connected USB storage device or an iPod® can be controlled using the radio buttons and knobs. The iPod music will appear on the radio display and begin playing automatically. For more information, please refer to your Owner Manual.

Radio Data System

When you tune to a Radio Data System (RDS) station, the station name or call letters will appear on the display instead of the frequency. Depending on the RDS station, additional text information may be available by pressing the **i (Information)** button.

RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

Setting Favorite Stations

Before setting your favorite stations, shift the vehicle into Park.

Note: Engaging in extended searching for specific audio stations or songs by using buttons and knobs — or giving extended attention to entertainment tasks — can lead you to look away from the road frequently or for prolonged periods, which may cause you to miss seeing things on the road that you need to see. Avoid engaging in extended searching for specific items while driving.

You can set up to six pages of any combination (AM, FM or XM) of favorite radio stations, with up to six stations stored on each page.

To set the number of favorite station pages:

1. Press the MENU button to display the radio setup menu.
2. Press the pushbutton below the FAV 1–6 label on the radio display.
3. Select the desired number of favorite station pages.
4. Press the FAV button. You may now begin storing your favorite stations for the chosen number of pages.

To store favorite stations:

1. Tune in the desired radio station.
2. Press the FAV button to display the page where the station is to be stored.
3. Press and hold one of the six push-buttons until a beep sounds to store the station.
4. Repeat the steps for each push-button on each page.

Setting the Time

To set the time:

1. Turn on the radio.
2. Press the ⌚ (Clock) button. Or, if equipped, press the MENU button until the clock option is displayed; and then press the pushbutton located under the clock option label. The HR, MIN, MM, DD, YYYY labels will appear on the display.
3. Press the pushbutton under any of the labels to be changed.
4. Press the pushbutton again, the right SEEK arrow or the FWD button to increase the numbers. Press the left SEEK arrow or the REV button to decrease the numbers. Rotating the 🎵 (Tune) knob also will increase or decrease the numbers of the selected label.
5. Press the Clock or MENU button again to set the currently displayed time and date.

See Section 3 of your Owner Manual.

Audio Steering Wheel Controls

The following audio controls are located on the steering wheel:



(Volume):

Press the plus or minus button to increase or decrease the volume.



(Next/Previous/End): Press the up or down arrow to go to the next or previous preset radio station or, when a CD is playing, to the next or previous track.

Press and hold the up or down arrow for one second to advance to the next or previous radio station in the selected band or, when a CD is playing, to continue moving to the next or previous track on the CD.

Press the (End) button to end or reject an OnStar or Bluetooth call.

(Mute/Voice Recognition):

Press this button to silence the system. Press it again to turn on the sound.

Press and hold the button for two seconds to interact with the OnStar or Bluetooth system.

See Section 3 of your Owner Manual.

Bluetooth® System (if equipped)

The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive hands-free phone calls using the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired with the in-vehicle Bluetooth system before it can be used in the vehicle. Not all phones will support all functions.

Visit www.pontiac.com/bluetooth for more information.


See Section 3 of your Owner Manual.

XM® Radio (if equipped)

XM Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada. For more information, visit XM online at www.XMradio.com or call 1-800-929-2100.

See Section 3 of your Owner Manual.

Instrument Panel

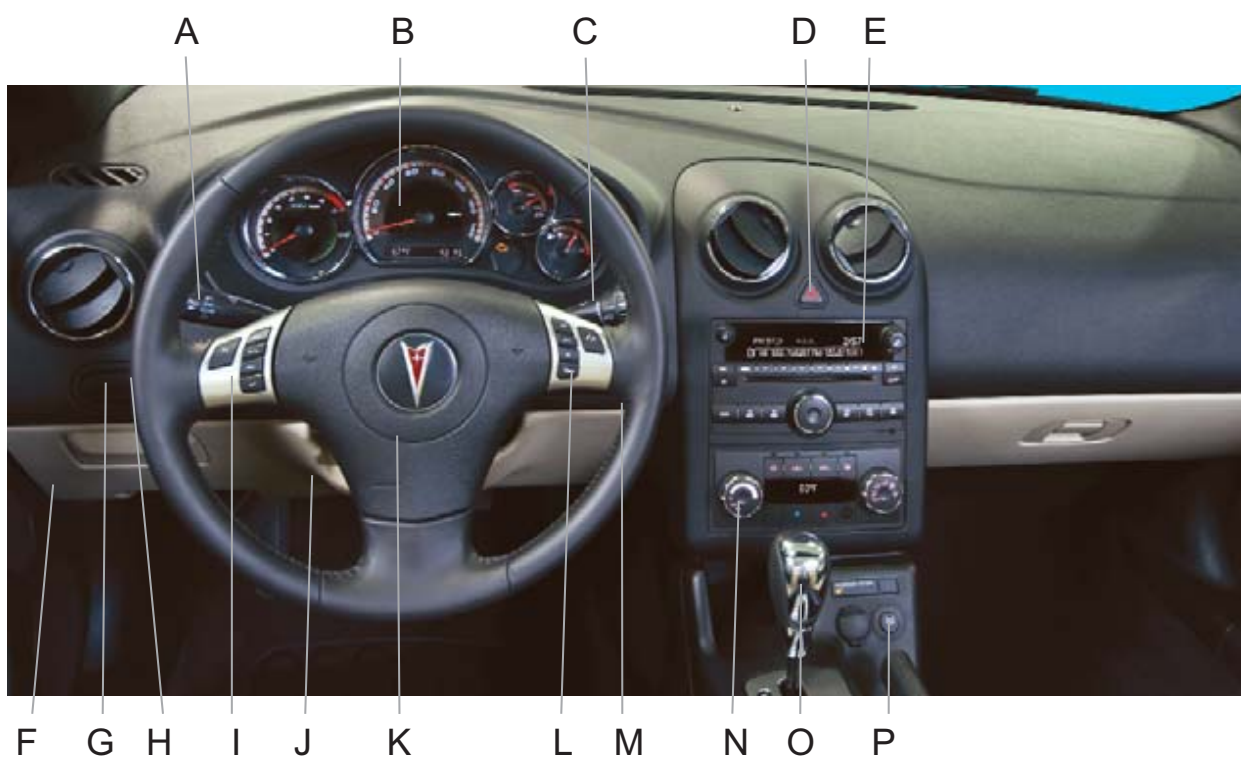


The main features of the instrument panel include:

- A. Turn Signal/Multifunction Lever
- B. Instrument Panel Cluster
- C. Windshield Wipers/Washer Lever
- D. Hazard Warning Flashers Button
- E. Audio System
- F. Hood Release Lever
- G. Instrument Panel Brightness Control
- H. Fog Lamps Switch (if equipped)

- I. Cruise Control/Driver Information Center Buttons
- J. Steering Wheel Adjustment Lever
- K. Horn
- L. Audio Steering Wheel Controls
- M. Ignition Switch
- N. Climate Control System
- O. Shift Lever
- P. Traction Control Button

See Section 3 of your Owner Manual.

Instrument Panel Cluster

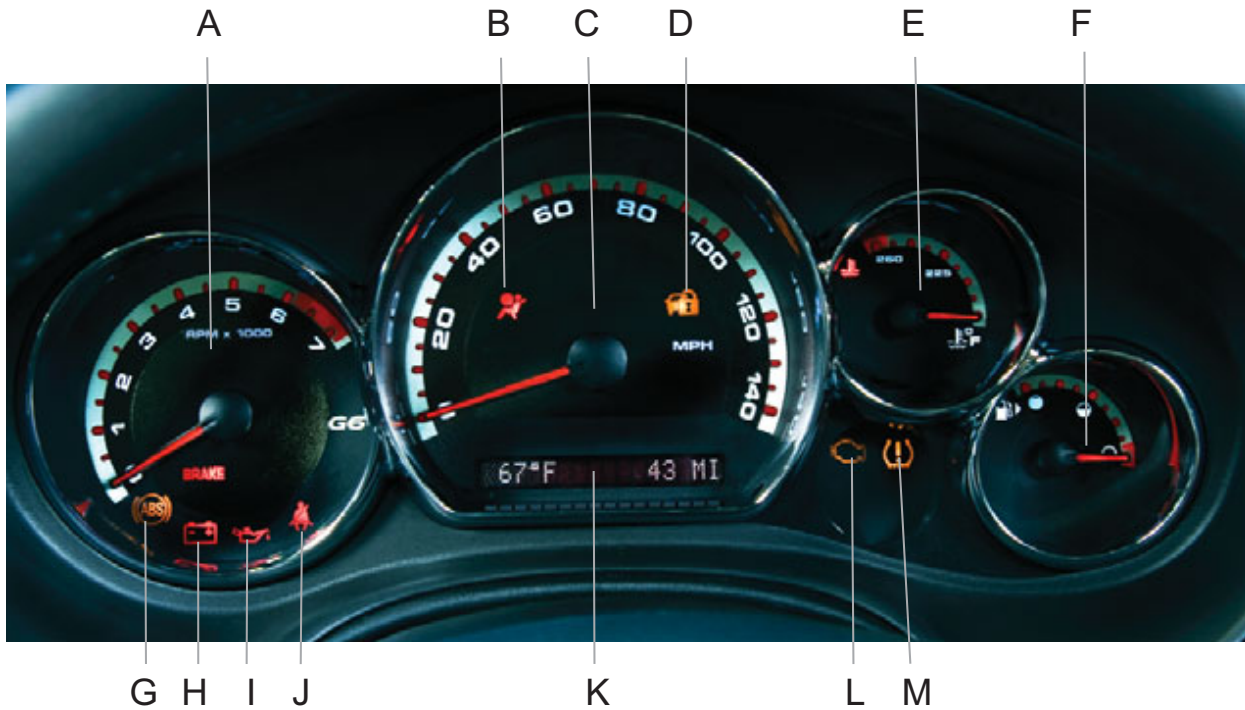

The instrument panel cluster includes these key features:

- A. Tachometer
- B. Airbag Readiness Light
- C. Speedometer
- D. Security Light
- E. Engine Coolant Temperature Gauge
- F. Fuel Gauge
- G. Antilock Brake System Warning Light
- H. Charging System Warning Light
- I. Oil Pressure Warning Light

- J. Safety Belt Reminder Light
- K. Odometer/Driver Information Center
- L. Check Engine Light
- M. Tire Pressure Warning Light

Note: The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

See Section 3 of your Owner Manual.

Remote Keyless
Entry System

Comfort
Features

Audio System
Features

Instrument
Panel Features

Convenience
Features

Maintenance
Features

Owner
Information

Driver Information Center



The Driver Information Center (DIC) provides vehicle information, vehicle feature customization and vehicle warning messages. The DIC messages are shown on the instrument panel cluster display.



To access DIC features, use the following two buttons located on the left side of the steering wheel:

INFO: Press this button to display the following vehicle information:

- Outside Temperature and Odometer
- Trip Odometers
- Fuel Range
- Average Fuel Economy
- Instantaneous Fuel Economy

- Average Speed
- Oil Life
- Tire Pressures

← (Reset): Press this button to set or reset DIC information while it is displayed or to acknowledge a warning message.

Note: System may require use of at least one tank of fuel to correctly report Average Fuel Economy and Average Speed.

Vehicle Feature Customization

A variety of your vehicle's features can be customized to your preference. To customize features:

1. With the vehicle in Park, turn on the ignition. (Access to the customization features, except for Units, is not available while the vehicle is moving.)
2. Press and hold both the INFO button and the ← (Reset) button to enter the customization menu.
3. Press the INFO button to scroll through the available customization features.
4. With the desired feature displayed, press the ← (Reset) button for one second to scroll through each setting.
5. With the desired setting displayed, press the INFO button to record your choice and move on to the next feature.
6. To exit the customization menu, press the INFO button until the end of the menu is reached.

Customization features may include:

- Oil Life Reset
- Units (English/Metric)
- Remote Start (if equipped)
- Lock Horn (during Remote Keyless Entry (RKE) locking)
- Unlock Horn (during RKE unlocking)
- Light Flash (during RKE locking or unlocking)
- Delay Lock
- Auto Unlock
- Exterior Lights (during RKE unlocking)
- Language (English, French, Spanish or German)

Note: Depending on equipment, not all customization features may be available on your vehicle.

Warnings and Messages

The DIC provides a variety of vehicle warning messages (depending on optional equipment) if a problem is sensed in a vehicle system. To acknowledge a message and clear it from the display, press the  (Reset) button. Some urgent messages cannot be cleared from the DIC display.

If you have a current OnStar subscription, and a warning message appears, you can press the OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

Note: Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

See Section 3 of your Owner Manual.

Remote Keyless
Entry System

Comfort
Features

Audio System
Features

Instrument
Panel Features

Convenience
Features

Maintenance
Features

Owner
Information

Automatic Transmission Operation

You can enjoy the sporty driving characteristics provided by a manual transmission with the Driver Shift Control or TAPshift feature (if equipped). To shift gears similar to a manual transmission:

1. Move the shift lever to Manual (M).
2. With the Driver Shift Control, move the shift lever forward to upshift or rearward to downshift.

With TAPshift, press either of the shift plus (+) paddles (A) located on top of the steering wheel away from you to upshift, or press the back of either of the shift paddles (B) behind the steering wheel toward you to downshift.



The Driver Information Center (DIC) in the instrument panel cluster will display the letter M for manual position and a number indicating the selected gear.

While using either feature, the transmission will have firmer shifting and sportier performance. The transmission will allow you to shift only into gears appropriate for the vehicle speed and engine revolutions per minute (rpm).

If the vehicle slows almost to a stop, an automatic downshift will occur.

See Section 2 of your Owner Manual.

Traction Control

When one or more of the drive wheels begin to spin from traction loss, the Traction Control system will reduce engine power and may apply the front brakes and shift the transmission to help regain traction.

To limit wheelspin and help maintain directional control, you should always leave the system on. However, if your vehicle becomes stuck in snow or mud and rocking the vehicle is required, the system should be turned off.

- To turn off the Traction Control system, press the  (Traction Control) button located on the center console in front of the shift lever.

When the system is turned off, the Traction Control light will illuminate in the instrument panel cluster.

See Section 4 of your Owner Manual.

Automatic Door Locks

For your safety, your vehicle is programmed at the factory to lock all doors automatically when all doors are closed, the ignition is on and the shift lever is moved out of Park (automatic transmission) or above a set speed (manual transmission).

This feature cannot be disabled; you can personalize the unlock features by using the Driver Information Center.

See Section 2 of your Owner Manual.

Speed-Sensitive Wipers



The speed-sensitive wipers lever is located to the right of the steering column. The wipers include the following settings:

(Intermittent): Move the lever up to this position to have the wipers adjust with your vehicle speed. Rotate the speed-sensitive wiper control on the lever to increase or decrease the wiper delay.

(Low): Move the lever up to this position to turn the wipers on Low.

(High): Move the lever up to this position to turn the wipers on High.

(Mist): Move the lever down to this position to turn the wipers on for one wipe.

See Section 3 of your Owner Manual.

Cruise Control

The following cruise control buttons are located on the left side of the steering wheel:

(On/Off):

Press this button to turn the cruise control system on or off.



SET- (Set): Press this button to set a speed. If the system is active, press and release this button to decrease speed 1 mph, or press and hold the button to decrease speed more than 1 mph.


When the cruise control is set, the  (Cruise Control) symbol will illuminate in the instrument panel cluster.

RES+ (Resume): Press this button to resume a set speed. If the system is active, press and release this button to increase speed 1 mph, or press and hold the button to increase speed more than 1 mph.

Cancel: To cancel cruise control, step lightly on the brake pedal. The set speed will remain in memory.

See Section 3 of your Owner Manual.

Climate Controls

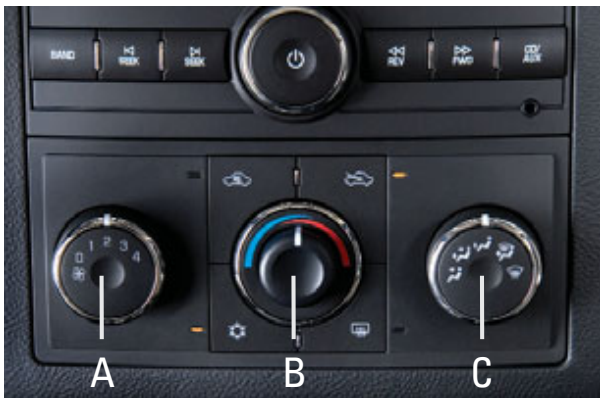

Your vehicle may have a manual climate control system or the available automatic climate control system. Both systems include the following functions:

 **(Fan):** Turn the fan control knob (A) to increase or decrease the fan speed.

 **(Off):** Turn the fan control knob to the Off position to turn off the system. Only the rear defogger will operate when the system is off.

Temperature Control: Turn the temperature control knob or press the temperature control buttons (B) (if equipped) to raise or lower the temperature setting.

 **(Air Conditioning):** Press this button to turn the air conditioning system on or off.

 **(Recirculation):** Press this button to recirculate air inside the vehicle. This mode helps heat or cool the vehicle more quickly and prevents outside air and odors from entering the vehicle.

The recirculation mode will not operate when the airflow control knob is in the Defog or Defrost mode.

 **(Outside Air):** Press this button to allow outside air to enter the vehicle.

Airflow Mode: Turn the airflow mode control knob (C) to change the direction of the airflow to the vent, bi-level, floor, defog or defrost mode.

 **(Defog):** Select this mode to direct air to the windshield, side window outlets and floor outlets.

 **(Defrost):** Select this mode to direct most of the air to the windshield and some air to the side window outlets and floor outlets.

 **(Rear Window Defogger):** Press this button to activate the rear window defogger and the heated outside rearview mirrors (if equipped). The defogger and heated mirrors will turn off automatically or can be turned off by pressing the button again.

Automatic Climate Control Operation (if equipped)

The automatic climate control system adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature as quickly as possible.

To set the automatic system:

1. Turn the fan control knob (A) and the airflow mode control knob (C) to the AUTO position.
2. Set the temperature. Allow time for the system to reach the desired temperature.

See Section 3 of your Owner Manual.

Exterior Lamps



Automatic Headlamp System

The Automatic Headlamp System turns on the Daytime Running Lamps in the daytime, and the headlamps and other exterior lamps at night or when necessary. There is a short delay before the system switches on or off when driving into or out of a garage or tunnel.

The headlamps also will turn on if the wipers are on for more than 15 seconds.

The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper operation, avoid placing any objects on or near the sensor, such as with an instrument panel cover.

Exterior Lamp Control Switch

The exterior lamp control switch is located on the lever to the left of the steering column. The switch can be rotated to each of the following four positions:

D (Headlamps): Turns on the headlamps, parking lamps and taillamps.

P (Parking Lamps): Turns on parking lamps and taillamps only.

AUTO: Automatic Headlamp

System: Automatically turns on Daytime Running Lamps (DRLs) in the daytime, and headlamps, parking lamps and taillamps at dusk or when necessary.

Off: When operating in the *AUTO* position, a momentary turn of the lamp control switch to the Off position will turn off the automatic headlamps and all of the exterior lights. The DIC will display an Automatic Lights Off message. To activate the Automatic Headlamp System, turn the switch again. The Automatic Headlamp System is always turned on when the vehicle is started.

See Section 3 of your Owner Manual.

Sunroof (if equipped)

The control switch for the sunroof is located on the headliner between the sun visors. It will operate only while the ignition is on.

Vent Position

- Open the sunshade by hand.
- Press the rear part of the switch and release it.

Fully Open Position

- Open the sunshade by hand.
- Press the rear part of the switch twice and release it. The roof will express-open all the way.

Closed Position

- Press the front part of the switch and hold it until the roof closes.
- Close the sunshade by hand.

See Section 2 of your Owner Manual.

60/40 Split Rear Seat

The split-folding rear seatback permits loading of longer items from the trunk.

Folding the Seatback

1. Open the trunk and locate the gray handles on the upper side of the trunk opening.
2. Position your hand over the top of one or both of the handles and pull toward you. The left handle opens the larger seatback; the right handle opens the smaller side.



3. Push the seatback open through the trunk or pull it open from inside the vehicle.

To return the seatback to an upright position, push it up until you hear a click and then pull on the seatback to make sure it is secure.

See Section 1 of your Owner Manual.

Retractable Hardtop Convertible (if equipped)

Before operating the hardtop:

- The vehicle must be in Park, and the engine must be running or the ignition must be turned on.
- The trunk cargo cover must be fully closed, and the trunk must be closed.

- Make sure any item stowed in the trunk fits beneath the cargo cover.
- Make sure nothing is on top or in front of the cargo cover in the trunk.

If an item cannot be stowed without contacting the cargo cover, do not operate the retractable hardtop or damage may occur.

Note: With the hardtop lowered, the trunk cannot be opened. The trunk release buttons on the driver's door and Remote Keyless Entry transmitter will be disabled.

Lower or Raise the Hardtop

The switch to operate the retractable hardtop is located on the headliner between the front reading lamps.

- Press and hold the switch rearward to lower the hardtop and forward to raise the hardtop.

Always fully open or close the hardtop by holding the switch until the cycle is complete and a chime sounds. To automatically close the windows, continue to hold the switch for two seconds after the cycle is complete.

See Section 2 of your Owner Manual.

Window Indexing (Coupe/Convertible only)

To provide a tight seal around the doors, the window will automatically lower slightly when the door is opened and then automatically rise fully when the door is closed.

Follow the Owner Manual procedure for initializing the indexing feature if battery power is disconnected.

See Section 2 of your Owner Manual.

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel cluster. The low tire pressure warning light will remain on until you correct the tire pressure. A CHECK TIRE PRESSURE message will also appear on the Driver Information Center (DIC).

- To view the tire pressures on the DIC, press the INFO button until the current tire pressures are displayed; left front (LF), for example, is the driver's side front tire.

Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must inflate the tire to the proper tire pressure (just as you must refuel the vehicle when the low fuel warning light illuminates). The Tire and Loading Information label, located on the center pillar below the driver's door latch, shows the correct tire pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

During cooler conditions, the low tire pressure warning light may appear when the vehicle is first started and then turn off as you start to drive. This could be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

Securing the Fuel Cap

If the Check Gas Cap message is displayed on the Driver Information Center when the ignition is turned to Run or Start, check that your fuel cap is securely fastened. If the cap is not secure, turn it clockwise until a clicking sound is heard, indicating that it is properly installed.

The Check Gas Cap message will turn off after a few driving trips with the cap properly installed.

See Section 3 of your Owner Manual.

Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays CHANGE OIL SOON in the Driver Information Center (DIC) when it's necessary to change your oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition, with the engine off.
2. Press and hold both the INFO button and the  (Reset) button to access the customization menu.
3. OIL LIFE RESET will be displayed.
4. Press and hold the  (Reset) button for at least one second. An ACKNOWLEDGED message will appear when the system is reset.
5. Turn off the ignition.

See Section 5 of your Owner Manual.

Remote Keyless
Entry System

Comfort
Features

Audio System
Features

Instrument
Panel Features

Convenience
Features

Maintenance
Features

Owner
Information

Roadside Assistance

**1-800-ROADSIDE
(1-800-762-3743)**

TTY Users: 1-888-889-2438

As the proud owner of a new Pontiac vehicle, you are automatically enrolled in the Pontiac Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Pontiac's Roadside Assistance toll-free number is staffed by a team of technically trained advisors, who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Pontiac dealer.

Pontiac will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service
(identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Pontiac's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Pontiac reserves the right to limit services or reimbursement to an owner or driver when, in Pontiac's judgment, the claims become excessive in frequency or type of occurrence.

Roadside Assistance and OnStar (if equipped)

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

Pontiac Owner Center

The Pontiac Owner Center, a complimentary service for Pontiac owners, is a one-stop resource to enhance your Pontiac ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **www.gmownercenter.com/pontiac**.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2008 by GM Corp. All rights reserved.

