


Fiat Linea 2007 – 2013 fuse box diagrams

Fuse box on dashboard

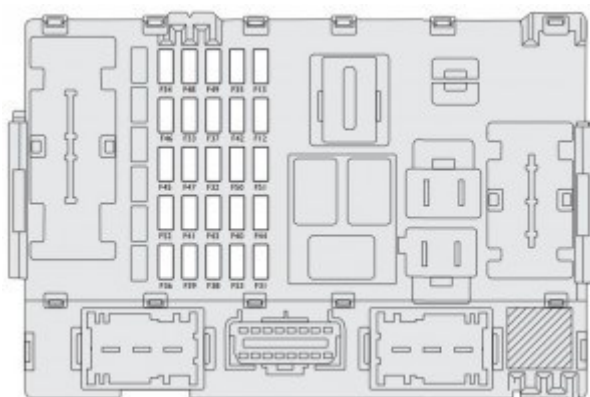


Fiat Linea – fuse box – dashboard

Loads	Fuse	Ampere rating [A]
Right dipped beam headlight	F12	7,5
Left dipped beam headlight, headlight corrector	F13	7,5
INT/A for relay coils (T08, T17) in engine compartment fuse box and body computer node	F31	7,5
Heated Seats	F32	15
Power windows control unit (left rear window motor	F33	20
Power windows control unit (right rear window motor)	F34	20
+15 reversing lights, brake lights control NC, air mass meter, glow plug pre-heating unit, water in diesel fuel sensor, tachometer generator, level sensor 2	F35	7,5
Power window unit (+30 for electronics)	F36	7,5
+15 instrument panel, NA brake lights control	F37	7,5
Body computer node	F38	20
Radio node, climate control node, node Blue&Me	F39	10
Heated rear window	F40	30
Mirror defrosters	F41	7,5
+15 brake system	F42	7,5
Windscreen wiper control (two-way pump)	F43	20
Cigar lighter or socket	F44	15
Boot lock actuator	F45	10
Power window unit (driver's side front window motor)	F47	20
Power window unit (passenger's side front window motor)	F48	20
+15 control lighting: radio on steering wheel, control panel, power mirrors, power window unit, electrochromic mirror and rain sensor	F49	7,5
+15 airbag node	F50	7,5

+15 cruise control, radio setup, Blu&Me setup, parking sensors, climate control node	F51	7,5
Power window unit, driver's seat adjustment motor	F52	15
Body computer and instrument panel node	F53	7,5

Fuse box in engine compartment

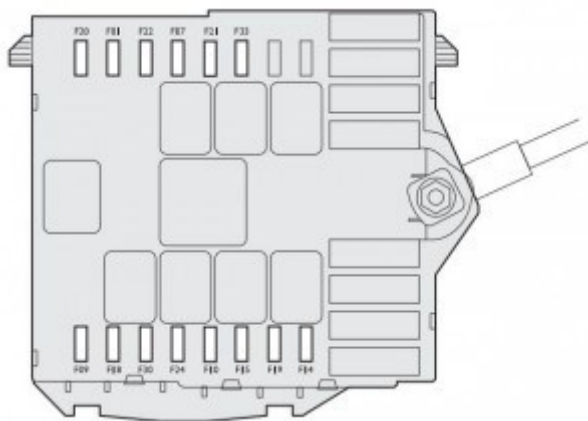

Fiat Linea – fuse box – engine compartment

Loads	Fuse	Ampere rating [A]
Horn	F10	15
Engine control system secondary loads	F11	10
Right main beam headlight	F14	7,5
Left beam headlight	F15	7,5
Engine control system primary loads	F17	10
Engine control unit	F18	10
Conditioner compressor	F19	7,5
Fuel pump	F21	15
Engine control system primary loads (injectors, ignition coils)	F22	15
Windscreen wiper motor	F23	20
Spare	F24	—
Fog lights	F30	15