

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	=	Air Conditioner
A/T	=	Automatic Transaxle
ABS	=	Anti-Lock Brake System
D-CAT	=	Diesel Clean Advanced Technology
DLC3	=	Data Link Connector 3
EC	=	Electrochromic
ECT	=	Electronic Control Transmission
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
EPS	=	Electric Power Steering
EVAP	=	Evaporative Emission
HID	=	High Intensity Discharge
ISC	=	Idle Speed Control
J/B	=	Junction Block
L/B	=	Liftback Type
LH	=	Left-Hand
LHD	=	Left-Hand Drive
M/T	=	Manual Transaxle
PTC	=	Positive Temperature Coefficient
R/B	=	Relay Block
RH	=	Right-Hand
RHD	=	Right-Hand Drive
S/D	=	Sedan Type
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TRC	=	Traction Control
VRV	=	Vacuum Regulating Valve
VSC	=	Vehicle Stability Control
VSV	=	Vacuum Switching Valve
W/G	=	Wagon Type
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.