

General Description


SEATS

1. General Description

A: COMPONENT

1. FRONT SEAT LH

- Normal seat

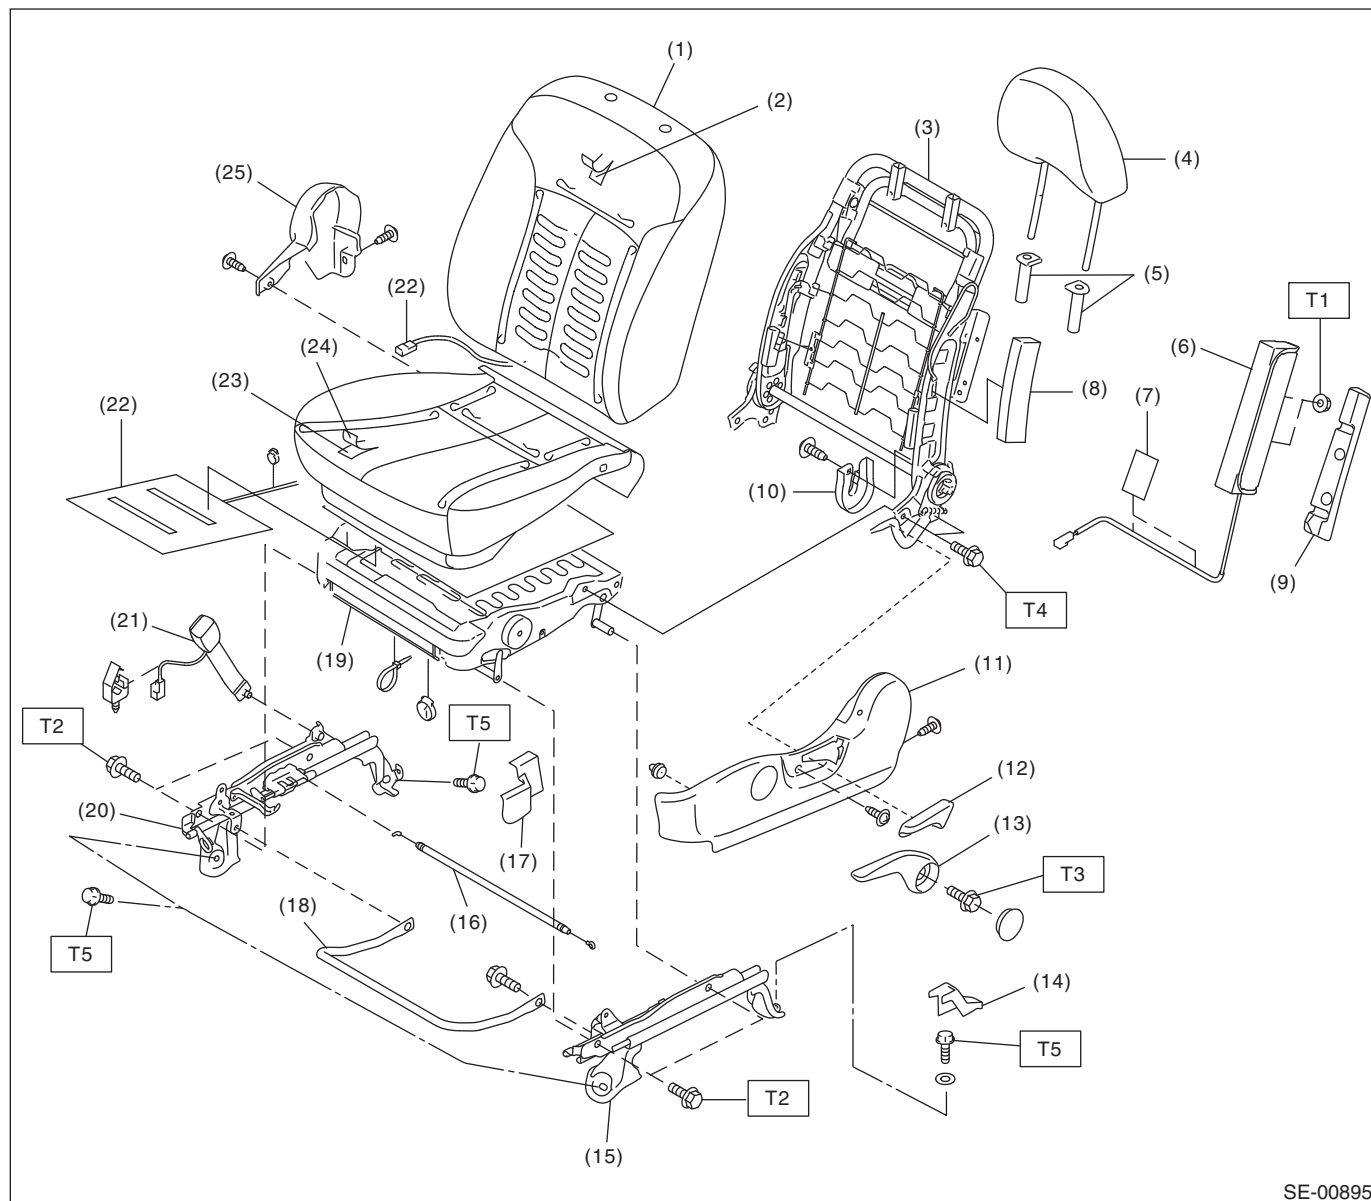

SE-00895

General Description

SEATS

(1) Backrest cover	(11) Seat side cover outside	(23) Seat cushion pad
(2) Backrest pad	(12) Reclining lever	(24) Seat cushion cover
(3) Backrest frame ASSY	(13) Lifter lever	(25) Seat side cover inside
(4) Headrest ASSY	(14) Rear bolt cover outside	
(5) Headrest lock bushing	(15) Outer slide rail	
(6) Side airbag module ASSY	(16) Connecting cable	
(7) Tape	(17) Rear bolt cover inside	
(8) Pad A (Only models without side airbags)	(18) Seat slide bar	
(9) Pad B (Only models with side airbags)	(19) Seat cushion frame ASSY	
(10) Seat hinge inner cover	(20) Inner slide rail	
	(21) Inner seat belt ASSY	
	(22) Seat heater module ASSY	

Tightening torque:N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)

T2: With lifter: 9.8 (1.0, 7.23)

Without lifter: 17.6 (1.8, 13.0)

T3: 17.6 (1.8, 13.0)


T4: 52 (5.30, 38.4)

T5: 53 (5.40, 39.1)

General Description

SEATS

• Power seat

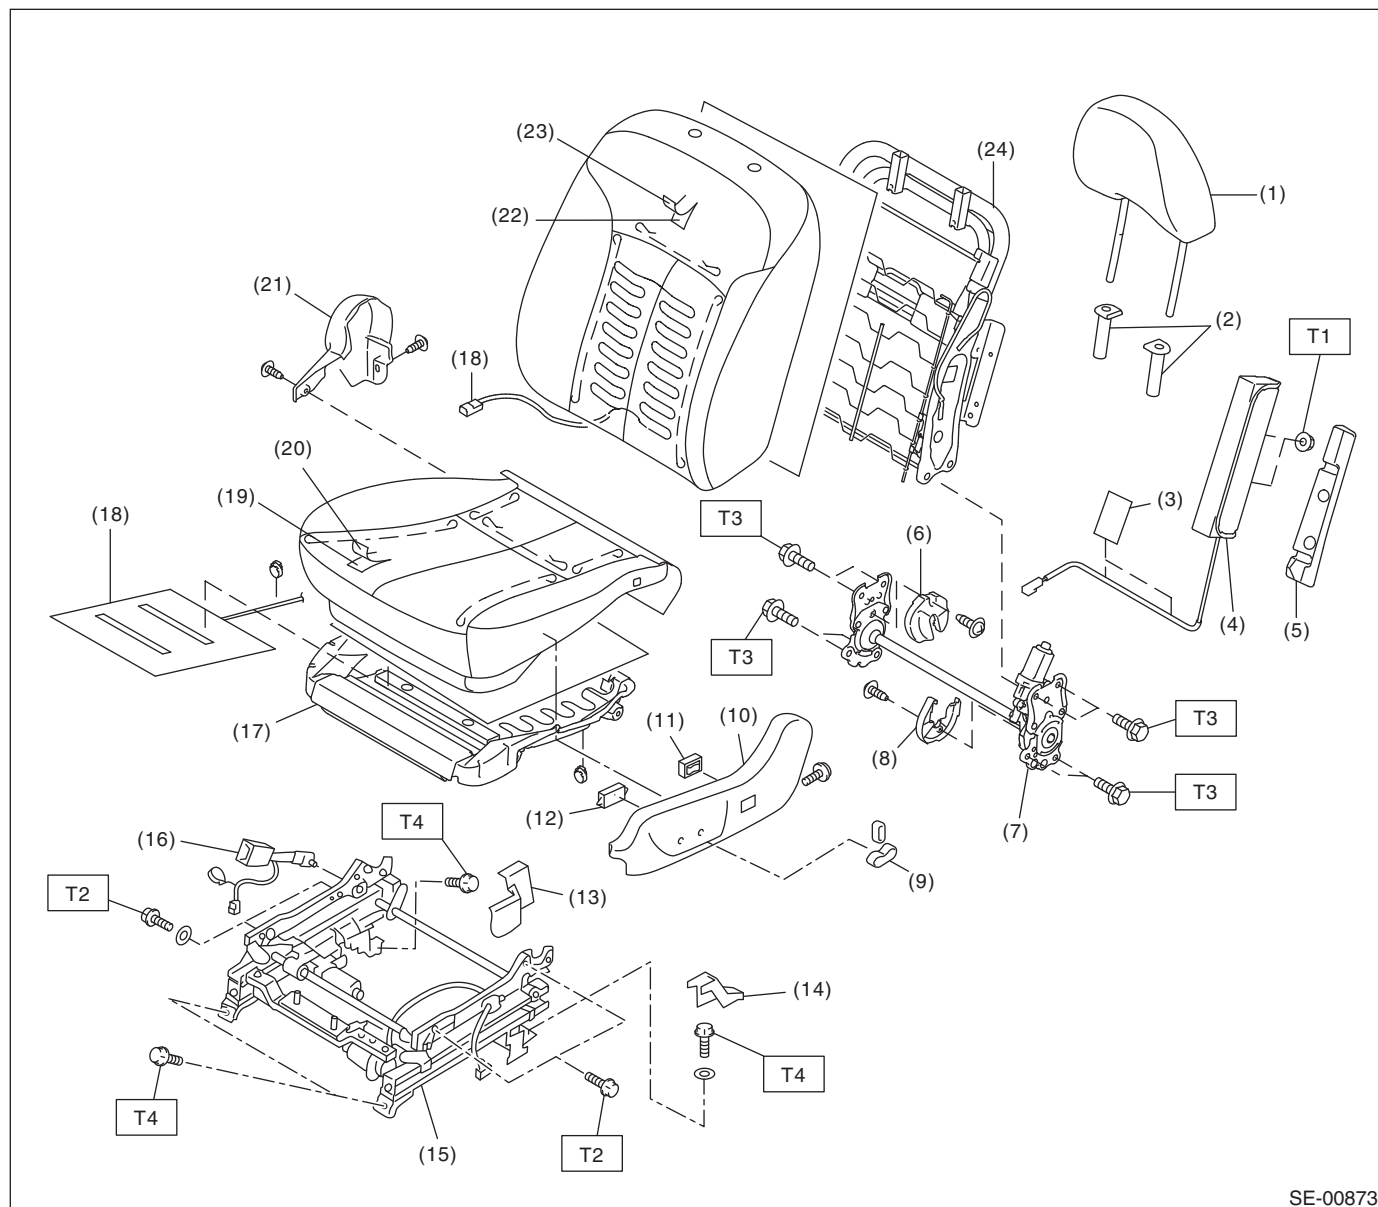

SE-00873

- | | | |
|------------------------------|------------------------------|-----------------------------|
| (1) Headrest ASSY | (11) Lumbar switch unit | (21) Seat side cover inside |
| (2) Headrest lock bushing | (12) Power seat switch unit | (22) Backrest pad |
| (3) Tape | (13) Rear bolt cover inside | (23) Backrest cover |
| (4) Side airbag module ASSY | (14) Rear bolt cover outside | (24) Backrest frame ASSY |
| (5) Pad | (15) Slide rail ASSY | |
| (6) Hinge inner cover RH | (16) Inner seat belt ASSY | |
| (7) Reclining hinge ASSY | (17) Seat cushion frame ASSY | |
| (8) Hinge inner cover LH | (18) Seat heater module ASSY | |
| (9) Power seat switch knob | (19) Seat cushion pad | |
| (10) Seat side cover outside | (20) Seat cushion cover | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 6 (0.61, 4.43)

T2: 17.6 (1.8, 13.0)

T3: 52 (5.30, 38.4)

T4: 53 (5.40, 39.1)

2. FRONT SEAT RH

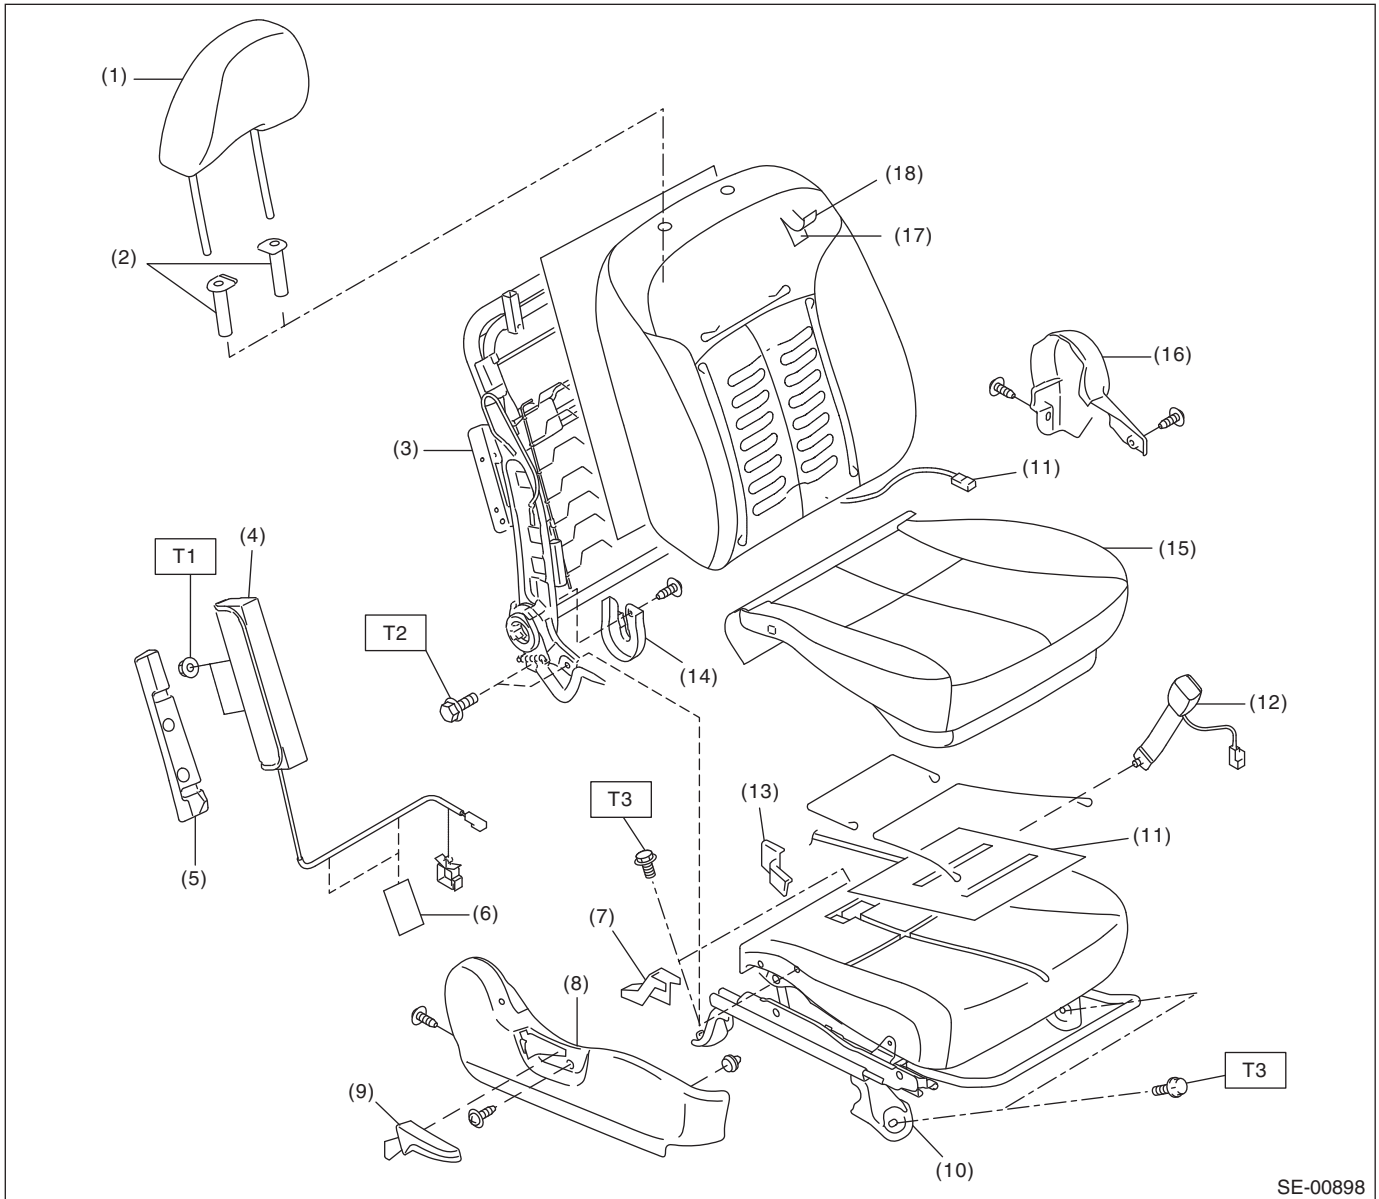

- | | | |
|-----------------------------|--------------------------------------|---------------------|
| (1) Headrest ASSY | (9) Reclining lever | (17) Backrest pad |
| (2) Headrest lock bushing | (10) Seat cushion pad and frame ASSY | (18) Backrest cover |
| (3) Backrest frame ASSY | (11) Seat heater unit | |
| (4) Side airbag module ASSY | (12) Inner seat belt ASSY | |
| (5) Pad | (13) Rear bolt cover inside | |
| (6) Tape | (14) Hinge inner cover RH | |
| (7) Rear bolt cover outside | (15) Seat cushion cover | |
| (8) Seat side cover outside | (16) Seat side cover inside | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.43)


T2: 52 (5.30, 38.4)

T3: 53 (5.40, 39.1)

General Description

SEATS

3. REAR SEAT

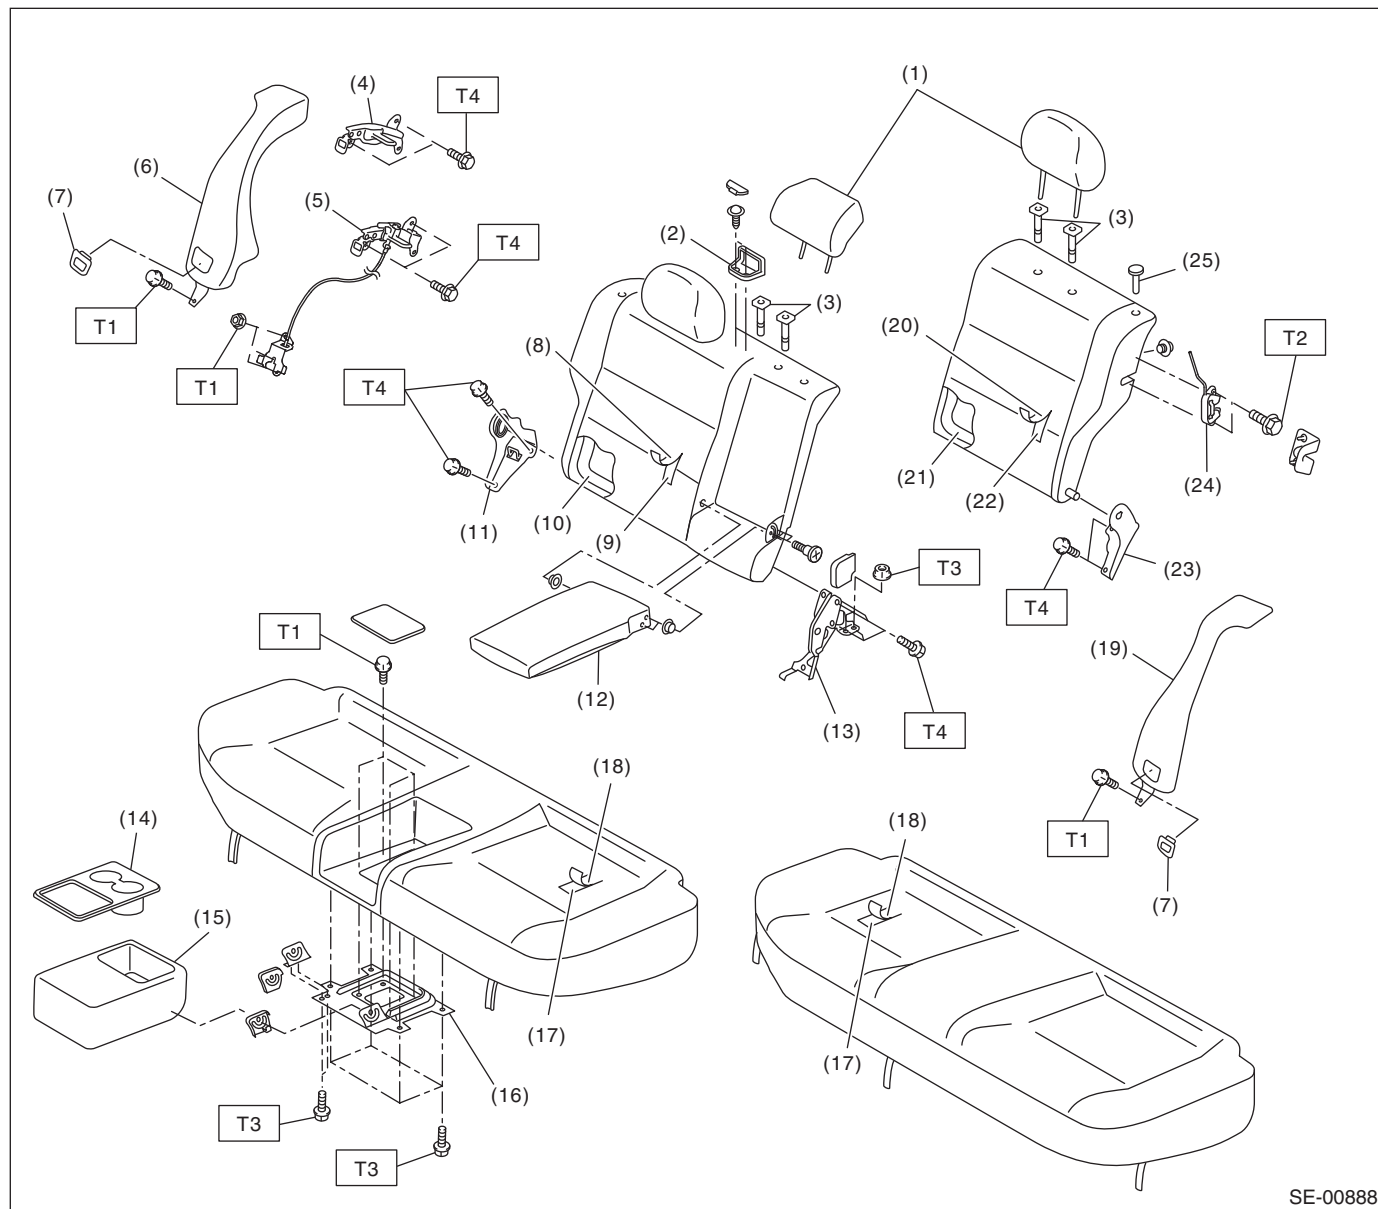

SE-00888

- | | | |
|-------------------------------|--|--------------------------|
| (1) Headrest ASSY | (13) Hinge ASSY center | (21) Backrest frame LH |
| (2) Seat belt guide | (14) Seat table plate
(Models with seat tables) | (22) Backrest pad LH |
| (3) Headrest bushing | (15) Seat table
(Models with seat tables) | (23) Hinge ASSY LH |
| (4) Striker | (16) Seat table frame
(Models with seat tables) | (24) Seat backrest latch |
| (5) Striker (Reclining type) | (17) Seat cushion pad | (25) Backrest knob |
| (6) Seat backrest shoulder RH | (18) Seat cushion cover | |
| (7) Reclining button | (19) Seat backrest shoulder LH | |
| (8) Backrest cover RH | (20) Backrest cover LH | |
| (9) Backrest pad RH | | |
| (10) Backrest frame RH | | |
| (11) Hinge ASSY RH | | |
| (12) Armrest ASSY | | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 17.6 (1.8, 13.0)

T3: 24.5 (2.5, 18.1)

T4: 33 (3.3, 24.3)

B: CAUTION

- If the seat cushion cover is removed or replaced, make sure to perform passenger detection system adjustment after installing the seat to the vehicle. <Ref. to OD(diag)-19, OPERATION, System Calibration (Rezeroing).>

If system adjustment is not performed, the occupant detection system may not function properly.

- The passenger detection system (passenger seat only) control unit and the passenger detection sensor are fixed to the seat cushion frame. Never remove the passenger detection control unit or the pressure sensor from the seat cushion frame.

- Do not replace the seat cushion pad by itself. Always replace the seat cushion pad and frame assembly as a set. The seat cushion pad and cushion frame are adjusted as a set at the time of manufacture. If cushion pads and cushion frames are combined from those of other vehicles or other sets, the passenger detection system may not operate properly.

- If the seat cushion cover is removed, make sure to replace the hang wire on the seat cushion side with a new wire.

C: PREPARATION TOOL**1. GENERAL TOOL**

TOOL NAME	REMARKS
Long nose plier	Used for removing the hog ring.
Hog ring pliers	Used for installing the hog ring.
Circuit tester	Used for checking voltage and continuity.