


3. Rear Seat

A: REMOVAL


CAUTION:

The satellite safing sensor of the airbag system is installed under the center of the rear seat cushion. Read the cautions and warnings indicated in the AB section before removing the rear seat. <Ref. to AB-5, CAUTION, General Description.>

- 1) Remove the cap behind the seat table and disconnect the connector. (Models with seat table)
- 2) Remove the bolt. (Models with seat table)

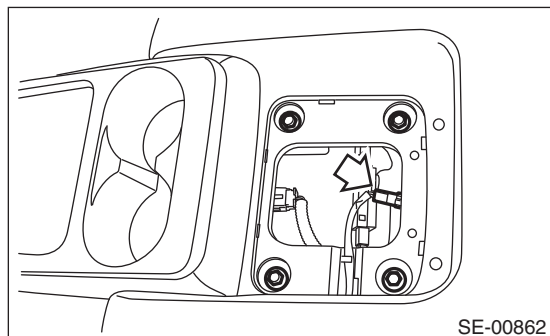


- 3) Remove the three hooks while lifting up the rear seat cushion.

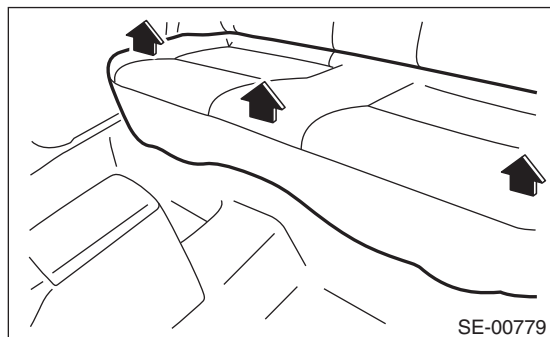


NOTE:


There are two hook locations on the seat table.

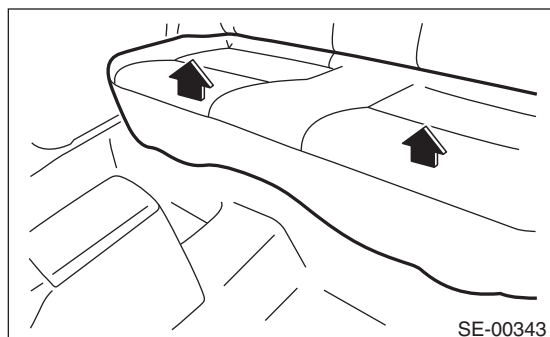


- 4) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

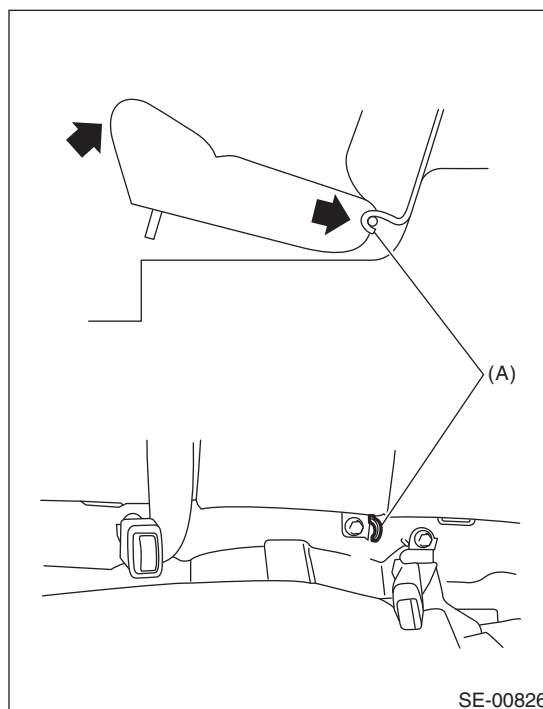

- 5) Remove the headrest, and then tilt the backrest forward.
- 6) Remove the luggage floor mat.
- 7) Turn over the mat and remove the bolts.

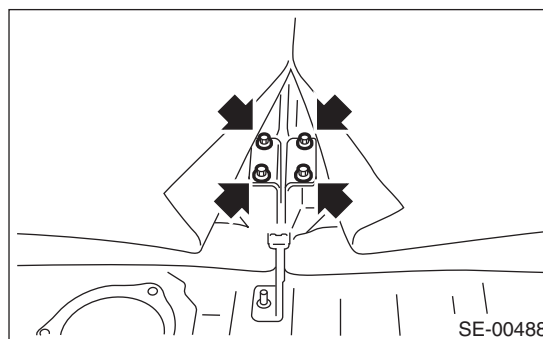

- 8) Remove the backrest from hinge assembly LH (hinge assembly RH).

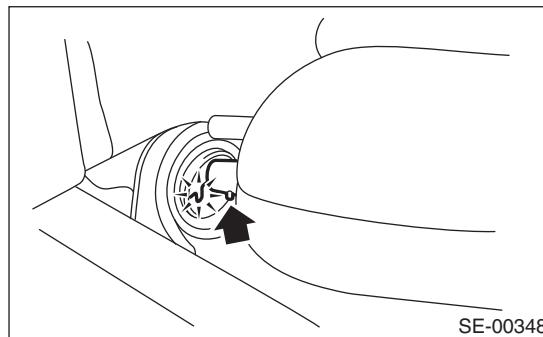

NOTE:

The backrest cannot be detached while the hinge assembly side and the backrest pin are not aligned.

Rear Seat

SEATS

9) Remove the reclining button.



CAUTION:

Use the following procedures to remove the reclining button. Damage to the reclining button may result if the procedures are not followed correctly.

- (1) Remove the weather strip, and insert a flat-head screwdriver into the rear of the rear seat backrest shoulder.
- (2) Press the tab on the rear side of the reclining button downwards and remove the reclining button.

CAUTION:


Do not press strongly on the button tab. Pressing with excessive force may break the tab.

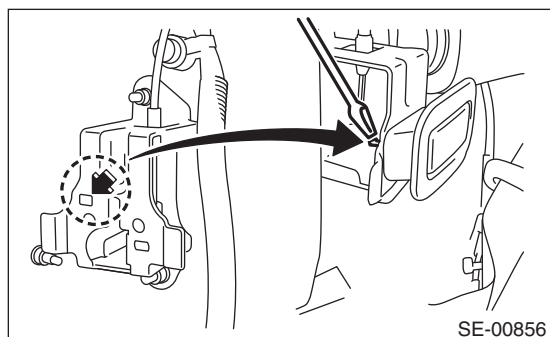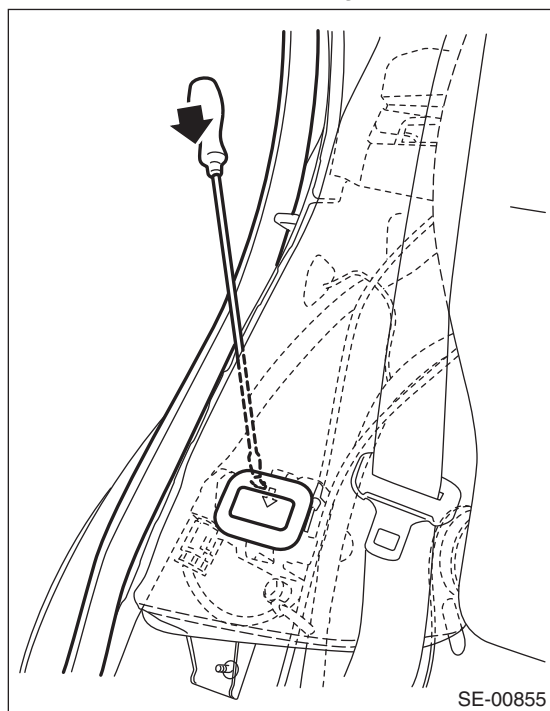

NOTE:

- Direct a light from under the rear seat backrest shoulder to easily identify the tab position.
- The LH side is left and right symmetrical.

10) Remove the nut, and remove the rear seat backrest shoulder.

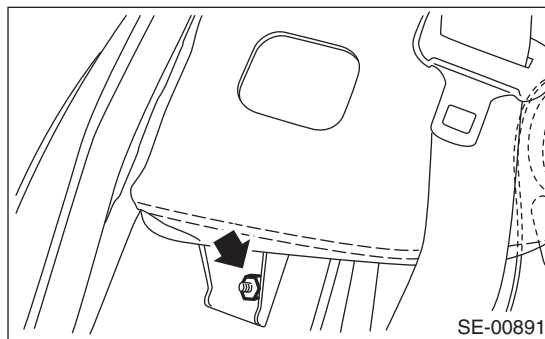

B: INSTALLATION

1) Install in the reverse order of removal.

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SE-6, REAR SEAT, COMPONENT, General Description.>

2) Check the routing of the seat belt. <Ref. to SB-19, INSTALLATION, Rear Seat Belt.>


C: DISASSEMBLY

1) Remove the rear seat. <Ref. to SE-15, REMOVAL, Rear Seat.>


2) Remove the armrest hinge cover in the direction of the black arrow, and loosen the screws to remove the armrest.

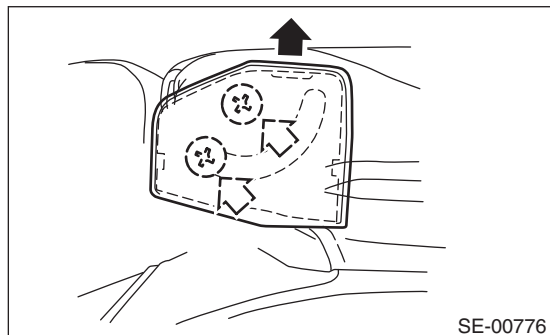**NOTE:**


The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

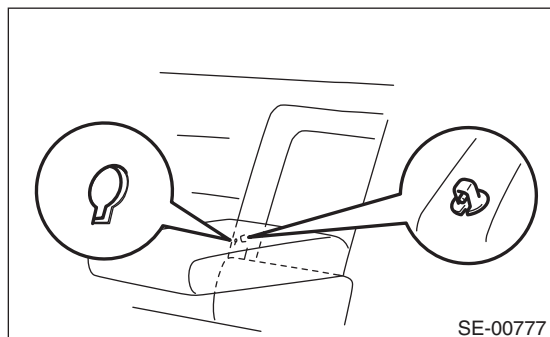


3) Remove the backrest knob. (Screw-in type)

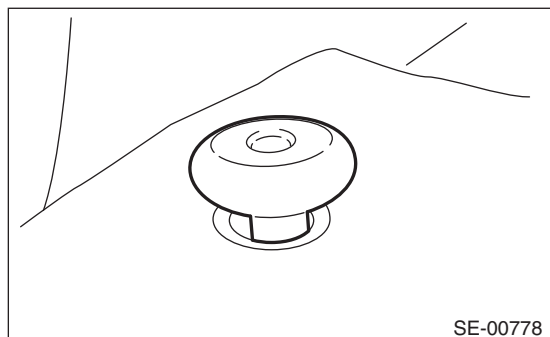

4) Remove the seat backrest latch cover.

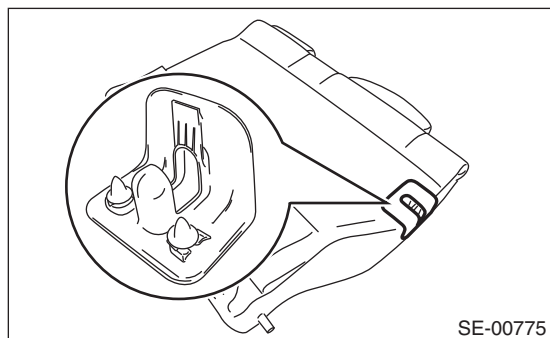

5) Turn over the backrest cover to remove the hog rings.

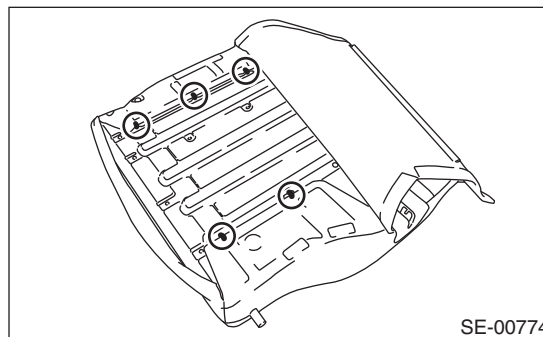


6) Remove all the hog rings securing the backrest frame and backrest pad.

7) Remove the headrest bushing.


8) Remove the backrest pad and backrest cover from the backrest frame.

9) Disassemble the backrest assembly LH by referring to above procedures.


10) Remove the bolts on the backside of the seat cushion, and remove the seat table assembly.

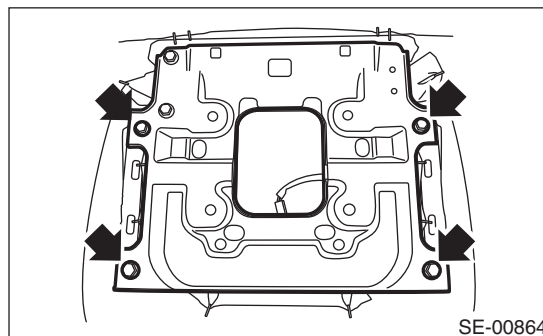


11) Remove the bolts on the right and left sides, and remove the seat table assembly.

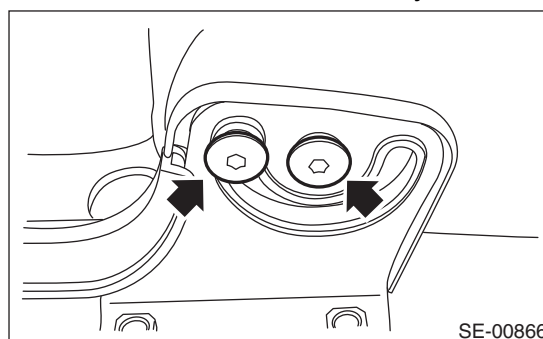

12) Remove the bolts and the seat table hinge.

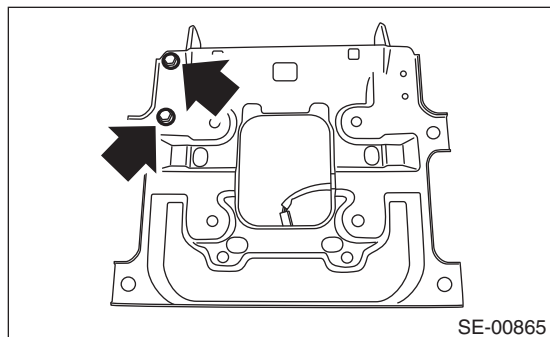


13) Remove the hooks and the seat table plate.

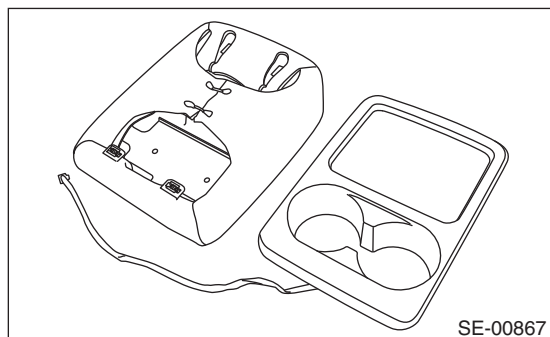


14) Remove all the hog rings on the backside of the seat cushion, and disassemble the seat cushion cover and seat cushion pad.

15) Open the plastic fastener and remove the headrest cover from the headrest.

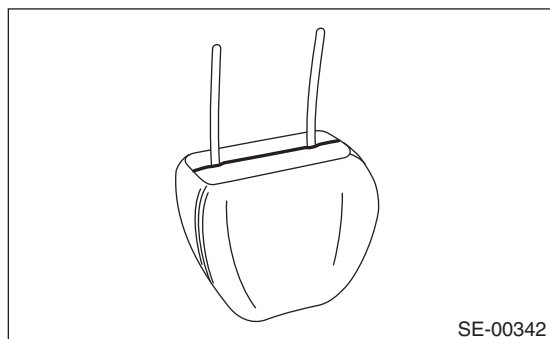

16) Detach the plastic fastener and hog ring, and then remove the armrest cover.

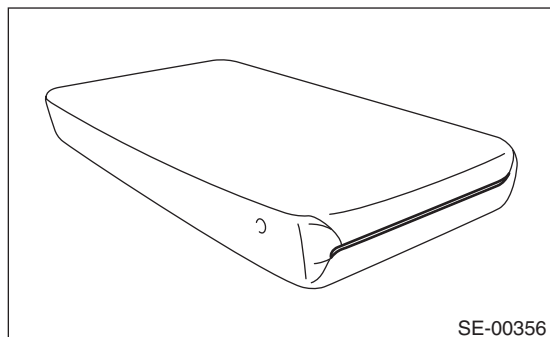

D: ASSEMBLY

CAUTION:

- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.