



6. Rear Seat Reclining System

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the backrest shoulder. <Ref. to SE-15, REMOVAL, Rear Seat.>
- 3) Remove the rear quarter lower trim. <Ref. to EI-55, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolts and the wire, and remove the rear seat backrest striker assembly.

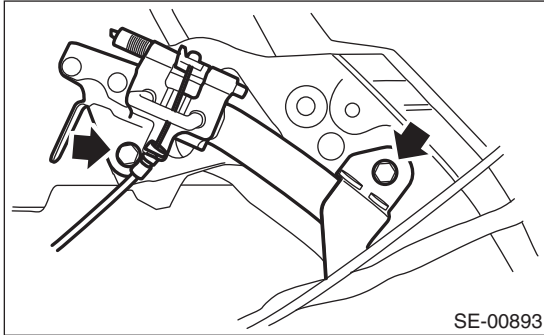

- 5) Remove the nuts and remove the reclining button bracket.

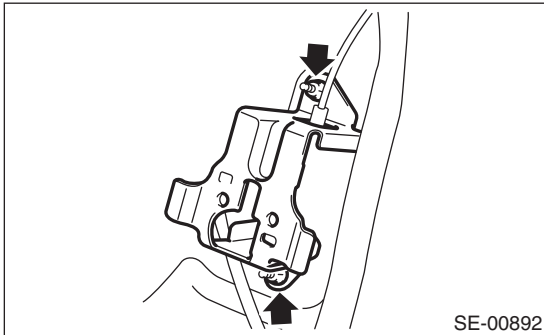

B: INSTALLATION

Install in the reverse order of removal.

SECURITY AND LOCKS

SL

	Page
1. General Description	2
2. Door Lock Control System	8
3. Keyless Entry System	13
4. Security System	22
5. Front Inner Remote	26
6. Front Outer Handle	27
7. Front Door Latch and Door Lock Actuator Assembly	28
8. Rear Inner Remote	29
9. Rear Outer Handle	30
10. Rear Door Latch and Door Lock Actuator Assembly	31
11. Rear Gate Opener Button	32
12. Rear Gate Latch and Actuator Assembly	33
13. Front Hood Lock Assembly	34
14. Remote Openers	35
15. Ignition Key Lock	36
16. Key Lock Cylinders	37
17. Security Control Module	38
18. Impact Sensor	39
19. Keyless Entry Control Module	40
20. Keyless Buzzer	41
21. Body Integrated Unit	42
22. Transmitter	43
23. Immobilizer Control Module	44
24. Immobilizer Antenna	45