



10. Air Cleaner Element

A: REPLACEMENT


- 1) Disconnect the ground cable from the battery.
- 2) Remove the air intake duct (rear).

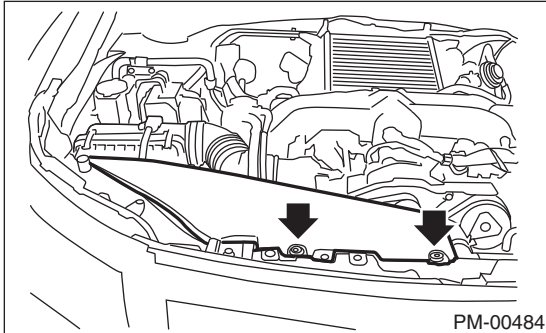


- 3) Disconnect the connector from the mass air flow and intake air temperature sensor.

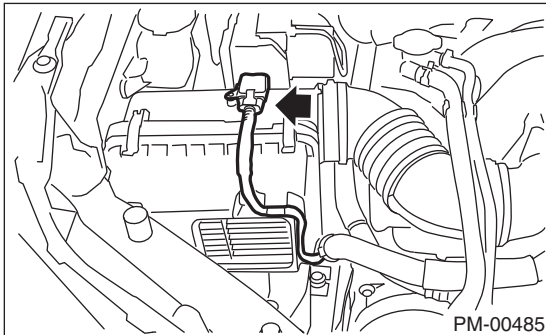

- 4) Remove the clips on the upper side of the air cleaner case.

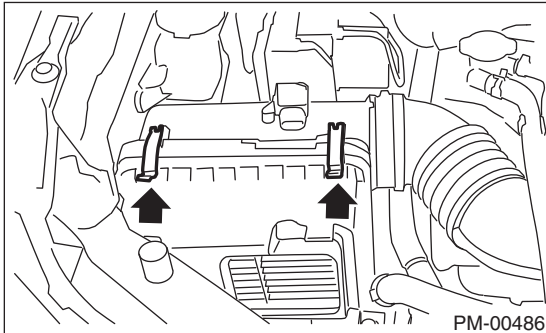

- 5) Separate the intake duct boot from the air cleaner case. (Non-turbo model)
- 6) Pull the air cleaner case (rear) towards the back of the vehicle and remove the element.

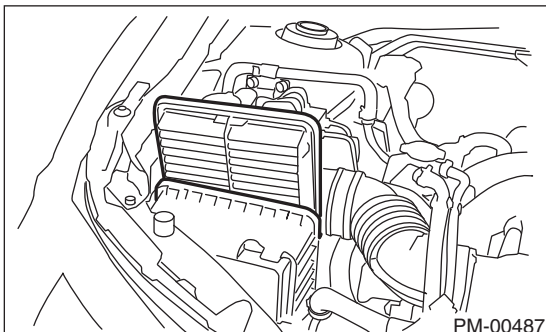

- 7) Check that there is no foreign matter on the clean side and install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.