


Alfa Romeo MiTo 2008 – 2013 fuse box diagram


Fuse box in engine compartment

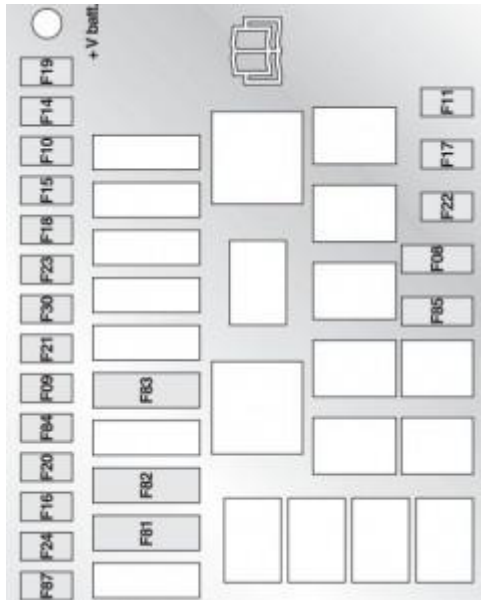

Alfa Romeo MiTo – fuse box – engine


compartment

Fuse box on dashboard

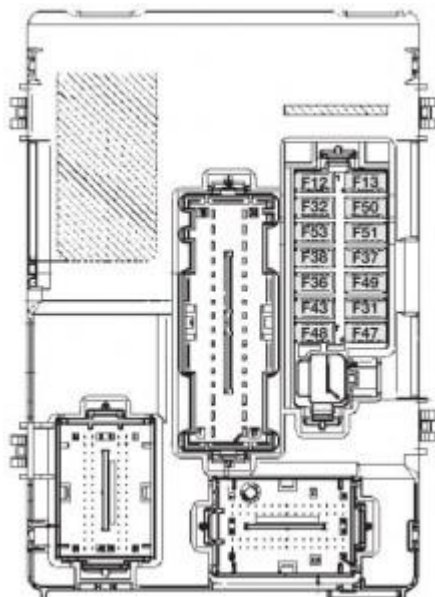

Alfa Romeo MiTo – fuse box – dashboard

Luggage compartment fuse box

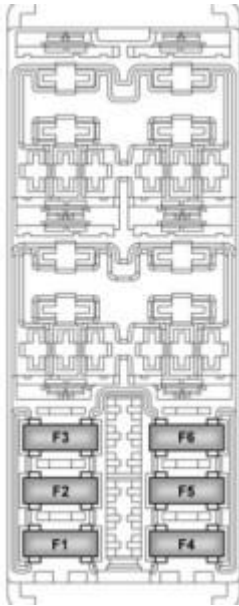

Alfa Romeo MiTo – fuse box – luggage

Fuse summary table

Lights	Fuse	Ampere rating [A]	Location
Main beams	F14	15	Engine compartment
Right hand dipped beam headlight	F12	7,5	Dashboard
Left hand dipped beam headlight	F13	7,5	Dashboard
Headlight gas discharge system (right side)	F12	15	Dashboard
Headlight gas discharge system (left side)	F13	15	Dashboard
Fog lights	F30	15	Engine compartment
3rd Brake light	F37	5	Dashboard

Reversing light	F51	5	Dashboard
Front courtesy light, luggage compartment light, Sun visor courtesy light, Door lights, Glove compartment light	F32	5	Dashboard

Consumers	Fuse	Ampere rating [A]	Location
Passenger compartment fan	F08	30	Engine compartment
Headlight washer pump	F09	20	Engine compartment
Two-tone horn	F10	15	Engine compartment
Waste gate solenoid, Shut off solenoid, Canister solenoid, Lambda Sensor Heater, VGT solenoid, EGR cooling bypass solenoid, Swirl solenoid, Throttle solenoid, Glow plug preheating control unit	F11	10	Engine compartment
Headlight alignment adjustment system	f13	7,5	Dashboard
Additional heater (PTC 1)	F15	30	Engine compartment
Engine management control unit	F16	5	Engine compartment

Engine management control unit (power supply)	F17	10	Engine compartment
Control system relay coil, Engine management control unit (1.4 versions), Engine cooling system remote control switch coil (300W+300W)	F18	5	Engine compartment
Air conditioning compressor	F19	7,5	Engine compartment
Heated rear windscreen, demisting system	F20	30	Engine compartment
Fuel pump on tank	F21	15	Engine compartment
Engine management system main loads (1.4 versions)	F22	10	Engine compartment
Engine management system main loads (1.6 JTDM versions)	F22	20	Engine compartment
Braking system control unit (control unit and solenoid unit)	F23	20	Engine compartment
Electric steering control unit (power supply + Key), Brake system control unit (power supply + Key), Yaw sensor on tunnel	F24	5	Engine compartment
INT/A key exhaust relay coils on engine fuse box	F31	5	Dashboard
Radio, Blue&Me™ control unit, Climate control unit, Alarm control unit, Volume sensing system control unit, EOBD external diagnostic socket, Tyre pressure detection control unit	F36	10	Dashboard

Instrument panel, Brake light switch, Gas discharge headlights management system	F37	5	Dashboard
Door lock motor on door, Safe Lock motor on doors, Tailgate unlocking motor	F38	15	Dashboard
Windscreen / rearscreen washer pump	F43	20	Dashboard
Electric window motor complete with control unit (driver-side door)	F47	20	Dashboard
Electric window motor complete with control unit (passenger-side door)	F48	20	Dashboard
Parking sensors control unit, Tyre pressure detection control unit, Rain/dusk sensor on rear-view mirror, Electro-chrome sensor on rear-view mirror, Seat belts fastened warning light display on rear-view mirror, Control panel illumination (Central control panel, Driver-side control panel, Steering wheel control panel, Blue&MeTM control panel), Front seat heating pad activation switch, Alarm system volume-sensing sensors control unit, Electric sunroof control unit, PND socket on dashboard	F49	5	Dashboard
Air Bag system control unit	F50	7,5	Dashboard
Clutch switch, Brake light switch, relay coils on engine fuse box, Control system on internal heater/air conditioning unit, Blue&MeTM control unit, Radio wiring, Air flow meter, Water in diesel fuel sensor	F51	5	Dashboard
Instrument panel	F53	5	Dashboard
Bose HI-FI system amplifier control unit	F4	15	Luggage

Bassbox subwoofer in spare wheel compartment	F5	10	Luggage
Left and right front seat heater	F6	15	Luggage
Electric sunroof opening system	F1	20	Luggage
Fuse wiring	F2	—	Luggage
Luggage compartment power socket	F3	15	Luggage
Passenger compartment fan	F83	40	Engine compartment
Power socket on tunnel	F85	15	Engine compartment
Passenger/driver-side door mirror demister, Demister on front jets, Heated windscreen relay coil	F87	7,5	Engine compartment