

Dodge Stratus 2001 – 2006 fuse box diagram

Engine Compartment Fuse Box



Dodge Stratus – fuse box diagram – engine

compartment


No.	A	Protected Component
1	40	Ignition Switch (Fuse (Passenger Compartment): "1", "4", "16", "19")
2	20	Cigar Lighter/Power Outlet
3	30	Export: Headlamp Washer Relay
4	40	Headlamp Delay Relay, Multi-Function Switch, Fuse (Passenger Compartment): "9", "10", "18"
5	–	–
6	40	Rear Window Defogger Relay
7	40	2.4L PZEV: Air Pump Motor Relay

8	20	Starter Relay, Fuel Pump Relay, Ignition Switch (Clutch Interlock/Upstop Switch (M/T), Transmission Control Module (A/T), Body Control Module, Fuse (Passenger Compartment): "14", "15", "17", Fuse (Engine Compartment): "23")
9	20	Transmission Control Relay, Transmission Control Module, Transmission Solenoid/Pressure Switch Assembly
10	10	Ignition Switch (Fuse (Passenger Compartment): "11"), Sentry Key Immobilizer Module
11	20	Stop Lamp Switch, Fuse (Passenger Compartment): "5", Rear Fog Lamp Relay
12	40	Air Conditioner Compressor Clutch Relay, Radiator Fan (Low Speed) Relay, Radiator Fan (High Speed) Relay
13	20	Heated Seat Relay (Driver/Passenger Heated Seat Module)
14	30	Automatic Shut Down Relay (Fuse: "24", "25"), Powertrain Control Module
15	40	ABS
16	40	Fuse (Passenger Compartment): "7", "8"
17	40	Convertible: Power Top Up/Down Relays
18	40	Front Wiper (On/Off) Relay (Front Wiper (High/Low) Relay)
19	20	Convertible: Seat Belt Control Module
20	20	Multi-Function Switch
21	–	–

22	20	ABS
23	10	Sentry Key Immobilizer Module, Leak Detection Pump (USA), Powertrain Control Module, Fuel Pump Relay, Air Conditioner Compressor Clutch Relay, Radiator Fan (Low Speed) Relay, Radiator Fan (High Speed) Relay
	20	Sentry Key Immobilizer Module, Leak Detection Pump (USA), Powertrain Control Module, Fuel Pump Relay, Air Conditioner Compressor Clutch Relay, Radiator Fan (Low Speed) Relay, Radiator Fan (High Speed) Relay
24	20	Fuel Injector, Ignition Coil, Noise Suppressor, Manifold Tuning Valve (2.7L)
25	20	Generator, EGR Solenoid, Oxygen Sensor, PCV Heater (2.7L)
Relay		
R1	Transmission Control	
R2	Starter	
R3	Fuel Pump	
R4	Front Wiper (High/Low)	
R5	Front Wiper (On/Off)	
R6	Export: Rear Fog Lamp	
R7	Air Conditioner Compressor Clutch	
R8	Heated Seats	

R9	Radiator Fan (Low Speed)
R10	Radiator Fan (High Speed)
R11	Automatic Shut Down
R12	Headlamp Washer

Passenger Compartment Fuse Box

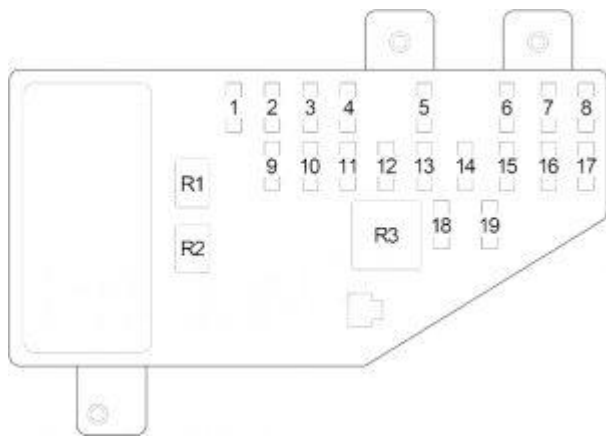

Dodge Stratus – fuse box diagram –

passenger compartment

No.	A	Protected Component
1	30	Blower Motor (MTC), Blower Motor Power Module (ATC)
2	10	High Beam, Right Headlamp (USA), Daytime Running Lamp Module (USA), Right Lavalier Module (export)
3	10	High Beam, Left Headlamp (USA), Left Lavalier Module (export)
4	15	ABS, Back-Up Lamp Switch (M/T), Transmission Range Sensor (A/T), Daytime Running Lamp Module, Driver/Passenger Door Lock Switch, Power Mirror Switch, Brake Transmission Shift Interlock Solenoid, Automatic Temperature Control Head (ATC), Compass/Mini-Trip Computer

5	10	Data Link Connector, Dome Lamp, Power Mirror Switch, Driver/Passenger Door Lock Switch, Driver/Passenger Cylinder Lock Switch (VTSS), Body Control Module, Glove Box Lamp, Radio, Automatic Temperature Control Head (ATC), Compass/Mini-Trip Computer, Trunk Lamp, Power Antenna (export), Rear Floor Courtesy Lamp, Overhead Map/Courtesy Lamp, Left/Right Vanity Lamp
6	10	Heated Mirror, A/C Heater Control
7	20	Multi-Function Switch (Headlamp Switch (Headlamp Leveling Switch (export), Body Control Module, Park/Turn Signal Lamp (USA), Left/Right Lavalier Module (export), Tail/Stop/Side Marker/Turn Signal Lamp, License Lamp), Instrument Cluster
8	20	Horn Relay, Audio Amplifier
9	15	Power Door Lock Motors (Body Control Module)
10	20	Daytime Running Lamp Module, Multi-Function Switch (export)
11	10	Transmission Control Module, Body Control Module, Autostick Switch, Heated Seat Switch (export), Instrument Cluster, A/C Heater Control, Data Link Connector
12	10	Low Beam, Daytime Running Lamp Module, Left Headlamp (USA), Left Lavalier Module (export)
13	20	Low Beam, Multi-Function Switch (Fog Lamp, Instrument Cluster), Right Headlamp (USA), Right Lavalier Module (export)
14	10	Radio
15	10	Multi-Function Switch, Front Wiper (High/Low) Relay, Rear Window Defogger Relay, Body Control Module

16	10	Occupant Restraint Controller (Airbag Control Module)
17	10	Occupant Restraint Controller (Airbag Control Module), Left/Right Side Impact Airbag Control Module
Circuit Breaker		
18	20	Power Seat Switch
19	30	Power Window Switch, Sunroof Control Module, Window Drop Relay (Convertible)
Relay		
R1	Headlamp Delay	
R2	Horn	
R3	Rear Window Defogger	