

Dodge Magnum SRT 2007 fuse box diagram

Front Power Distribution Center

A power distribution center is located in the engine compartment. Interior Fuses

Cavity	Cartridge fuse	Mini fuse	Description
1	—	—	—
2	—	—	—
3	—	15	Adjustable Pedals – if equipped
4	—	20	AC Clutch/Horn
5	—	—	—
6	—	15	Front Control Module (FCM)
7	—	20	Fog Lamp
8	—	15	Lights – License, Park, Side Marker, Stop, Turn
9	—	15	Front Control Module (FCM)
10	—	5	Powertrain Control Module (PCM)/Starter
11	—	25	Auto Shutdown/Powertrain Control Module (PCM)

12	—	—	—
13	—	—	—
14	—	25	Powertrain Control Module (PCM)
15	—	20	Injectors, Ignition Coils
16	—	—	—
17	30	—	Anti-lock Brakes System (ABS) Valves/Powertrain Control Module (PCM)
18	30	—	Windshield Wiper/Washer
19	50	—	Radiator Fan
20	20	—	Starter
21	50	—	Anti-lock Brakes System (ABS) Pump Motor
22	40	—	AC Clutch/Radiator Fan High — Low
23	—	—	—
24	60	—	Radiator Fan
25	30	—	Front Control Module (FCM)
26	—	—	—

27	30	—	Front Control Module (FCM)
----	----	---	----------------------------

Rear Power Distribution Center

There is also a power distribution center located in the trunk under the spare tire access panel.

Cavity	Cartridge fuse	Mini fuse	Description
1	60	—	Ignition Off Draw (IOD)
2	40	—	Battery
3	—	—	—
4	40	—	Battery
5	40	—	Heated Seats – if equipped
6	—	20	Fuel Pump
7	—	20	Amplifier – Subwoofer
8	—	15	Ignition Switch/Airbag Control Module (ACM)
9	—	20	Console Power Outlet
10	—	—	—

11*	—	—	—
12*	—	—	—
13*	—	—	—
14	—	10	AC Heater Control/Cluster/Sentry Key Remote Keyless Entry
15	—	20	Trailer Tow Brake Module – if equipped
16	—	20	Rear Power Outlet
17	—	20	Cluster
18	—	20	Selectable Power Outlet
19	—	10	Stop Lights
20	—	20	Rear Wiper
21	—		—
22	—		—
23	—		—
24	—		—
25	—		—

26	—		—
27	—	10	Airbag/Airbag Control Module (ACM)
28	—	10	Curtain Airbag – if equipped
29	—	5	Anti-lock Brakes Module/Cluster/Front Control Module (FCM)/Powertrain Control Module (PCM)/Sentry Key Remote Keyless Entry/Stop Lights
30	—	10	Door Modules/Power Mirrors – if equipped/Steering Control Module
31	—		—
32	—		—
33	—		—
34	—		—
35	—	5	Amplifier – if equipped/Antenna/Ignition Delay/Overhead Console/Passenger Door Lock & Express Power Window Switch – if equipped/Power Mirrors – if equipped/Rear Defrost
36	—	20	Hands Free Phone – if equipped/Media System Monitor DVD – if equipped/Radio/Satellite Receiver – if equipped
37	—	15	Transmission – NAG1
38	—	5	Overhead Console
39	—	10	Heated Mirrors – if equipped

40	—	10	Heated Seats – if equipped/Inside Rearview Mirror
41	—	10	Tire Pressure Monitoring – if equipped
42	30	—	Front Blower Motor
43	30	—	Amplifier – if equipped/Antenna/Rear Defrost
44	20	—	Amplifier – if equipped/Front Control Module (FCM)/Sunroof – if equipped

* Cavities 11, 12, and 13 contain self-resetting fuses (circuit breakers). The Cluster is fused by the 25 amp circuit breaker in Cavity 11. The Passenger Seat Switch is fused by the 25 amp circuit breaker in Cavity 12. The Door Modules and the Driver Express Power Window Switch (if equipped) are fused by the 25 amp circuit breaker in Cavity 13. If you experience temporary or permanent loss of these systems.