

H PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A1	A/C Ambient Temp. Sensor	90980-11070	C3	Crankshaft Position Sensor (3S-FE,2C-TE)	90980-10947
A2	A/C Condenser Fan Motor (Gasoline)	90980-11237		Crankshaft Position Sensor (Lean Burn Type, 4A-FE Europe Stoichiometric Type)	
	A/C Condenser Fan Motor (Diesel)	90980-10928		Crankshaft Position Sensor (1CD-FTV)	90980-12028
A3	A/C Magnetic Clutch	90980-11271	C4	Center Airbag Sensor Assembly	90980-11871
A4	A/C Magnetic Clutch and Lock Sensor	90980-10942	C5	Center Airbag Sensor Assembly	90980-11872
A5	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	C6	Center Airbag Sensor Assembly	90980-11873
A6	ABS ECU with Actuator	90080-98102	C7	Cigarette Lighter	90080-98102
A7	ABS Speed Sensor Front LH	90980-11155	C8	Cigarette Lighter Illumination	90080-98112
A8	ABS Speed Sensor Front RH		C9	Circuit Opening Relay	82660-05020
A9	Accelerator Pedal Position Sensor	90980-11016	C10	Combination Meter	90080-98111
A10	Alternator	90980-09212	C11	Combination Meter	90080-98109
A11	Alternator (1CD-FTV)	90980-11964	C12	Combination SW	90980-11672
	Alternator (Except 1CD-FTV)	90980-11349	C13	Combination SW	90980-11594
A12	Ambient Temp. Sensor	90080-98138	C14	Combustion Type Power Heater	90980-10897
A13	A/C Amplifier	90980-10807	C15	Curtain Airbag Squib LH	90980-11864
A14	A/C Amplifier	90980-11469	C16	Curtain Airbag Squib RH	
A15	A/C Amplifier	90980-11556	D1	Daytime Running Light Relay	90980-10807
A16	A/C Evaporator Temp. Sensor	90980-10825	D2	Defogger Relay	82660-05020
A17	A/C Room Temp. Sensor		D3	Deicer SW or Short Connector (Deicer SW)	90980-10996
A18	A/C Solar Sensor	90980-11369	D4	Diode (EFI)	90980-10962
A19	A/C SW	90980-11280	D5	Diode (Idle-Up)	90980-11071
A20	Accelerator Pedal Position Sensor (1CD-FTV,2C-TE (RHD))	90980-11232	D6	Diode (Idle-Up)	90980-10962
	Accelerator Pedal Position Sensor (2C-TE (LHD))		D7	DLC3	90980-11665
A21	Accelerator Position SW	90980-10825	D9	Diode (Luggage Room Light)	90980-10962
A22	Air Mix Control Servo Motor	90980-11165	D10	Door Courtesy SW Front LH	90980-10871
A23	Airbag Squib (Front Passenger Airbag Assembly)	90080-98054	D11	Door Courtesy SW Front RH	
	Airbag Squib (Steering Wheel Pad)		D12	Door Courtesy SW Rear LH	
A24	Airbag Squib (Steering Wheel Pad)	90980-10850	D13	Door Courtesy SW Rear RH	90980-11150
A25	Ashtray Illumination	—	D14	Door Lock Motor Rear LH	
A26	ABS Speed Sensor Rear LH	90980-11060	D15	Door Lock Motor Rear RH	90980-11144
A27	ABS Speed Sensor Rear RH		D16	Door Lock Motor, Door Key Lock and Unlock SW Front LH	
A28	Air Flow Meter	90980-11317	D17	Door Lock Motor, Door Key Lock and Unlock SW Front RH	
B1	Back-Up Light SW	90980-11250	D18	Diesel Throttle Control Motor	90980-11038
B2	Brake Fluid Level Warning SW	90980-11156	D19	Diesel Throttle Position Sensor	
B3	Brake Vacuum Warning SW	90980-11252	D20	Diode (Door)	90980-10962
B4	Blower Controller	90980-11136	D21	Diode (Luggage Room Light)	
B5	Blower Motor	90980-10214	E1	ECT Solenoid	90980-11143
B6	Blower Resistor	90980-11136	E2	Engine Hood Courtesy SW	90980-10474
B7	Blower SW	90980-11279	E3	Engine Oil Level Sensor	90980-10532
B8	Back Door Lock Motor	90080-98120	E4	Engine Speed Sensor	90980-11250
C1	Camshaft Position Sensor	90980-10947	E5	ECT Pattern Select SW (Europe)	90980-10933
C2	Check Connector	90980-11195			

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

Code	Part Name	Part Number	Code	Part Name	Part Number
E5	ECT Pattern Select SW (General)	90980-10601	F22	Fuel Control Connector	90980-10871
E6	Engine ECU (M/T) or Engine and ECT ECU (A/T) (3S-FE,Lean Burn Type)	90980-11392	F23	Fuel Control Connector	90980-10870
	Engine ECU (M/T) or Engine and ECT ECU (A/T) (4A-FE General Stoichiometric Type)	90980-11424	F24	Fuse Box	82620-05020
	Engine ECU (1CD-FTV)	90980-11637	F25	Front Door Speaker LH	90980-11156
	Engine ECU (2C-TE)	90980-11408	F26	Front Door Speaker RH	
	Engine ECU (2C-T)	90980-11391	F27	Fuel Sender and Fuel Pump	90980-11077
E7	Engine ECU (M/T) or Engine and ECT ECU (A/T) (3S-FE,4A-FE General Stoichiometric Type,Lean Burn Type,2C-TE,2C-T)	90980-11390	F28	Fuel Pressure Sensor	90980-10845
	Engine ECU (4A-FE Europe Stoichiometric Type)	90080-98103	F29	Fuel Pump	90980-98001
	Engine ECU (1CD-FTV)	90980-11421	G1	Glow Plug (Engine)	99141-13005
			G2	Glow Plug Relay	90980-11569
E8	Engine ECU (M/T) or Engine and ECT ECU (A/T) (3S-FE,4A-FE General Stoichiometric Type,Lean Burn Type,2C-TE)	90980-11391	G3	Glove Box Light	-
	Engine ECU (1CD-FTV)	90980-11476	G4	Glove Box Light SW	90980-11098
			G5	Glass Breakage Sensor ECU	-
E9	Engine ECU (1CD-FTV)	90980-11368	G6	Glass Breakage Sensor Microphone	90980-11368
	Engine ECU (2C-TE)	90980-11392	G7	Glow Plug (Power Heater)	99141-13006
E10	Electronic Driver Unit	90980-11024	G8	Glow Plug (Power Heater)	
E11	Electronic Driver Unit	90980-11592	G9	Glow Plug (Power Heater)	
F1	Front Airbag Sensor LH	90980-11856	H1	Hall Sensor	90080-98027
F2	Front Airbag Sensor RH		H2	Headlight and Front Clearance Light LH	90080-98140
F3	Front Fog Light LH	90080-98001	H3	Headlight and Front Clearance Light RH	
F4	Front Fog Light RH		H4	Headlight Beam Level Control Actuator LH	90980-11349
F5	Front Side Turn Signal Light LH	90080-98138	H5	Headlight Beam Level Control Actuator RH	
F6	Front Side Turn Signal Light RH		H6	Headlight Cleaner Motor	90080-98116
F7	Front Turn Signal Light LH	90080-98001	H7	Headlight Cleaner Relay	90980-10939
F8	Front Turn Signal Light RH		H8	Heated Oxygen Sensor	90980-11028
F9	Front Washer Motor	90080-98117	H9	Horn LH	90980-10619
F10	Front Window Deicer	90980-11155	H10	Horn RH	
F11	Front Wiper Motor	90980-11599	H11	Hazard SW	90980-10801
F12	Fuel Heater (1CD-FTV)	90980-10928	H12	Headlight Beam Level Control SW	90980-10789
	Fuel Heater (2C-TE,2C-T)	90980-11409	H13	Headlight Cleaner SW	90980-10601
F13	Fuel Sedimentary SW (1CD-FTV)	90980-11003	H14	Heater Control SW	90980-10799
	Fuel Sedimentary SW (2C-TE,2C-T)	90980-11254	H15	High Mounted Stop Light	90080-98002
F14	Fuel Temp. Sensor	90980-10737	H16	Heater SW	90980-10996
F15	Fusible Link Block	82620-05020	I1	Ignition Coil	90080-98001
F16	Fusible Link Block		I2	Ignition Coil and Igniter No.1	90980-11150
F17	Fusible Link Block	90980-10903	I3	Ignition Coil and Igniter No.2	
F18	Fusible Link Block	82620-05020	I4	IIA	90980-11038
F19	Fusible Link Block	82620-05020	I5	IIA	90980-11197
F20	Fusible Link Block		I6	Injection Pump (2C-TE)	90980-11028
F21	Front Fog Light Relay		I6	Injection Pump (2C-T)	90980-11157

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro. Al pedir un conector o terminal con cable, asegúrese, de antemano, de que esté suministrado refiriéndose a "Parts Catalog News" (publicado por el Departamento Administrativo de Ingeniería de las Partes).

Anmerkung : Nicht alle der oben erwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert. Im Falle der Bestellung von Stecker oder Anschlußklemme mit Draht bestätigen Sie bitte unter Verwendung der "Teile-Prospekt-Nachrichten" (herausgegeben durch die Teile-Engineering-Verwaltungsabteilung) im voraus, ob es entsprechende Lieferung gibt.

H PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I7	Injector No.1 (3S-FE,4A-FE Europe Stoichiometric Type)	90980-11153	J13	Junction Connector	90980-11661
	Injector No.1 (Lean Burn Type)	90080-98176	J14	Junction Connector	
	Injector No.1 (4A-FE General Stoichiometric Type)	90980-11153	J15	Junction Connector	
	Injector No.1 (1CD-FTV)	90980-12005	J16	Junction Connector	
I8	Injector No.2 (3S-FE,4A-FE Europe Stoichiometric Type)	90980-11153	J17	Junction Connector	
	Injector No.2 (Lean Burn Type)	90080-98176	J18	Junction Connector	
	Injector No.2 (4A-FE General Stoichiometric Type)	90980-11153	J19	Junction Connector	90980-11583
	Injector No.2 (1CD-FTV)	90980-12005	J20	Junction Connector	
I9	Injector No.3 (3S-FE,4A-FE Europe Stoichiometric Type)	90980-11153	J21	Junction Connector	90980-11661
	Injector No.3 (Lean Burn Type)	90080-98176	J22	Junction Connector	
	Injector No.3 (4A-FE General Stoichiometric Type)	90980-11153	J23	Junction Connector	90980-11542
	Injector No.3 (1CD-FTV)	90980-12005	J24	Junction Connector	
I10	Injector No.4 (3S-FE,4A-FE Europe Stoichiometric Type)	90980-11153	J25	Junction Connector	90980-10803
	Injector No.4 (Lean Burn Type)	90080-98176	J26	Junction Connector	
	Injector No.4 (4A-FE General Stoichiometric Type)	90980-11153	J27	Junction Connector	90980-11583
	Injector No.4 (1CD-FTV)	90980-12005	J28	Junction Connector	
I11	Intake Air Temp. Sensor (1CD-FTV,2C-TE)	90980-11025	J29	Junction Connector	90980-11661
	Intake Air Temp. Sensor (Gasoline)	90980-11163	J30	Junction Connector	
I12	ISC Valve	90980-11145	J31	Junction Connector	
I13	Ignition SW	90980-11615	J32	Junction Connector	
I14	Integration Relay	90980-10848	J33	Junction Connector	
I15	Interior Light	90980-10121	J34	Junction Connector	
J1	Junction Connector	90980-11583	J35	Junction Connector	
J2	Junction Connector	90980-11542	J36	Junction Connector	
J3	Junction Connector		J37	Junction Connector	
J4	Junction Connector	90980-10803	K1	Knock Sensor (Except 4A-FE Europe Stoichiometric Type)	90980-11166
J5	Junction Connector			Knock Sensor (4A-FE Europe Stoichiometric Type)	90080-98001
J6	Junction Connector	90980-11661	K2	Kick Down SW	90980-11156
J7	Junction Connector		L1	Lean Mixture Sensor	90980-11028
J8	Junction Connector	90980-11583	L2	License Plate Light LH	90080-98138
J9	Junction Connector		L3	License Plate Light RH	
J10	Junction Connector	90980-11661	L4	Luggage Compartment Door Lock Motor	90080-98120
J11	Junction Connector		L5	Luggage Room Light (S/D)	90980-11148
J12	Junction Connector			Luggage Room Light (L/B)	90980-10121
				Luggage Room Light (W/G)	90980-10935
			L6	Luggage Room Light SW (S/D,L/B)	90980-11097
				Luggage Room Light SW (W/G)	90980-10860
			M1	Moon Roof Control Relay and Motor	90080-98107

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

Code	Part Name	Part Number	Code	Part Name	Part Number
M2	Moon Roof Control SW	90980-10367	R15	Rear Window Defogger (S/D)	90980-10786
M3	Max Hot SW	90980-10860		Rear Window Defogger (L/B)	90980-10792
N1	Neutral Start SW (3S-FE)	90980-11643		Rear Window Defogger (W/G)	90980-11258
	Neutral Start SW (7A-FE,4A-FE)	90980-11332	R16	Rear Wiper Motor and Relay	90080-98136
N2	Noise Filter (Ignition System)	90980-10825	R17	Remote Control Mirror LH (w/ Mirror Heater)	90980-11181
O1	Oil Pressure SW (7A-FE,4A-FE)	90980-11363		Remote Control Mirror LH (w/o Mirror Heater)	90980-11169
	Oil Pressure SW (Except 7A-FE and 4A-FE)		R18	Remote Control Mirror RH (w/ Mirror Heater)	90980-11181
O2	O/D Main SW	90980-10795		Remote Control Mirror RH (w/o Mirror Heater)	90980-11169
P1	Power Steering Oil Pressure SW	90980-11428	S1	Short Connector	90980-10959
P2	Parking Brake SW	90980-10871	S2	Short Connector	90980-10947
P3	Personal Light	90980-11148	S3	Speed Sensor	90980-11143
P4	Power Window Control SW (Front Passenger Side)	90980-10509	S4	Spill Control Valve	90980-11286
	Power Window Control SW Rear LH		S5	Starter (3S-FE)	90980-09506
P6	Power Window Control SW Rear RH			Starter (Except 3S-FE)	90980-09507
P7	Power Window Master SW	90980-10807	S6	Starter	90980-11400
P8	Power Window Motor (Driver Side)	90080-98135	S7	Seat Heater Relay	82660-05020
P9	Power Window Motor (Front Passenger Side)	90080-98128	S8	Seat Heater SW (Driver's Seat)	90980-10797
	Power Window Motor Rear LH		S9	Seat Heater SW (Front Passenger's Seat)	
P11	Power Window Motor Rear RH		90980-11886	S10	Status Monitor
P12	Pretensioner LH	S11		Stop Light SW	90980-11118
P13	Pretensioner RH	S12		Seat Heater (Driver's Seat)	90980-10860
R1	Radiator Fan Motor	90980-10928	S13	Seat Heater (Front Passenger's Seat)	
R2	Rear Washer Motor	90080-98117	S14	Side Airbag Sensor LH	90980-11857
R3	Radar Sensor	90980-11013	S15	Side Airbag Sensor RH	
R4	Radio and Player	90980-10997	S16	Side Airbag Squib LH	90980-11864
R5	Radio and Player	90980-10996	S17	Side Airbag Squib RH	
R6	Rear Window Defogger SW	90980-10797	S18	Suction Control Valve 1	90980-11285
R7	Remote Control Mirror SW	90980-11165	S19	Suction Control Valve 2	90980-11284
R8	Rear Combination Light LH (S/D,L/B)	90080-98175	T1	Theft Deterrent Siren	90980-10988
	Rear Combination Light LH (W/G)	90080-98143	T2	Throttle Position Sensor (4A-FE Europe Stoichiometric Type)	90080-98028
R9	Rear Combination Light LH			Throttle Position Sensor (Except 4A-FE Europe Stoichiometric Type)	90980-11261
R10	Rear Combination Light RH (S/D,L/B)	90080-98175	T3	Timing Control Valve	90980-11153
	Rear Combination Light RH (W/G)	90080-98143	T4	Turbo Pressure Sensor	90980-10845
R11	Rear Combination Light RH		T5	Theft Deterrent ECU	90980-11423
R12	Rear Door Speaker LH	90980-11156	T6	Transponder Key ECU	90980-11581
R13	Rear Door Speaker RH		U1	Unlock Warning SW	90980-10860
R14	Rear Window Defogger (S/D)	90980-10786	V1	Vacuum Sensor	90980-10845
	Rear Window Defogger (L/B)	90980-10792			
	Rear Window Defogger (W/G)	90980-11258			

Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro. Al pedir un conector o terminal con cable, asegúrese, de antemano, de que esté suministrado refiriéndose a "Parts Catalog News" (publicado por el Departamento Administrativo de Ingeniería de las Partes).

Anmerkung : Nicht alle der oben erwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert. Im Falle der Bestellung von Stecker oder Anschlußklemme mit Draht bestätigen Sie bitte unter Verwendung der "Teile-Prospekt-Nachrichten" (herausgegeben durch die Teile-Engineering-Verwaltungsabteilung) im voraus, ob es entsprechende Lieferung gibt.

H PART NUMBER OF CONNECTORS

[illegible]

Note : Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Nota : Toutes les références du connecteur ne sont pas définies pour la fourniture. Pour passer une commande d'un connecteur ou d'une borne avec fil, prière de vérifier préalablement si cette pièce est bien disponible en se reportant à "Parts Catalog News" (publié par le Département de la Gestion de l'Ingénierie).

