


Chevrolet Venture 1998 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is to the right of the glove box.

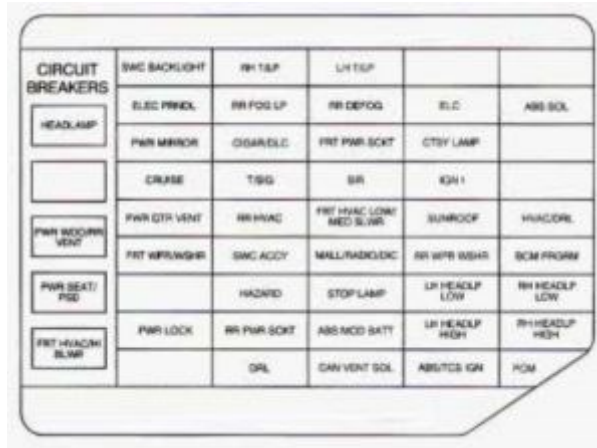

Chevrolet Venture – fuse box – instrument

panel

Circuit breaker	Usage
HEADLAMP	DRL Control Module, Headlamp and UP Dimmer Switch
PWR WDO/RR VENT	Front Power Windows
PWR SEAT/PSD	6-Way Power Seat(s) and Rear Side Door Actuator Motor
FRT HVAC/HI BLWR	Blower Motor Hi Speed Relay in Module
Fuses	Usage
SWC BACKLIGHT	Steering Wheel Radio Control Switches (Illumination)
ELEC PRNDL	Instrument Cluster to PRNDL Indicators
PWR MIRROR	Power Remote Control Mirror Switch
CRUISE	Cruise Control Module, Switch and Release Switch
PWR QTR VENT	Interior Lamps and Multifunction Switch (Power Vent Switch)
FRT WPWSHR	Windshield Wiper/washer Motor and Switch
PWR LOCK	BCM
RR TLP	Not Used
RR FOG LP	Not Used
CIGAR/DLC	Cigarette Lighter and Data Link Connector (DLC)
T/SIG	Turn Signal Switch
RR HVAC	Rear Blower Motor, Rear Heater-NC Control, and Temperature Door Actuator (Rear)
SWC ACCY	Steering Wheel Radio Control Switches
HAZARD	Turn Signal Switch
RR PWR SCKT	Rear Electric Accessory Plug Housing
DRL	DRL Control Module
LH TLP	Not Used

RR DEFOG	Rear Window Defogger Rela
FRT PWR SCKT	Front Electric Accessory Plug Housing
SIR	Inflatable Restraint Control Module
FRT HVAC LOWMED BLWR	Heater-A/C Control
MALL/RADIO/DIC	BCM, Driver Information Display, Radio and Radio Rear Speaker Amplifier
STOP LAMP	Stoplamp Switch to Stoplamps
ABS MOD BATT	Electronic Brake Control ModuleElectronic Brake Traction Control Module (EBCMEBTCM)
CAN VENT SOL	Evaporative Emissions (EVAP) Canister Vent Solenoid Valve
ELC	Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harne
CTSY LAMP	BCM
IGN 1	ALC Sensor, BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Window Wipermasher and Multifunction Switch (Fog Lamp SwitcWTraction Control Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch
SUNROOF	Sunroof Control Module
RR WPR WSHR	Rear Window Wiper Motor, Rear Window Wipermasher and Multifunction Switch (Rear Window Wipermasher Switch)
LH HEADLP LOW	Not Used
LH HEADLP HIGH	Not Used
ABS/TCS IGN Elect	Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)
ABS SOL	LH and RH Front Brake Solenoid Valve
HVAC/DRL	Air Inlet Actuator, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay
BCM PRGRM	Body Control Module (BCM)
RH HEADLP LOW	Not Used
RH HEADLP HIGH	Not Used
PCM	IGN MAIN Relay and PCM

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir. The fuses marked spare are available if a replacement fuse is needed.



Chevrolet Venture – fuse box – engine

compartment

Maxi fuses		Usage
1	COOL FAN 2	Coolant Fans
3	HEADLAMPS	Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (UP): HAZARD and STOPLAMP
4	BATT MAIN 2	Circuit Breaker: PWR SEATRSD. Fuses (UP): ELC and RR DEFOG
5	IGN MAIN 1	Ignition Switch to Fuses (W): ABSECS IGN, CRUISE, DRL, ELEC PRNDL, TGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN I-U/H, INJ, TCC)]
6	COOL FAN 1	Coolant Fans
7	BATT MAIN 1	Fuses (UP): ABS MDL BATT, CIGARDLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT
8	IGN MAIN 2	Ignition Switch to Fuses (VP): BCM PRGRM, FRT HVAC LOWMED BLWR, FRT WPWSHR, HVACDRL, MALL/RADIO/DIC, PWR QRT VENT, RR HVAC, RR WPWSHR, SUNROOF, SWC ACCY and PWR WDO Circuit Breaker
Mini Relays		Usage
9	COOL FAN	RH FAN 1, LH FAN 2
10	COOL FAN 2	LH FAN 2
11	IGN MAIN	FUSES: A/C CLU, IGN I-U/H, INS, ELEK IGN, TCC
12	COOL FAN 1	RH FAN 1, LH FAN 2
Micro Relays		Usage
13	A/C CLU	A/C Clutch
14	FUEL PUMP	Fuel Pump
15	F/FMP SPD CONT	Not Used
16	HORN	Horn
17	FOG LAMP	LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator

Micro Re	Usage
----------	-------

18	INJ	Fuel Injectors 1-6
19	SPARE	Not Used
20	SPARE	Not Used
21	IGN1-UH	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor
22	SPARE	Not Used
23	SPARE	Not Used
24	SPARE	Not Used
25	ELEK IGN	Ignition Control Module (ICM)
26	SPARE	Not Used
27	B/U LAMP	Transaxle Range Switch to Back-up Lamps
28	A/C CLU	A/C CLU Relay to A/C Compressor Clutch Oil
29	RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft Deterrent Shock Sensor
30	ALT SENSE	Generator
31	TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32	FUEL PUMP	Fuel Pump Relay
33	ECM SENSE	Powertrain Control Module (PCM)
34		Not Used
35	FOG LP	Fog Lamp Relay
36	HORN	Horn Relay
37	PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps and I/P Dimmer Switch Theft-Deterrent Relay to Headlamps
38		Not Used
39		Not Used
40		Mini Fuse Pulle