



LH Bank:

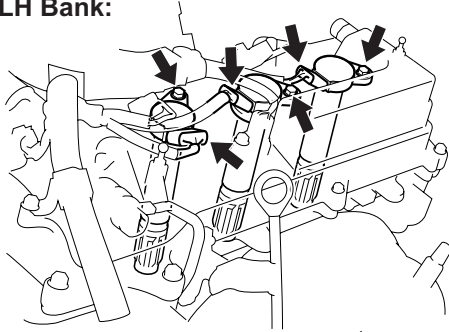

RH Bank:

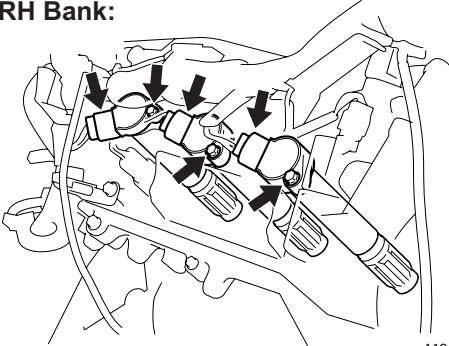


C

A134966E01


11. REMOVE IGNITION COIL ASSEMBLY

- (a) Disconnect the 6 ignition coil connectors.
- (b) Remove the 6 bolts and 6 ignition coils.

LH Bank:

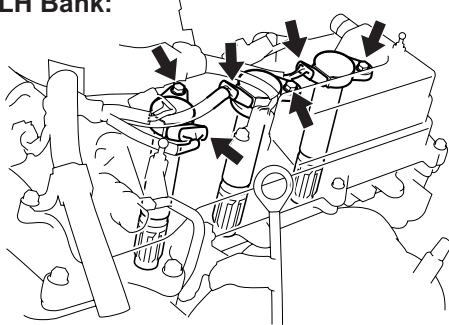

RH Bank:

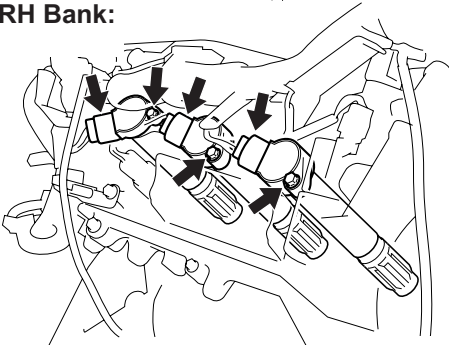

C

A134966E01


INSTALLATION**1. INSTALL IGNITION COIL ASSEMBLY**

- (a) Install the 6 ignition coils with the 6 bolts.
Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)
- (b) Connect the 6 ignition coil connectors.

2. INSTALL NO. 1 SURGE TANK STAY**NOTICE:****DO NOT** apply oil to the bolt listed below:**Tightening Parts**

No. 1 Surge tank stay and Cylinder head cover


IG

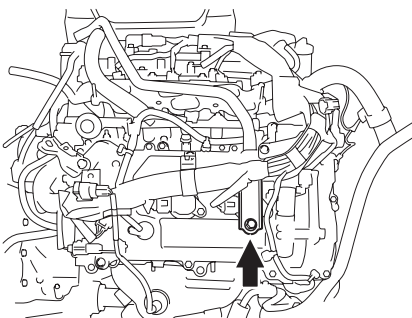

C

A134967

- (a) Install the No. 1 surge tank stay with the bolt.
Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

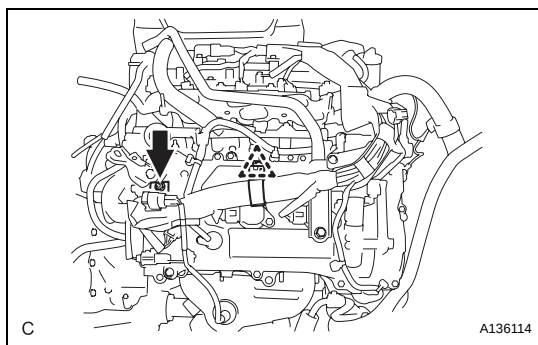

(b) Install the bolt and clamp.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

3. **INSTALL INTAKE AIR SURGE TANK ASSEMBLY** (See page [FU-17](#))
4. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY** (See page [ES-522](#))
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL** (See page [EM-49](#))
6. **ADD ENGINE COOLANT** (See page [CO-6](#))
7. **CHECK FOR ENGINE COOLANT LEAKS** (See page [CO-1](#))
8. **INSTALL FRONT SUSPENSION UPPER CENTER BRACE** (See page [BR-25](#))
9. **INSTALL V-BANK COVER SUB-ASSEMBLY** (See page [EM-49](#))
10. **INSTALL ENGINE ROOM SIDE COVER LH** (See page [EM-50](#))
11. **INSTALL ENGINE ROOM SIDE COVER RH** (See page [EM-50](#))
12. **INSTALL COOL AIR INTAKE DUCT SEAL** (See page [EM-50](#))
13. **PERFORM INITIALIZATION**
 - (a) Perform initialization procedure (See page [IN-33](#)).

NOTICE:
Some vehicle systems require initialization after reconnecting the cable to the negative battery terminal.