

Lincoln MKX 2016 – 2018 fuse box diagram

Passenger compartment fuse panel



Lincoln MKX – fuse box diagram –
passenger compartment


No.	A	Protected Components
1	10	'16: Demand lighting (glove box, vanity, dome), Battery saver relay coil, Second row easy fold relay coil
2	7.5	Memory seats, Lumbar, Power mirrors ('16), Driver seat module logic power
3	20	Driver door unlock
4	5	Not used (spare)
5	20	Subwoofer amplifier
6	10	USB charger
7	10	Not used (spare)
8	–	'17-'18: Security horn relay
9	10	Rear seat entertainment system module, 360 camera badge

10	5	Keypad, Power liftgate module logic power, Handsfree liftgate module, MyLincoln module ('16), SYNC 3 module ('17-'18), Embedded modem ('18)
11	5	'17-'18: Combined sensing module
12	7.5	Climate control module, Gear shift module ('17-'18)
13	7.5	Steering column control module, Smart datalink connector (gateway) module
14	10	'17-'18: Extended power module – power
15	10	Datalink power
16	15	Not used (spare)
17	5	Not used (spare)
18	5	'16: Ignition switch, Push button start switch, Key inhibit solenoid
19	7.5	'17-'18: Extended power module – Run/Start
20	7.5	Active front steering logic power
21	5	Humidity and in-car temperature sensor
22	5	Occupant classification sensor

23	10	Delayed accessory (power inverter logic, moonroof logic, driver window switch power), Heads up display ('16), Gear shift module ('16), Front camera ('16), 360 camera module ('16)
24	20	Central lock unlock
25	30	Driver door (window, mirror), Driver door module, Driver door lock indicator, Driver lock switch illumination
26	30	Front passenger door (window, mirror), Front passenger door module, Front passenger lock indicator, Front passenger switch illumination (window, lock)
27	30	Moonroof
28	20	Amplifier
29	30	Rear driver side door smart window
30	30	Rear passenger side door smart window
31	15	Not used (spare)
32	10	Global positioning system module ('16), Centerstack display ('16), Voice control (SYNC), Radio transceiver module, Multimedia gateway module ('16)
33	20	Radio
34	30	Run-start bus (fuse 19, 20, 21, 22, 35,36, 37, circuit breaker 38)

35	5	'16: Restraints control module
36	15	Auto-dimming rearview mirror, Heated seat ('16), Auto high beam/lane departure mirror module, Rear heated seat module logic power, Suspension module
37	20	'16: Heated steering wheel module (without active front steering)
38	30	Rear power windows, Rear window switch illumination

Engine Compartment Fuse Box

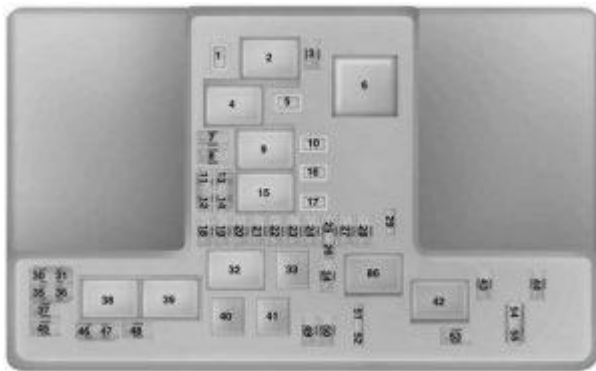

Lincoln MKX – fuse box diagram – engine compartment

No.	A	Protected Components
1	30	Power fold 2nd row seats
3	15	Rear wiper, Rain sensor
5	20	Power point 3 – back of console
7	20	Powertrain control module – vehicle power 1
8	20	Powertrain control module – vehicle power 2


10	20	'16-'17: Power point 1 – driver front '18: Power point 5 – main bin
11	15	Powertrain control module – vehicle power 4
12	15	Powertrain control module – vehicle power 3
13	–	Not used
14	–	Not used
16	20	Power point 2 – console bin
17	20	Power point 4 – luggage compartment
18	20	RH HID headlamp
19	10	Run-start electronic power assist steering
20	10	Run/start lighting
21	15	Transmission oil pump logic power (start/stop)
22	10	Air conditioner clutch solenoid
23	15	'16: Run-start 6, Blind spot information system, Rear view camera, Adaptive cruise control, Heads-up display, Voltage quality module (start/stop), Front split view camera, Front split view camera module '17-'18: Front split view camera, Rear view camera, Front split view camera module, Gear shift actuator

24	10	Not used (spare)
25	10	Run-start anti-lock brake system
26	10	Run-start powertrain control module
27	–	Not used
28	10	Rear washer pump
29	–	Not used
30	–	Not used
31	–	Not used
34	15	Glove box release
35	–	Not used
36	–	Not used
37	10	Power transfer unit fan
43	10	2nd row easy fold seat release
44	20	LH HID headlamp
45	–	Not used

46	–	Not used
47	–	Not used
48	–	Not used
49	–	Not used
50	20	Horn
51	–	Not used
52	–	Not used
53	10	'16-'17: Multi-contour seats
54	10	Brake on off switch
55	10	ALT sensor
Relay		
2	Starter	
4	Blower motor	
6	Not used	
9	Powertrain control module	

15	Run-start
32	Electronic fan 1
33	A/C clutch
38	Electronic fan 2
39	Electric fan 3
40	Horn
41	Not used
42	Fuel pump
86	Not used

There are fuses located on the bottom of the fuse box.

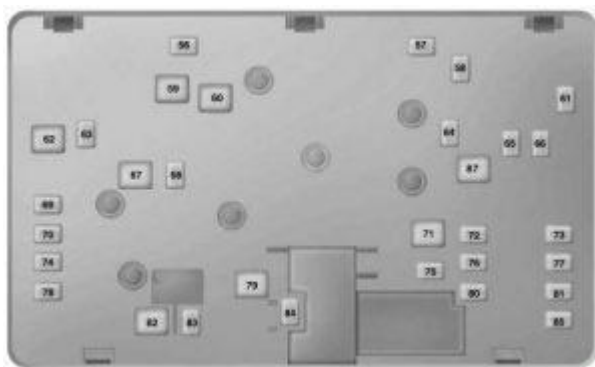

Lincoln MKX – fuse box diagram – engine compartment

No.	A	Protected Components
56	–	Not used

57	20	'18: Power point 1 – driver front
58	30	Fuel pump feed
59	40	Electronic fan 3
60	40	Electronic fan 1
61	–	Not used
62	50	Body control module 1
63	25	Electronic fan 2
64	20	Headlamp washer
65	20	Front heated seat
66	15	'17-'18: Heated wiper park
67	50	Body control module 2
68	40	Heated rear window
69	30	Anti-lock brake system valves
70	30	Passenger seat
71	50	Active front steering

72	20	Transmission oil pump (start/stop)
73	20	Rear heated seats
74	30	Driver seat module
75	25	Wiper motor 1
76	30	Power liftgate module
77	30	Climate control seat module
78	40	Trailer lighting module
79	40	Blower motor
80	25	Wiper motor 2
81	40	110 volt inverter
82	–	Not used
83	20	TRCM (iShifter)
84	30	Starter solenoid
85	30	'16: Vista roof
87	60	Anti-lock brake system pump

