

Dodge Dart 2014 fuse box diagram

Interior Fuses

Cavity	Cartridge fuse	Mini Fuse	Description
F1	—	20	Front Heated Seats – If Equipped
F2	—	20	Rear Heated Seats, Heated Steering Wheel – If Equipped
F3	—	10	Park Assist Module, Rear Camera, Left and Right Blind Spot Sensor, Compass – If Equipped
F4	—	15	Instrument Cluster
F5	—	10	HVAC, Humidity Sensor, In-Car Temperature Sensor, Inside Mirror Assembly
F18	—	15	Radio
F19	—	10	Fuel Door
F20	—	10	Steering Column Control Module, Switch Bank
F21	—	10	Diagnostic Port
F22	—	10	Universal Garage Door Opener, EOM
F23	—	20	Sunroof
F24	—	5	Run/Accessory Relay

F25	—	5	Transmission Control Module #4
F26	—	5	Stop Lamp Switch
F27	—	10	Pneumatic Lumbar Support

Underhood Fuses

The Power Distribution Center is located on the right side of the engine compartment, behind the battery.

Cavity	Cartridge fuse	Mini Fuse	Description
F01	70	—	Body Control Module #1
F02	60	—	Body Control Module #2
F03	30	—	Output For Starter Relay #1
F04	40	—	ESC Pump Motor
F05	40	—	Transmission Control Module #1
F06	30	—	Body Control Module #3
F07	40	—	EBL RLY Coil, Blower Motor RLY Coil
F09	—	5	Radiator Fan
F10	—	10	ORC

F11	—	20	Run/Start, Engine Control Module
F14	—	15	Transmission Control Module #2
F15	—	15	Transmission Control Module #3
F16	—	15	Engine Control Module, Ignition Coils
F17	—	15	Brake System Module
F18	—	20	Engine Control Module
F19	—	10	A/C Compressor Clutch
F20	—	30	Rear Defroster (EBL)
F21	—	20	Fuel Pump
F22	—	10	Occupant Restraint Controller
F23	—	25	Brake System Module
F24	—	20	Engine Control Module, Fuel Injectors
F30	—	20	Power Outlet (Console)
F81	60	—	Interior PDC Battery Feed, Power Seats
F82	30	—	Amplifier

F83	40	—	HVAC Blower Motor
F84	—	20	Cigar Lighter
F85	—	10	Sunroof, LRSM, Power Outlet (Console), UCI/AUX Port, Cigar Lighter
F86	—	20	—
F87	—	10	Wastegate, Purge Solenoid, OBD Vent Valve, Oxygen Sensor Heaters
F88	—	10	Heated Outside Mirrors

Body Control Module (BCM) Fuses

Cavity	Cartridge fuse	Mini Fuse	Description
F12	—	—	Spare
F13	—	15	Left Headlamp
F31	—	—	Spare
F32	—	10	Interior Lighting/Decklid/Liftgate Release
F33	—	25	Window Motor – Driver
F34	—	25	Window Motor – Passenger
F36	—	15	Intrusion Module

F37	—	10	Instrument Panel Cluster
F38	—	20	Door Locks
F42	—	—	Spare
F43	—	20	Windshield Washer Pump
F47	—	5	Transmission Control Module (Tcm)
F48	—	20	Spare
F49	—	7,5	Stop Lamp Switch
F50	—	7,5	Pneumatic Lumbar Support
F51	—	7,5	Cd/Hands-Free Module – Bluetooth/Radio Display
F53	—	7,5	Driver Window Switch/Power Mirrors
F89	—	5	Trunk Lamp
F90	—	7,5	Front Fog Lamps – Right
F91	—	7,5	Front Fog Lamps – Left
F92	—	7,5	High Beams (Shutters)
F93	—	15	Right Headlamp