


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

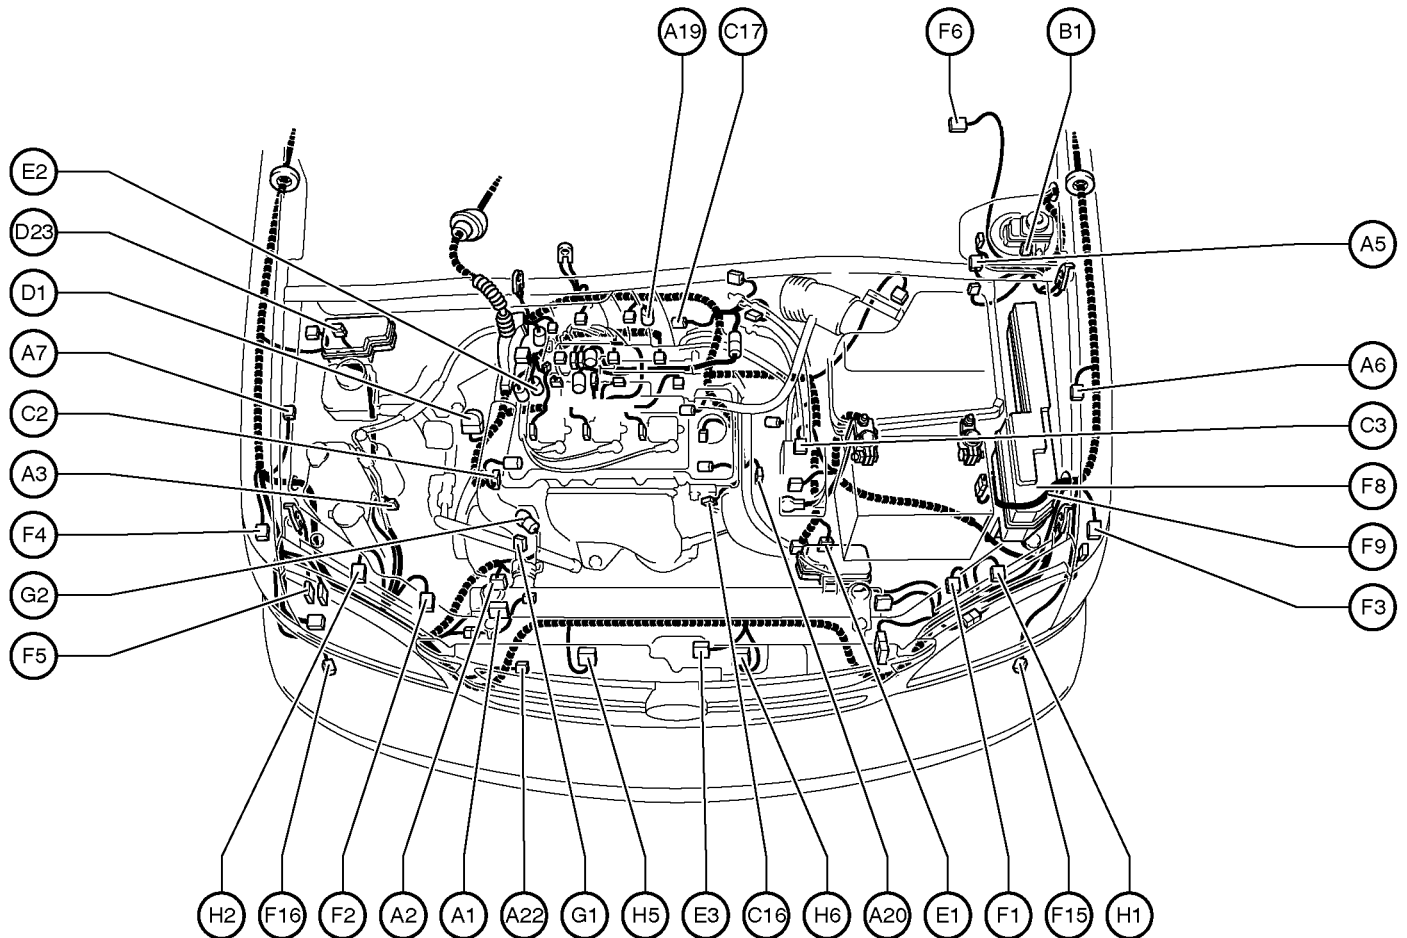

- A 1 A/C Condenser Fan Motor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 5 ABS Actuator and ECU
- A 6 ABS Speed Sensor Front LH
- A 7 ABS Speed Sensor Front RH
- A19 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A20 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A22 A/C Ambient Temp. Sensor

- B 1 Brake Fluid Level Warning SW

- C 2 Crankshaft Position Sensor
- C 3 Cruise Control Actuator
- C16 Camshaft Timing Oil Control Valve LH
- C17 Camshaft Timing Oil Control Valve RH

- D 1 Data Link Connector 1
- D23 Diode (A/C Magnetic Clutch)


- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Turn Signal Light and Parking Light LH
- F 4 Front Turn Signal Light and Parking Light RH
- F 5 Front Washer Motor
- F 6 Front Wiper Motor
- F 8 Fusible Link Block
- F 9 Fusible Link Block
- F15 Front Fog Light LH
- F16 Front Fog Light RH

- G 1 Generator
- G 2 Generator

- H 1 Headlight LH
- H 2 Headlight RH
- H 5 Horn (High)
- H 6 Horn (Low)

Position of Parts in Engine Compartment

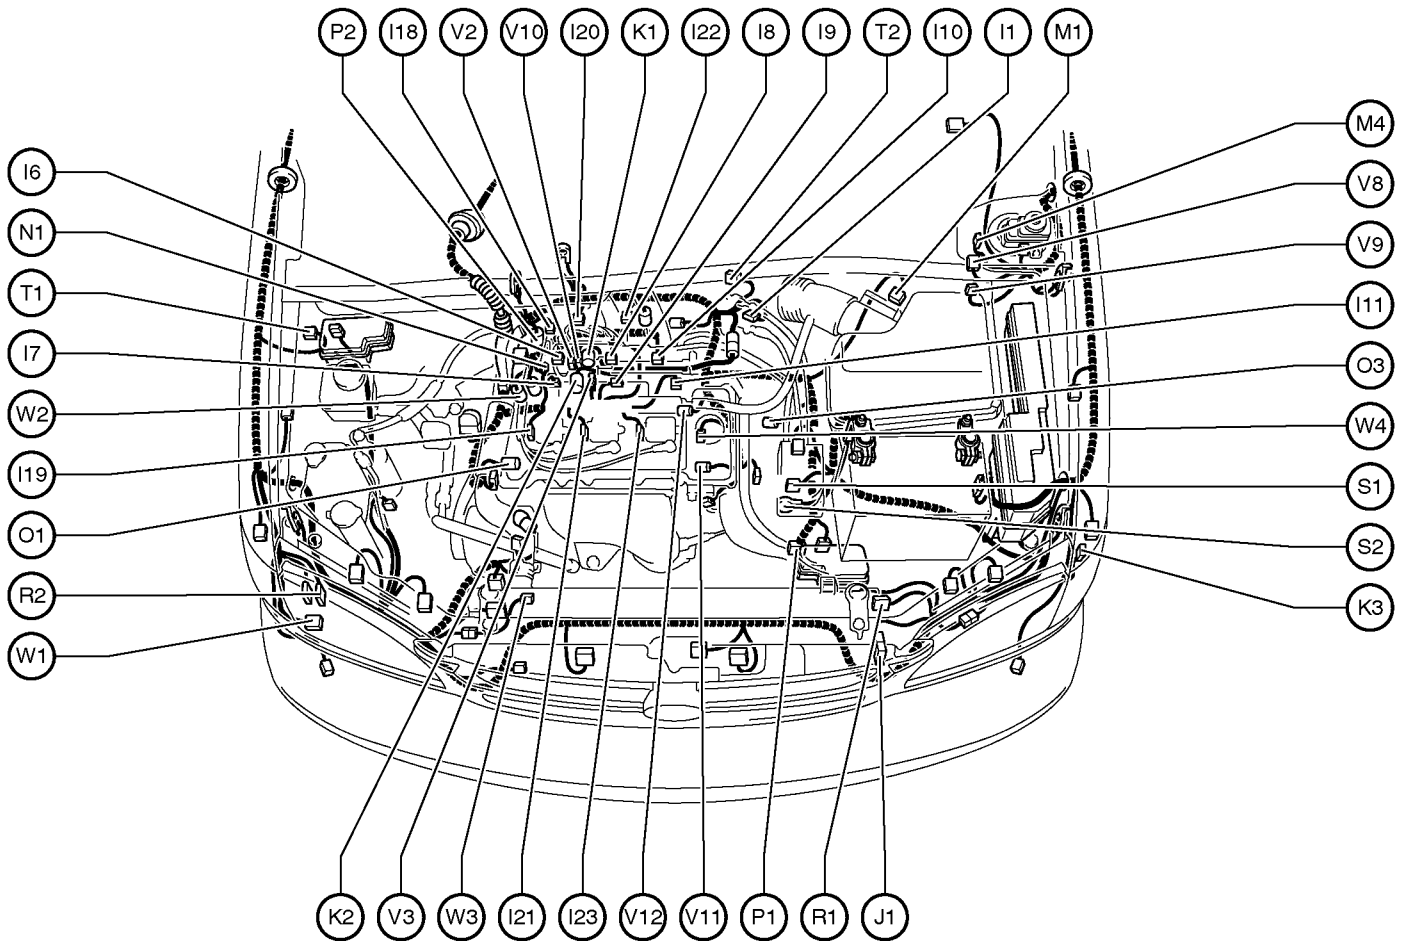

- I 1 Idle Air Control Valve
- I 6 Injector No.1
- I 7 Injector No.2
- I 8 Injector No.3
- I 9 Injector No.4
- I 10 Injector No.5
- I 11 Injector No.6
- I 18 Ignition Coil and Igniter No.1
- I 19 Ignition Coil and Igniter No.2
- I 20 Ignition Coil and Igniter No.3
- I 21 Ignition Coil and Igniter No.4
- I 22 Ignition Coil and Igniter No.5
- I 23 Ignition Coil and Igniter No.6

- J 1 Junction Connector

- K 1 Knock Sensor 1
- K 2 Knock Sensor 2
- K 3 Keyless Buzzer

- M 1 Mass Air Flow Meter
- M 4 Master Cylinder Pressure Sensor

- N 1 Noise Filter (Ignition)

- O 1 Oil Pressure SW
- O 3 O/D Direct Clutch Speed Sensor

- P 1 Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW
- P 2 Power Steering Oil Pressure SW

- R 1 Radiator Fan Motor
- R 2 Rear Washer Motor

- S 1 Starter
- S 2 Starter


- T 1 Theft Deterrent Horn
- T 2 Throttle Position Sensor

- V 2 VSV (EVAP)
- V 3 VSV (Intake Air Control)
- V 8 VSC Actuator
- V 9 VSV (Canister Closed Valve)
- V10 VSV (Intake Air Control No.2)
- V11 VVT Solenoid LH
- V12 VVT Solenoid RH

- W 1 Washer Level Warning SW
- W 2 Water Temp. Sender
- W 3 Water Temp. SW No.1
- W 4 Water Temp. SW No.2

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

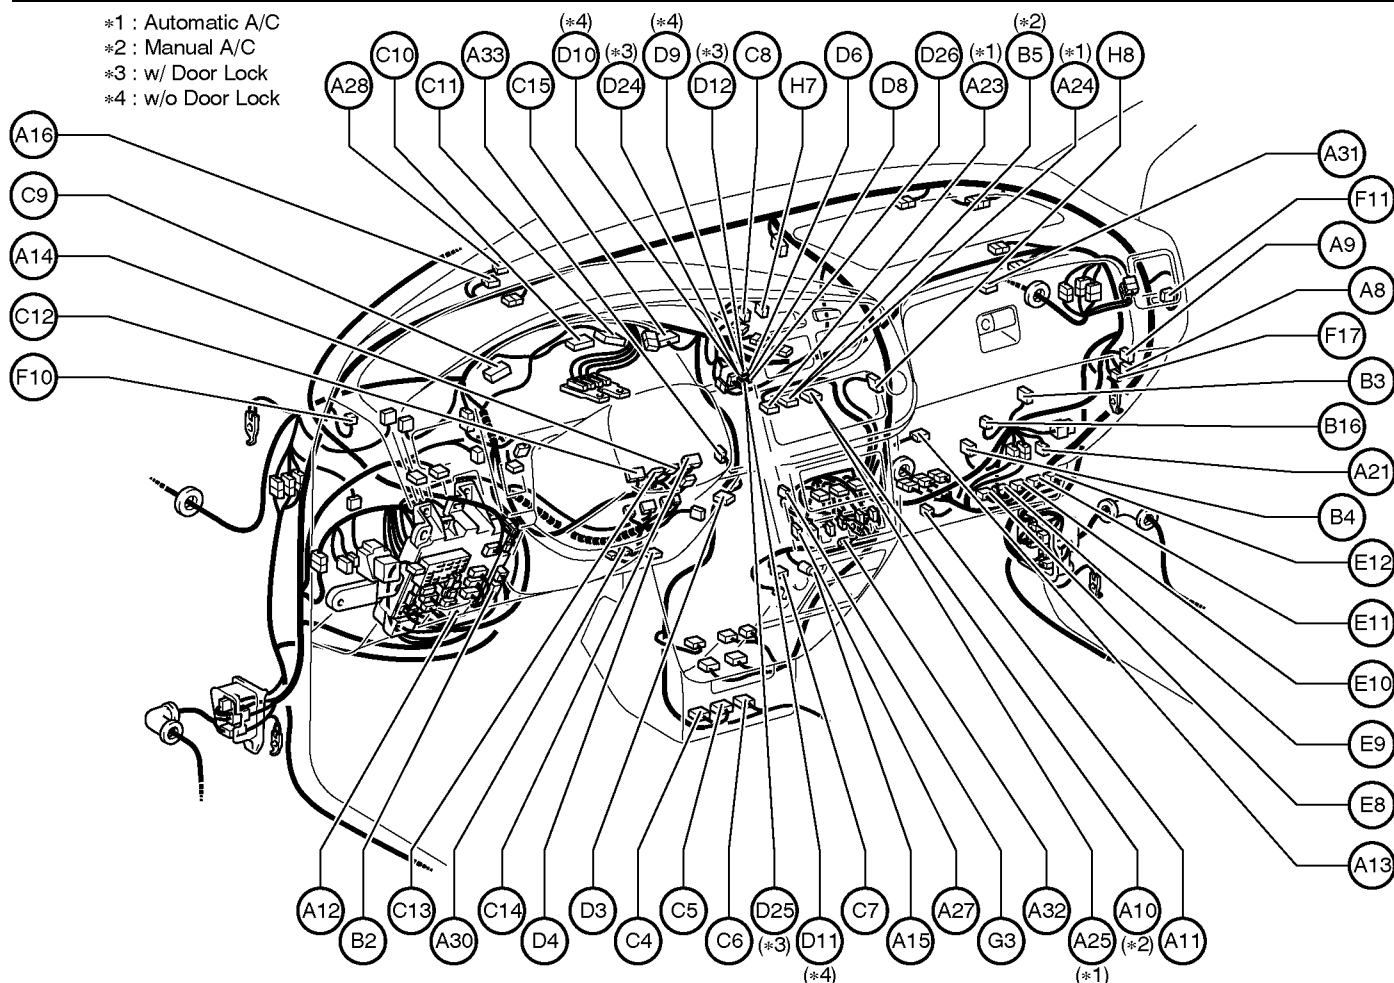

A 8 A/C Amplifier
 A 9 A/C Amplifier
 A10 A/C SW
 A11 A/C Thermistor
 A12 ACC Main Relay
 A13 Airbag Squib (Front Passenger Airbag Assembly)
 A14 Airbag Squib (Steering Wheel Pad)
 A15 Ashtray Illumination
 A16 Automatic Light Control Sensor
 A21 A/F Heater Relay
 A23 A/C Control Assembly
 A24 A/C Control Assembly
 A25 A/C Control Assembly
 A27 A/C Room Temp. Sensor
 A28 A/C Solar Sensor
 A30 Active Light Relay
 A31 Air Inlet Control Servo Motor
 A32 Air Mix Control Servo Motor (Front)
 A33 Air Vent Mode Control Servo Motor

B 2 Back-Up Light Relay
 B 3 Blower Motor
 B 4 Blower Resistor
 B 5 Blower SW
 B16 Blower Motor Controller (Front)

C 4 Center Airbag Sensor Assembly
 C 5 Center Airbag Sensor Assembly
 C 6 Center Airbag Sensor Assembly
 C 7 Cigarette Lighter
 C 8 Clock
 C 9 Combination Meter
 C10 Combination Meter

C11 Combination Meter
 C12 Combination SW
 C13 Combination SW
 C14 Combination SW
 C15 Cruise Control ECU
 D 3 Data Link Connector 3
 D 4 Daytime Running Light Relay (Main)
 D 6 Diode (Courtesy No.3)
 D 8 Diode (Daytime Running Light No.2)
 D 9 Diode (Dome No.1)
 D10 Diode (Dome No.2)
 D11 Diode (Dome No.3)
 D12 Diode (Park/Neutral Position SW)
 D24 Diode (Dome No.4)
 D25 Diode (Dome No.5)
 D26 Diode (Buckle SW)


E 8 Engine Control Module
 E 9 Engine Control Module
 E10 Engine Control Module
 E11 Engine Control Module
 E12 Engine Control Module

F10 Front Tweeter Speaker LH
 F11 Front Tweeter Speaker RH
 F17 Fog Light Relay

G 3 Glass Antenna Amplifier

H 7 Hazard SW
 H 8 Heater Blower SW (Front)

Position of Parts in Instrument Panel

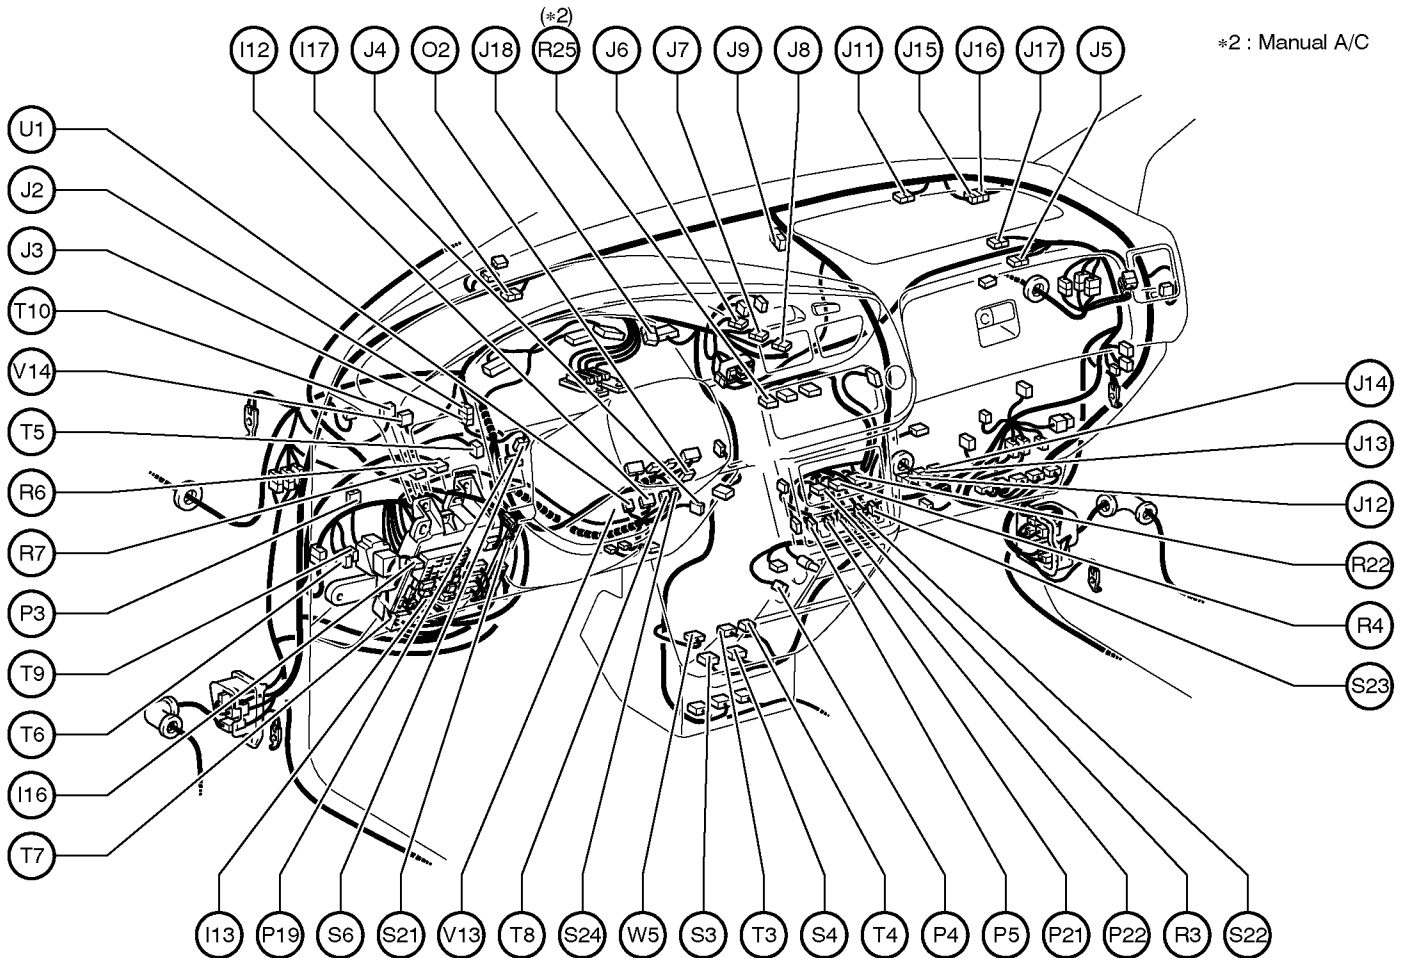

I 12 Ignition SW
 I 13 Integration Relay
 I 16 Integration Relay
 I 17 Ignition Key Cylinder Light

J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector
 J 11 Junction Connector
 J 12 Junction Connector
 J 13 Junction Connector
 J 14 Junction Connector
 J 15 Junction Connector
 J 16 Junction Connector
 J 17 Junction Connector
 J 18 Junction Connector

O 2 O/D Main SW

P 3 Parking Brake SW
 P 4 Power Outlet (Front)
 P 5 Power Quarter Window SW
 P19 Power Slide Door Main SW
 P21 Power Slide Door LH Control SW (Front)
 P22 Power Slide Door RH Control SW (Front)

R 3 Radio and Player
 R 4 Radio and Player
 R 6 Remote Control Mirror SW
 R 7 Rheostat
 R22 Radio and Player
 R25 Rear Window Defogger SW and Air Inlet Control SW

S 3 Stereo Component Amplifier
 S 4 Stereo Component Amplifier
 S 6 Stop Light SW
 S21 Seat Heater Relay
 S22 Seat Heater SW (Driver's Seat)
 S23 Seat Heater SW (Front Passenger's Seat)
 S24 Steering Sensor

T 3 Theft Deterrent ECU
 T 4 Theft Deterrent ECU
 T 5 Theft Deterrent Indicator Light
 T 6 Tire Pressure Warning Standardization SW
 T 7 Turn Signal Flasher
 T 8 Transponder Key Amplifier
 T 9 TRAC OFF SW
 T10 Translate ECU

U 1 Unlock Warning SW


V13 VSC Buzzer
 V14 VSC ECU

W 5 Wireless Door Lock ECU

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

- *1 : w/ Theft Deterrent System
 *2 : w/o Theft Deterrent System
 *3 : Manual A/C
 *4 : Automatic A/C

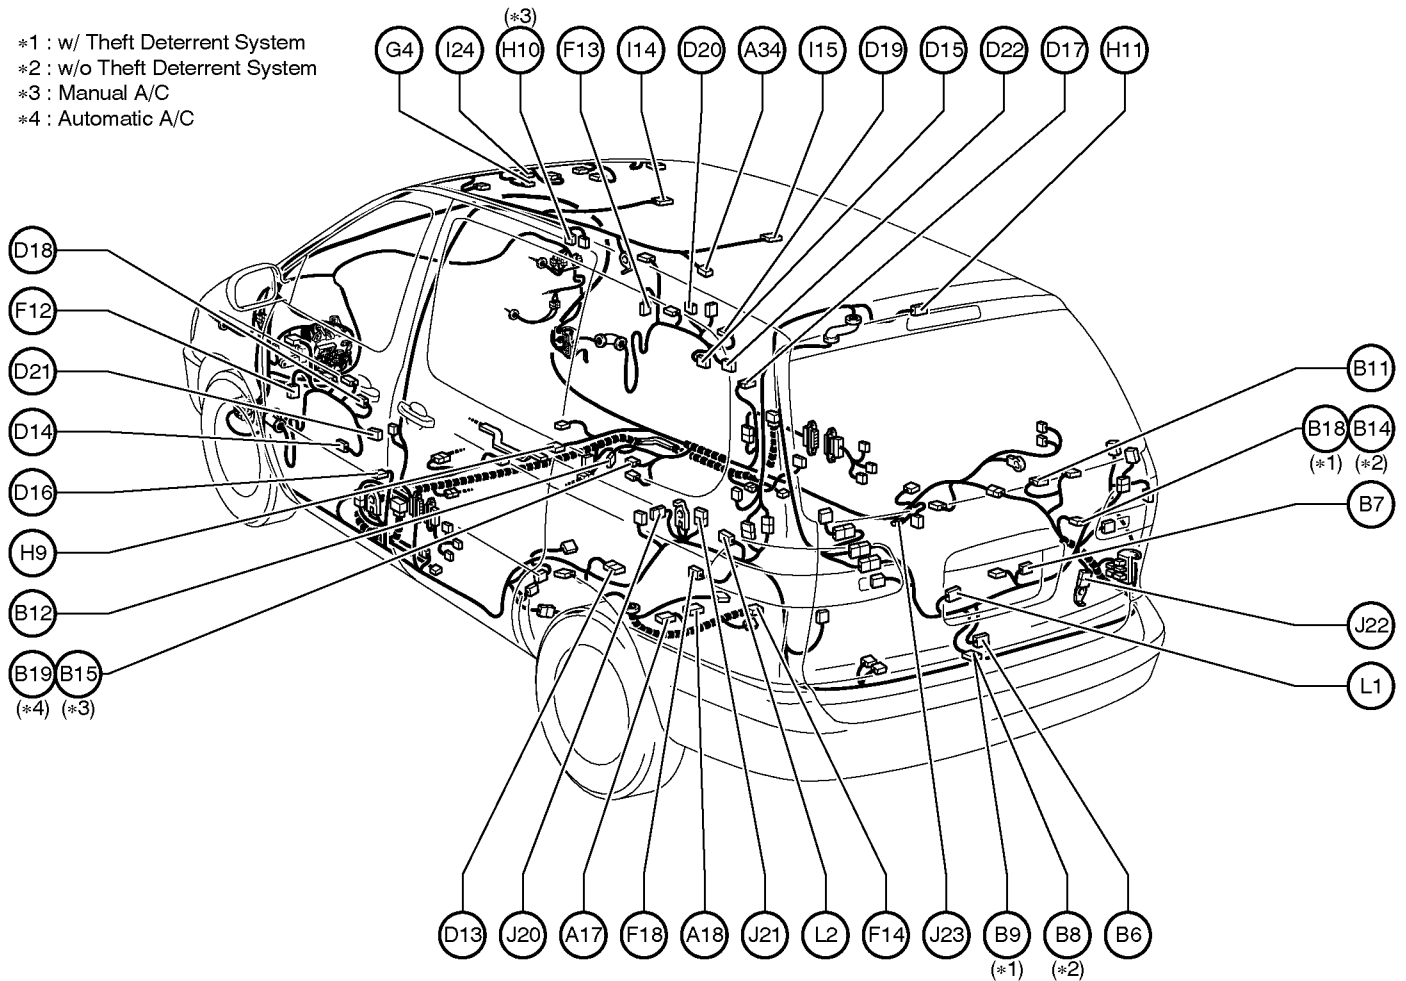

A17 ABS Speed Sensor Rear LH
 A18 ABS Speed Sensor Rear RH
 A34 A/C Evaporator Temp. Sensor (Rear)

B 6 Back Door Courtesy SW
 B 7 Back Door Key Lock and Unlock SW
 B 8 Back Door Lock Motor
 B 9 Back Door Lock Motor and Unlock Detection SW
 B11 Blower Motor (Rear Cooling)
 B12 Blower Motor (Rear Heater)
 B14 Blower Resistor (Rear Cooling)
 B15 Blower Resistor (Rear Heater)
 B18 Blower Resistor Transistor (Cooler)
 B19 Blower Resistor Transistor (Heater)

D13 Diode (Courtesy No.2)
 D14 Door Courtesy Light Front LH
 D15 Door Courtesy Light Front RH
 D16 Door Courtesy SW Front LH
 D17 Door Courtesy SW Front RH
 D18 Door Key Lock and Unlock SW Front LH
 D19 Door Key Lock and Unlock SW Front RH
 D20 Door Lock Control SW Front RH
 D21 Door Lock Motor and Unlock Detection SW Front LH
 D22 Door Lock Motor and Unlock Detection SW Front RH

F12 Front Door Speaker LH
 F13 Front Door Speaker RH
 F14 Fuel Pump and Sender
 F18 Fuel Lid Courtesy SW

G 4 Garage Door Opener


H 9 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H10 Heater Blower SW (Rear)
 H11 High Mounted Stop Light

I 14 Interior Light No.1
 I 15 Interior Light No.2
 I 24 Inner Mirror

J 20 Junction Connector
 J 21 Junction Connector
 J 22 Junction Connector
 J 23 Junction Connector

L 1 License Plate Light
 L 2 Luggage Compartment Light

Position of Parts in Body

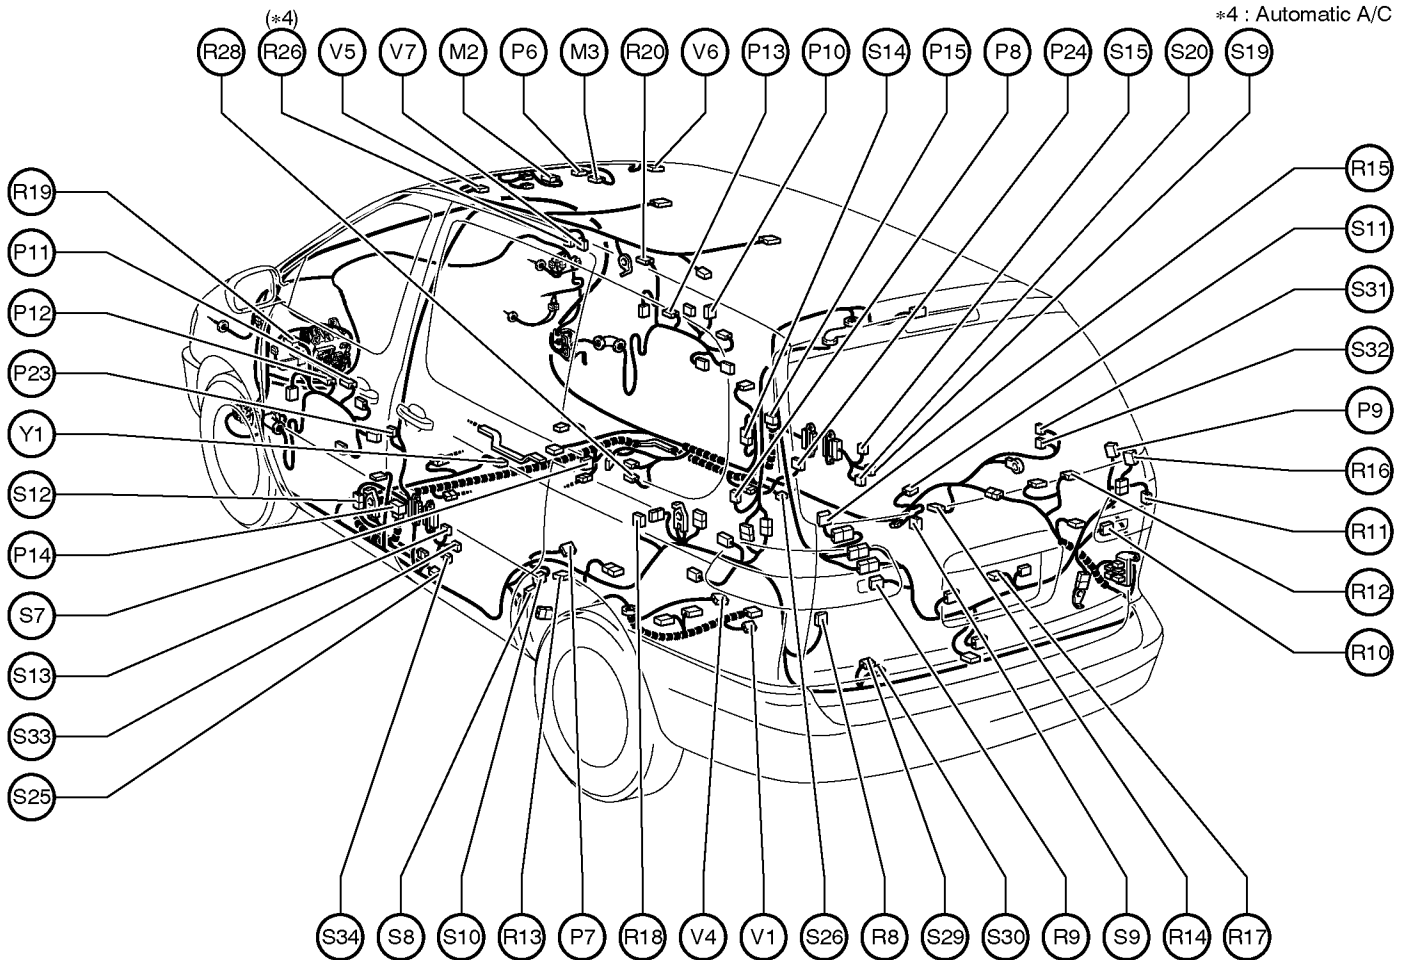

M 2 Moon Roof Control SW and Relay
M 3 Moon Roof Motor and Limit SW

P 6 Personal Light
P 7 Power Outlet (Rear)
P 8 Power Vent Window Motor LH
P 9 Power Vent Window Motor RH
P10 Power Window Control SW Front RH
P11 Power Window Master SW
P12 Power Window Motor Front LH
P13 Power Window Motor Front RH
P14 Pretensioner LH
P15 Pretensioner RH
P23 Power Slide Door LH Control SW (Rear)
P24 Power Slide Door RH Control SW (Rear)

R 8 Rear Combination Light LH
R 9 Rear Combination Light LH
R10 Rear Combination Light RH
R11 Rear Combination Light RH
R12 Rear HI Relay
R13 Rear Speaker LH
R14 Rear Speaker RH
R15 Rear Window Defogger
R16 Rear Window Defogger
R17 Rear Wiper Motor
R18 Rear Wiper Relay
R19 Remote Control Mirror LH
R20 Remote Control Mirror RH
R26 Rear A/C SW
R28 Rear Heater Intake Air Temp. Sensor


S 7 Servo Motor
S 8 Slide Door Courtesy Light LH
S 9 Slide Door Courtesy Light RH
S10 Slide Door Courtesy SW LH
S11 Slide Door Courtesy SW RH
S12 Slide Door Junction Connector LH
S13 Slide Door Junction Connector LH
S14 Slide Door Junction Connector RH
S15 Slide Door Junction Connector RH
S19 Slide Door Junction Connector RH
S20 Slide Door Junction Connector RH
S25 Side Airbag Sensor LH
S26 Side Airbag Sensor RH
S29 Slide Door LH ECU
S30 Slide Door LH ECU
S31 Slide Door RH ECU
S32 Slide Door RH ECU
S33 Slide Door Junction Connector LH
S34 Slide Door Junction Connector LH

V 1 Vapor Pressure Sensor
V 4 VSV (Pressure Switching Valve)
V 5 Vanity Light LH
V 6 Vanity Light RH
V 7 Volume SW

Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

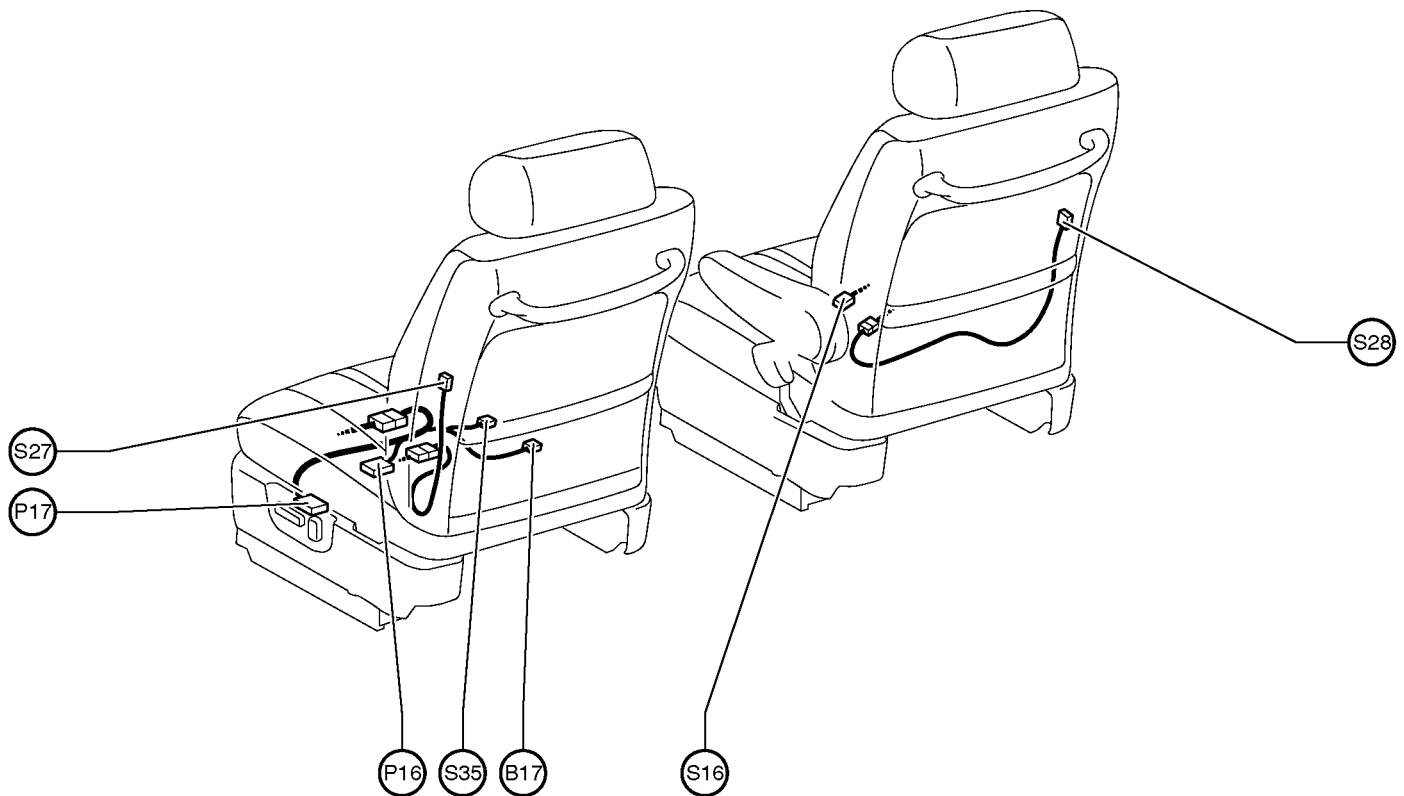

B17 Buckle SW LH

P16 Power Seat Motor

P17 Power Seat SW

S16 Seat Belt Warning Occupant Detection Sensor

S27 Side Airbag Squib LH

S28 Side Airbag Squib RH

S35 Seat Heater (Driver's Seat)

