

MECHANICAL

ME(DOHC TURBO)

	Page
1. General Description	2
2. Compression	22
3. Idle Speed	23
4. Ignition Timing	24
5. Intake Manifold Vacuum	25
6. Engine Oil Pressure	26
7. Fuel Pressure	27
8. Valve Clearance	28
9. Engine Assembly	33
10. Engine Mounting	42
11. Preparation for Overhaul	43
12. V-belt	44
13. Crankshaft Pulley	46
14. Belt Cover	47
15. Timing Belt Assembly	48
16. Camshaft Sprocket	57
17. Crankshaft Sprocket	58
18. Camshaft	59
19. Cylinder Head Assembly	64
20. Cylinder Block	72
21. Engine Trouble in General	91
22. Engine Noise	96

GENERAL DESCRIPTION

MECHANICAL

1. General Description

A: SPECIFICATIONS

Engine	Type		Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine		
	Valve arrangement		Belt driven, double overhead camshaft, 4-valve/cylinder		
	Bore x Stroke	mm (in)	92 x 75 (3.62 x 2.95)		
	Piston displacement	cm ³ (cu in)	1,994 (121.67)		
	Compression ratio		8.0		
	Compression pressure (at 200 — 300 rpm)	kPa (kgf/cm ² , psi)	981 — 1,177 (10 — 12, 142 — 171)		
	Number of piston rings		Pressure ring: 2, Oil ring: 1		
	Intake valve timing	Opening	10° BTDC		
		Closing	50° ABDC		
	Exhaust valve timing	Opening	53° BBDC		
		Closing	7° ATDC		
	Valve clearance	Intake	mm (in)	0.20±0.02 (0.0079±0.0008)	
		Exhaust	mm (in)	0.25±0.02 (0.0098±0.0008)	
	Idling speed [At neutral position]		rpm	MT	750±100 (No load) 800±150 (A/C switch ON)
				AT	750±100 (No load) 825±150 (A/C switch ON)
Firing order		1 → 3 → 2 → 4			
Ignition timing		BTDC/rpm			
		12°±3°/750 rpm			

GENERAL DESCRIPTION

MECHANICAL

NOTE:

STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter OS: Oversize US: Undersize

Belt tension adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)	
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)	
	Tensioner bush I.D.			18.0 — 18.08 mm (0.7087 — 0.7118 in)	
	Clearance between spacer and bush	STD	Limit	0.025 — 0.125 mm (0.0010 — 0.0049 in)	
				0.175 mm (0.0069 in)	
	Side clearance of spacer	STD	Limit	0.2 — 0.55 mm (0.0079 — 0.0217 in)	
				0.81 mm (0.0319 in)	
Camshaft	Bend limit			0.020 mm (0.0079 in)	
	Thrust clearance	STD	Limit	0.015 — 0.070 mm (0.0006 — 0.0028 in)	
				0.10 mm (0.0039 in)	
	Cam lobe height	Intake	STD	46.25 — 46.35 mm (1.821 — 1.825 in)	
			Limit	46.15 mm (1.817 in)	
		Exhaust	STD	46.15 — 46.25 mm (1.817 — 1.821 in)	
			Limit	46.05 mm (1.813 in)	
	Journal O.D.	STD	Front	37.946 — 37.963 mm (1.4939 — 1.4946 in)	
			Center rear	29.946 — 29.963 mm (1.1790 — 1.1796 in)	
	Oil clearance	STD	Limit	0.037 — 0.072 mm (0.0015 — 0.0028 in)	
				0.10 mm (0.0039 in)	
Cylinder head	Surface warpage limit			0.05 mm (0.0020 in)	
	Surface grinding limit			0.3 mm (0.012 in)	
	Standard height			127.5 mm (5.02 in)	
Valve seat	Refacing angle			90°	
	Contacting width	Intake	STD	1.0 mm (0.039 in)	
			Limit	1.7 mm (0.067 in)	
		Exhaust	STD	1.5 mm (0.059 in)	
			Limit	2.2 mm (0.087 in)	
Valve guide	Inner diameter			6.000 — 6.012 mm (0.2362 — 0.2367 in)	
	Protrusion above head			12.0 — 12.4 mm (0.472 — 0.488 in)	
Valve	Head edge thickness	Intake	STD	1.2 mm (0.047 in)	
			Limit	0.8 mm (0.031 in)	
		Exhaust	STD	1.5 mm (0.059 in)	
			Limit	0.8 mm (0.031 in)	
	Stem diameter	Intake	5.950 — 5.965 mm (0.2343 — 0.2348 in)		
		Exhaust	5.945 — 5.960 mm (0.2341 — 0.2346 in)		
	Stem oil clearance	STD	Intake	0.035 — 0.062 mm (0.0014 — 0.0024 in)	
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)	
		Limit	— 0.15 mm (0.0059 in)		
Overall length	Intake	104.4 mm (4.110 in)			
	Exhaust	104.7 mm (4.122 in)			
Valve spring	Free length			44.67 mm (1.7587 in)	
	Squareness			2.5°, 2.0 mm (0.079 in)	
	Tension/spring height			220.7±15.7 N (22.5±1.6 kgf, 49.6±3.5 lb)/36.0 mm (1.417 in) 510.9±25.5 N (52.1±2.6 kgf, 114.9±5.7 lb)/26.6 mm (1.047 in)	

GENERAL DESCRIPTION

MECHANICAL

Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)
	Surface grinding limit			0.1 mm (0.004 in)
	Cylinder bore	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
			B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
	Taper		STD	0.015 mm (0.0006 in)
			Limit	0.050 mm (0.0020 in)
	Out-of-roundness		STD	0.010 mm (0.0004 in)
			Limit	0.050 mm (0.0020 in)
	Piston clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
Limit			0.050 mm (0.0020 in)	
Enlarging (boring) limit			0.5 mm (0.020 in)	
Piston	Outer diameter	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
			B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
		0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
		0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
Piston pin	Standard clearance between piston pin and hole in piston		STD	0.004 — 0.008 mm (0.0002 — 0.0003 in)
			Limit	0.020 mm (0.0008 in)
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD	0.20 — 0.35 mm (0.0079 — 0.0138 in)
			Limit	1.0 mm (0.039 in)
		Second ring	STD	0.35 — 0.50 mm (0.0138 — 0.0197 in)
			Limit	1.0 mm (0.039 in)
		Oil ring	STD	0.20 — 0.70 mm (0.0079 — 0.0276 in)
			Limit	1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.15 mm (0.0059 in)
Second ring		STD	0.030 — 0.070 mm (0.0012 — 0.0028 in)	
		Limit	0.15 mm (0.0059 in)	
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance		STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion		STD	1.492 — 1.501 mm (0.0587 — 0.0591 in)
			0.03 mm (0.0012 in) US	1.510 — 1.513 mm (0.0594 — 0.0596 in)
			0.05 mm (0.0020 in) US	1.520 — 1.523 mm (0.0598 — 0.0600 in)
			0.25 mm (0.0098 in) US	1.620 — 1.623 mm (0.0638 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

ME(DOHC TURBO)-4

GETtheMANUALS.org

GENERAL DESCRIPTION

MECHANICAL


Crankshaft	Bend limit		0.035 mm (0.0014 in)	
	Crank pin and crank journal	Out-of-roundness	0.020 mm (0.0008 in) or less	
		Grinding limit	0.25 mm (0.0098 in)	
	Crank pin outer diameter		STD	47.984 — 48.000 mm (1.8891 — 1.8898)
			0.03 mm (0.0012 in) US	47.954 — 47.970 mm (1.8879 — 1.8886)
			0.05 mm (0.0020 in) US	47.934 — 47.950 mm (1.8872 — 1.8878)
			0.25 mm (0.0098 in) US	47.734 — 47.750 mm (1.8793 — 1.8799)
	Crank journal outer diameter	#1, #3, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
	Oil clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
			Limit	0.040 mm (0.0016 in)
Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

GENERAL DESCRIPTION

MECHANICAL

B: COMPONENT

1. TIMING BELT

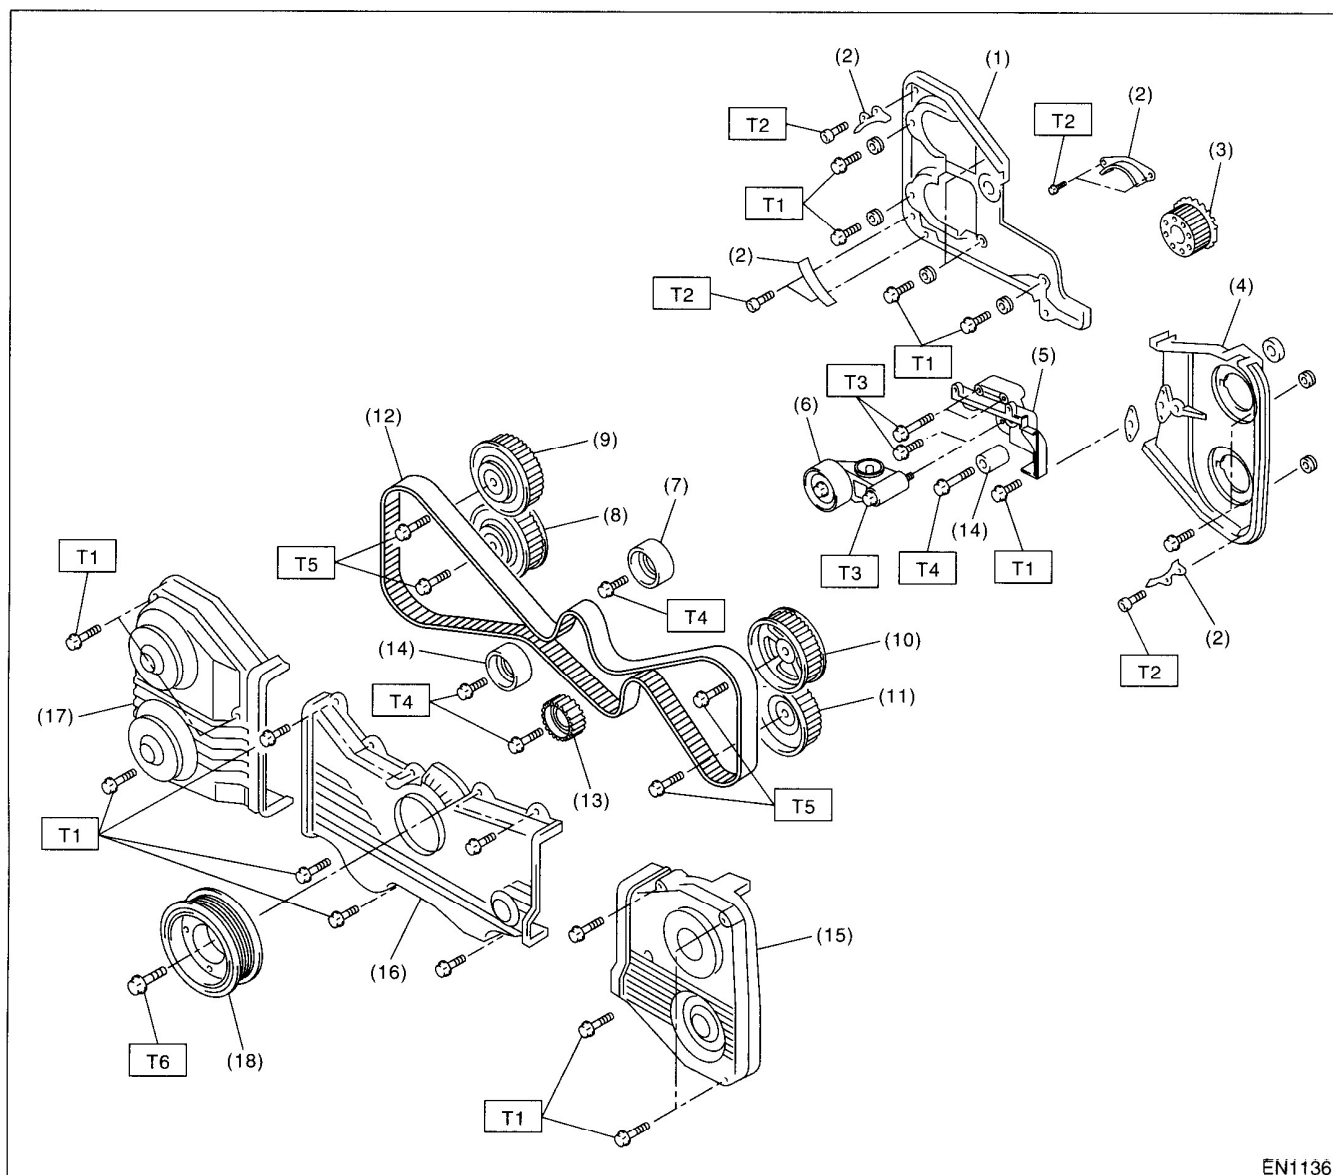

EN1136

- (1) Right-hand belt cover No. 2
- (2) Timing belt guide (MT vehicles only)
- (3) Crankshaft sprocket
- (4) Left-hand belt cover No. 2
- (5) Tensioner bracket
- (6) Automatic belt tension adjuster ASSY
- (7) Belt idler
- (8) Right-hand exhaust camshaft sprocket

- (9) Right-hand intake camshaft sprocket
- (10) Left-hand intake camshaft sprocket
- (11) Left-hand exhaust camshaft sprocket
- (12) Timing belt
- (13) Belt idler No. 2
- (14) Belt idler
- (15) Left-hand belt cover
- (16) Front belt cover

- (17) Right-hand belt cover
- (18) Crankshaft pulley

Tightening torque: N·m (kgf-m, ft-lb)

T1: 5 (0.5, 3.6)

T2: 10 (1.0, 7)

T3: 25 (2.5, 18.1)

T4: 39 (4.0, 28.9)

T5: 98 (10, 72.4)

T6: <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>


GENERAL DESCRIPTION

MECHANICAL

GENERAL DESCRIPTION

MECHANICAL

2. CYLINDER HEAD AND CAMSHAFT

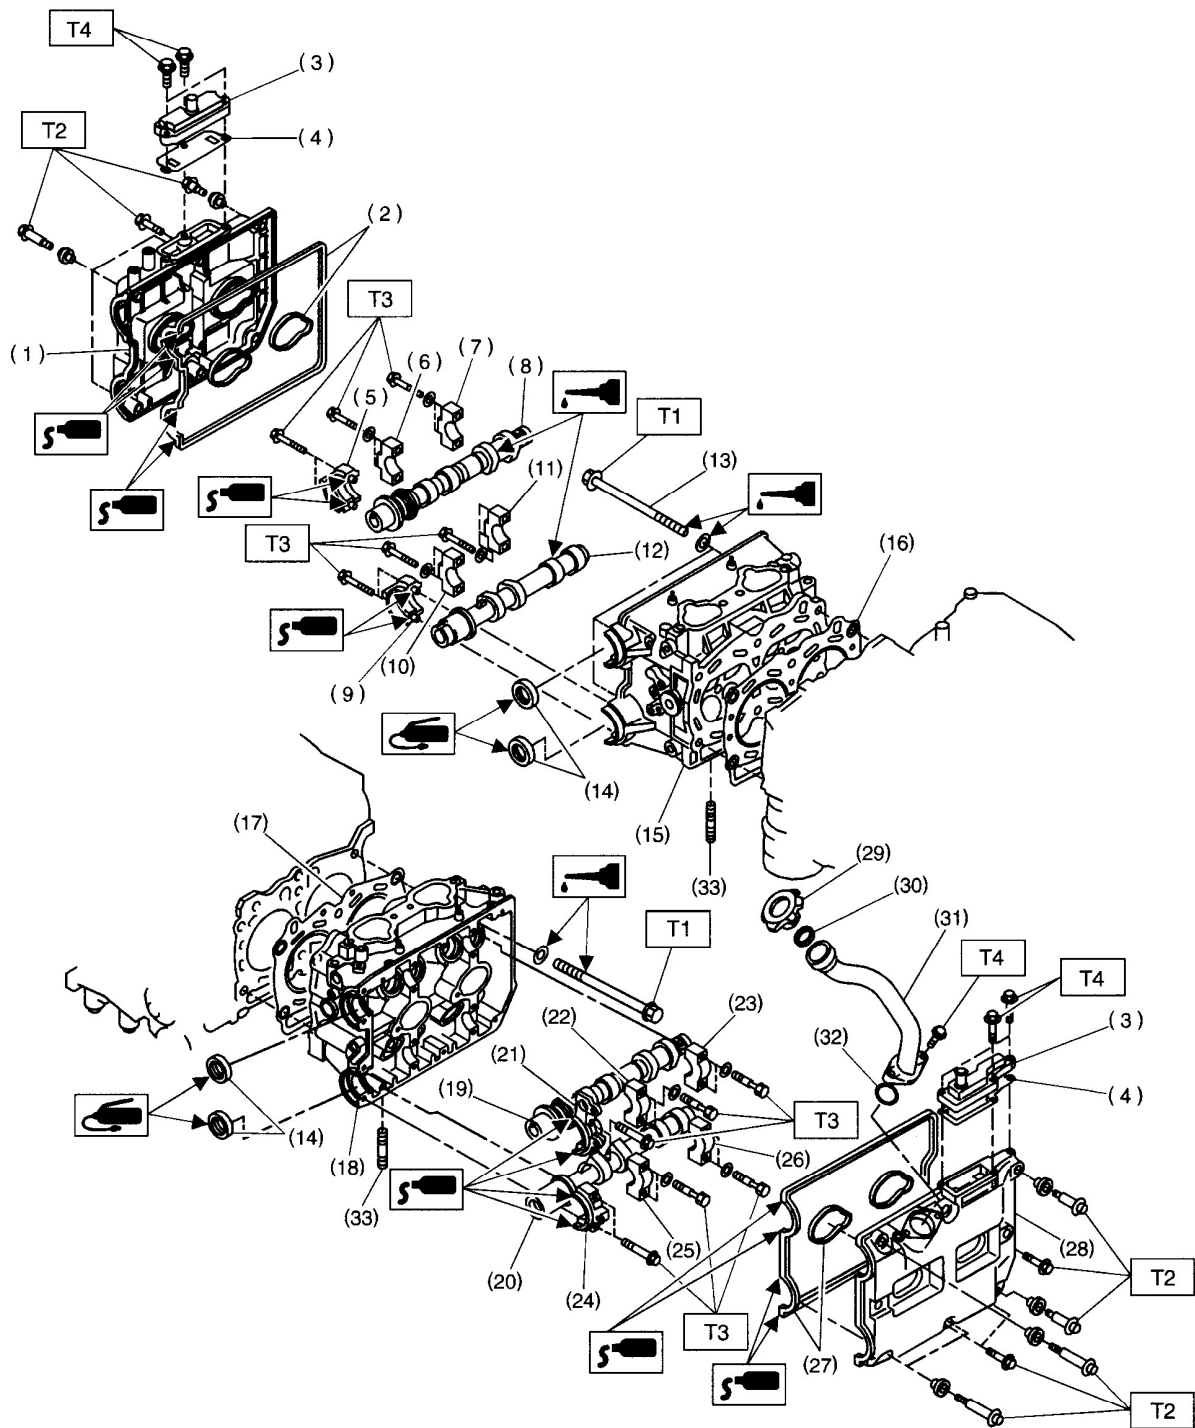

S2M1188A

GENERAL DESCRIPTION

MECHANICAL

- | | | |
|---------------------------------------|---------------------------------------|----------------------|
| (1) Rocker cover (RH) | (15) Cylinder head (RH) | (29) Oil filler cap |
| (2) Rocker cover gasket (RH) | (16) Cylinder head gasket (RH) | (30) Gasket |
| (3) Oil separator cover | (17) Cylinder head gasket (LH) | (31) Oil filler duct |
| (4) Gasket | (18) Cylinder head (LH) | (32) O-ring |
| (5) Intake camshaft cap (Front RH) | (19) Intake camshaft (LH) | (33) Stud bolt |
| (6) Intake camshaft cap (Center RH) | (20) Exhaust camshaft (LH) | |
| (7) Intake camshaft cap (Rear RH) | (21) Intake camshaft cap (Front LH) | |
| (8) Intake camshaft (RH) | (22) Intake camshaft cap (Center LH) | |
| (9) Exhaust camshaft cap (Front RH) | (23) Intake camshaft cap (Rear LH) | |
| (10) Exhaust camshaft cap (Center RH) | (24) Exhaust camshaft (Front LH) | |
| (11) Exhaust camshaft cap (Rear RH) | (25) Exhaust camshaft cap (Center LH) | |
| (12) Exhaust camshaft (RH) | (26) Exhaust camshaft cap (Rear LH) | |
| (13) Cylinder head bolt | (27) Rocker cover gasket (LH) | |
| (14) Oil seal | (28) Rocker cover (LH) | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: <Ref. to ME(DOHC TURBO)-64, INSTALLATION, Cylinder Head Assembly.>

T2: 5 (0.5, 3.6)


T3: 10 (1.0, 7)

T4: 6.4 (0.65, 4.7)

GENERAL DESCRIPTION

MECHANICAL


3. CYLINDER HEAD AND VALVE ASSEMBLY

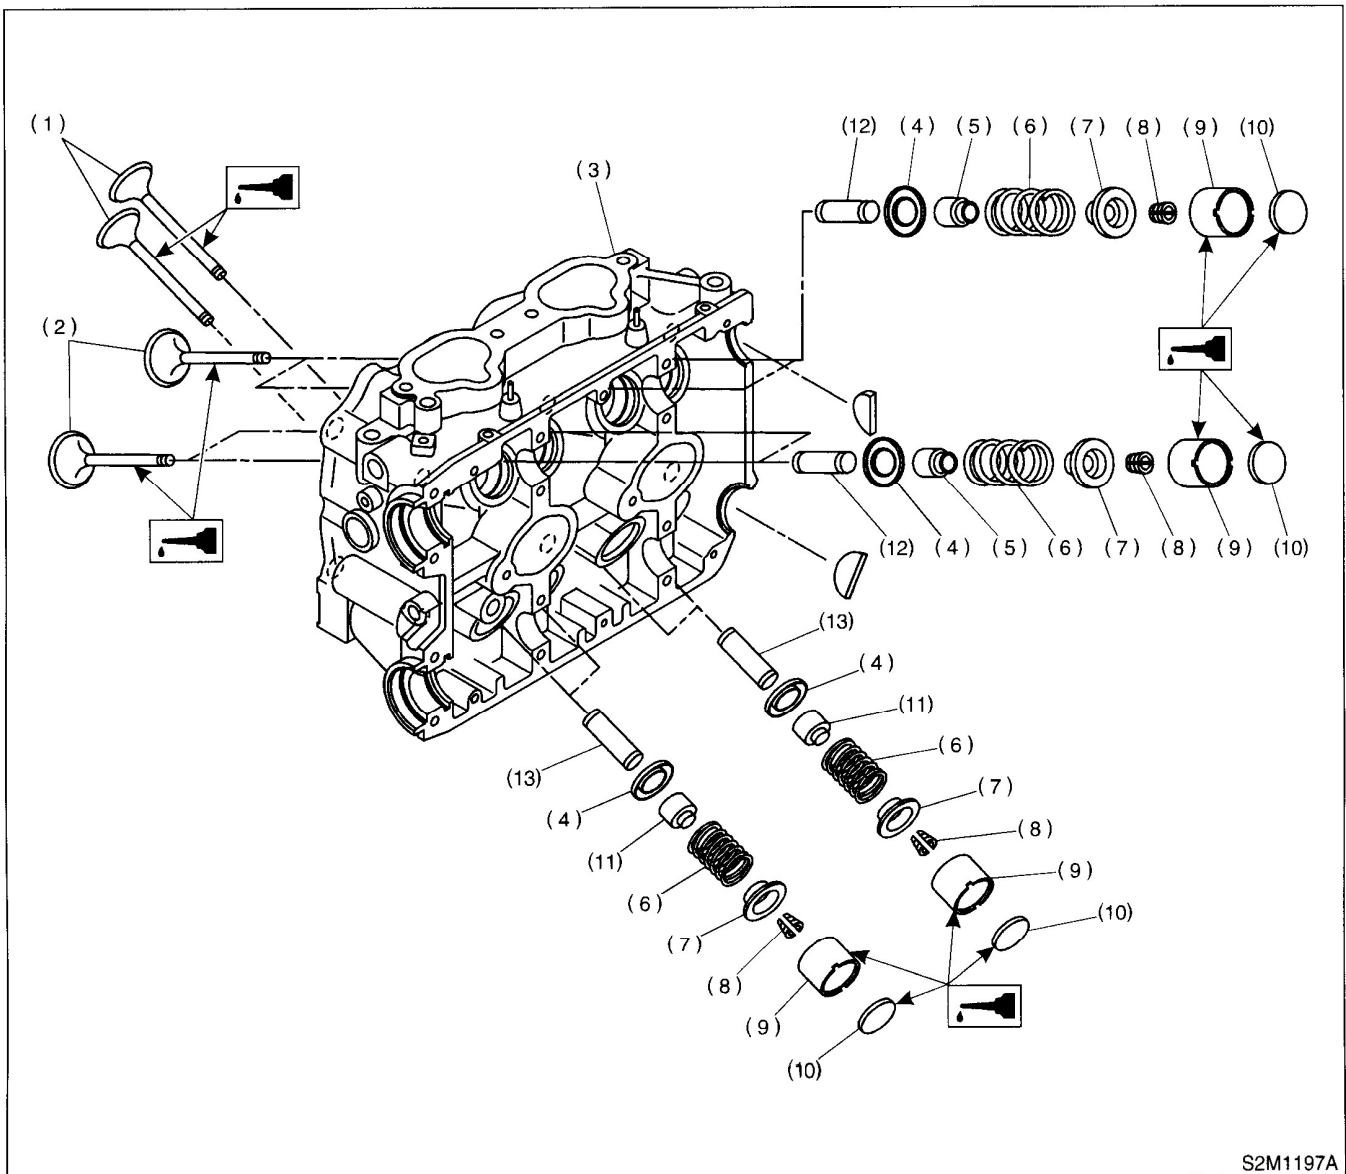

- | | | |
|---------------------------|------------------|-----------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Exhaust valve oil seal |
| (2) Intake valve | (7) Retainer | (12) Intake valve guide |
| (3) Cylinder head | (8) Retainer key | (13) Exhaust valve guide |
| (4) Valve spring seat | (9) Valve lifter | |
| (5) Intake valve oil seal | (10) Shim | |

ME(DOHC TURBO)-10

4. CYLINDER BLOCK

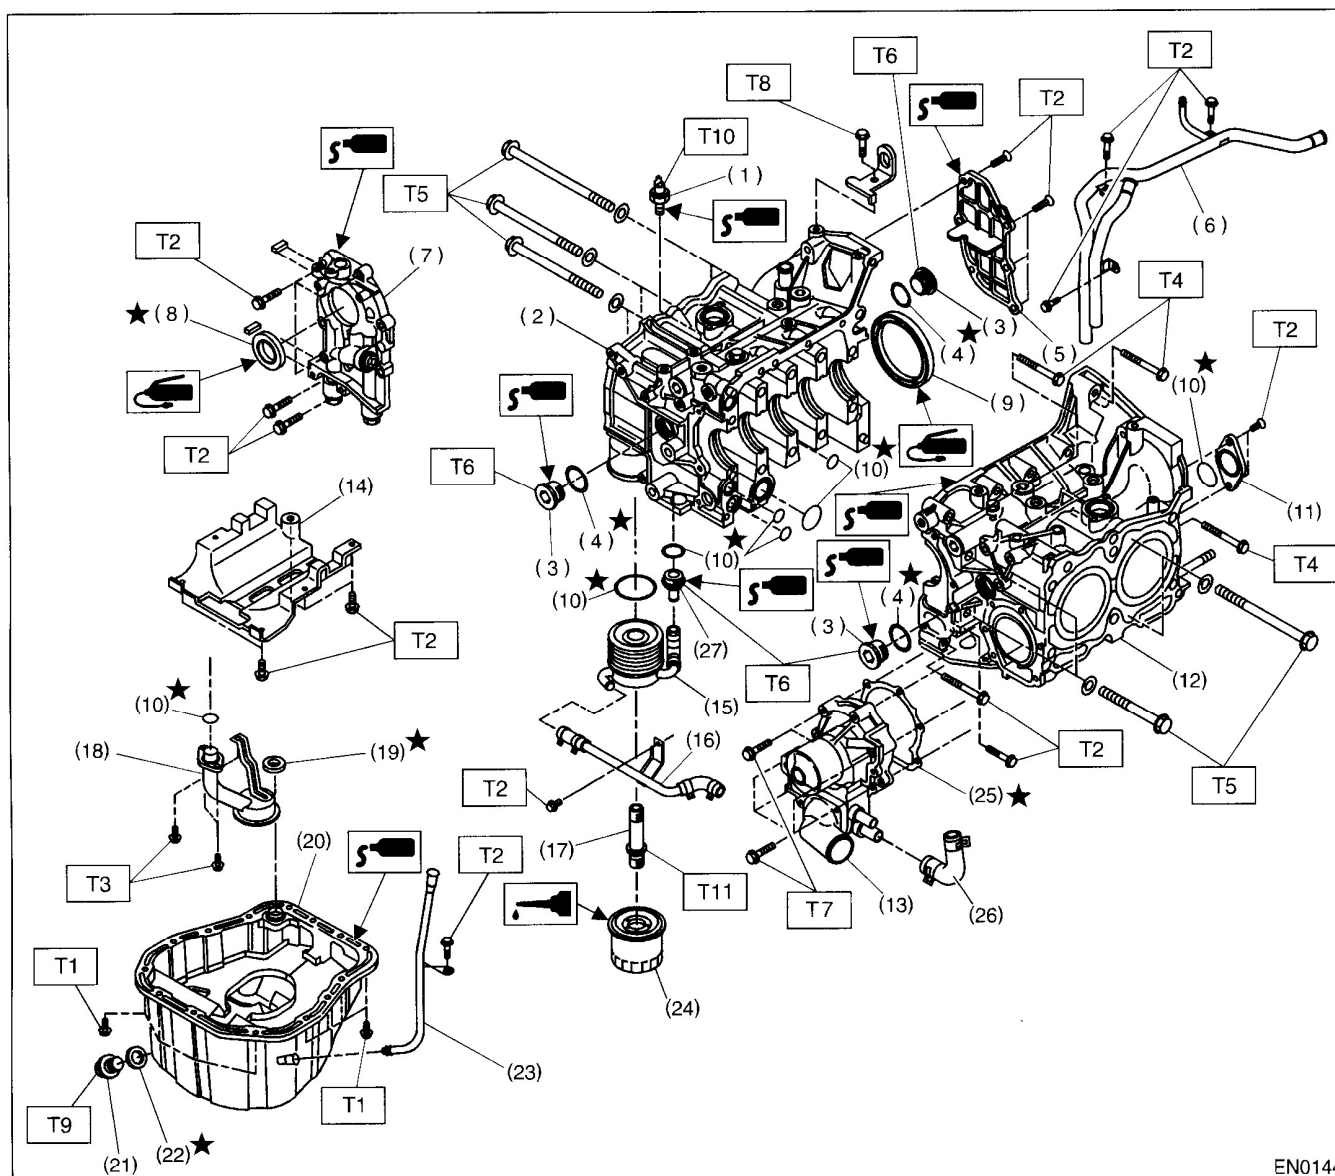

EN0144


- | | |
|--------------------------|----------------------------|
| (1) Oil pressure switch | (15) Oil cooler |
| (2) Cylinder block (RH) | (16) Waster by-pass pipe |
| (3) Service hole plug | (17) Connector |
| (4) Gasket | (18) Oil strainer |
| (5) Oil separator cover | (19) Gasket |
| (6) Water by-pass pipe | (20) Oil pan |
| (7) Oil pump | (21) Drain plug |
| (8) Front oil seal | (22) Metal gasket |
| (9) Rear oil seal | (23) Oil level gauge guide |
| (10) O-ring | (24) Oil filter |
| (11) Service hole cover | (25) Gasket |
| (12) Cylinder block (LH) | (26) Water pump hose |
| (13) Water pump | (27) Plug |
| (14) Baffle plate | |

Tightening torque: N·m (kgf-m, ft-lb)

- T1: 5 (0.5, 3.6)**
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7)
T4: 25 (2.5, 18.1)
T5: 47 (4.8, 34.7)
T6: 69 (7.0, 50.6)
T7: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T8: 16 (1.6, 11.6)
T9: 44 (4.5, 33)
T10: 25 (2.5, 18.1)
T11: 55 (5.5, 40)

GENERAL DESCRIPTION

5. CRANKSHAFT AND PISTON

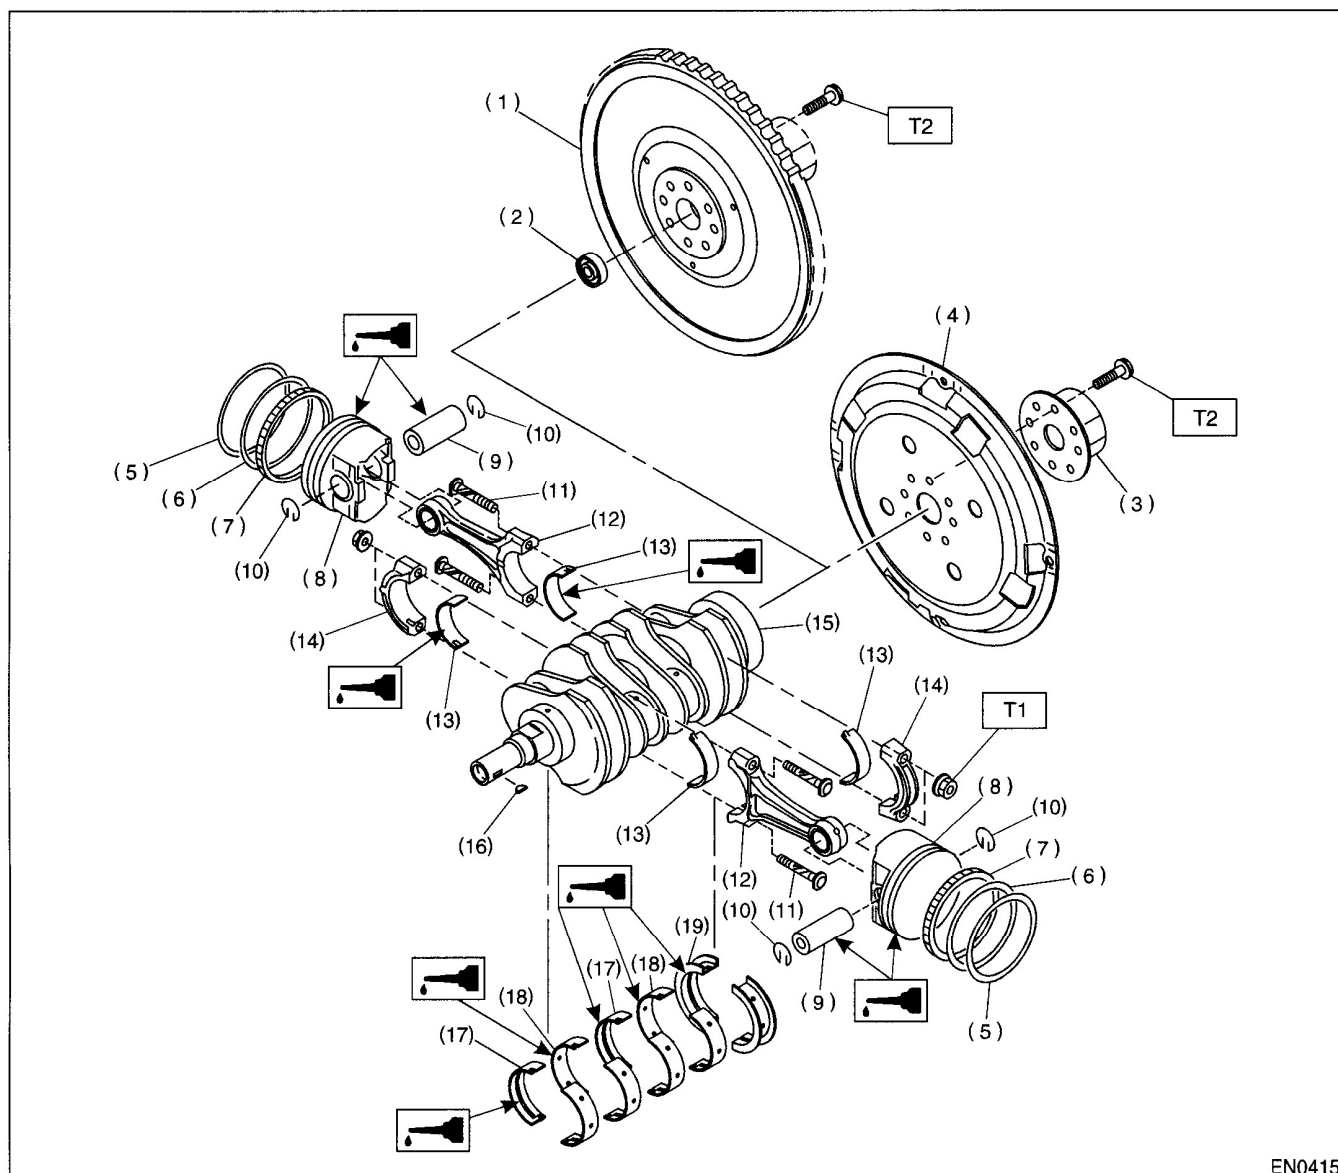


EN0415

- | | | |
|--------------------------------------|-----------------------------|--------------------------------|
| (1) Flywheel (MT vehicles only) | (9) Piston pin | (17) Crankshaft bearing #1, #3 |
| (2) Ball bearing (MT vehicles only) | (10) Circlip | (18) Crankshaft bearing #2, #4 |
| (3) Reinforcement (AT vehicles only) | (11) Connecting rod bolt | (19) Crankshaft bearing #5 |
| (4) Drive plate (AT vehicles only) | (12) Connecting rod | |
| (5) Top ring | (13) Connecting rod bearing | |
| (6) Second ring | (14) Connecting rod cap | |
| (7) Oil ring | (15) Crankshaft | |
| (8) Piston | (16) Woodruff key | |

Tightening torque: N-m (kgf-m, ft-lb)
T1: 44.6 (4.55, 32.9)
T2: 72 (7.3, 52.8)

6. ENGINE MOUNTING

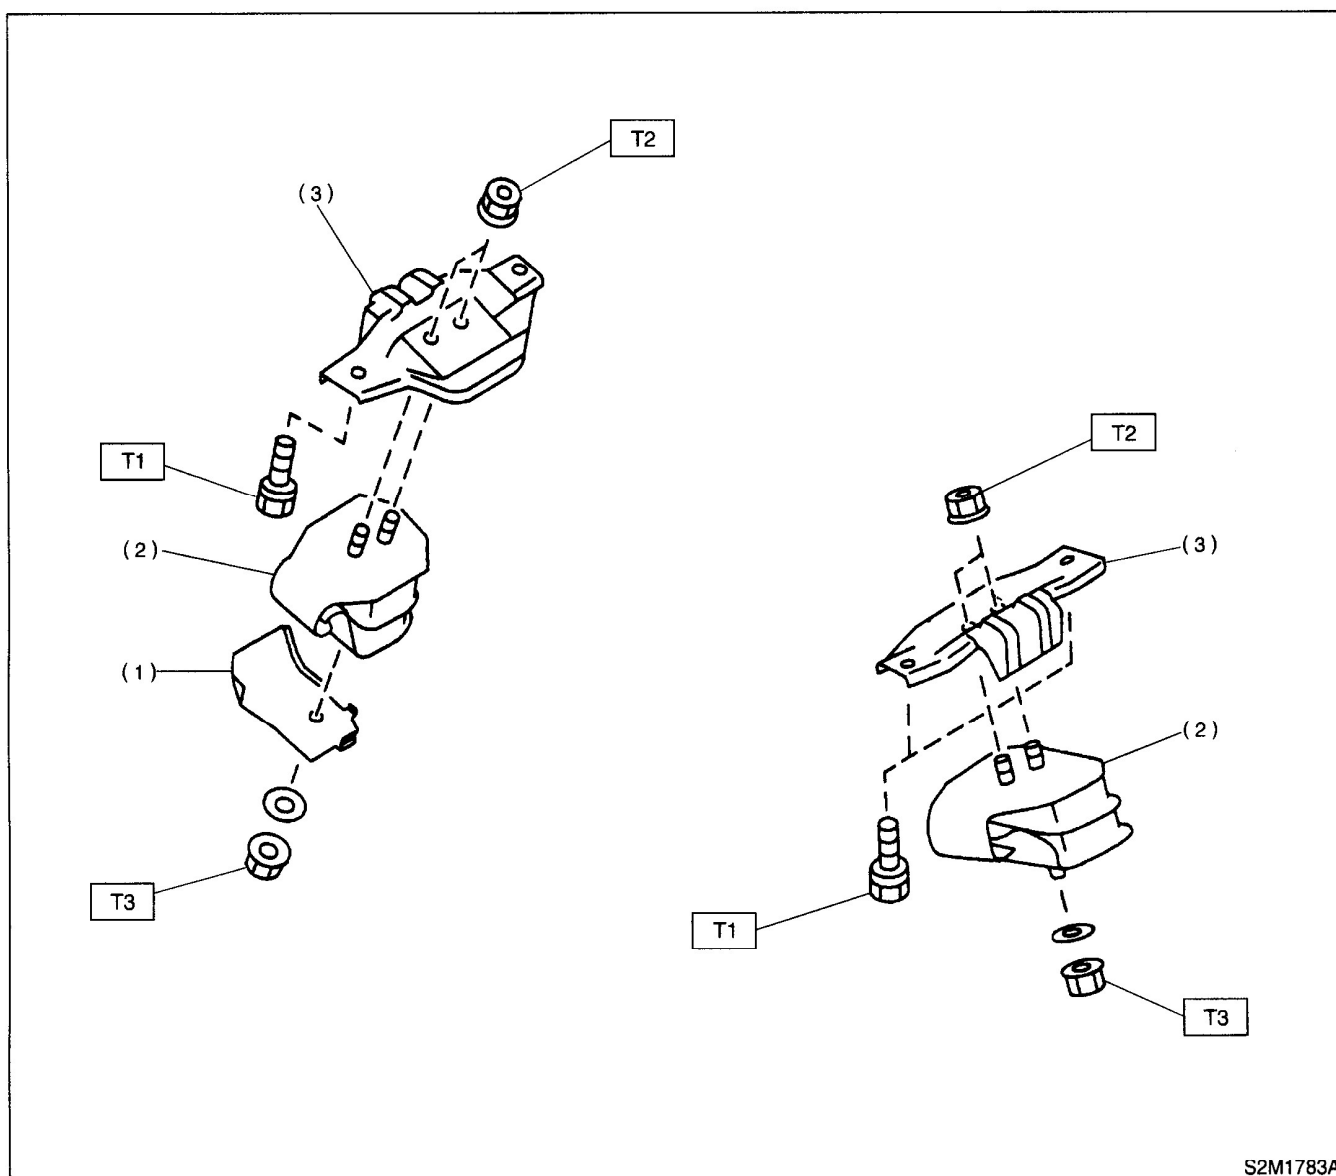

- (1) Hear shield cover
- (2) Front cushion rubber

- (3) Front engine mounting bracket

Tightening torque: N·m (kgf-m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 42 (4.3, 30.9)

T3: 85 (8.7, 62.7)

ME(DOHC TURBO)-13

GETtheMANUALS.org

GENERAL DESCRIPTION



MECHANICAL

C: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the negative terminal from battery.
- All parts should be thoroughly cleaned, paying special attention to the engine oil passages, pistons and bearings.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be re-installed in the original positions and directions.
- Bolts, nuts and washers should be replaced with new ones as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools or stain seats and windows with coolant or oil. Place a cover over fenders, as required, for protection.
- Prior to starting work, prepare the following: Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.





D: PREPARATION TOOL

1. SPECIAL TOOLS

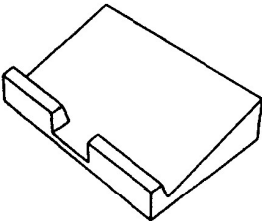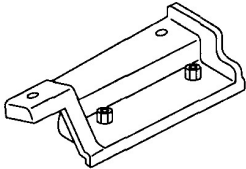ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 EN0147	498267600	CYLINDER HEAD TABLE	• Used for replacing valve guides. • Used for removing and installing valve springs.
 B2M3851	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).





GENERAL DESCRIPTION

MECHANICAL

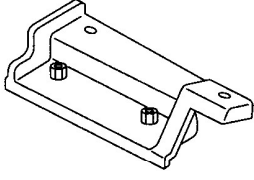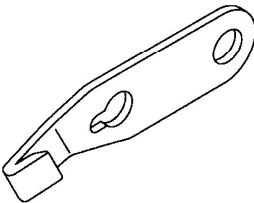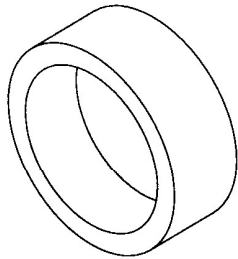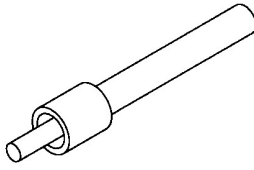ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3852	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
 B2M3853	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc.
 B2M3854	398744300 (Newly adopted tool)	PISTON GUIDE	Used for installing piston in cylinder for 2000 cc engine.
 B2M3855	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.





GENERAL DESCRIPTION

MECHANICAL

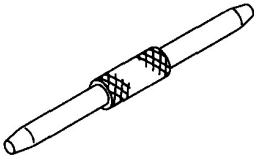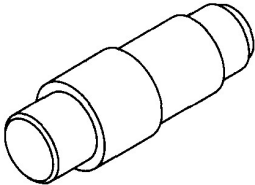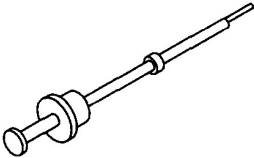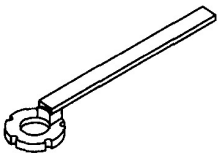ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3856	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 B2M3857	499037100	CONNECTING ROD BUSHING REMOVER & INSTALLER	Used for removing and installing connecting rod bushing.
 B2M3858	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
 B2M4158	499207400 (Newly adopted tool)	CAMSHAFT SPROCKET WRENCH	Used for removing and installing camshaft sprocket.





GENERAL DESCRIPTION

MECHANICAL

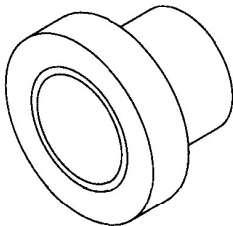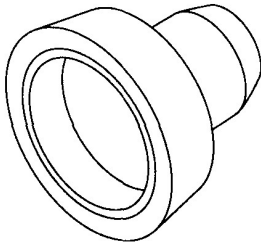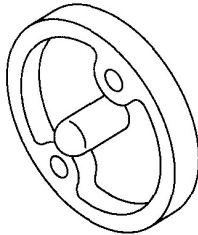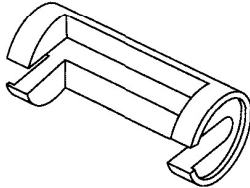ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3860	499587700 (Newly adopted tool)	CAMSHAFT OIL SEAL INSTALLER	Used for installing cylinder head plug for DOHC engine.
 B2M3861	499587200	CRANKSHAFT OIL SEAL INSTALLER	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
 B2M3863	499597100	CRANKSHAFT OIL SEAL GUIDE	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
 B2M3864	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.





GENERAL DESCRIPTION

MECHANICAL

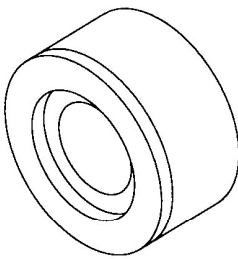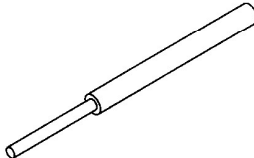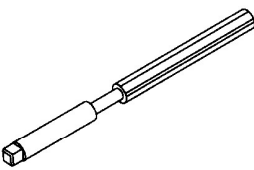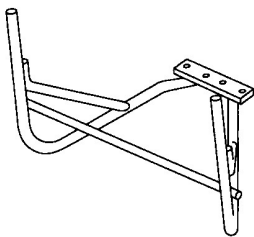ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3865	498267700	VALVE GUIDE ADJUSTER	Used for installing intake and exhaust valve guides.
 B2M3867	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 B2M3868	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 B2M3869	499817000	ENGINE STAND	• Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).





GENERAL DESCRIPTION

MECHANICAL

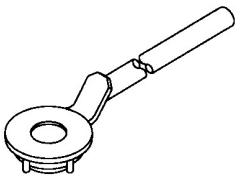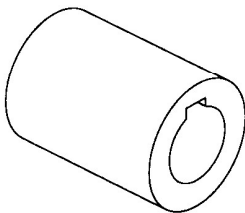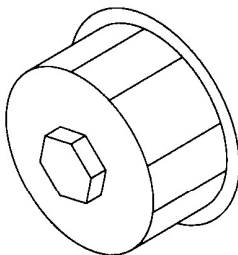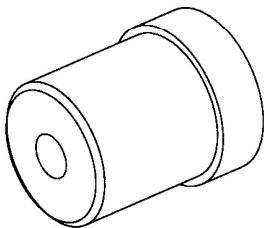ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M4157	499977300	CRANK PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts.
 B2M3871	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 B2M3872	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.
 B2M3875	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.


GENERAL DESCRIPTION

MECHANICAL

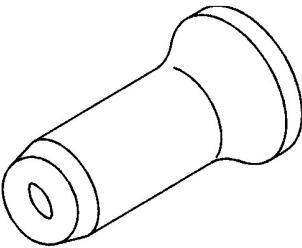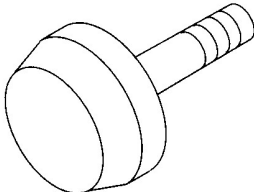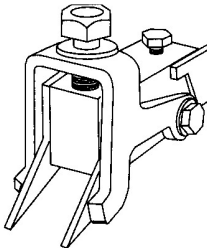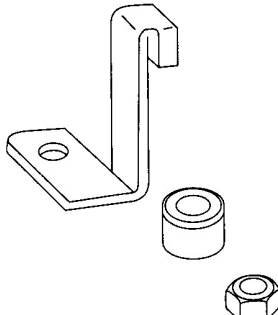ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 S1H0136	499587600 (Newly adopted tool)	OIL SEAL GUIDE	Used for installing camshaft oil seal for DOHC engine.
 EN0168	499597200 (Newly adopted tool)	OIL SEAL GUIDE	Used for installing camshaft oil seal for DOHC engine. Used with OIL SEAL GUIDE (499587600).
 EN0169	498187200 (Newly adopted tool)	SHIM REPLACER	Used for correct valve clearance.
 H1H049	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.

GENERAL DESCRIPTION

MECHANICAL

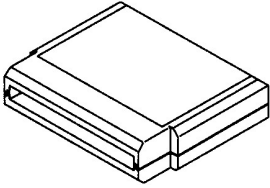ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3876	24082AA150	CARTRIDGE	Troubleshooting for electrical systems.
 B2M3877	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. - English: 22771AA030 (Without printer) - German: 22771AA070 (Without printer) - French: 22771AA080 (Without printer) - Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Compression Gauge	Used for measuring compression.
Timing Light	Used for measuring ignition timing.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on the vehicle, however, the procedures described in this section are based on the condition that the engine is removed from the vehicle.

- V-belt
- Timing Belt
- Camshaft
- Cylinder Head

2. Compression

A: INSPECTION

CAUTION:


After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

- 1) After warming-up the engine, turn the ignition switch to OFF.
- 2) Make sure that the battery is fully charged.
- 3) Release fuel pressure. <Ref. to FU(DOHC TURBO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 4) Remove all the spark plugs. <Ref. to IG(DOHC TURBO)-4, REMOVAL, Spark Plug.>
- 5) Fully open the throttle valve.
- 6) Check the starter motor for satisfactory performance and operation.
- 7) Hold the compression gauge tight against the spark plug hole.

CAUTION:

When using a screw-in type compression gauge, the screw (put into cylinder head spark plug hole) should be less than 18 mm (0.71 in) long.

- 8) Crank the engine by means of the starter motor, and read the maximum value on the gauge when the pointer is steady.

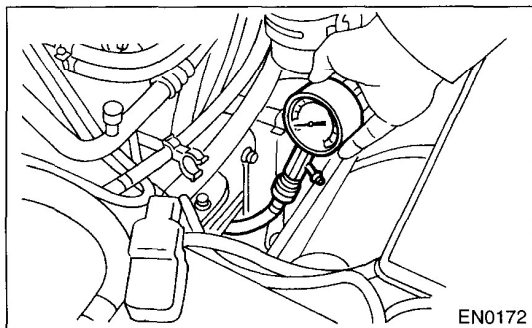

- 9) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (350 rpm and fully open throttle):

Standard;

951 — 1,147 kPa (9.7 — 11.7 kgf/cm², 138 — 166 psi)

Limit;

834 kPa (8.5 kgf/cm², 121 psi)

Difference between cylinders;

49 kPa (0.5 kgf/cm², 7 psi)

3. Idle Speed

A: INSPECTION

1) Before checking the idle speed, check the following:

(1) Ensure the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and that hoses are connected properly.

(2) Ensure the malfunction indicator light (CHECK ENGINE light) does not illuminate.

2) Warm-up the engine.

3) Stop the engine, and turn the ignition switch to OFF.

4) Insert the cartridge to the SUBARU SELECT MONITOR.

5) Connect the SUBARU SELECT MONITOR to the data link connector.

6) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.

7) Select {2. Each System Check} in Main Menu.

8) Select {Engine Control System} in Selection Menu.

9) Select {1. Current Data Display & Save} in Engine Control System Diagnosis.

10) Select {1.12 Data Display} in Data Display Menu.

11) Start the engine, and read engine idle speed.

12) Check the idle speed when unloaded. (With headlights, heater fan, rear defroster, radiator fan, air conditioning, etc. OFF)

Idle speed (No load and gears in neutral:

750±100 rpm

13) Check the idle speed when loaded. (Turn the air conditioning switch to "ON" and operate the compressor for at least one minute before measurement.)

Idle speed [A/C "ON", no load and gears in neutral]:

800±150 rpm (MT model)

825±150 rpm (AT model)

CAUTION:

Never rotate the idle adjusting screw. If the idle speed is out of specifications, refer to General On-board Diagnosis Table under "Engine Control System". <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>

4. Ignition Timing

A: INSPECTION

1) Before checking the ignition timing speed, check the following:

- (1) Ensure the air cleaner element is free from clogging, spark plugs are in good condition, and that hoses are connected properly.
- (2) Ensure the malfunction indicator light (CHECK ENGINE light) does not illuminate.

2) Warm-up the engine.

3) Stop the engine, and turn the ignition switch to OFF.

4) Insert the cartridge to the SUBARU SELECT MONITOR.

5) Connect the SUBARU SELECT MONITOR to the data link connector.

6) Turn the ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.

7) Select {2. Each System Check} in Main Menu.

8) Select {Engine Control System} in Selection Menu.

9) Select {1. Current Data Display & Save} in Engine Control System Diagnosis.

10) Select {1.12 Data Display} in Data Display Menu.

11) Start the engine, at idle speed and check the ignition timing.

Ignition timing [BTDC/rpm]:

12°±3°/750

If the timing is not correct, check the ignition control system. Refer to Engine Control System. <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>


5. Intake Manifold Vacuum

A: INSPECTION

- 1) Warm-up the engine.
- 2) Disconnect the brake vacuum hose and install the vacuum gauge to the hose fitting on the manifold.

- 3) Keep the engine at the idle speed and read the vacuum gauge indication.

By observing the gauge needle movement, the internal condition of the engine can be diagnosed as described below.

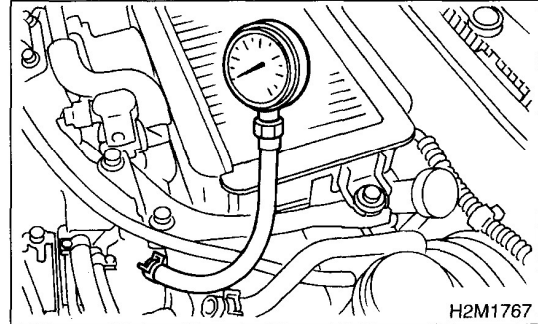

Vacuum pressure (at idling, A/C "OFF"):
Less than -60.0 kPa (-450 mmHg, -17.72 in-Hg)

Diagnosis of engine condition by measurement of manifold vacuum	
Vacuum gauge indication	Possible engine condition
1. Needle is steady but lower than normal position. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket or disconnection or damaged vacuum hose
2. When engine speed is reduced slowly from higher speed, needle stops temporarily when it is lowering or becomes steady above normal position.	Back pressure too high, or exhaust system clogged
3. Needle intermittently drops to position lower than normal position.	Leakage around cylinder
4. Needle drops suddenly and intermittently from normal position.	Sticky valves
5. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
6. Needle vibrates above and below normal position in narrow range.	Defective ignition system or throttle chamber idle adjustment


ENGINE OIL PRESSURE

MECHANICAL


6. Engine Oil Pressure

A: INSPECTION

- 1) Remove the oil pressure switch from engine cylinder block. <Ref. to LU-22, REMOVAL, Oil Pressure Switch.>
- 2) Connect the oil pressure gauge hose to cylinder block.
- 3) Connect the battery ground terminal to battery.

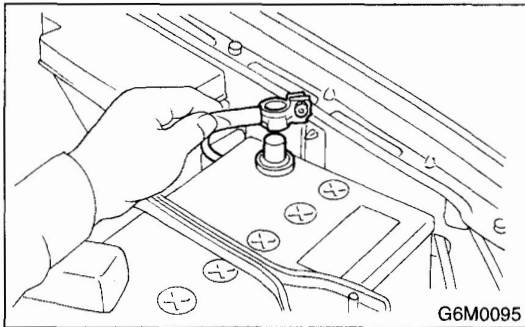

- 4) Start the engine, and measure oil pressure.

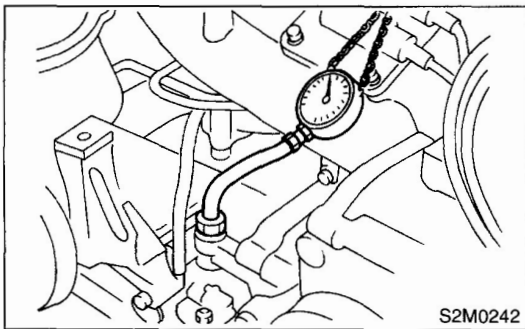

Oil pressure:

98 kPa (1.0 kg/cm², 14 psi) or more at 800 rpm
294 kPa (3.0 kg/cm², 43 psi) or more at 5,000 rpm

CAUTION:

- If the oil pressure is out of specification, check oil pump, oil filter and lubrication line. <Ref. to LU-28, INSPECTION, Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is turned ON and oil pressure is in specification, replace the oil pressure switch. <Ref. to LU-28, INSPECTION, Engine Lubrication System Trouble in General.>

NOTE:

The specified data is based on an engine oil temperature of 80°C (176°F).

- 5) After measuring the oil pressure, install the oil pressure switch. <Ref. to LU-23, INSTALLATION, Oil Pressure Switch.>

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

7. Fuel Pressure

A: INSPECTION

WARNING:


Before removing the fuel pressure gauge, release the fuel pressure.

NOTE:


If out of specification, check or replace the pressure regulator and pressure regulator vacuum hose.

1) Release the fuel pressure. <Ref. to FU(DOHC TURBO)-51, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>


2) Open the fuel flap lid, and remove the fuel filler cap.

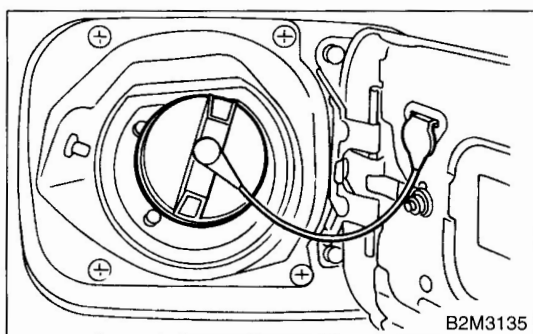

3) Disconnect the fuel delivery hoses from fuel filter, and connect the fuel pressure gauge.

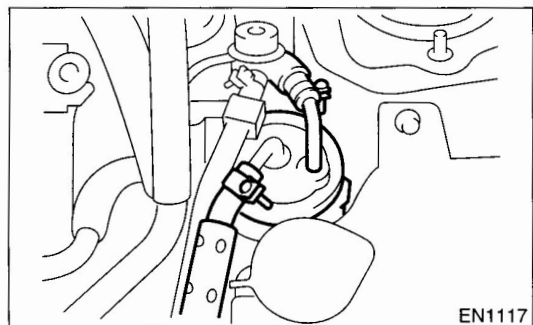

4) Connect the connector of fuel pump relay.

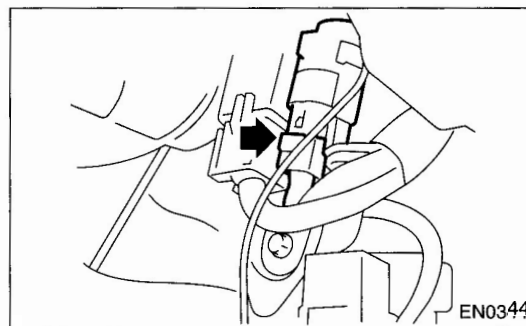


5) Start the engine.

6) Measure fuel pressure while disconnecting the pressure regulator vacuum hose from intake manifold.

Fuel pressure:


Standard; 284 — 314 kPa (2.9 — 3.2 kgf/cm², 41 — 46 psi)

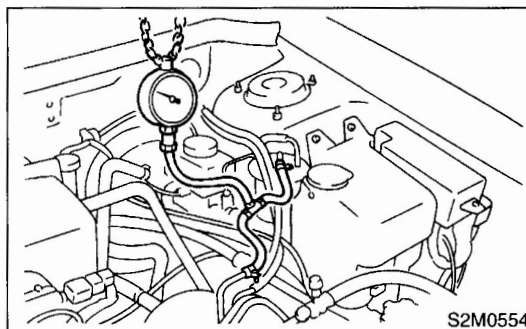

7) After connecting the pressure regulator vacuum hose, measure fuel pressure.

Fuel pressure:

Standard; 230 — 260 kPa (2.35 — 2.65 kgf/cm², 33 — 38 psi)

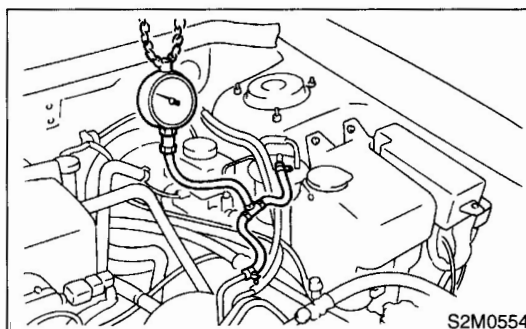

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kgf/cm², 1 to 3 psi) higher than standard values during high-altitude operations.

VALVE CLEARANCE

MECHANICAL


8. Valve Clearance

A: INSPECTION


CAUTION:

Inspection and adjustment of valve clearance should be performed while engine is cold.

- 1) Set the vehicle onto the lift.
- 2) Disconnect the ground terminal from battery.

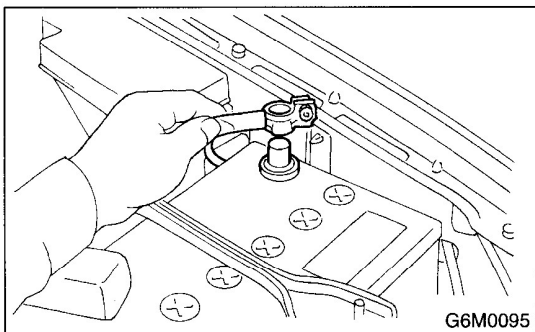


- 3) Remove the air intake duct. <Ref. to IN(DOHC TURBO)-8, REMOVAL, Air Intake Duct.>
- 4) Remove one bolt which secures the timing belt cover (RH).
- 5) Lift-up the vehicle.
- 6) Remove the under cover.
- 7) Loosen the remaining bolts which secure the timing belt cover (RH), then remove the belt cover.
- 8) Lower the vehicle.
- 9) When inspecting #1 and #3 cylinders:
 - (1) Pull out the engine harness connector with bracket from air cleaner upper cover.

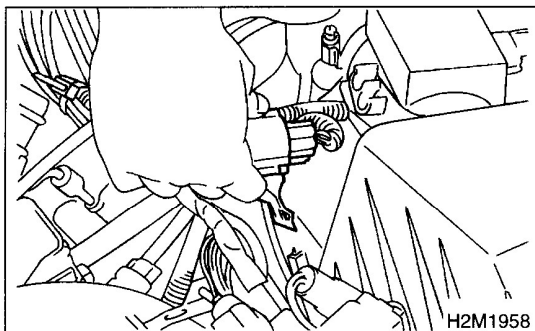


- (2) Remove the air cleaner case. <Ref. to IN(DOHC TURBO)-7, REMOVAL, Air Cleaner.>
- (3) Disconnect the spark plug cords from spark plugs (#1 and #3 cylinders).
- (4) Place a suitable container under the vehicle.
- (5) Disconnect the PCV hose from rocker cover (RH).
- (6) Remove the bolts, then remove the rocker cover (RH).


- 10) When inspecting #2 and #4 cylinders:
 - (1) Disconnect the battery terminal, and then remove the battery and battery carrier.

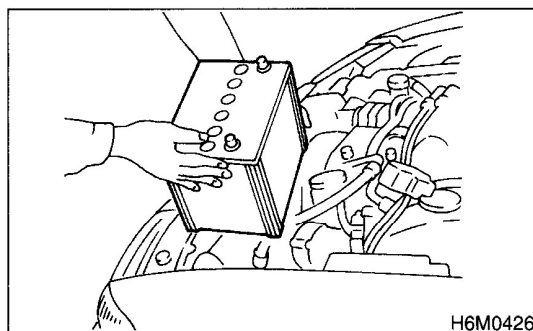


- (2) Remove the bolt which secures the engine harness bracket onto body.

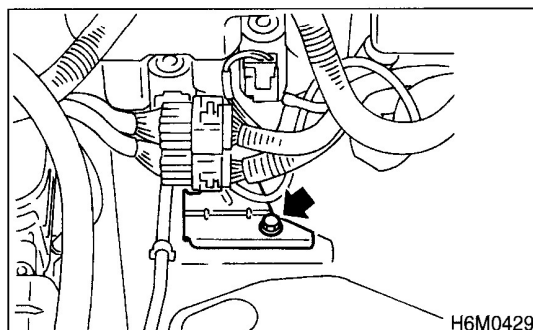

- (3) Disconnect the washer motor connectors.

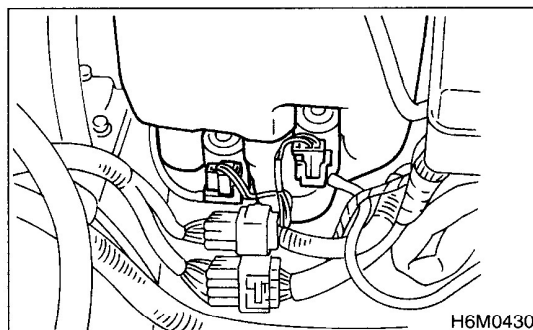


- (4) Remove the washer tank mounting bolts.

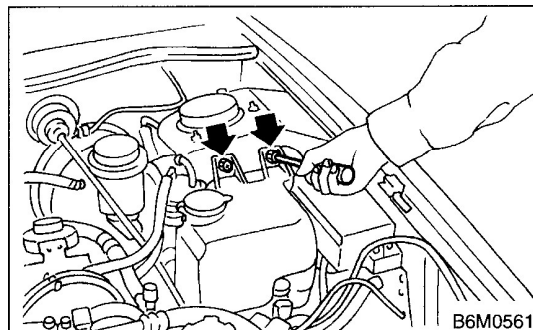

VALVE CLEARANCE

MECHANICAL

- (5) Move the washer tank upward.

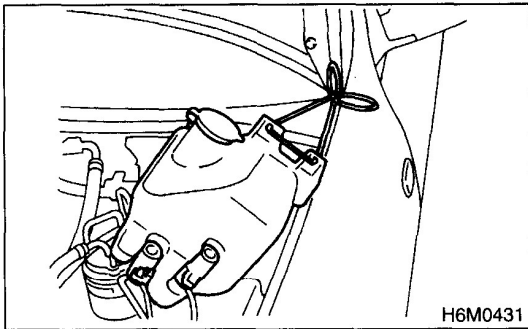

- (6) Disconnect the spark plug cords from spark plugs (#2 and #4 cylinders).

- (7) Place a suitable container under the vehicle.

- (8) Disconnect the PCV hose from rocker cover (LH).


- (9) Remove the bolts, then remove the rocker cover (LH).

- 11) Turn the crankshaft pulley clockwise until arrow mark on the camshaft sprocket is set to position shown in the figure.

NOTE:

Turn the crankshaft using ST.

ST 499987500 CRANKSHAFT SOCKET

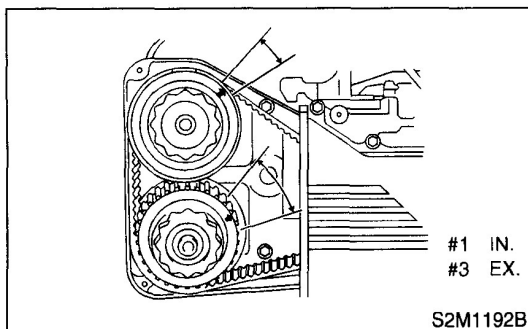

- 12) Measure #1 cylinder intake valve and #3 cylinder exhaust valve clearance by using thickness gauge (A).

CAUTION:

- Insert the thickness gauge in as horizontal a direction as possible with respect to the shim.
- Measure the exhaust valve clearances while lifting-up the vehicle.


Valve clearance:

Intake: 0.20 ± 0.02 mm (0.0079 ± 0.0008 in)

Exhaust: 0.25 ± 0.02 mm (0.0098 ± 0.0008 in)

NOTE:


If the measured value is not within specification, take notes of the value in order to adjust the valve clearance later on.

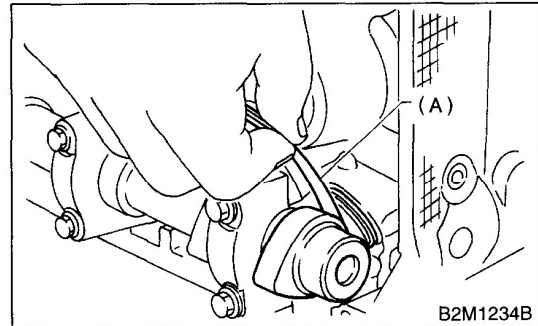


- 13) If necessary, adjust the valve clearance. <Ref. to ME(DOHC TURBO)-30, ADJUSTMENT, Valve Clearance.>

- 14) Further turn the crankshaft pulley clockwise. Using the same procedures described previously, then measure valve clearances again.

- (1) Set the arrow mark on camshaft sprocket to position shown in the figure, and measure #2 cylinder exhaust valve and #3 cylinder intake valve clearances.

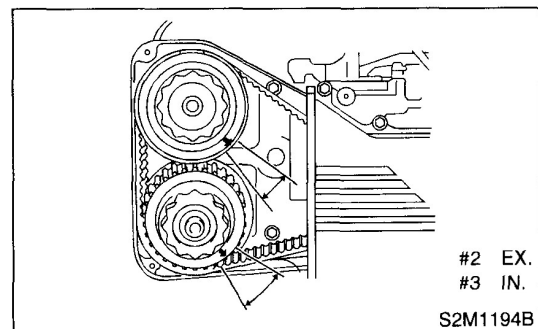


- (2) Set the arrow mark on camshaft sprocket to position shown in the figure, and measure #2 cylinder intake valve and #4 cylinder exhaust valve clearances.

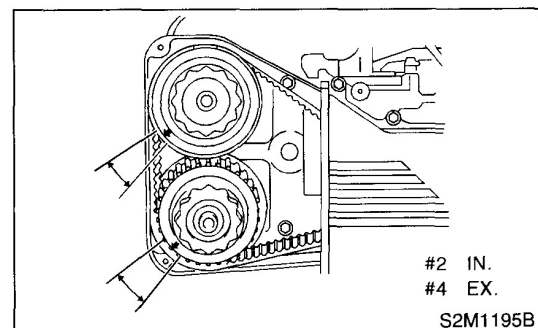

VALVE CLEARANCE

MECHANICAL


(3) Set the arrow mark on camshaft sprocket to position shown in the figure, and measure #1 cylinder exhaust valve and #4 cylinder intake valve clearances.

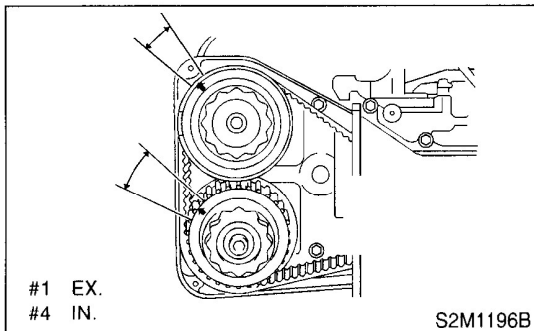

15) After inspection, install the related parts in the reverse order of removal.

Tightening torque:

32 N·m (3.3 kgf-m, 24 ft-lb)

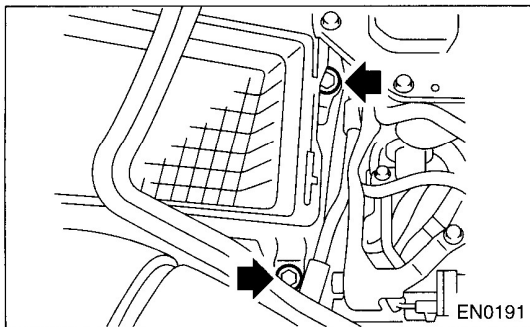

B: ADJUSTMENT


CAUTION:

Adjustment of valve clearance should be performed while engine is cold.

1) Measure all valve clearances. <Ref. to ME(DOHC TURBO)-28, INSPECTION, Valve Clearance.>

NOTE:


Record each valve clearance after it has been measured.

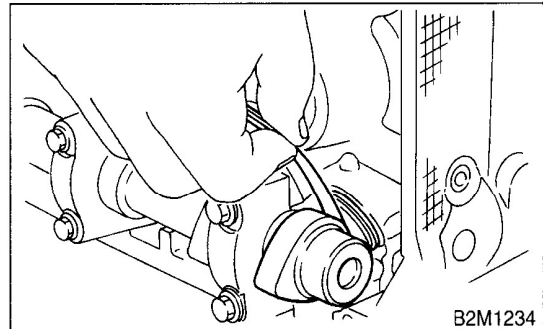


2) Remove the shim from valve lifter.

(1) Prepare the ST.

ST 498187200 SHIM REPLACER

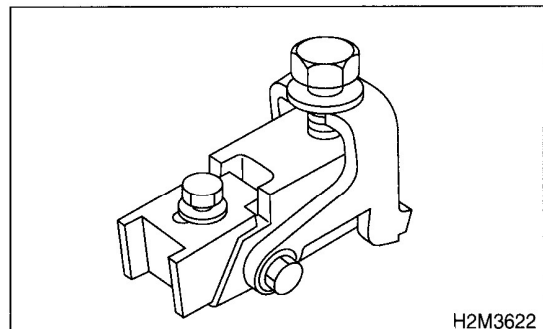


(2) Rotate the notch of the valve lifter outward by 45°.

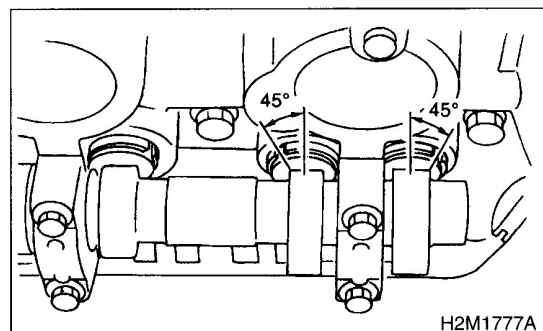

VALVE CLEARANCE

MECHANICAL

(3) Adjust the SHIM REPLACER notch to valve lifter and set it.

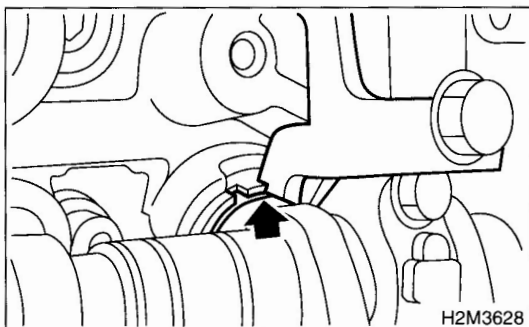


NOTE:


When setting, be careful the SHIM REPLACER edge does not touch shim.

(4) Tighten bolt (A) and install it to the cylinder head.

(5) Tighten bolt (B) and insert the valve lifter.

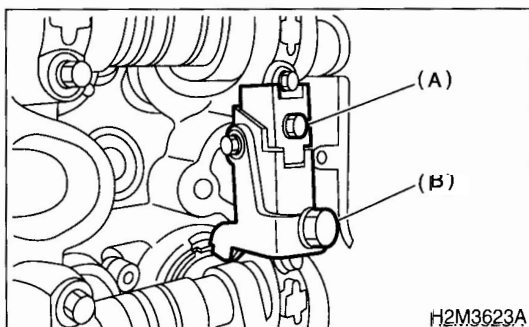


(6) Insert tweezers into the notch of the valve lifter, and take the shim out.

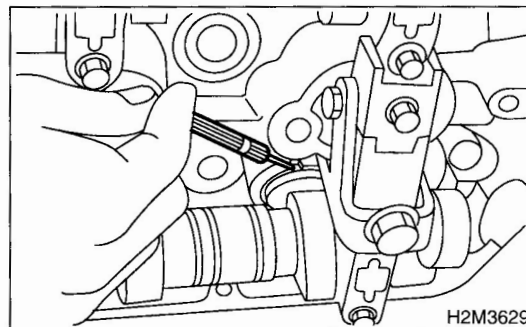


NOTE:

By using a magnet (A), the shim (B) can be taken out without dropping it.

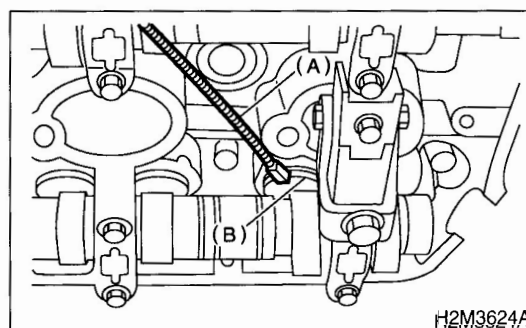

3) Measure the thickness of shim with a micrometer.

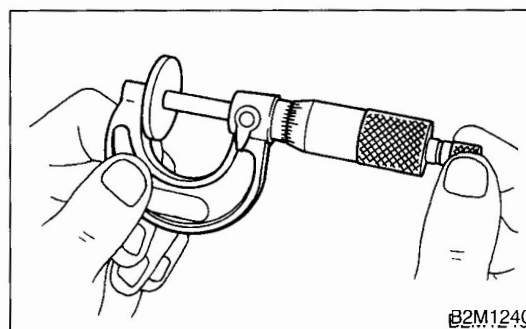

4) Select a shim of suitable thickness using measured valve clearance and shim thickness, by referring to the following table.

5) Set the suitable shim selected in step 4) to valve lifter.

Unit: mm	
Intake valve:	$S = (V + T) - 0.20$
Exhaust valve:	$S = (V + T) - 0.25$
S: Shim thickness to be used	
V: Measured valve clearance	
T: Shim thickness required	

VALVE CLEARANCE

MECHANICAL

Part No.	Thickness mm (in)
13218 AK010	2.00 (0.0787)
13218 AK020	2.02 (0.0795)
13218 AK030	2.04 (0.0803)
13218 AK040	2.06 (0.0811)
13218 AK050	2.08 (0.0819)
13218 AK060	2.10 (0.0827)
13218 AK070	2.12 (0.0835)
13218 AK080	2.14 (0.0843)
13218 AK090	2.16 (0.0850)
13218 AK100	2.18 (0.0858)
13218 AK110	2.20 (0.0866)
13218 AE710	2.22 (0.0874)
13218 AE730	2.24 (0.0882)
13218 AE750	2.26 (0.0890)
13218 AE770	2.28 (0.0898)
13218 AE790	2.30 (0.0906)
13218 AE810	2.32 (0.0913)
13218 AE830	2.34 (0.0921)
13218 AE850	2.36 (0.0929)
13218 AE870	2.38 (0.0937)
13218 AE890	2.40 (0.0945)
13218 AE910	2.42 (0.0953)
13218 AE920	2.43 (0.0957)
13218 AE930	2.44 (0.0961)
13218 AE940	2.45 (0.0965)
13218 AE950	2.46 (0.0969)
13218 AE960	2.47 (0.0972)
13218 AE970	2.48 (0.0976)
13218 AE980	2.49 (0.0980)
13218 AE990	2.50 (0.0984)
13218 AF000	2.51 (0.0988)
13218 AF010	2.52 (0.0992)
13218 AF020	2.53 (0.0996)
13218 AF030	2.54 (0.1000)
13218 AF040	2.55 (0.1004)
13218 AF050	2.56 (0.1008)
13218 AF060	2.57 (0.1012)
13218 AF070	2.58 (0.1016)
13218 AF090	2.60 (0.1024)
13218 AF110	2.62 (0.1031)
13218 AF130	2.64 (0.1039)
13218 AF150	2.66 (0.1047)
13218 AF170	2.68 (0.1055)
13218 AF190	2.70 (0.1063)


6) Inspect all valves for clearance again at this stage. If the valve clearance is not correct, repeat the procedure over again from the first step.

7) After inspection, install the related parts in the reverse order of removal.


9. Engine Assembly

A: REMOVAL

- 1) Set the vehicle on lift arms.
- 2) Open the front hood fully and support with stay.
- 3) Raise the rear seat, and turn the floor mat up.
- 4) Release the fuel pressure.
 - (1) Disconnect the fuel pump relay connector.

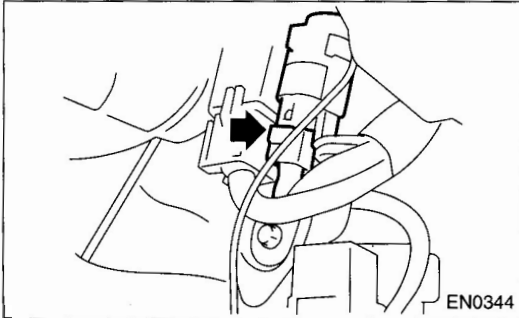


- (2) Start the engine, and run until stalls.
- (3) After the engine stalls, crank it for five seconds more.
- (4) Turn the ignition switch to "OFF".
- 5) Remove the filler cap.
- 6) Disconnect the ground terminal from battery.

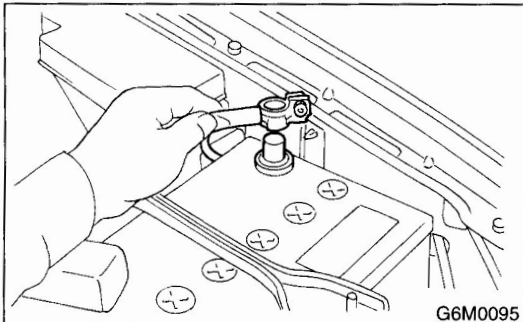

- 7) Remove the radiator from vehicle. <Ref. to CO-37, REMOVAL, Radiator.>
- 8) Remove the coolant filler tank. <Ref. to CO-51, REMOVAL, Coolant Filler Tank.>


- 9) Collect refrigerant, and remove the pressure hoses.

- (1) Place and connect the attachment hose to the refrigerant recycle system.
- (2) Collect the refrigerant from A/C system.
- (3) Disconnect the A/C pressure hoses from A/C compressor.

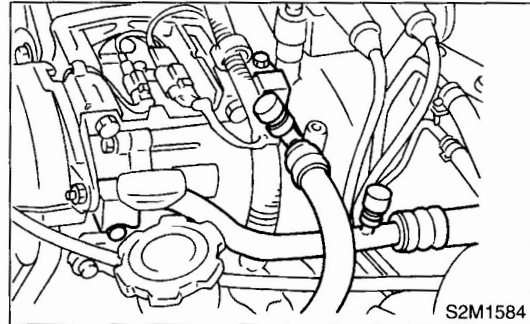


- 10) Remove the intercooler. <Ref. to IN(DOHC TURBO)-10, REMOVAL, Intercooler.>

- 11) Disconnect the following connectors and cable.
 - (1) Engine harness connector

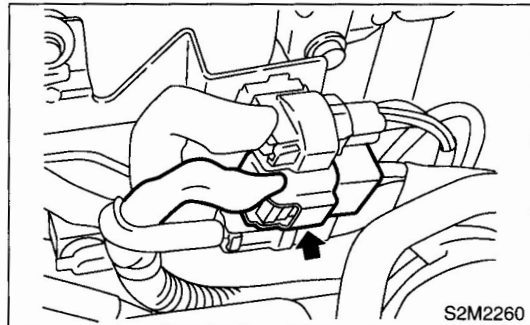


- (2) Engine ground terminal

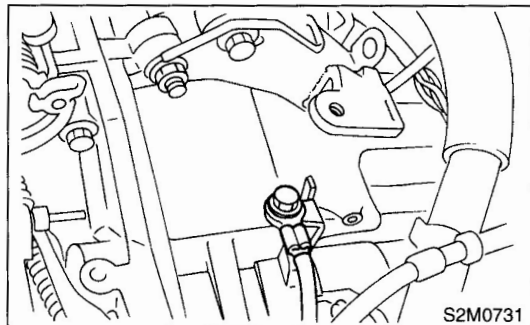


ENGINE ASSEMBLY

MECHANICAL

(3) Engine harness connector

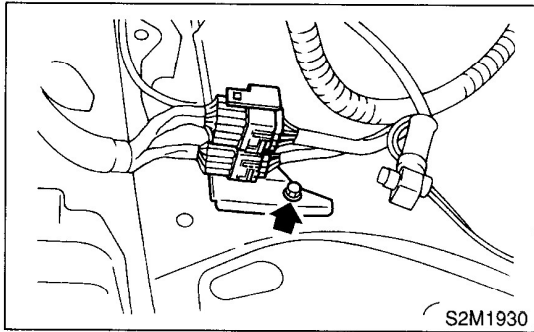


(4) Generator connector, terminal and A/C compressor connectors

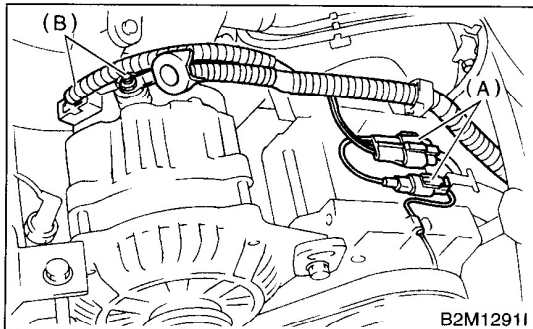


- (A) A/C compressor connector
(B) Generator connector and terminal

(5) Accelerator cable

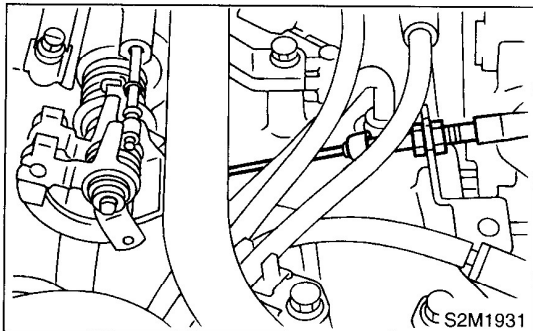


(6) Clutch release spring

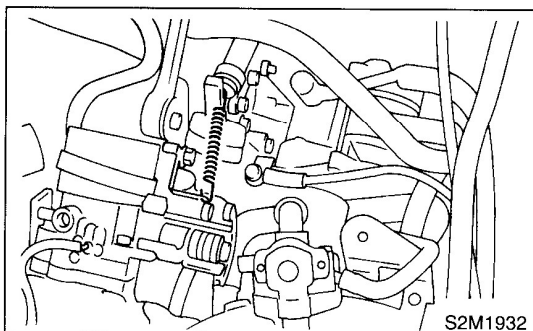


12) Disconnect the following hoses.

(1) Brake booster vacuum hose

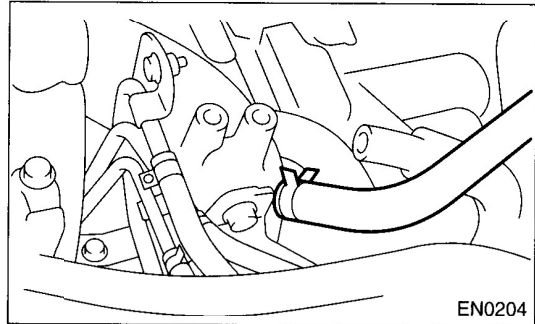


(2) Heater inlet outlet hose

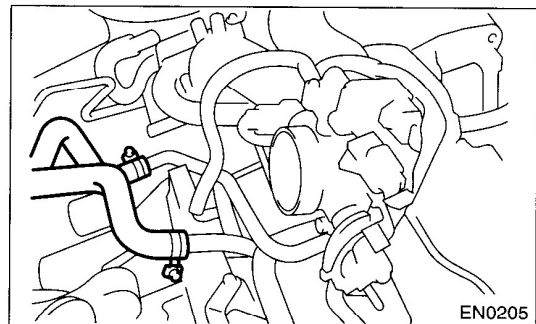


13) Remove the power steering pump from bracket.

(1) Loosen lock bolt and slider bolt, and remove the front side V-belt. <Ref. to ME(DOHC TURBO)-44, FRONT SIDE BELT, REMOVAL, V-belt.>


(2) Disconnect the power steering switch connector.

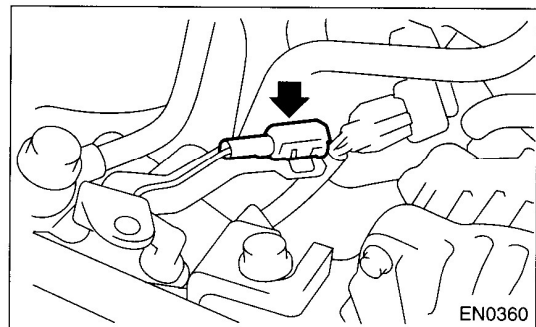


(3) Remove the pipe with bracket from intake manifold.

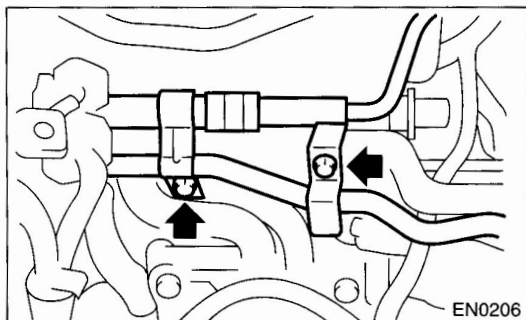


(4) Remove the power steering pump from engine.

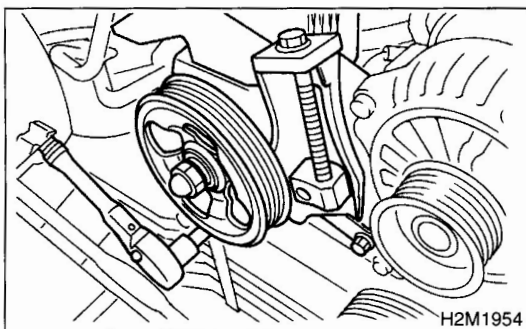

(5) Remove the power steering tank from the bracket by pulling it upward.

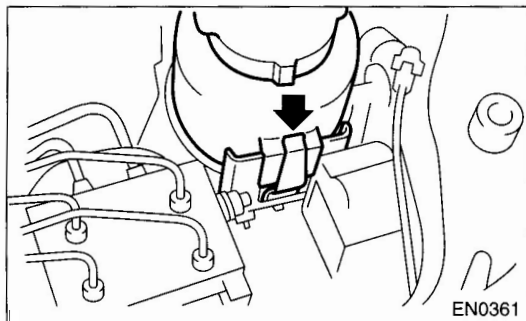


(6) Place the power steering pump on the right side wheel apron.

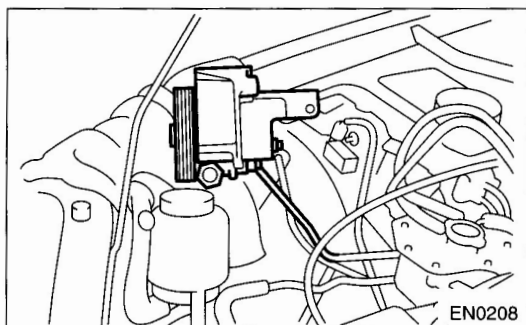


14) Remove the center exhaust pipe. <Ref. to EX(DOHC TURBO)-8, REMOVAL, Center Exhaust Pipe.>

15) Remove the nuts which hold lower side of transmission to engine.

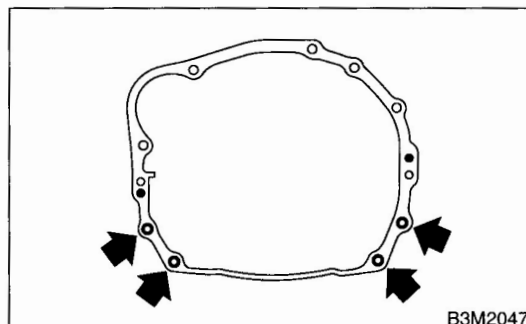


16) Remove the nuts which install the front cushion rubber onto front crossmember.

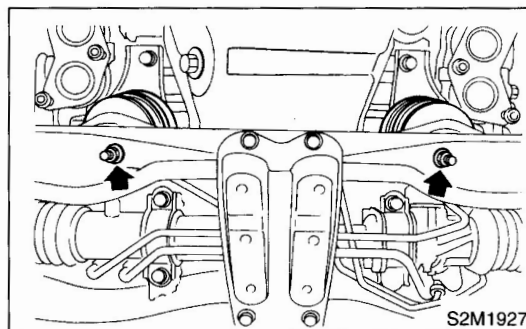

17) Separate the clutch release fork from release bearing. (MT vehicles)

(1) Remove the clutch operating cylinder from transmission.


(2) Remove the plug using a 10 mm hexagon wrench.

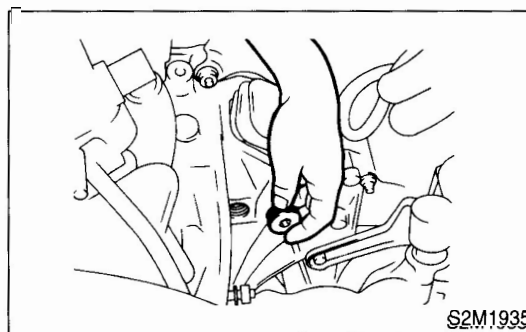

ENGINE ASSEMBLY

MECHANICAL

- (3) Screw the 6 mm dia. bolt into release fork shaft, and remove it.

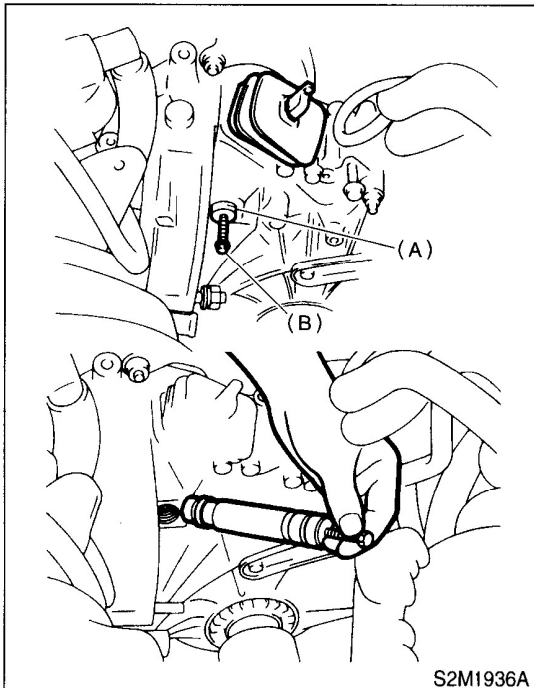

- (A) Shaft
(B) Bolt

- (4) Raise the release fork and unfasten the release bearing tabs to free release fork.


CAUTION:

Step (4) is required to prevent interference with engine when removing the engine from transmission.


- 18) Separate the torque converter clutch from drive plate. (AT vehicles)

- (1) Lower the vehicle.
- (2) Remove the service hole plug.
- (3) Remove the bolts which hold torque converter clutch to drive plate.
- (4) Remove the other bolts while rotating the engine using ST.

ST 499977300 CRANK PULLEY WRENCH

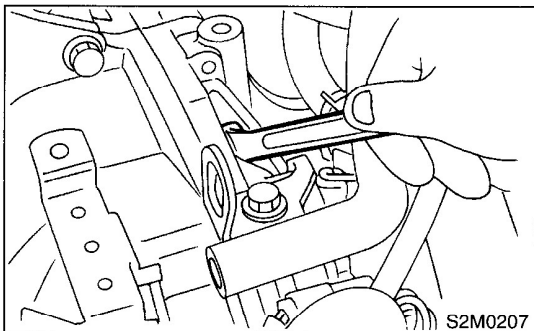


- 19) Remove the pitching stopper.

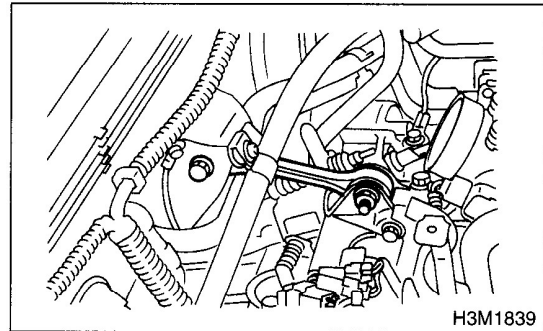


- 20) Disconnect the fuel delivery hose, return hose and evaporation hose.

CAUTION:


- Catch fuel from hose into container.
- Disconnect the hose with its end wrapped with cloth to prevent fuel from splashing.

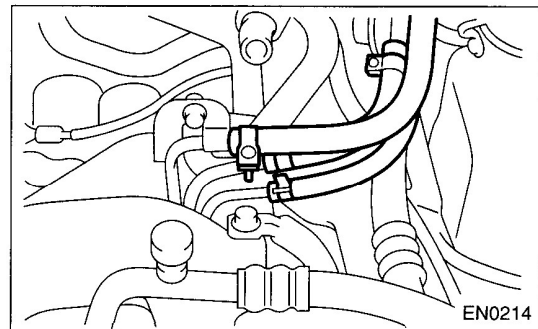

- 21) Remove the fuel filter and bracket.

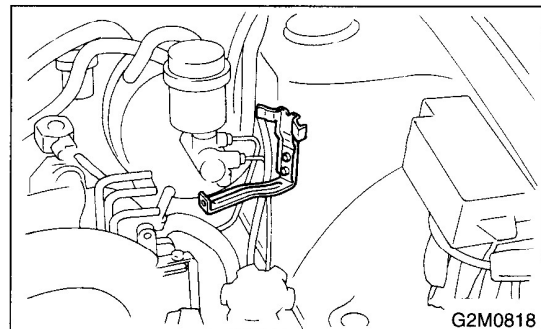

- 22) Support the engine with a lifting device and wire ropes.

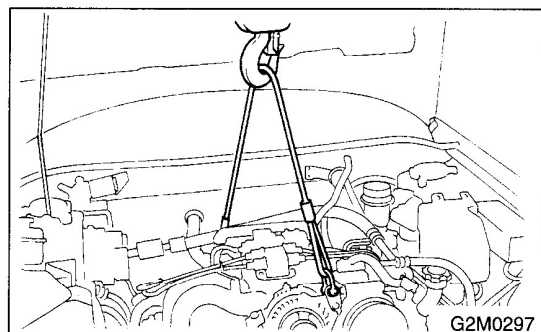


ME(DOHC TURBO)-36

GETtheMANUALS.org

23) Support the transmission with a garage jack.

CAUTION:

Before moving the engine away from transmission, check to be sure no work has been overlooked. Doing this is very important in order to facilitate re-installation and because transmission lowers under its own weight.

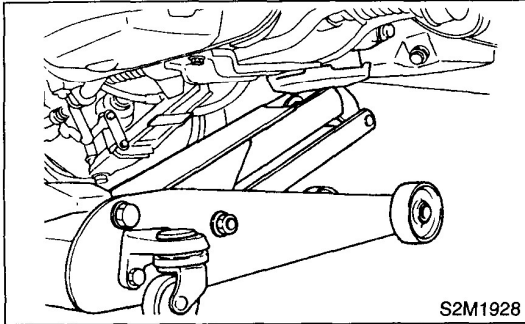

25) Remove the engine from vehicle.

- (1) Slightly raise the engine.
- (2) Raise the transmission with garage jack.
- (3) Move the engine horizontally until the mainshaft is withdrawn from clutch cover.
- (4) Slowly move the engine away from engine compartment.

CAUTION:


Be careful not to damage adjacent parts or body panels with crank pulley, oil pressure gauge, etc.

26) Remove the front cushion rubbers.


24) Separation of engine and transmission.

- (1) Remove the starter. <Ref. to SC-6, REMOVAL, Starter.>
- (2) Install the ST to torque converter clutch case. (AT vehicles)

ST 498277200 STOPPER SET

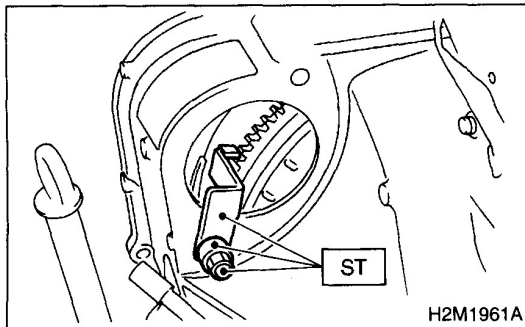

(3) Remove the bolts which hold right upper side of transmission to engine.

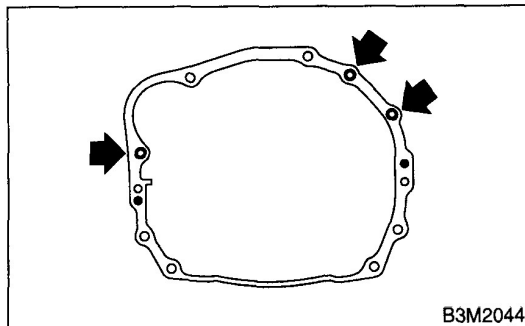


ENGINE ASSEMBLY

MECHANICAL

B: INSTALLATION


1) Install the clutch release fork and bearing onto transmission. (MT vehicles)

(1) Remove the release bearing from clutch cover with flat type screw driver.

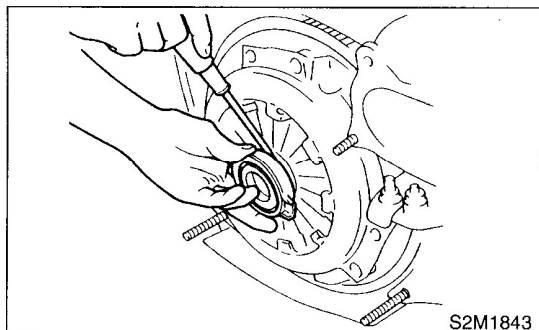


(2) Install the release bearing on transmission.

(3) Install the release fork into release bearing tab.

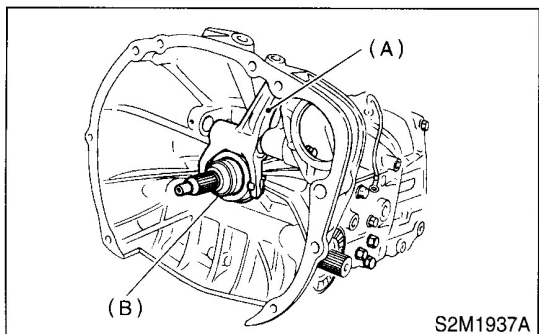

- (A) Release fork
- (B) Release bearing

- (4) Apply grease to the specified points.
- Spline FX2200
- Shaft SUNLIGHT 2

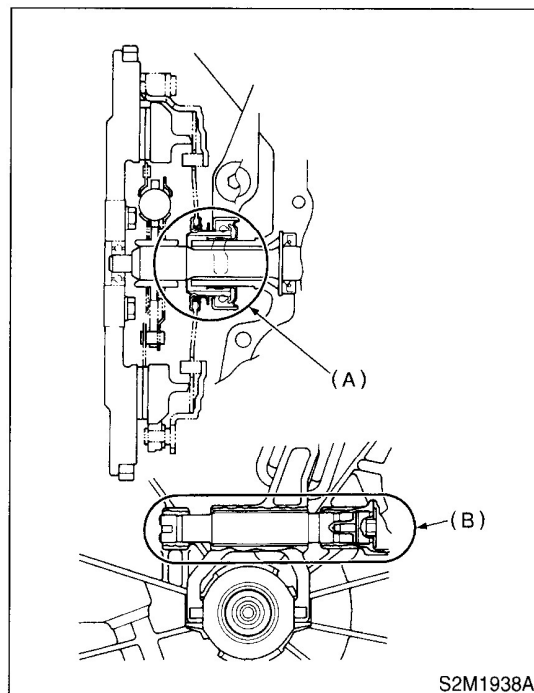


- (A) Spline (FX2200)
- (B) Shaft (SUNLIGHT 2)

(5) Insert the release fork shaft into release fork.

CAUTION:

Make sure the cutout portion of release fork shaft contacts spring pin.

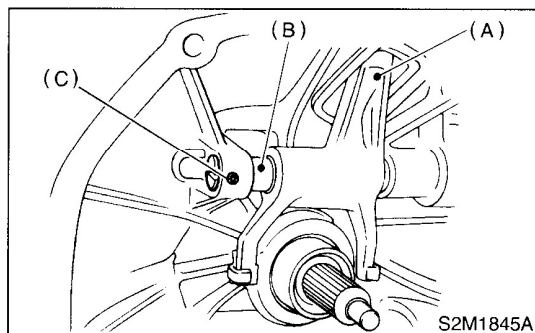


- (A) Release fork
- (B) Release shaft
- (C) Spring pin

- (6) Tighten the plug.

Tightening torque:

44 N·m (4.5 kgf-m, 32.5 ft-lb)

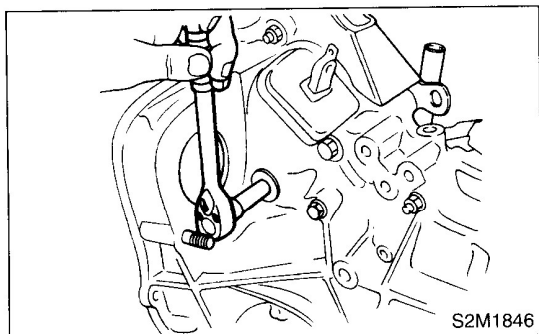

- 2) Install the front cushion rubbers to engine.

Tightening torque:

34 N·m (3.5 kgf-m, 25.3 ft-lb)

- 3) Install the engine onto transmission.

- (1) Position the engine in engine compartment and align it with transmission.


CAUTION:

Be careful not to damage adjacent parts or body panels with crank pulley, oil pressure gauge, etc.

- (2) Apply a small amount of grease to splines of mainshaft. (MT vehicles)
4) Tighten the bolts which hold right upper side of transmission to engine.


Tightening torque:

50 N·m (5.1 kgf-m, 36.9 ft-lb)

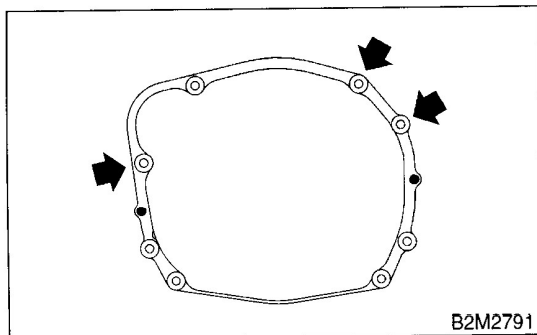

- 5) Remove the lifting device and wire ropes.

- 6) Remove the garage jack.

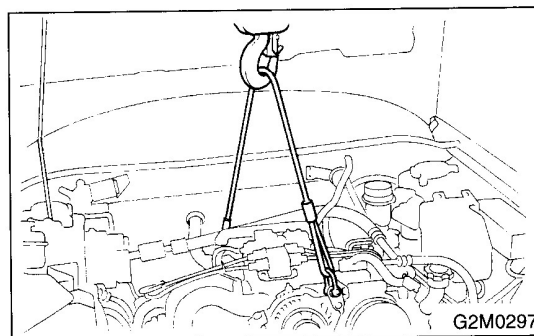


- 7) Install the pitching stopper.

Tightening torque:

T1: 50 N·m (5.1 kgf-m, 37 ft-lb)

T2: 58 N·m (5.9 kgf-m, 43 ft-lb)

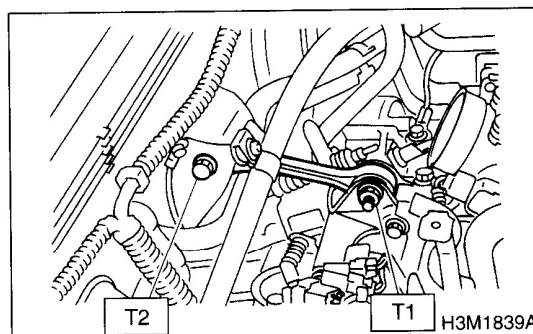

- 8) Remove the ST from torque converter clutch case. (AT vehicles)

NOTE:

Be careful not to drop the ST into the torque converter clutch case when removing ST.

ST 498277200 STOPPER SET

- 9) Install the starter. <Ref. to SC-7, INSTALLATION, Starter.>

ENGINE ASSEMBLY

MECHANICAL

10) Install the torque converter clutch onto drive plate. (AT vehicles)

(1) Tighten the bolts which hold torque converter clutch to drive plate.

(2) Tighten other bolts while rotating the engine by using ST.


CAUTION:

Be careful not to drop bolts into the torque converter clutch housing.

ST 499977300 CRANK PULLEY WRENCH


Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

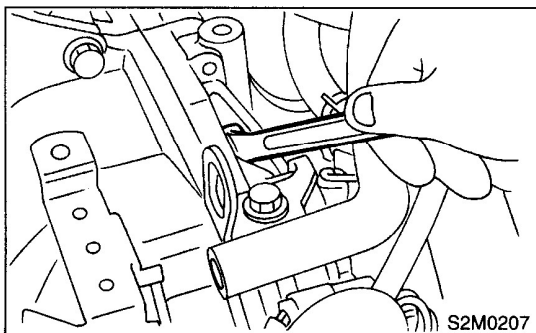


(3) Clog the service hole with plug.

11) Install the fuel filter and bracket.

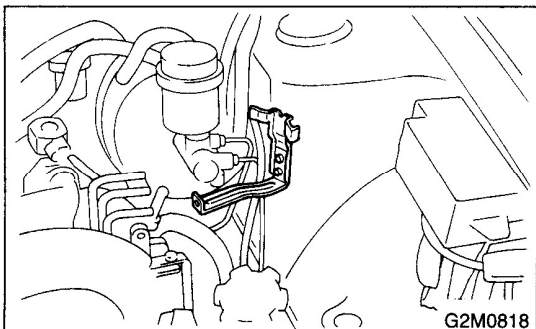

12) Install the power steering pump on bracket.


(1) Install the power steering tank on bracket.

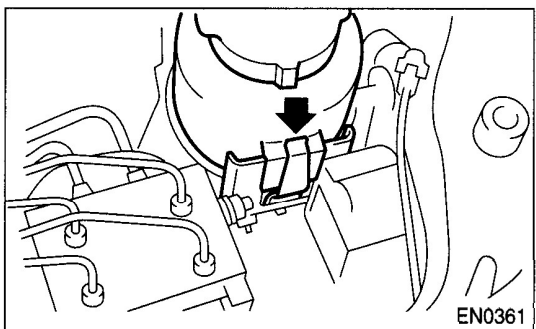


(2) Install the power steering pump.

Tightening torque:


20.1 N·m (2.05 kgf-m, 14.8 ft-lb)

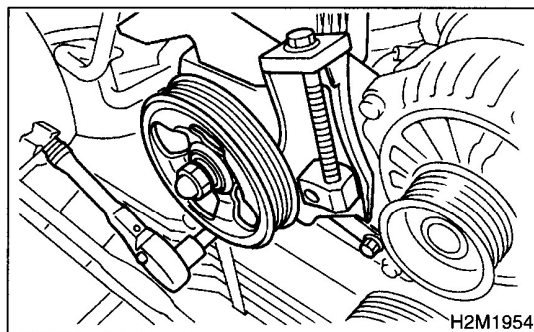

(3) Install the power steering pipe bracket on right side intake manifold, and install the spark plug codes.

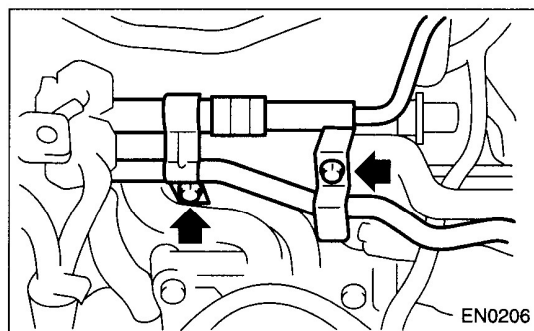

(4) Connect the power steering switch connector.

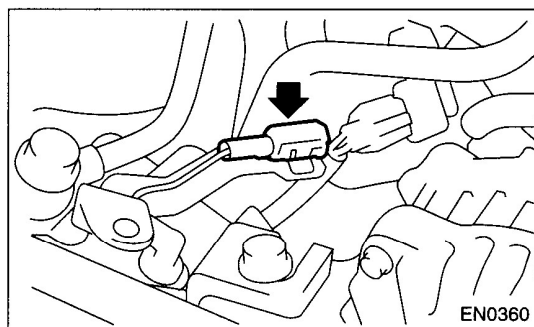

(5) Install the front side V-belt, and adjust it.
<Ref. to ME(DOHC TURBO)-44, FRONT SIDE BELT, INSTALLATION, V-belt.>


ME(DOHC TURBO)-40

GETtheMANUALS.org

13) Tighten the nuts which hold lower side of transmission to engine.

Tightening torque:

50 N·m (5.1 kgf-m, 36.9 ft-lb)

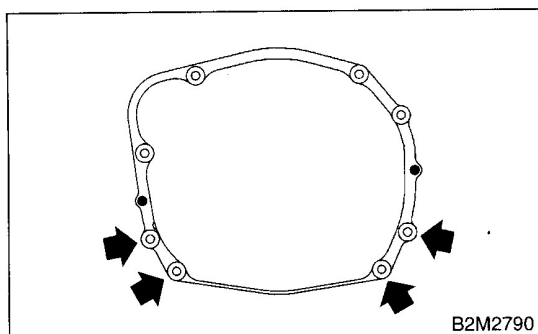


14) Tighten the nuts which install the front cushion rubber onto crossmember.

Tightening torque:

83 N·m (8.5 kgf-m, 61 ft-lb)

CAUTION:

Make sure the front cushion rubber mounting bolts (A) and locator (B) are securely installed.

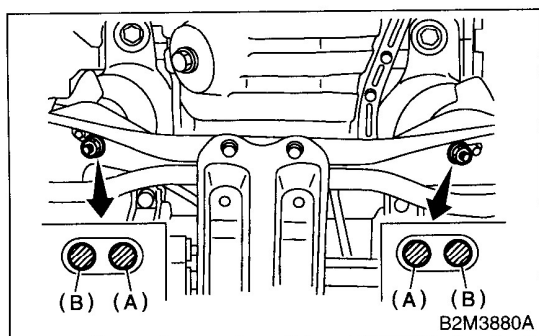

15) Install the center exhaust pipe.
<Ref. to EX(DOHC TURBO)-9, INSTALLATION, Center Exhaust Pipe.>

16) Connect the following hoses:

- (1) Fuel delivery hose, return hose and evaporation hose
- (2) Heater inlet and outlet hoses
- (3) Brake booster vacuum hose

17) Connect the following connectors and terminals:

- (1) Engine ground terminal
- (2) Engine harness connectors
- (3) Generator connector and terminal
- (4) A/C compressor connectors

18) Connect the following cables:

- (1) Accelerator cable
- (2) Clutch release spring

CAUTION:

After connecting each cable, adjust them.

19) Install the air intake system.

(1) Install the intercooler. <Ref. to IN(DOHC TURBO)-11, INSTALLATION, Intercooler.>

(2) Install the air cleaner element and air cleaner upper cover.

(3) Install the engine harness connector bracket.

(4) Install the filler hose to air cleaner case.


20) Install the A/C pressure hoses.

CAUTION:

Use new O-rings.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

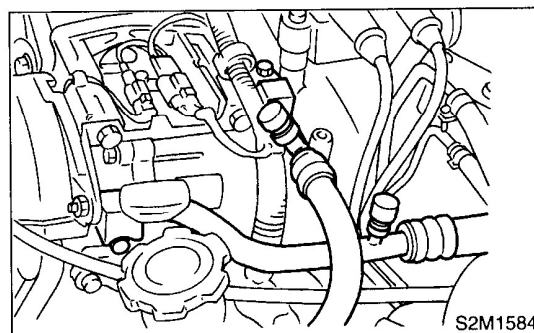

21) Install the radiator. <Ref. to CO-41, INSTALLATION, Radiator.>

22) Install the coolant filler tank. <Ref. to CO-51, INSTALLATION, Coolant Filler Tank.>

23) Install the window washer tank.

24) Install the battery in the vehicle, and connect cables.

25) Fill coolant.

<Ref. to CO-25, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

26) Charge the A/C system with refrigerant.

<Ref. to AC-17, OPERATION, Refrigerant Charging Procedure.>

27) Remove the front hood stay, and close the front hood.

28) Take off the vehicle from lift arms.

10.Engine Mounting

A: REMOVAL

- 1) Remove the engine assembly. <Ref. to ME(DOHC TURBO)-33, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION


Make sure there are no cracks or other damage.

11. Preparation for Overhaul

A: PROCEDURE

1) After removing the engine from the body, secure it in the ST shown below.

- ST1 498457000 ENGINE STAND ADAPTER
RH
- ST2 498457100 ENGINE STAND ADAPTER
LH
- ST3 499817000 ENGINE STAND

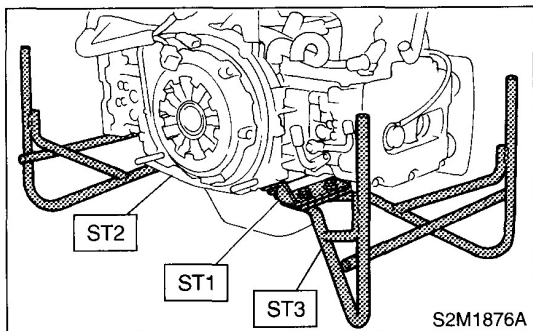

2) In this section the procedures described under each index are all connected and stated in order. It will be the complete procedure for overhauling of the engine itself when you go through all steps in the process.

Therefore, in this section, to conduct the particular procedure within the flow of a section, you need to go back and conduct the procedure described previously in order to do that particular procedure.

12.V-belt


A: REMOVAL

1. FRONT SIDE BELT


NOTE:

Perform the following procedures 1) to 4) with the engine installed to the body.

- 1) Remove the V-belt cover.

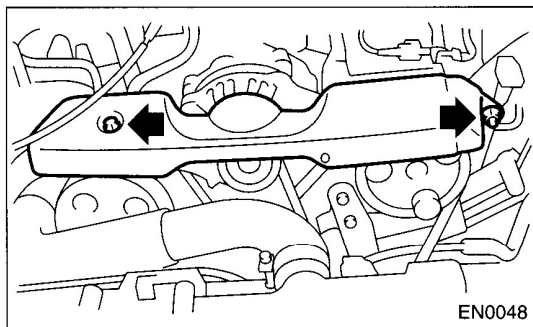


- 2) Loosen the lock bolt (A).
- 3) Loosen the slider bolt (B).
- 4) Remove the front side belt (C).

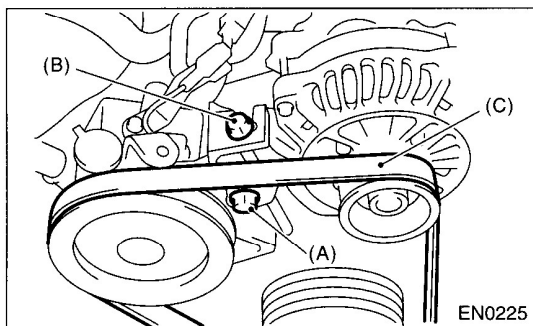


2. REAR SIDE BELT

- 1) Loosen the lock nut (A).
- 2) Loosen the slider bolt (B).

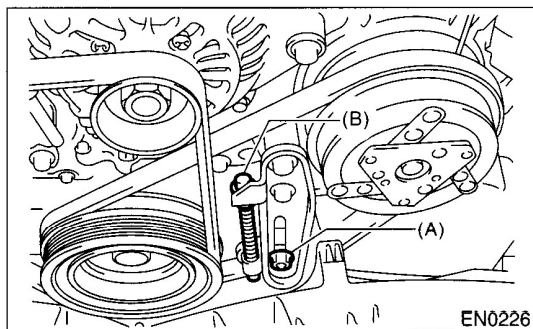

- 3) Remove the A/C belt.

- 4) Remove the A/C belt tensioner.

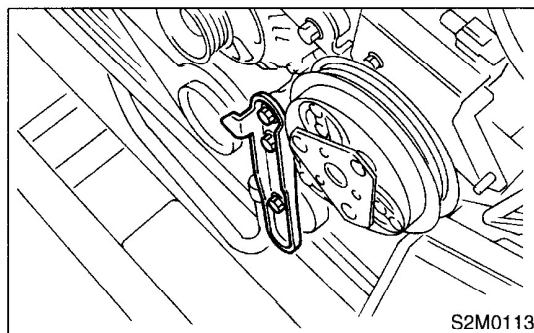

B: INSTALLATION

1. FRONT SIDE BELT

CAUTION:

Wipe off any oil or water on the belt and pulley.

- 1) Install a belt, and tighten the slider bolt so as to obtain the specified belt tension <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>
- 2) Tighten the lock bolt (A)
- 3) Tighten the slider bolt (B).


Tightening torque:

Lock bolt through bolt:

25 N·m (2.5 kgf-m, 18 ft-lb)

Slider bolt:

8 N·m (0.8 kgf-m, 5.5 ft-lb)

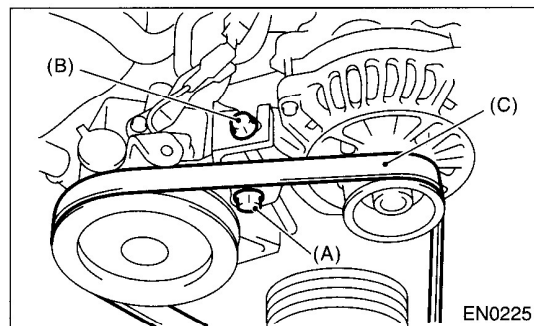


2. REAR SIDE BELT

- 1) Install a belt, and tighten the slider bolt (B) so as to obtain the specified belt tension. <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>
- 2) Tighten the lock nut (A).

Tightening torque:

Lock nut (A);

22.6 N·m (2.3 kgf-m, 16.6 ft-lb)

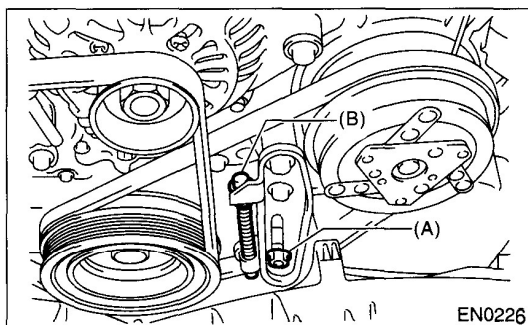

C: INSPECTION

- 1) Replace the belts, if cracks, fraying or wear is found.
- 2) Check the drive belt tension and adjust it if necessary by changing generator installing position and/or idler pulley installing position.

Belt tension

(A)

replaced: 7 — 9 mm (0.276 — 0.354 in)


reused: 9 — 11 mm (0.354 — 0.433 in)

(B)*

replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)

reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

*: With Air conditioner

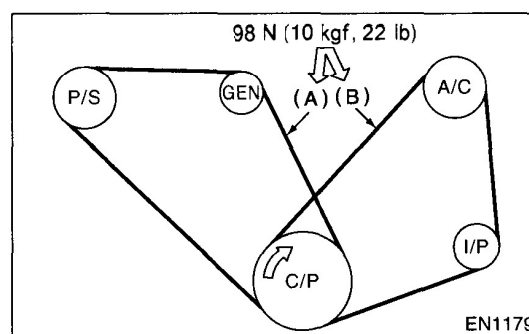

C/P Crankshaft pulley

GEN Generator

P/S Power steering oil pump pulley

A/C Air conditioning compressor pulley

I/P Idler pulley

CRANKSHAFT PULLEY

MECHANICAL

13. Crankshaft Pulley


A: REMOVAL

1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>

2) Remove the crankshaft pulley bolt. To lock crankshaft, use ST.

ST 499977300

CRANKSHAFT PULLEY WRENCH

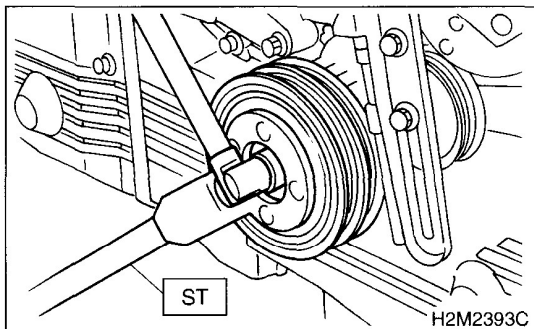

3) Remove the crankshaft pulley.

B: INSTALLATION

1) Install the crankshaft pulley.

2) Install the pulley bolt.

To lock the crankshaft, use ST.

ST 499977300

CRANKSHAFT PULLEY
WRENCH

(1) Clean the crankshaft pulley thread using an air gun.


(2) Apply engine oil to the crankshaft pulley bolt seat and thread.

(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).

(4) Tighten the crankshaft pulley bolts.

Tightening torque:

127 N·m (13 kgf-m, 94.0 ft-lb)

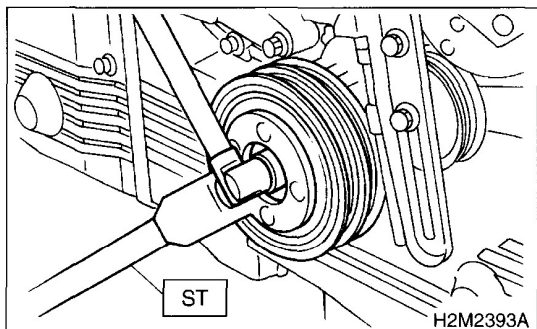

3) Confirm that the tightening angle of the crankshaft pulley bolt is 45 degrees or more. If not, conduct the following procedures (1) through (4).

CAUTION:

If the tightening angle of crankshaft pulley bolt is less than 45 degrees, the bolt should be damaged. In this case, the bolt must be replaced.

(1) Replace the crankshaft pulley bolts and clean them.

Crankshaft pulley bolt:

12369AA011

(2) Clean the crankshaft thread using an air gun.


(3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).

(4) Tighten the crankshaft pulley bolts keeping them in an angle between 65 degrees and 75 degrees.


CAUTION:

Conduct the tightening procedures by confirming the turning angle of the crankshaft pulley bolt referring to the gauge indicated on the belt cover.

4) Install the A/C belt tensioner.

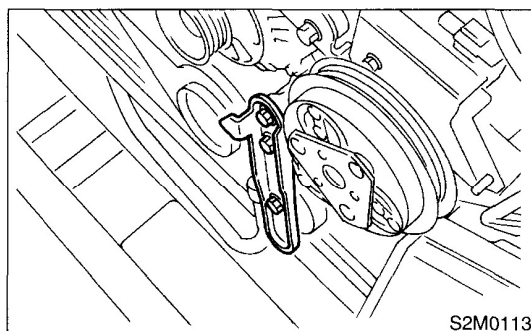

5) Install the A/C belt.

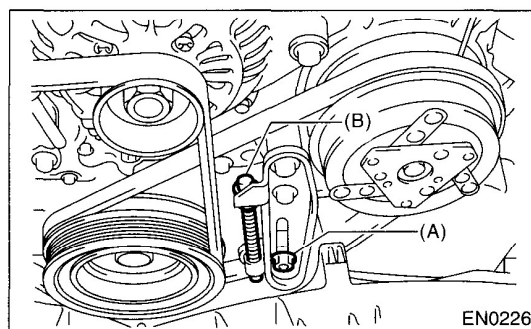

C: INSPECTION


1) Make sure the V-belt is not worn or otherwise damaged.

2) Check the tension of the belt. <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>

14. Belt Cover

A: REMOVAL

- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the left-hand belt cover (A).
- 4) Remove the right-hand belt cover (B).
- 5) Remove the front belt cover (C).

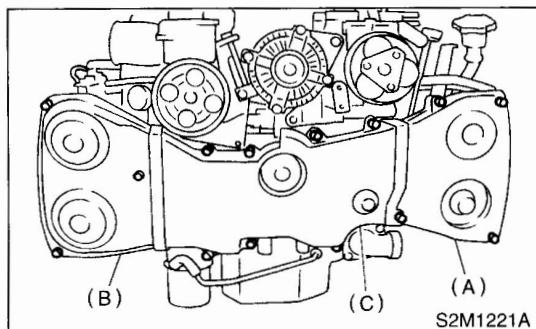

B: INSTALLATION

- 1) Install the front belt cover (C).

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

- 2) Install the right-hand belt cover (B).


Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

- 3) Install the left-hand belt cover (A).

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

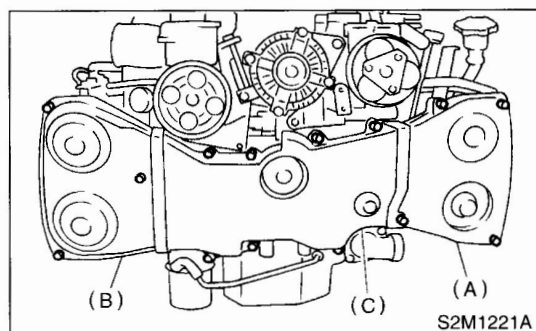

- 4) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 5) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

TIMING BELT ASSEMBLY





MECHANICAL

15. Timing Belt Assembly

A: REMOVAL

1. TIMING BELT


- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt guides. (MT vehicle)

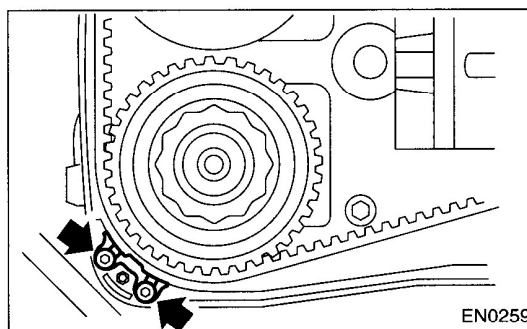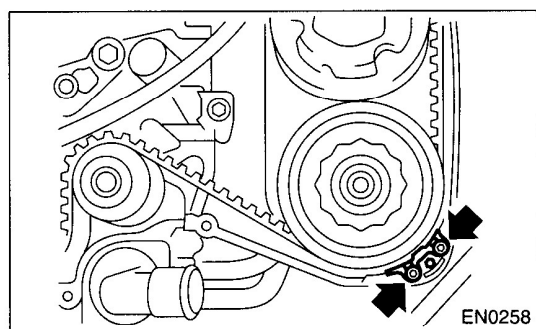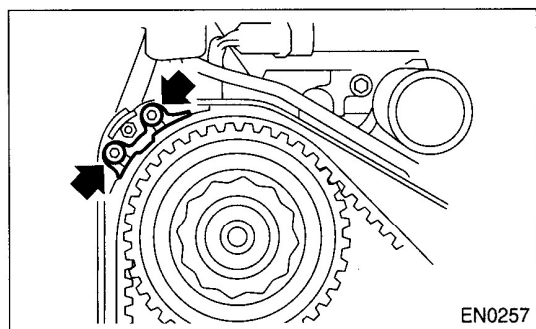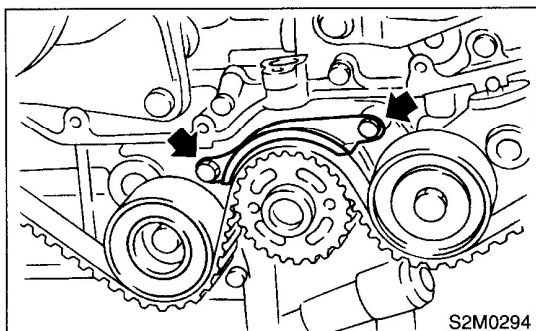



5) If the alignment mark and/or arrow mark (which indicates rotation direction) on timing belt fade away, put new marks before removing the timing belt as follows:

- (1) Turn the crankshaft using ST, and align alignment marks on crankshaft sprocket, left-hand intake camshaft sprocket, left-hand exhaust camshaft sprocket, right-hand intake camshaft sprocket and right hand exhaust camshaft sprocket with notches of belt cover and cylinder block.


ST 499987500 CRANKSHAFT SOCKET

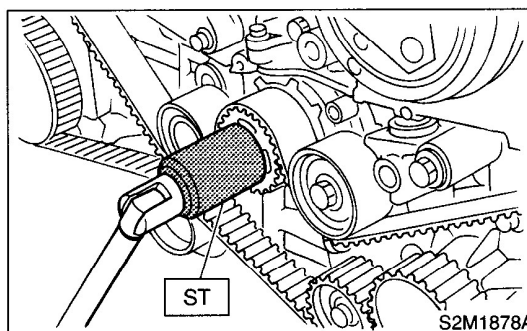


(2) Using white paint, put alignment and/or arrow marks on the timing belts in relation to the sprockets.

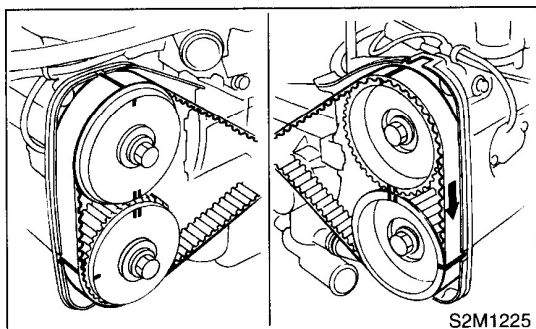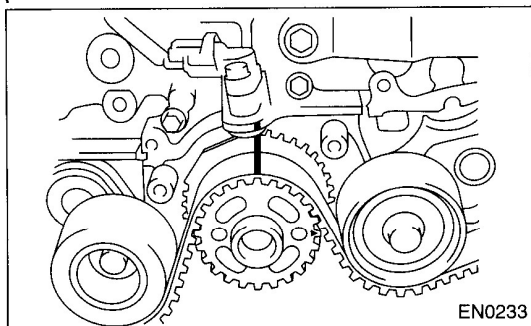

Z₁: 54.5 tooth length
Z₂: 51 tooth length
Z₃: 28 tooth length

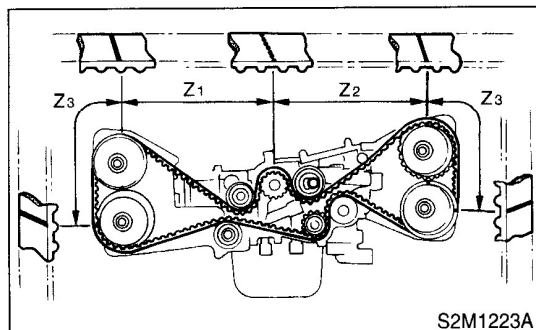

6) Remove the belt idler (A).

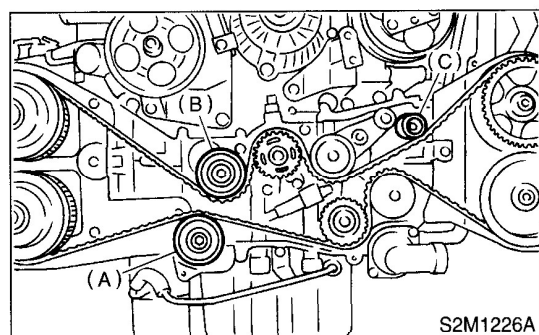


7) Remove the timing belt.

CAUTION:


After the timing belt has been removed, never rotate the intake and exhaust, camshaft sprocket. If the camshaft sprocket is rotated, the intake and exhaust valve heads strike together and valve stems are bent.

2. BELT IDLER AND AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY


1) Remove the belt idler (B) and (C).

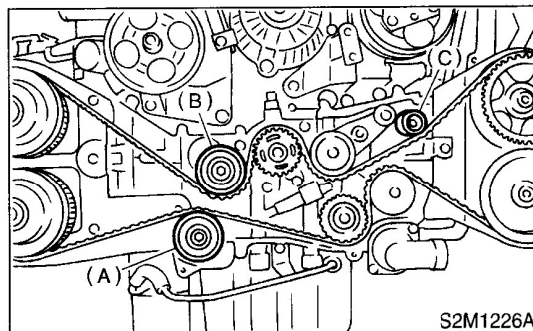

2) Remove the belt idler No. 2.

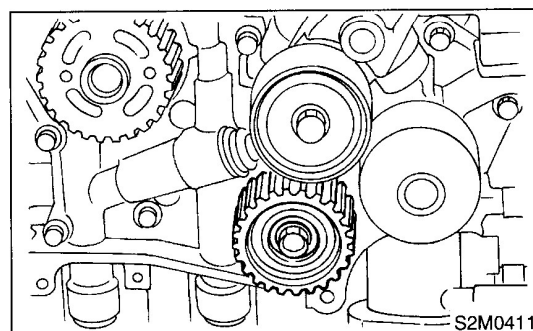

3) Remove the automatic belt tension adjuster assembly.

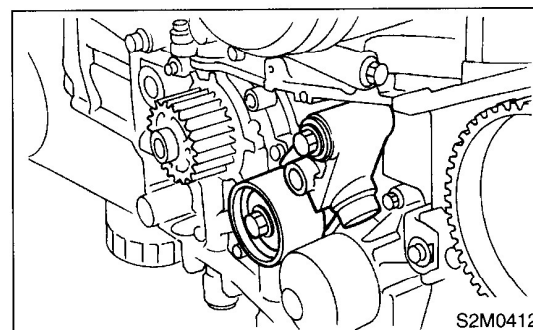

TIMING BELT ASSEMBLY

MECHANICAL

B: INSTALLATION

1. AUTOMATIC BELT TENSION ADJUST-ER ASSEMBLY AND BELT IDLER


1) Preparation for installation of automatic belt tension adjuster assembly:

CAUTION:


- Always use a vertical type pressing tool to move the adjuster rod down.
- Do not use a lateral type vise.
- Push the adjuster rod vertically.
- Be sure to slowly move the adjuster rod down applying a pressure of 294 N (30 kgf, 66 lb).
- Press-in the push adjuster rod gradually taking more than three minutes.
- Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
- Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.
- Do not release the press pressure until stopper pin is completely inserted.

(1) Attach the automatic belt tension adjuster assembly to the vertical pressing tool.

(2) Slowly move the adjuster rod down with a pressure of 294 N (30 kgf, 66 lb) until the adjuster rod is aligned with the stopper pin hole in the cylinder.

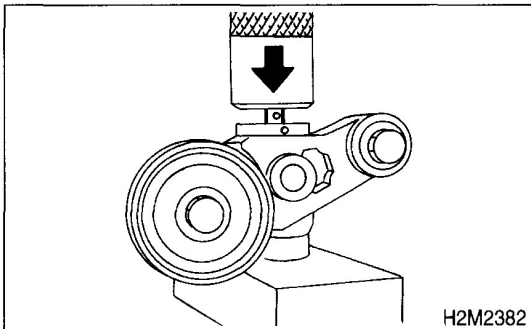


(3) With a 2 mm (0.08 in) dia. stopper pin or a 2 mm (0.08 in) (nominal) dia. hex bar wrench inserted into the stopper pin hole in the cylinder, secure the adjuster rod.

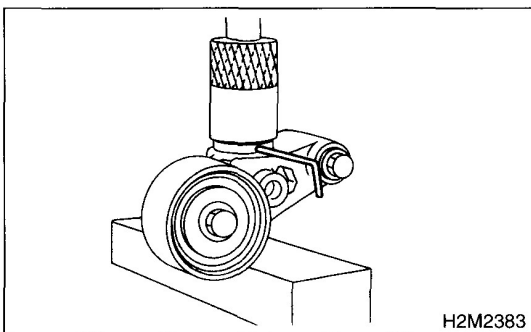

2) Install the automatic belt tension adjuster assembly.

Tightening torque:


39 N·m (4.0 kgf-m, 28.9 ft-lb)

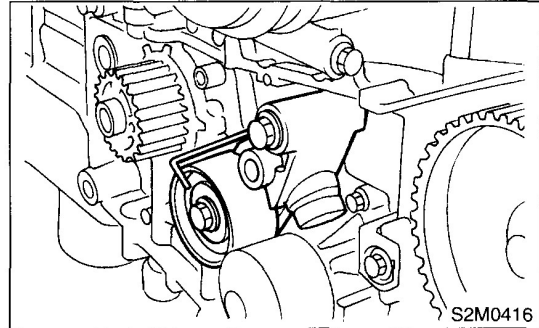

3) Install the belt idler No. 2.

Tightening torque:


39 N·m (4.0 kgf-m, 28.9 ft-lb)

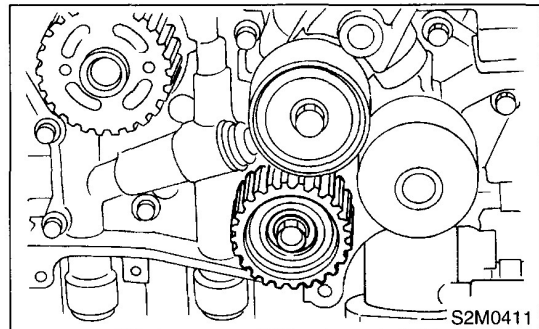

4) Install the belt idler.

Tightening torque:

39 N·m (4.0 kgf-m, 28.9 ft-lb)

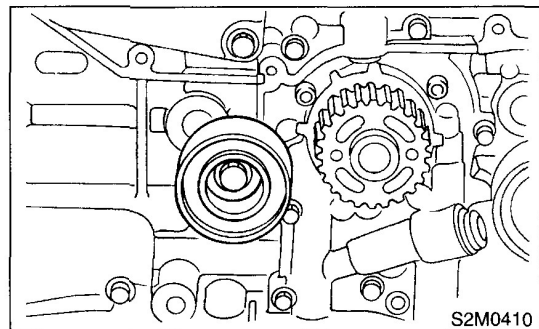

ME(DOHC TURBO)-50


GETTHEMANUALS.org

2. TIMING BELT


1) Preparation for installation of automatic belt tension adjuster assembly. <Ref. to ME(DOHC TURBO)-50, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, Timing Belt Assembly.>

2) Crankshaft and camshaft sprocket alignment.

(1) Align mark (A) on the crankshaft sprocket with mark on the oil pump cover at cylinder block.

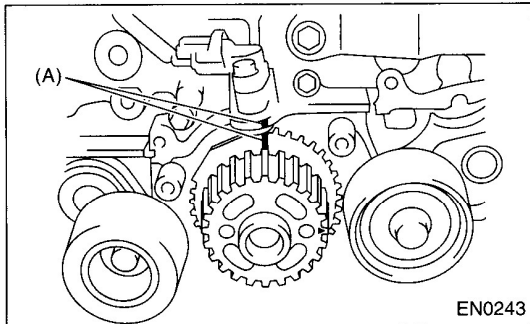


(2) Align single line mark (A) on the right-hand exhaust camshaft sprocket with notch (B) on belt cover.

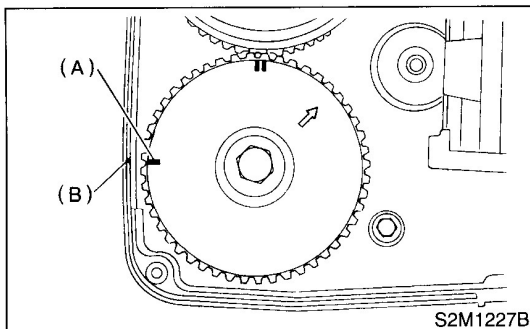


(3) Align single line mark (A) on the right-hand intake camshaft sprocket with notch (B) on belt cover.

(Make sure double lines (C) on intake camshaft and exhaust camshaft sprockets are aligned.)

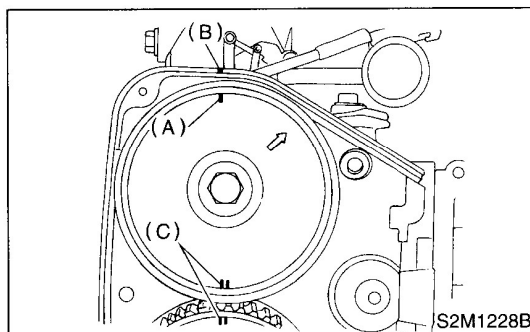


(4) Align single line mark (A) on left-hand exhaust camshaft sprocket with notch (B) on belt cover by turning the sprocket counterclockwise (as viewed from front of engine).

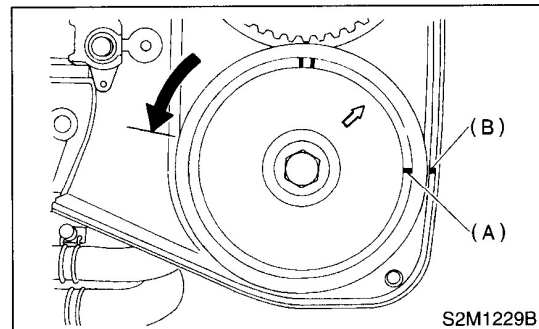

(5) Align single line mark (A) on left-hand intake camshaft sprocket with notch (B) on belt cover by turning the sprocket clockwise (as viewed from front of engine).

Ensure double lines (C) on intake and exhaust camshaft sprockets are aligned.

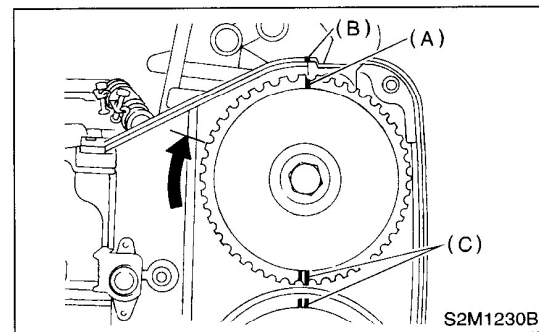


TIMING BELT ASSEMBLY

MECHANICAL

- (6) Ensure camshaft and crankshaft sprockets are positioned properly.


CAUTION:

• Intake and exhaust camshafts for this DOHC engine can be independently rotated with the timing belts removed. As can be seen from the figure, if the intake and exhaust valves are lifted simultaneously, their heads will interfere with each other, resulting in bent valves.

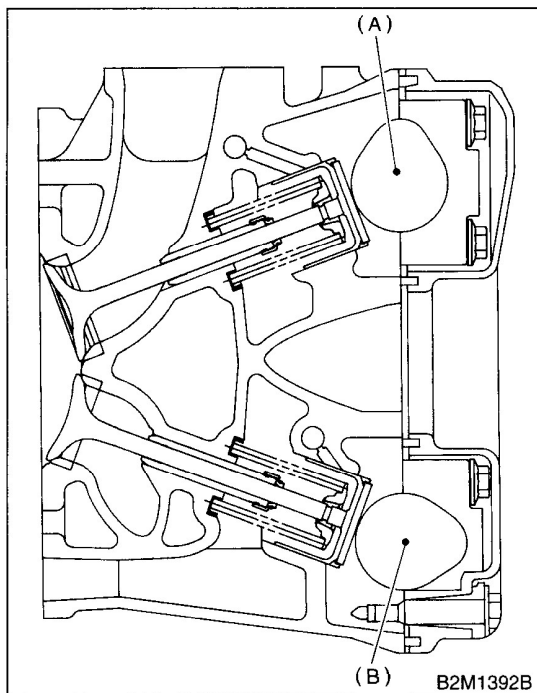

- (A) Intake camshaft
(B) Exhaust camshaft


- When the timing belts are not installed, four camshafts are held at the "zero-lift" position, where all cams on camshafts do not push the intake and exhaust valves down. (Under this condition, all valves remain unlifted.)
- When the camshafts are rotated to install the timing belts, #2 intake and #4 exhaust cam of left-hand camshafts are held to push their corresponding valves down. (Under this condition, these valves are held lifted.) Right-side camshafts are held so that their cams do not push valves down.
- Left-hand camshafts must be rotated from the "zero-lift" position to the position where the timing belt is to be installed at as small an angle as possible, in order to prevent mutual interference of intake and exhaust valve heads.
- Do not allow the camshafts to rotate in the direction shown in the figure as this causes both intake and exhaust valves to lift simultaneously, resulting in interference with their heads.

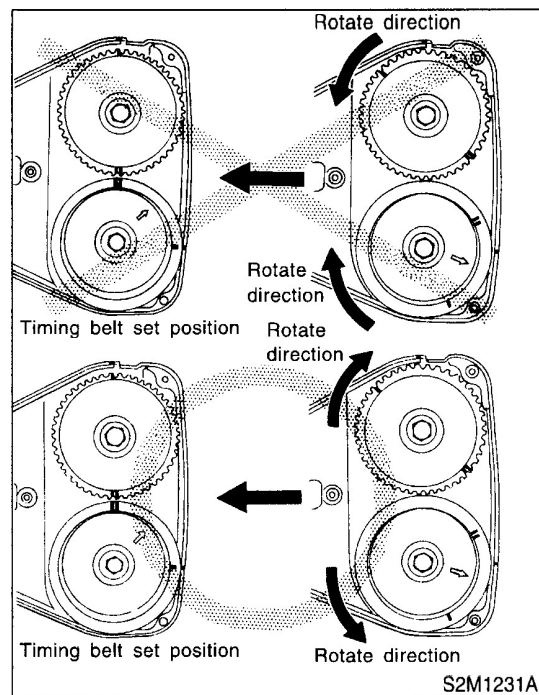

TIMING BELT ASSEMBLY

MECHANICAL


3) Installation of timing belt:

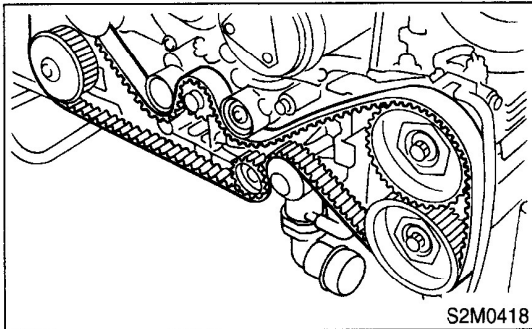

Align the alignment mark on the timing belt with marks on the sprockets in the alphabetical order shown in the figure. While aligning marks, position the timing belt properly.

CAUTION:

- Disengagement of more than three timing belt teeth may result in interference between the valve and piston.
- Ensure the belt's rotating direction is correct.

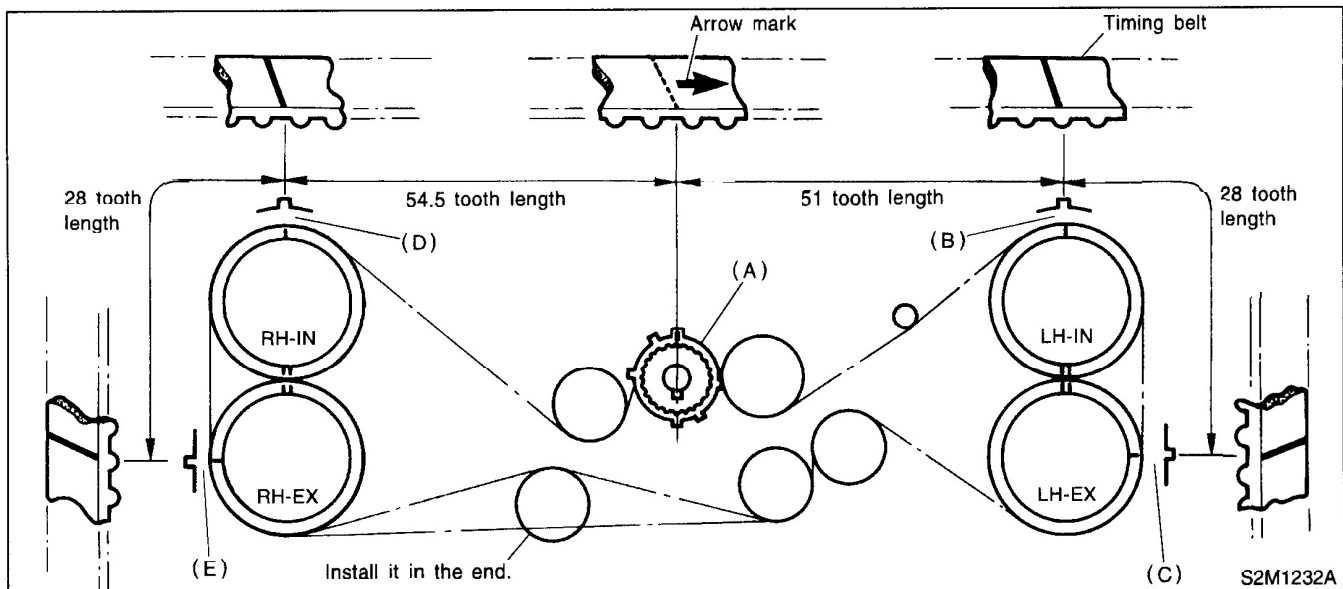

TIMING BELT ASSEMBLY

MECHANICAL


4) Install the belt idlers.

Tightening torque:

39 N·m (4.0 kgf·m, 28.9 ft·lb)

CAUTION:

Make sure that the marks on the timing belt and sprockets are aligned.

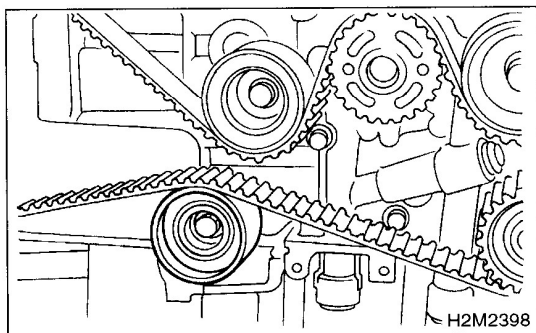





5) After ensuring that the marks on the timing belt and sprockets are aligned, remove the stopper pin from tensioner adjuster.

6) Install the timing belt guide. (MT vehicle)

- (1) Temporarily tighten the remaining bolts.
- (2) Check and adjust clearance between the timing belt and timing belt guide.

Clearance:



1.0±0.5 mm (0.039±0.020 in)

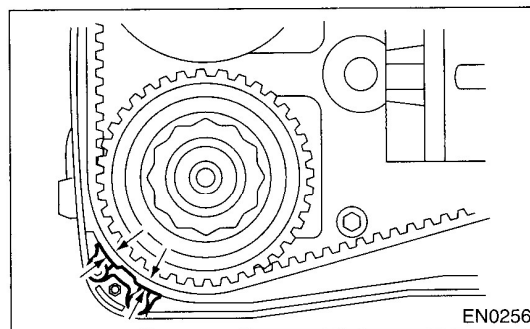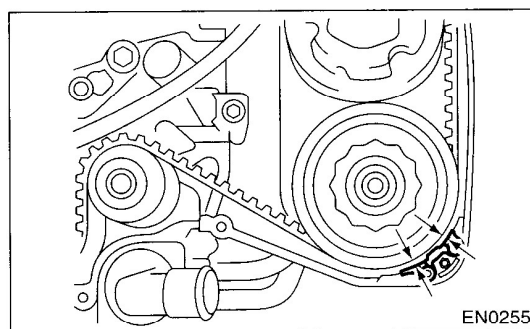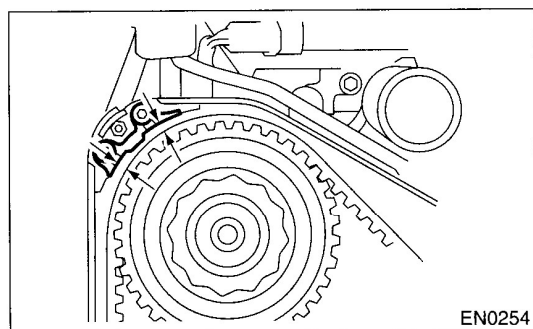
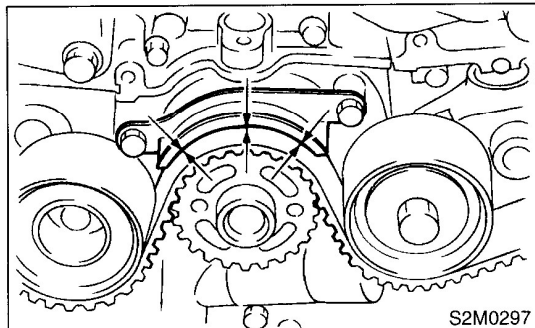


(3) Tighten the remaining bolts.

Tightening torque:

9.8 N·m (1.0 kgf·m, 7.2 ft·lb)

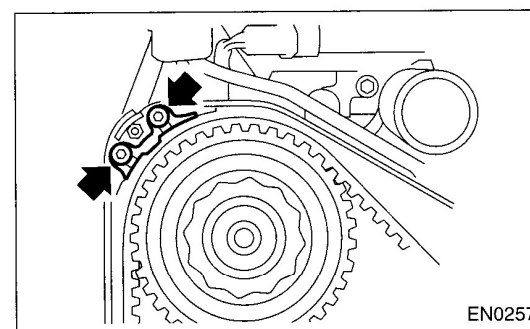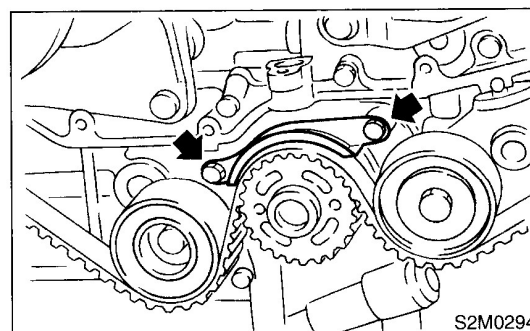

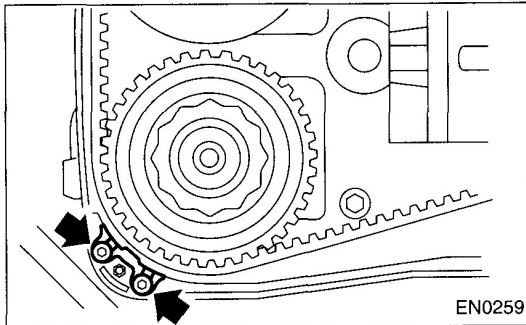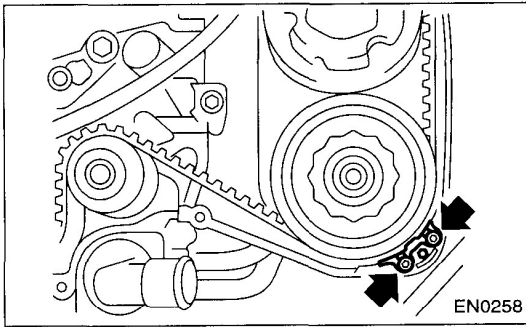

- 7) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 8) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 9) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1. TIMING BELT


- 1) Check the timing belt teeth for breaks, cracks, and wear. If any fault is found, replace the belt.
- 2) Check the condition of back side of belt; if any crack is found, replace the belt.

CAUTION:

- Be careful not to let oil, grease or coolant contact the belt. Remove quickly and thoroughly if this happens.
- Do not bend the belt sharply.

Bending radius: h

60 mm (2.36 in) or more

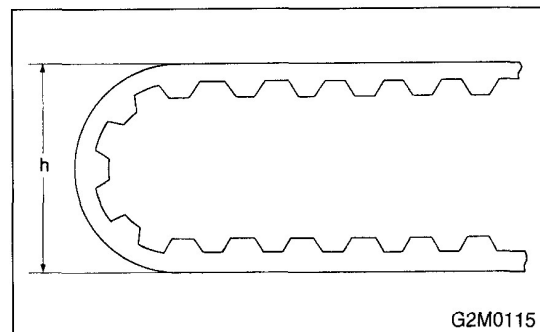

TIMING BELT ASSEMBLY

MECHANICAL

2. AUTOMATIC BELT TENSION ADJUST-ER

1) Visually check the oil seals for leaks, and rod ends for abnormal wear or scratches. If necessary, replace the automatic belt tension adjuster assembly.

CAUTION:

Slight traces of oil at rod's oil seal does not indicate the a problem.

2) Check that the adjuster rod does not move when a pressure of 294 N (30 kgf, 66 lb) is applied to it. This is to check adjuster rod stiffness.

3) If the adjuster rod is not stiff and moves freely when applying 294 N (30 kgf, 66 lb), check it using the following procedures:

(1) Slowly press the adjuster rod down to the end surface of the cylinder. Repeat this motion 2 or 3 times.

(2) With the adjuster rod moved all the way up, apply a pressure of 294 N (30 kgf, 66 lb) to it. Check the adjuster rod stiffness.

(3) If the the adjuster rod is not stiff and moves down, replace the automatic belt tension adjuster assembly with a new one.


CAUTION:

- Always use a vertical type pressing tool to move the adjuster rod down.
- Do not use a lateral type vise.
- Push the adjuster rod vertically.
- Press-in the push adjuster rod gradually taking more than three minutes.
- Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
- Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.

4) Measure the extension of rod beyond the body. If it is not within specifications, replace with a new one.

Rod extension: H

$5.7 \pm 0.5 \text{ mm}$ ($0.224 \pm 0.020 \text{ in}$)

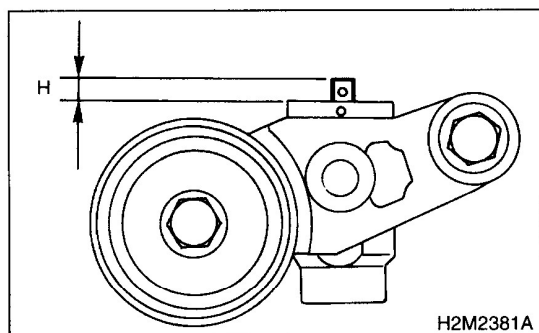

3. BELT TENSION PULLEY

1) Check the mating surfaces of timing belt and contact point of adjuster rod for abnormal wear or scratches. Replace the belt tension pulley if faulty.

2) Check the belt tension pulley for smooth rotation. Replace if noise or excessive play is noted.

3) Check the belt tension pulley for grease leakage.

4. BELT IDLER

1) Check the idler for smooth rotation. Replace if noise or excessive play is noted.

2) Check the outer contacting surfaces of idler pulley for abnormal wear and scratches.


3) Check the idler for grease leakage.

16. Camshaft Sprocket

A: REMOVAL

- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove the camshaft position sensor. <Ref. to FU(DOHC TURBO)-31, REMOVAL, Camshaft Position Sensor.>
- 6) Remove the camshaft sprockets. To lock the camshaft, use ST.

ST 499207400 CAMSHAFT SPROCKET WRENCH

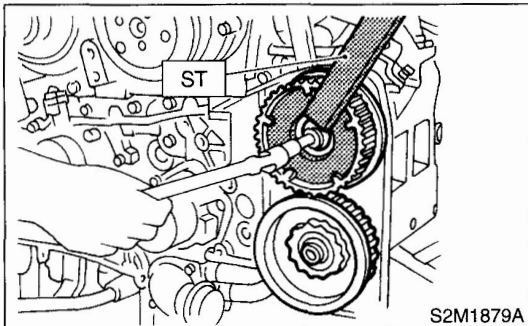

B: INSTALLATION

- 1) Install the camshaft sprocket No. 1. and No. 2. To lock camshaft, use ST.


ST 499207100 CAMSHAFT SPROCKET WRENCH

Tightening torque:

98 N·m (10 kgf-m, 72.4 ft-lb)

CAUTION:

Do not confuse left and right side camshaft sprockets during installation. The camshaft sprocket No. 2 is identified by a projection used to monitor camshaft position sensor.

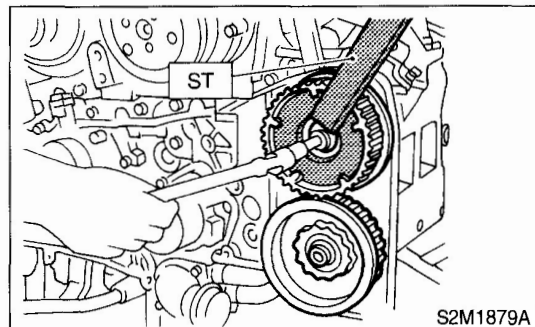

- 2) Install the camshaft position sensor. <Ref. to FU(DOHC TURBO)-31, INSTALLATION, Camshaft Position Sensor.>
- 3) Install the timing belt assembly. <Ref. to ME(DOHC TURBO)-50, INSTALLATION, Timing Belt Assembly.>
- 4) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 5) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 6) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION

- 1) Check the sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between sprocket and key.
- 3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.


CRANKSHAFT SPROCKET

MECHANICAL

17.Crankshaft Sprocket


A: REMOVAL

- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Camshaft Sprocket.>
- 6) Remove the crankshaft sprocket.

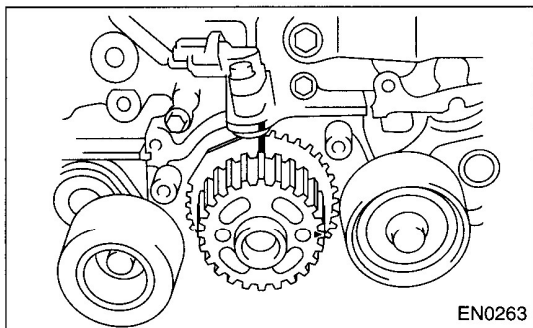

B: INSTALLATION

- 1) Install the crankshaft sprocket.

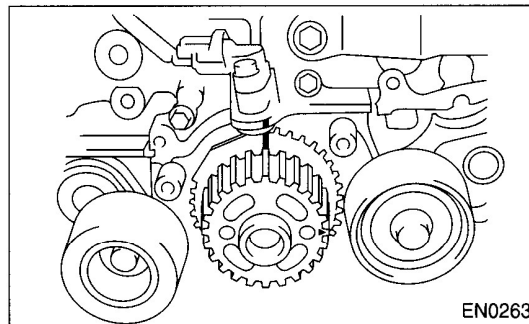

- 2) Install the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, INSTALLATION, Camshaft Sprocket.>
- 3) Install the timing belt assembly. <Ref. to ME(DOHC TURBO)-50, INSTALLATION, Timing Belt Assembly.>
- 4) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 5) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 6) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION

- 1) Check the sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between sprocket and key.
- 3) Check the crankshaft sprocket notch used for sensor for damage and contamination of foreign matter.


ME(DOHC TURBO)-58

GETtheMANUALS.org


18. Camshaft

A: REMOVAL


- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Camshaft Sprocket.>
- 6) Remove the crankshaft sprocket. <Ref. to ME(DOHC TURBO)-58, REMOVAL, Crankshaft Sprocket.>
- 7) Remove the right-hand belt cover No.2.

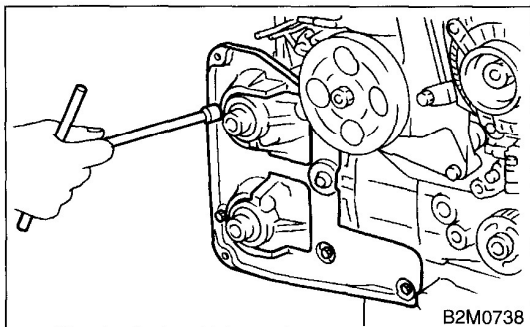


- 8) Remove the tensioner bracket.

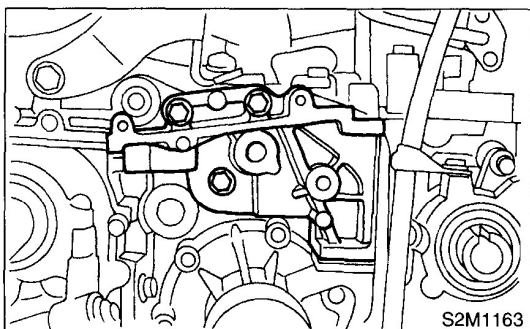


- 9) Remove the left-hand belt cover No. 2.

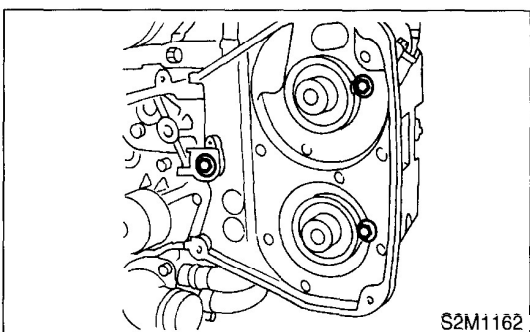

- 10) Remove the oil level gauge guide. (LH side only)
- 11) Remove the spark plug cord.
- 12) Remove the rocker cover and gasket.
- 13) Loosen the intake camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

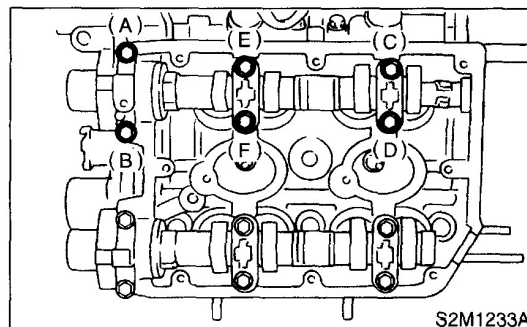

- 14) Remove the camshaft caps and intake camshaft.
- 15) Loosen the exhaust camshaft cap bolts equally, a little at a time in alphabetical sequence shown in the figure.

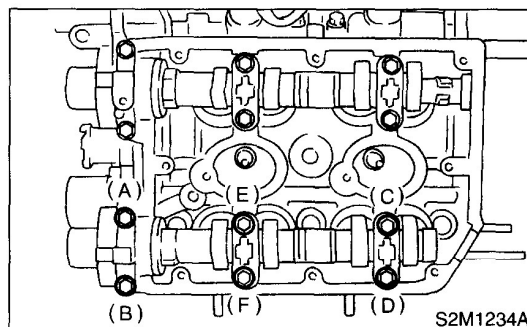

- 16) Remove the camshaft caps and exhaust camshaft.

CAUTION:

Arrange camshaft caps in order so that they can be installed in their original positions.

- 17) Similarly, remove the right-hand camshafts and related parts.

CAMSHAFT

MECHANICAL

B: INSTALLATION

1) Camshaft installation:

Apply engine oil to the cylinder head at camshaft bearing location before installing the camshaft. Install the camshaft so that each valve is close to or in contact with "base circle" of cam lobe.


CAUTION:

- When the camshafts are positioned as shown in the figure, camshafts need to be rotated at a minimum to align with the timing belt during installation.

- Right-hand camshaft need not be rotated when set at the position shown in the figure.

Left-hand intake camshaft: Rotate 80° clockwise.

Left-hand exhaust camshaft: Rotate 45° counterclockwise.

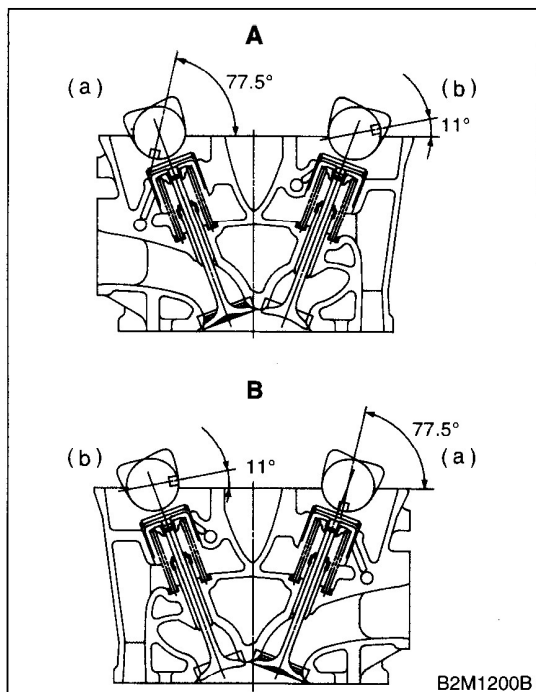

- A Left side cylinder head
B Right side cylinder head
(a) Intake camshaft
(b) Exhaust camshaft

2) Camshaft cap installation:


- (1) Apply fluid packing sparingly to the cap mating surface.

CAUTION:

Do not apply fluid packing excessively. Failure to do so may cause excess packing to come out and flow toward oil seal, resulting in oil leaks.

Fluid packing:

THREE BOND 1215 or equivalent

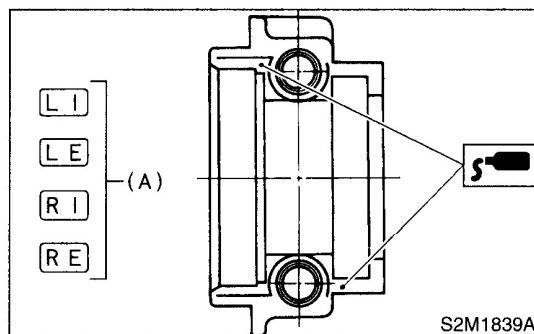


- (2) Apply engine oil to cap bearing surface and install the cap on camshaft as shown by identification mark (A).

- (3) Gradually tighten the cap in at least two stages in alphabetical sequence shown in the figure, and then tighten to specified torque.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)

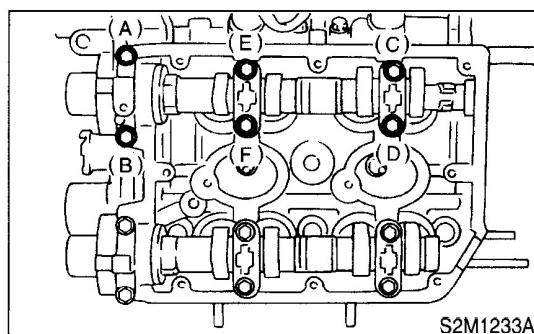

- (4) Similarly, tighten the cap on exhaust side. After tightening the cap, ensure the camshaft rotates only slightly while holding it at "base" circle.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)


3) Camshaft oil seal installation:
Apply grease to the new oil seal lips and press onto the front end of camshaft by using ST1 and ST2.

CAUTION:

Use a new oil seal.

ST1 499587600 OIL SEAL INSTALLER

ST2 499597200 OIL SEAL GUIDE

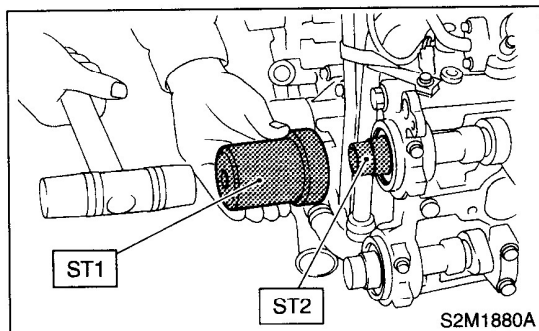


4) Rocker cover installation:

- (1) Install the gasket on rocker cover. Install the peripheral gasket and ignition coil gasket.
- (2) Apply fluid packing to four front open edges of peripheral gasket.

Fluid packing:

THREE BOND 1215 or equivalent

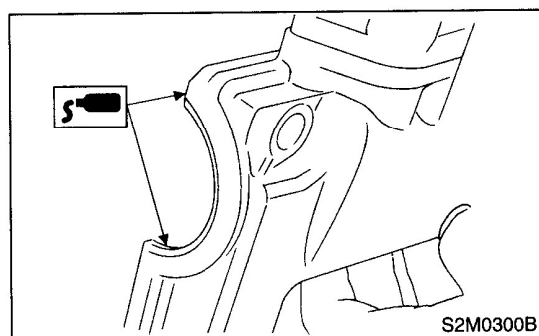

(3) Install the rocker cover on cylinder head. Ensure the gasket is properly positioned during installation.


5) Install the spark plug cord.

6) Similarly, install the parts on right-hand side.

7) Install the right-hand belt cover No. 2.

Tightening torque:


5 N·m (0.5 kgf-m, 3.6 ft-lb)

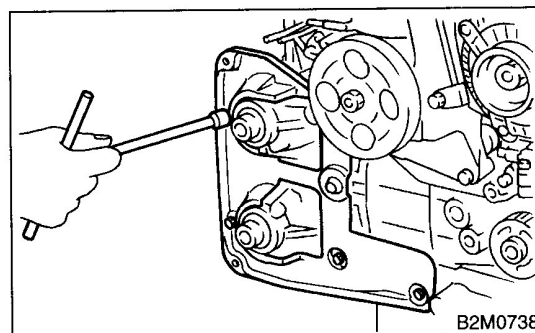

8) Install the tensioner bracket.

Tightening torque:


25 N·m (2.5 kgf-m, 18.1 ft-lb)

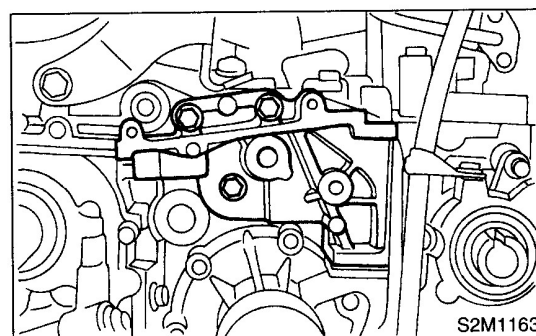

9) Install the left-hand belt cover No. 2.

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

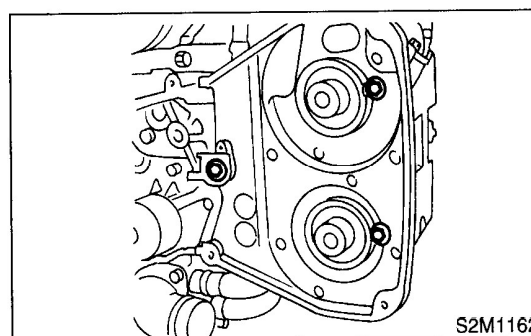

10) Install the crankshaft sprocket. <Ref. to ME(DOHC TURBO)-58, INSTALLATION, Crankshaft Sprocket.>

11) Install the camshaft sprockets. <Ref. to ME(DOHC TURBO)-57, INSTALLATION, Camshaft Sprocket.>

12) Install the timing belt assembly. <Ref. to ME(DOHC TURBO)-50, INSTALLATION, Timing Belt Assembly.>

13) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

CAMSHAFT

MECHANICAL

14) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>


15) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION

1) Measure the bend, and repair or replace if necessary.

Limit:

0.020 mm (0.0008 in)

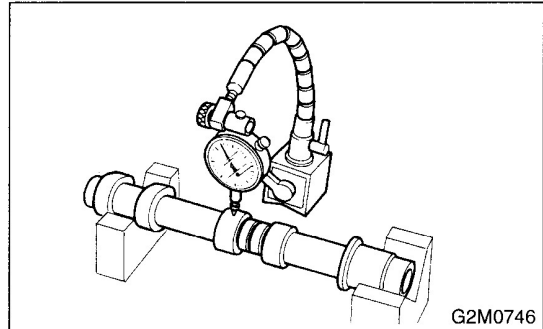

2) Check the journal for damage and wear. Replace if faulty.

3) Measure the outside diameter of camshaft journal. If the journal diameter is not as specified, check the oil clearance.


	Camshaft journal	
	Front	Center, rear
Standard	37.946 — 37.9635 mm (1.4939 — 1.4946 in)	29.946 — 29.963 mm (1.1790 — 1.1796 in)

4) Measurement of the camshaft journal oil clearance:

- (1) Clean the bearing caps and camshaft journals.
- (2) Place the camshafts on the cylinder head. (Without installing the valve rocker.)
- (3) Place a plastigauge across each of the camshaft journals.
- (4) Gradually tighten the cap in at least two stages in alphabetical sequence shown in the figure, and then tighten to specified torque.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)

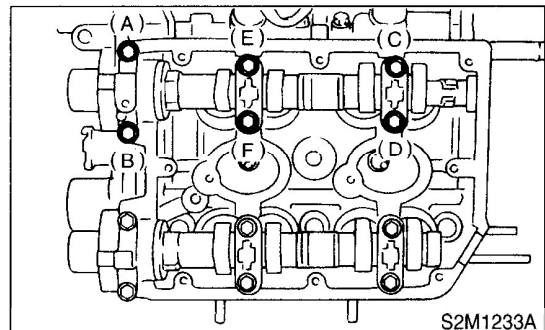

CAUTION:

Do not turn the camshaft.

CAMSHAFT

MECHANICAL

(5) Remove the bearing caps.

(6) Measure the widest point of the plastigauge on each journal.


If the oil clearance exceeds the limit, replace the camshaft. If necessary, replace the camshaft caps and cylinder head as a set.

Standard:

0.037 — 0.072 mm (0.0015 — 0.0028 in)

Limit:

0.10 mm (0.0039 in)

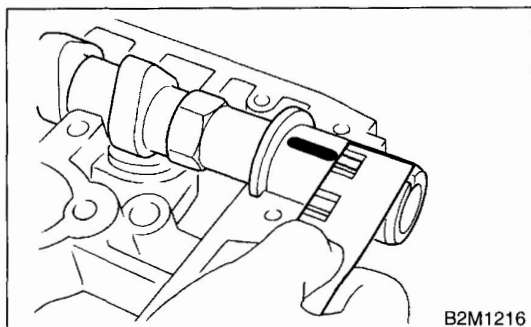

(7) Completely remove the plastigauge.

5) Check the cam face condition; remove the minor faults by grinding with oil stone. Measure the cam height H; replace if the limit has been exceeded.

Cam height: H

Standard:

Intake:

46.25 — 46.35 mm (1.821 — 1.825 in)

Exhaust:

46.15 — 46.25 mm (1.817 — 1.821 in)

Limit:

Intake:


46.15 mm (1.817 in)

Exhaust:

46.05 mm (1.813 in)

Cam base circle diameter A:

37.0 mm (1.457 in)

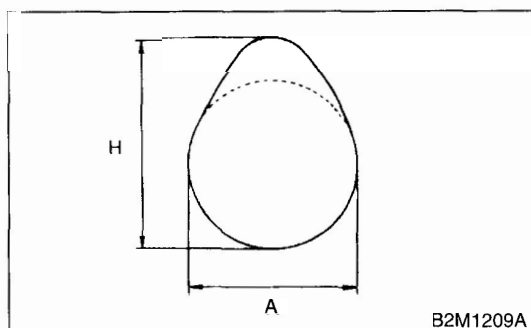


6) Measure the thrust clearance of camshaft with dial gauge. If the clearance exceeds the limit, replace the caps and cylinder head as a set. If necessary replace the camshaft.

Standard:

0.015 — 0.070 mm (0.0006 — 0.0028 in)

Limit:

0.1 mm (0.004 in)

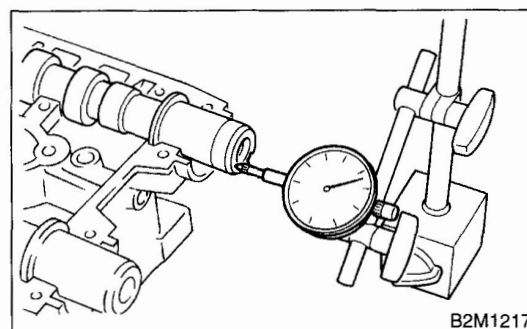

CYLINDER HEAD ASSEMBLY

MECHANICAL


19. Cylinder Head Assembly

A: REMOVAL


- 1) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove the timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Camshaft Sprocket.>
- 6) Remove the intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>
- 7) Remove the bolt which installs the A/C compressor bracket on cylinder head.
- 8) Remove the camshaft. <Ref. to ME(DOHC TURBO)-59, REMOVAL, Camshaft.>
- 9) Remove the cylinder head bolts in alphabetical sequence shown in the figure.

CAUTION:

Leave bolts (A) and (D) engaged by three or four threads to prevent the cylinder head from falling.

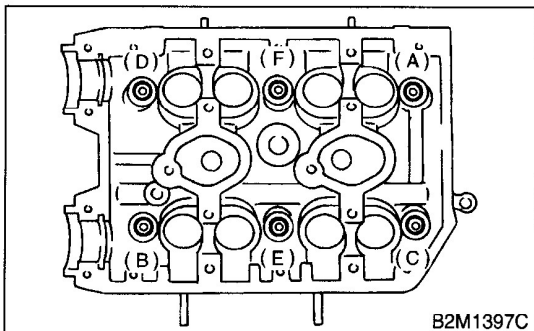

- 10) While tapping the cylinder head with a plastic hammer, separate it from cylinder block. Remove the bolts (A) and (D) to remove the cylinder head.

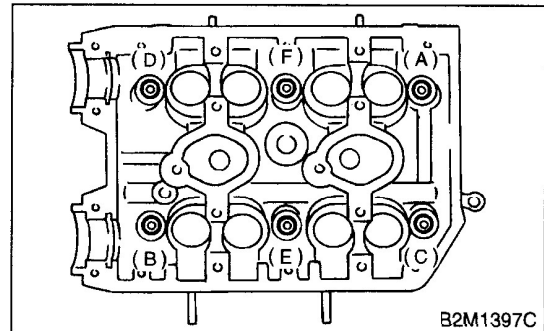

- 11) Remove the cylinder head gasket.

CAUTION:

Do not scratch the mating surface of cylinder head and cylinder block.


- 12) Similarly, remove the right side cylinder head.

B: INSTALLATION

- 1) Install the cylinder head and gaskets on cylinder block.

CAUTION:


- Use new cylinder head gaskets.
 - Be careful not to scratch the mating surface of cylinder head and cylinder block.
- 2) Tighten the cylinder head bolts.
 - (1) Apply a coat of engine oil to washers and bolt threads.
 - (2) Tighten all bolts to 29 N·m (3.0 kgf-m, 22 ft-lb) in alphabetical sequence. Then tighten all bolts to 69 N·m (7.0 kgf-m, 51 ft-lb) in alphabetical sequence.
 - (3) Back off all bolts by 180° first; back them off by 180° again.
 - (4) Tighten the bolts (A) and (B) to 34 N·m (3.5 kgf-m, 25 ft-lb).

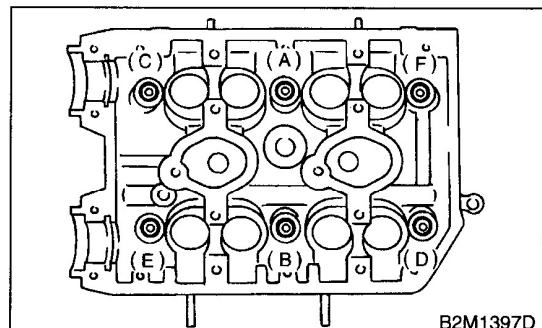

CYLINDER HEAD ASSEMBLY

MECHANICAL

(5) Tighten the bolts (C), (D), (E) and (F) to 15 N·m (1.5 kgf-m, 11 ft-lb).

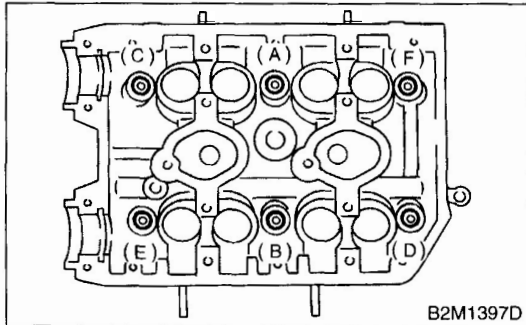

(6) Tighten all bolts by 80 to 90° in alphabetical sequence.

CAUTION:

Do not tighten the bolts more than 90°.

(7) Further tighten all bolts by 80 to 90° in alphabetical sequence.

CAUTION:

Ensure the total "re-tightening angle" [in the two previous steps] do not exceed 180°.

3) Install the camshaft. <Ref. to ME(DOHC TURBO)-60, INSTALLATION, Camshaft.>

4) Install the A/C compressor bracket on cylinder head.

5) Install the intake manifold. <Ref. to FU(DOHC TURBO)-18, INSTALLATION, Intake Manifold.>

6) Install the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, INSTALLATION, Camshaft Sprocket.>

7) Install the timing belt assembly. <Ref. to ME(DOHC TURBO)-50, INSTALLATION, Timing Belt Assembly.>

8) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

9) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>

10) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: DISASSEMBLY

1) Remove the valve shims and valve lifters.

2) Compress the valve spring and remove the valve spring retainer key. Remove each valve and valve spring.

ST1 498267600 CYLINDER HEAD TABLE


ST2 499718000 VALVE SPRING REMOVER

CAUTION:

- Keep the removed parts in order for re-installation in their original positions.

- Mark each valve to prevent confusion.


- Use extreme care not to damage the lips of the intake valve oil seals and exhaust valve oil seals.

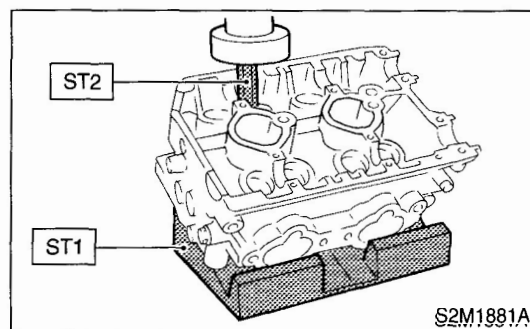

CYLINDER HEAD ASSEMBLY

MECHANICAL

D: ASSEMBLY

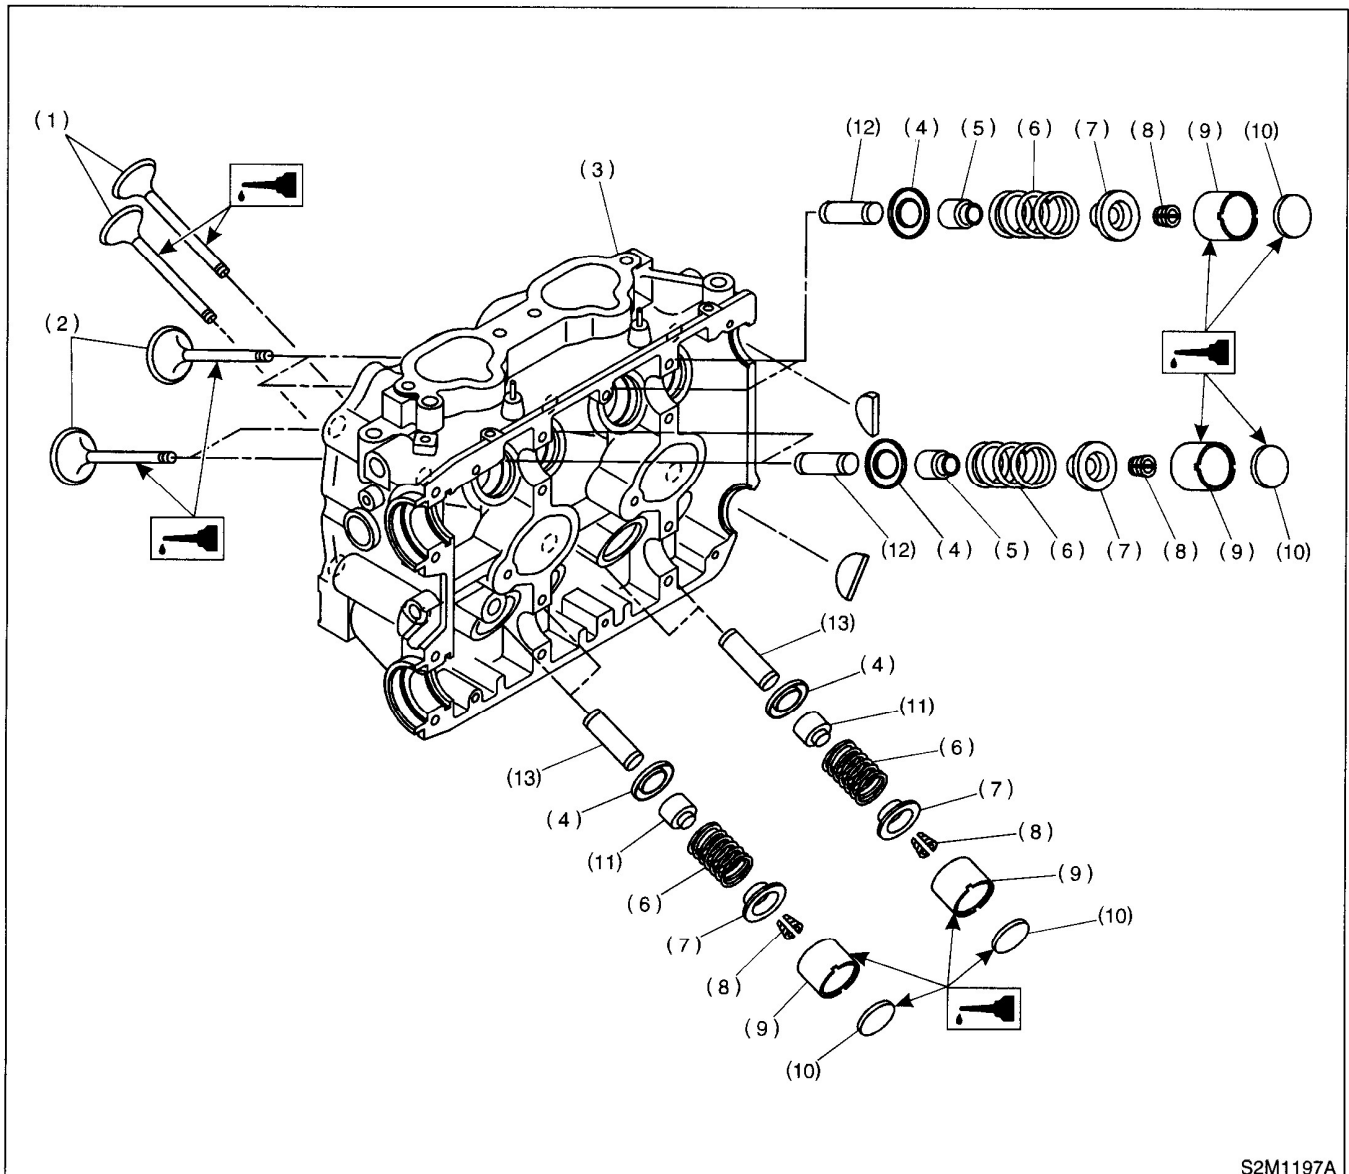

S2M1197A

- | | | |
|---------------------------|------------------|-----------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Exhaust valve oil seal |
| (2) Intake valve | (7) Retainer | (12) Intake valve guide |
| (3) Cylinder head | (8) Retainer key | (13) Exhaust valve guide |
| (4) Valve spring seat | (9) Valve lifter | |
| (5) Intake valve oil seal | (10) Shim | |

ME(DOHC TURBO)-66

GET theMANUALS.org

- 1) Installation of valve spring and valve:
 - (1) Coat the stem of each valve with engine oil and insert the valve into valve guide.

CAUTION:


When inserting the valve into valve guide, use special care not to damage the oil seal lip.

- (2) Set the cylinder head on ST1.
- (3) Install the valve spring and retainer using ST2.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499718000 VALVE SPRING REMOVER

CAUTION:

Be sure to install the valve springs with their close-coiled end facing the seat on the cylinder head.

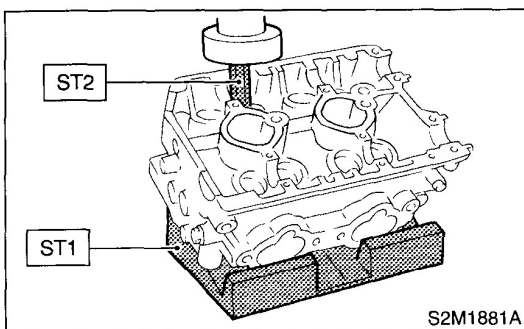

- (4) Compress the valve spring and fit the valve spring retainer key.
 - (5) After installing, tap the valve spring retainers lightly with wooden hammer for better seating.
- 2) Apply oil to the surface of the valve lifter and valve shim.
 - 3) Install the valve lifter and valve shim.

E: INSPECTION

1. CYLINDER HEAD

- 1) Make sure that no crack or other damage exists. In addition to visual inspection, inspect the important areas by means of red check.
- 2) Measure the warping of the cylinder head surface that mates with crankcase by using a straight edge (A) and thickness gauge (B).
If the warping exceeds 0.05 mm (0.0020 in), re-grind the surface with a surface grinder.

Warping limit:

0.05 mm (0.0020 in)

Grinding limit:


0.3 mm (0.012 in)

Standard height of cylinder head:

127.5 mm (5.02 in)

CAUTION:

Uneven torque for the cylinder head nuts can cause warping. When reassembling, pay special attention to the torque so as to tighten evenly.

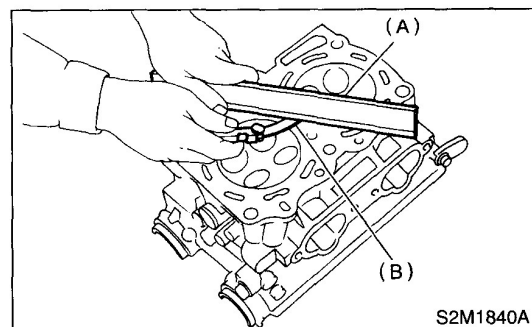

CYLINDER HEAD ASSEMBLY

MECHANICAL

2. VALVE SEAT

Inspect the intake and exhaust valve seats, and correct the contact surfaces with valve seat cutter if they are defective or when valve guides are replaced.

Valve seat width: *W*

Intake

Standard

1.0 mm (0.039 in)

Limit

1.7 mm (0.067 in)


Exhaust

Standard

1.5 mm (0.059 in)

Limit

2.2 mm (0.087 in)

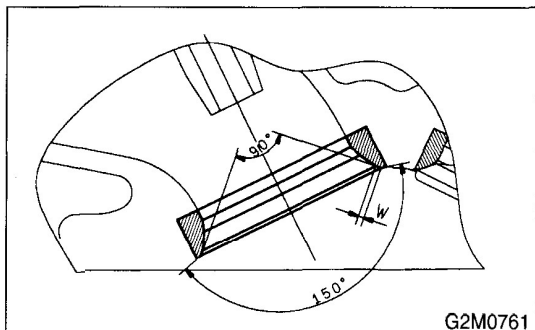

3. VALVE GUIDE

1) Check the clearance between valve guide and stem. The clearance can be checked by measuring the outside diameter of valve stem and the inside diameter of valve guide with outside and inside micrometers respectively.

Clearance between the valve guide and valve stem:

Standard

Intake

0.035 — 0.062 mm (0.0014 — 0.0024 in)

Exhaust

0.040 — 0.067 mm (0.0016 — 0.0026 in)

Limit

0.15 mm (0.0059 in)

2) If the clearance between valve guide and stem exceeds the limit, replace the valve guide or valve itself whichever shows greater amount of wear. See the following procedure for valve guide replacement.

Valve guide inner diameter:

6.000 — 6.012 mm (0.2362 — 0.2367 in)

Valve stem outer diameters:

Intake

5.950 — 5.965 mm (0.2343 — 0.2348 in)


Exhaust

5.945 — 5.960 mm (0.2341 — 0.2346 in)

(1) Place the cylinder head on ST1 with the combustion chamber upward so that valve guides enter the holes in ST1.


(2) Insert the ST2 into valve guide and press it down to remove the valve guide.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499767200 VALVE GUIDE REMOVER

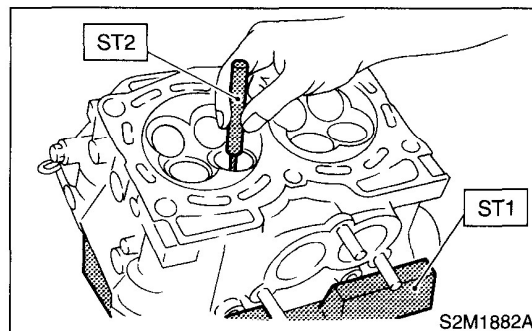

(3) Turn the cylinder head upside down and place ST as shown in the figure.


ST 498767700 VALVE GUIDE ADJUSTER

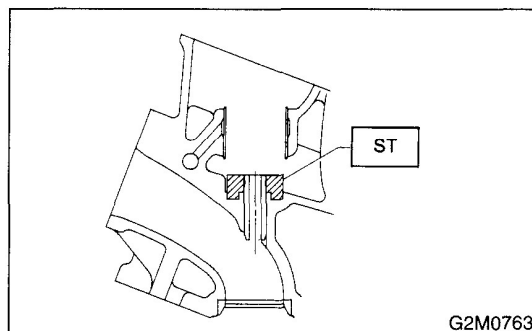

(4) Before installing a new valve guide, make sure that neither scratches nor damages exist on the inside surface of the valve guide holes in cylinder head.

(5) Put a new valve guide, coated with sufficient oil, in cylinder, and insert ST1 into valve guide. Press in until the valve guide upper end is flush with the upper surface of ST2.

ST1 499767200 VALVE GUIDE REMOVER
ST2 498267700 VALVE GUIDE ADJUSTER

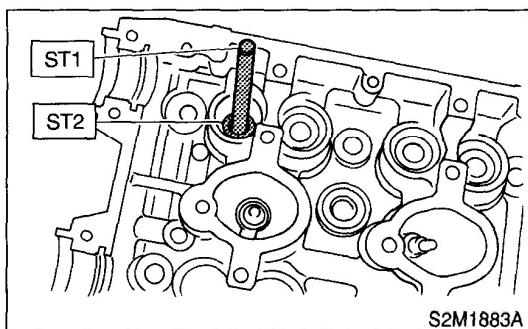

(6) Check the valve guide protrusion.

Valve guide protrusion: L

12.0 — 12.4 mm (0.472 — 0.488 in)

(7) Ream the inside of valve guide with ST. Gently rotate the reamer clockwise while pressing it lightly into the valve guide, and return it also rotating clockwise. After reaming, clean the valve guide to remove chips.

ST 499767400 VALVE GUIDE REAMER

CAUTION:

- Apply engine oil to the reamer when reaming.
- If the inner surface of the valve guide is torn, the edge of the reamer should be slightly ground with an oil stone.
- If the inner surface of the valve guide becomes lustrous and the reamer does not chips, use a new reamer or remedy the reamer.

(8) Recheck the contact condition between valve and valve seat after replacing the valve guide.

4. INTAKE AND EXHAUST VALVE

1) Inspect the flange and stem of valve, and replace if damaged, worn, or deformed, or if "H" is less than the specified limit.

H:

Intake

Standard

1.2 mm (0.047 in)

Limit

0.8 mm (0.031 in)

Exhaust

Standard

1.5 mm (0.059 in)

Limit

0.8 mm (0.031 in)


Valve overall length:

Intake

104.4 mm (4.110 in)

Exhaust

104.7 mm (4.122 in)

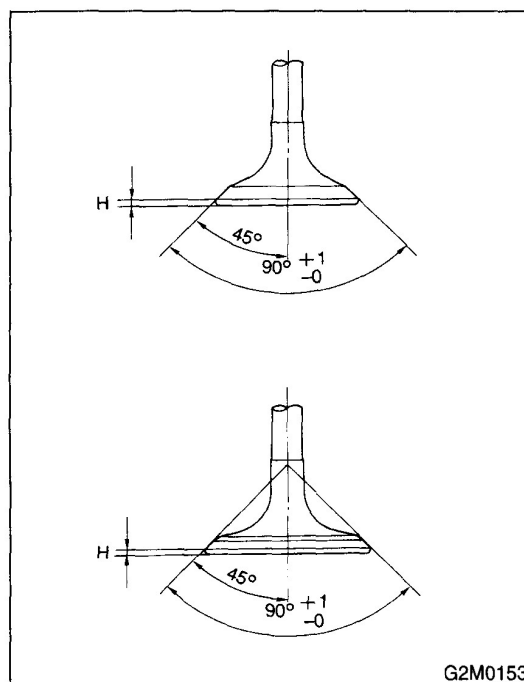

2) Put a small amount of grinding compound on the seat surface and lap the valve and seat surface. Install a new intake valve oil seal after lapping.

CYLINDER HEAD ASSEMBLY


MECHANICAL

5. VALVE SPRINGS

1) Check the valve springs for damage, free length, and tension. Replace the valve spring if it is not within specifications presented in the table.

2) To measure the squareness of the valve spring, stand the spring on a surface plate and measure its deflection at the top using a try square.

	Valve spring
Free length	44.67 mm (1.7587 in)
Tension/spring height	220.7±15.7 N (22.5 ± 1.6 kgf, 49.6±3.5 lb)/36.0 mm (1.417 in)
	510.9±25.5 N (52.1±2.6 kgf, 114.9±5.7 lb)/26.6 mm (1.047 in)
Squareness	2.5°, 2.0 mm (0.079 in)

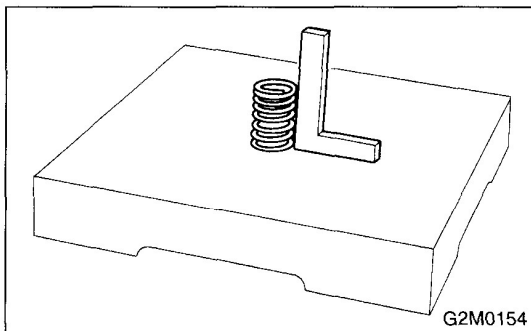

6. INTAKE AND EXHAUST VALVE OIL SEAL

Replace the oil seal with a new one, if the lip is damaged or spring out of place, or when the surfaces of intake valve and valve seat are reconditioned or intake valve guide is replaced.

1) Place the cylinder head on ST1.

2) Press in the oil seal to the specified dimension indicated in the figure by using ST2.

ST1 498267600 CYLINDER HEAD TABLE

ST2 498857100 VALVE GUIDE REMOVER

CAUTION:

- Apply engine oil to oil seal before force-fitting.
- Differentiate between the intake valve oil seal and exhaust valve oil seal by noting their difference in color.

Color of rubber part:


Intake [Black]

Exhaust [Brown]

Color of spring part:

Intake [Silver]

Exhaust [Silver]

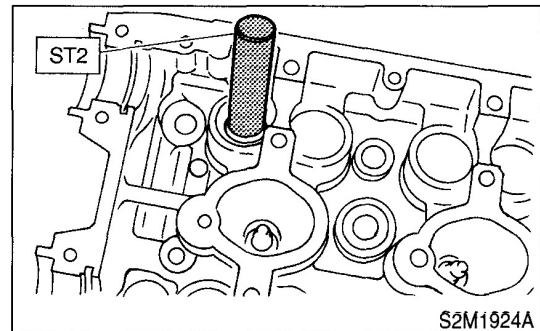


7. VALVE LIFTER

- 1) Check the valve lifter visually.
- 2) Measure the outer diameter of valve lifter.

Outer diameter:


34.959 — 34.975 mm (1.3763 — 1.3770 in)

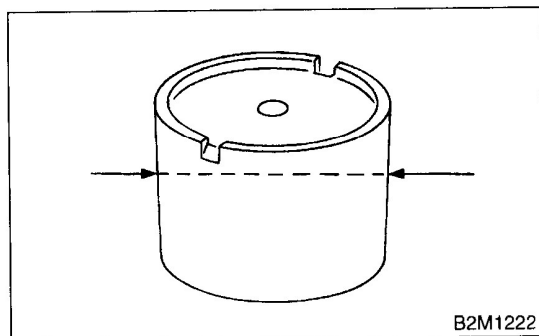

- 3) Measure the inner diameter of valve lifter mating part on cylinder head.

Inner diameter:

34.994 — 35.016 mm (1.3777 — 1.3786 in)

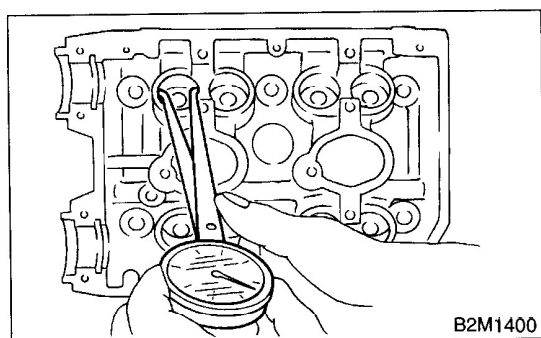**CAUTION:**

If difference between outer diameter of valve lifter and inner diameter of valve lifter mating part is over the limit, replace the cylinder head.

Standard:

0.019 — 0.057 mm (0.0007 — 0.0022 in)

Limit:

0.100 mm (0.0039 in)

CYLINDER BLOCK

MECHANICAL

20. Cylinder Block

A: REMOVAL

NOTE:

Before conducting this procedure, drain the engine oil completely if applicable.

1) Remove the intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>

2) Remove the V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>

3) Remove the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>

4) Remove the belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>

5) Remove the timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>

6) Remove the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Camshaft Sprocket.>

7) Remove the crankshaft sprocket. <Ref. to ME(DOHC TURBO)-58, REMOVAL, Crankshaft Sprocket.>

8) Remove the generator and A/C compressor with their brackets.

9) Remove the cylinder head assembly. <Ref. to ME(DOHC TURBO)-64, REMOVAL, Cylinder Head Assembly.>


10) Remove the clutch disc and cover. (MT vehicles) <Ref. to CL-11, REMOVAL, Clutch Disc and Cover.>

11) Remove the flywheel. (MT vehicles) <Ref. to CL-14, REMOVAL, Flywheel.>

12) Remove the drive plate. (AT vehicles)

Using the ST, lock crankshaft.

ST 498497100 CRANKSHAFT STOPPER

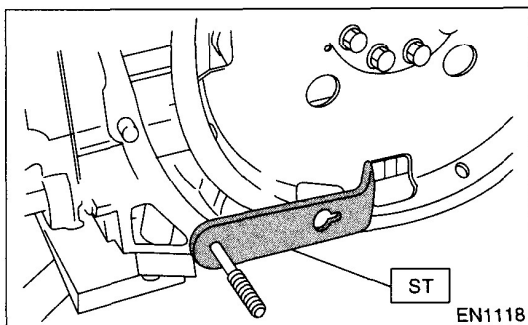


13) Remove the oil separator cover.

14) Remove the water by-pass pipe for heater.

15) Remove the oil filter.

16) Remove the oil cooler.

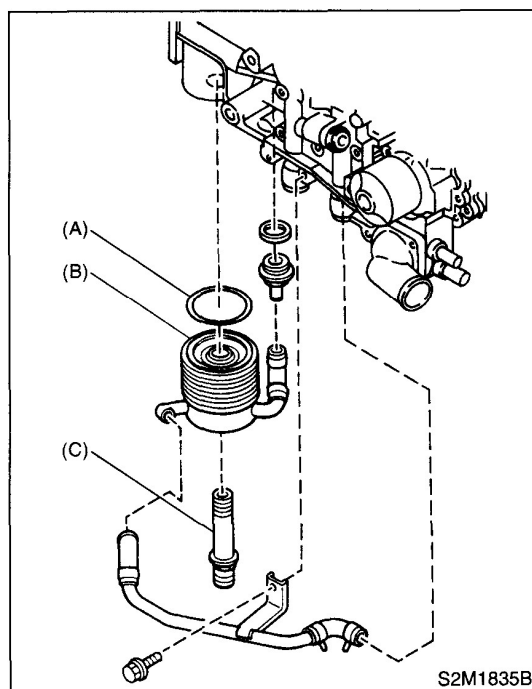

(a) Gasket

(b) Oil cooler

(c) Connector

17) Removal of oil pan:


(1) Turn the cylinder block with #2 and #4 piston sides facing upward.

(2) Remove the bolts which secure oil pan to cylinder block.

(3) Insert a oil pan cutter blade between cylinder block-to-oil pan clearance and remove the oil pan.

CAUTION:

Do not use a screwdriver or similar tool in place of oil pan cutter.

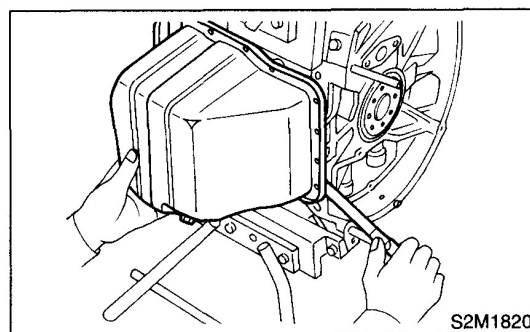

18) Remove the oil strainer stay.

19) Remove the oil strainer.

20) Remove the baffle plate.

21) Remove the water pipes.

22) Remove the water pump.



CYLINDER BLOCK

MECHANICAL

23) Remove the oil pump from cylinder block.
Use a flat-bladed screwdriver as shown in the figure when removing the oil pump.

CAUTION:

Be careful not to scratch the mating surface of cylinder block and oil pump.

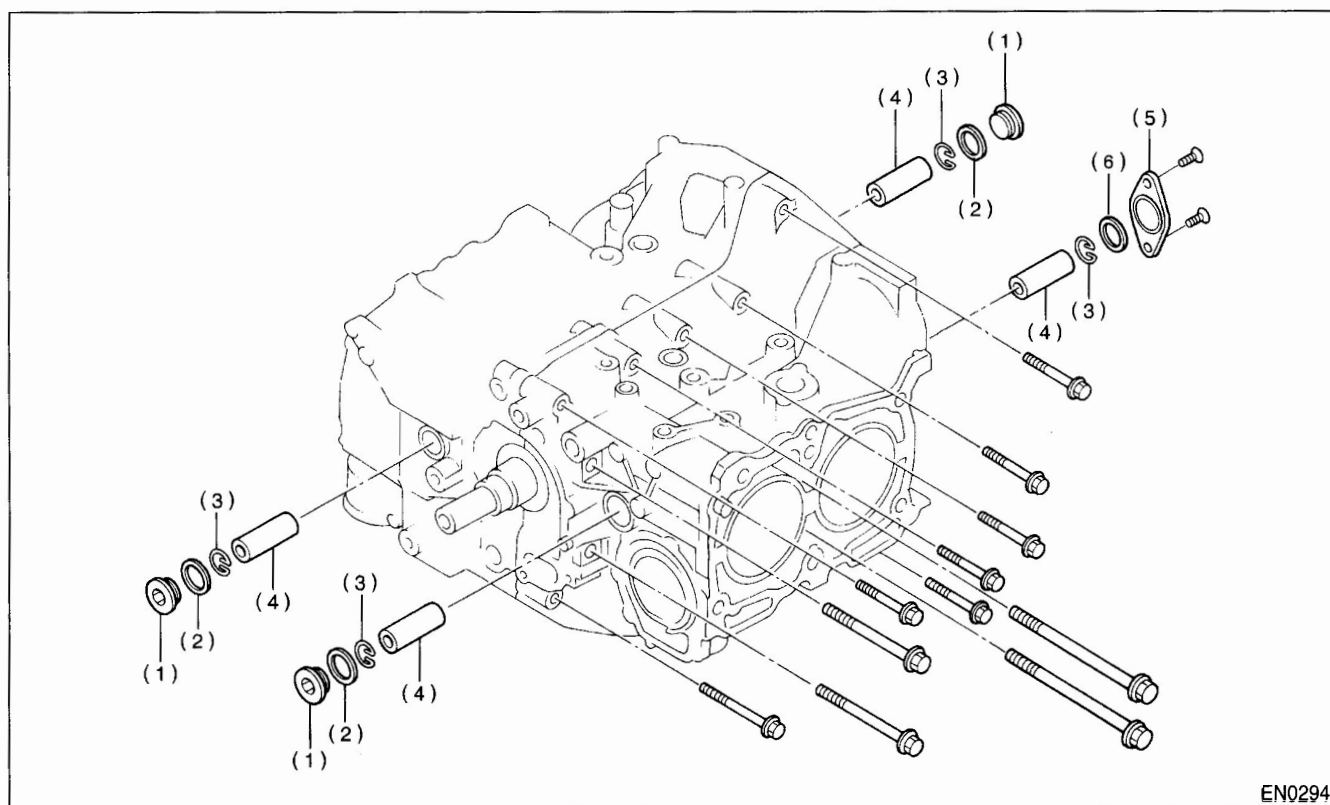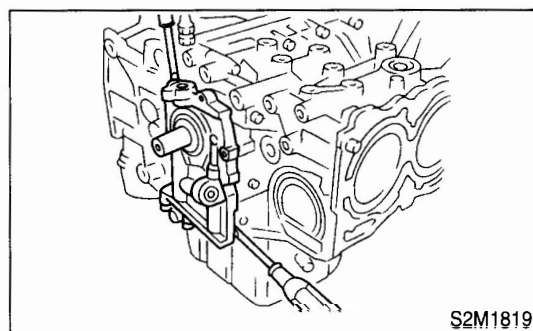

(1) Service hole plug

(2) Gasket


(3) Circlip

(4) Piston pin


(5) Service hole cover

(6) O-ring

24) Remove the service hole cover and service hole plugs using the hexagon wrench [14 mm (0.55 in)].

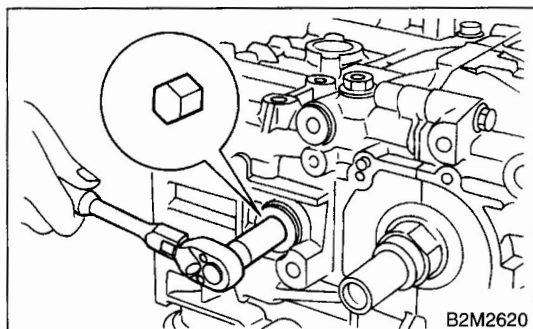

25) Rotate the crankshaft to bring #1 and #2 pistons to bottom dead center position, then remove the piston circlip through service hole of #1 and #2 cylinders.

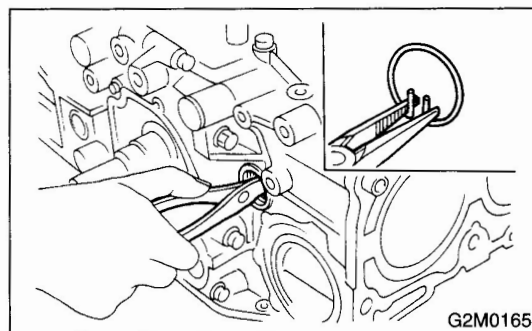

ME(DOHC TURBO)-73

GETtheMANUALS.org

CYLINDER BLOCK


MECHANICAL

26) Draw out the piston pin from #1 and #2 pistons using ST.

ST 499097700 PISTON PIN REMOVER

CAUTION:

Be careful not to confuse the original combination of piston, piston pin and cylinder.

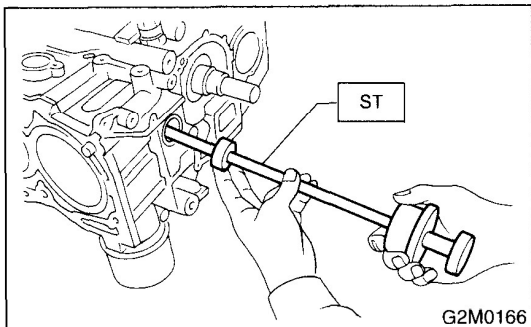

27) Similarly remove the piston pins from #3 and #4 pistons.

28) Remove the bolts which connect cylinder block on the side of #2 and #4 cylinders.


29) Back off the bolts which connect cylinder block on the side of #1 and #3 cylinders two or three turns.

30) Set up the cylinder block so that #1 and #3 cylinders are on the upper side, then remove the cylinder block connecting bolts.

31) Separate the left-hand and right-hand cylinder blocks.

CAUTION:

When separating the cylinder block, do not allow the connecting rod to fall and damage the cylinder block.

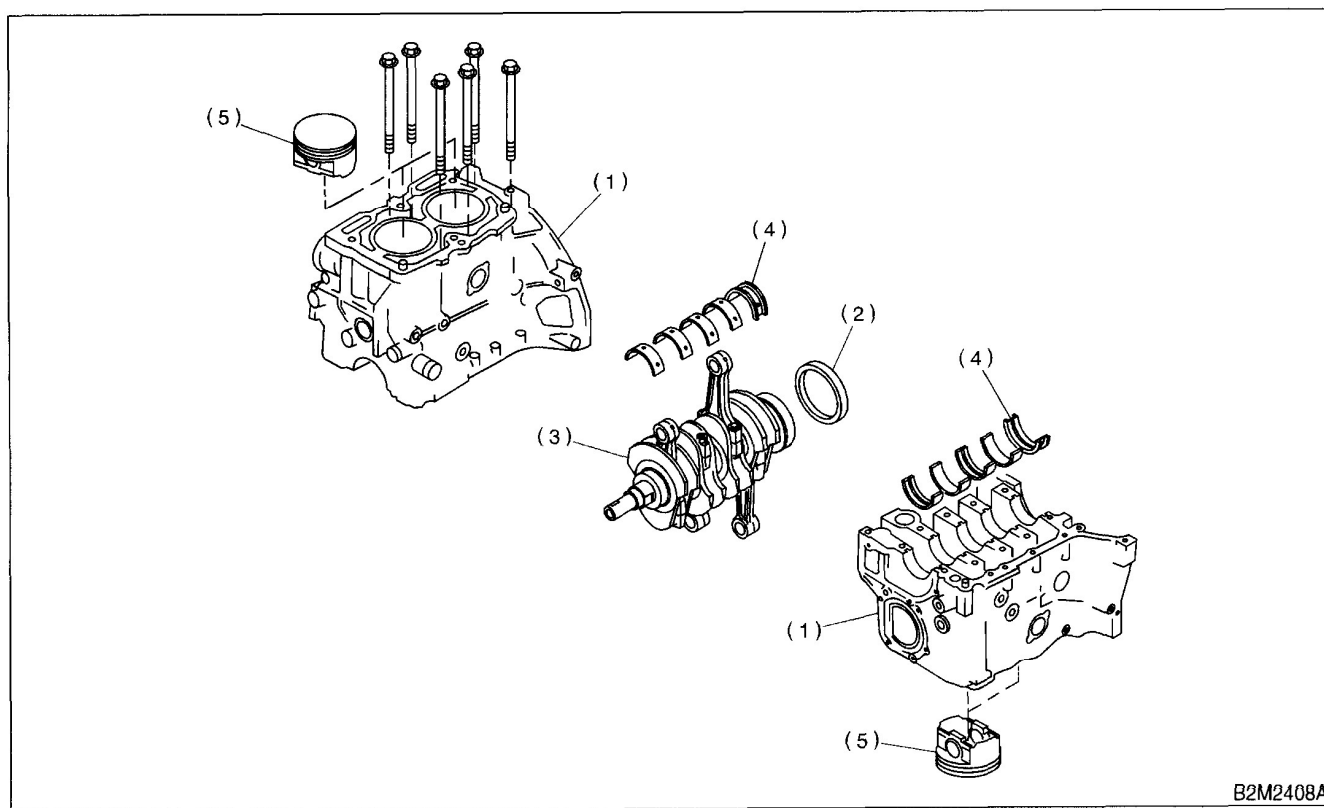

(1) Cylinder block

(2) Rear oil seal

(3) Crankshaft

(4) Crankshaft bearing

(5) Piston

32) Remove the rear oil seal.

33) Remove the crankshaft together with connecting rod.

34) Remove the crankshaft bearings from cylinder block using a hammer handle.

CAUTION:

Do not confuse the combination of crankshaft bearings.

Press the bearing at the end opposite to locking lip.

35) Draw out each piston from cylinder block using a wooden bar or hammer handle.


CAUTION:

Do not confuse the combination of piston and cylinder.

ME(DOHC TURBO)-74

GETtheMANUALS.org

B: INSTALLATION

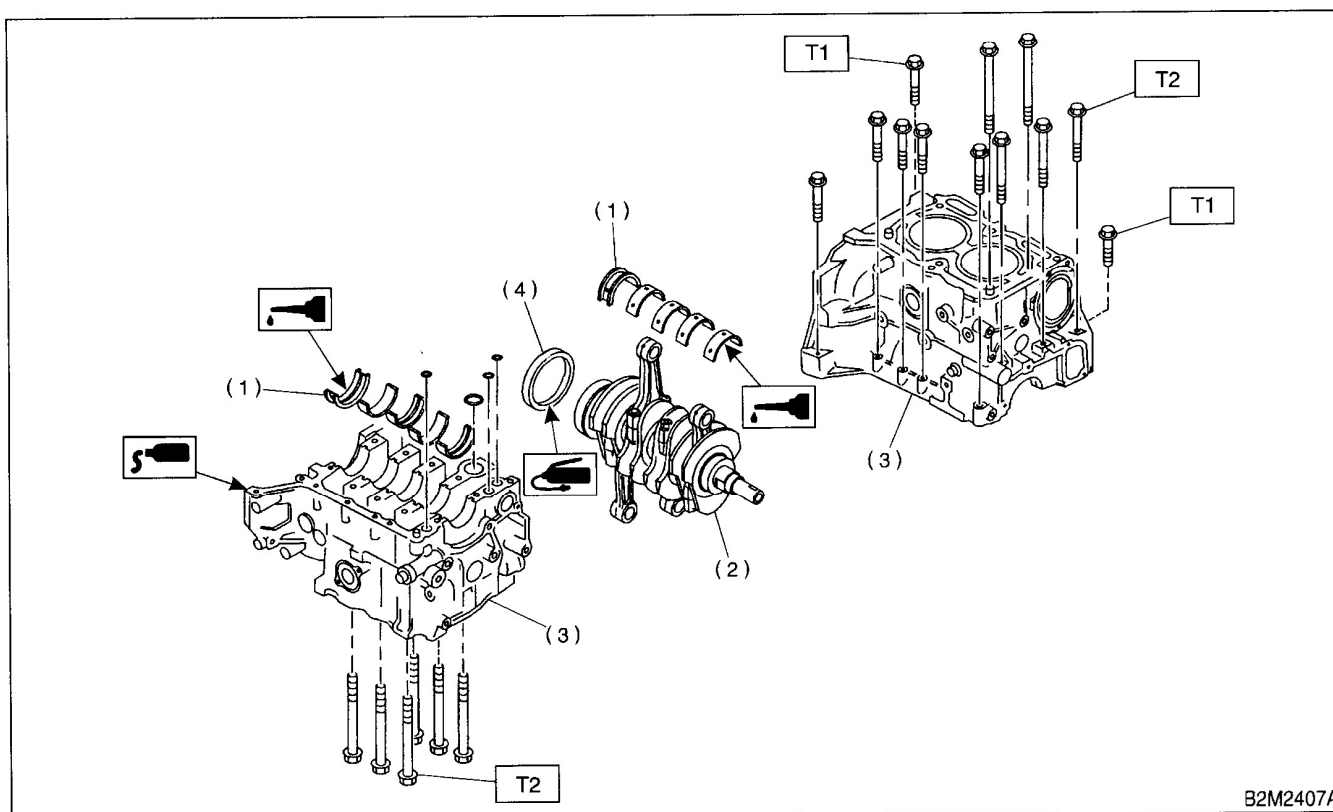

- (1) Crankshaft bearing
- (2) Crankshaft
- (3) Cylinder block
- (4) Rear oil seal

Tightening torque: N-m (kgf-m, ft-lb)

T1: 25 (2.5, 18.1)

T2: 47 (4.8, 34.7)

CAUTION:

Remove oil in the mating surface of bearing and cylinder block before installation. Also apply a coat of engine oil to crankshaft pins.

1) Position the crankshaft on the #2 and #4 cylinder block.


2) Apply fluid packing to the mating surface of #1 and #3 cylinder block, and position it on #2 and #4 cylinder block.

Fluid packing:

THREE BOND 1215 or equivalent

CAUTION:


Do not allow fluid packing to jut into O-ring grooves, oil passages, bearing grooves, etc.

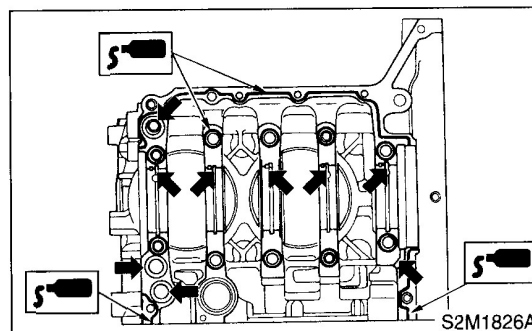

CYLINDER BLOCK

MECHANICAL


3) Temporarily tighten the 10 mm cylinder block connecting bolts in alphabetical sequence shown in the figure.

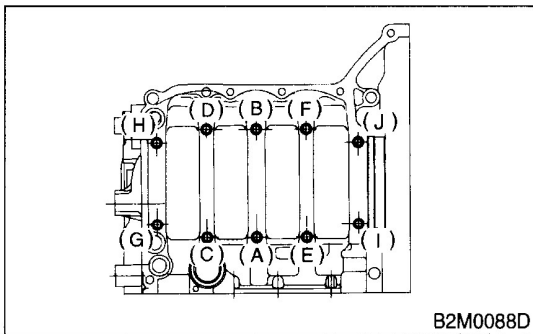

4) Tighten the 10 mm cylinder block connecting bolts in alphabetical sequence.

Tightening torque:

47 N·m (4.8 kgf-m, 34.7 ft-lb)

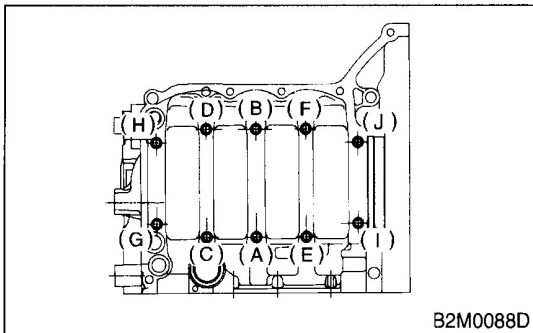


5) Tighten the 8 mm and 6 mm cylinder block connecting bolts in alphabetical sequence shown in the figure.

Tightening torque:

(A) — (G): 25 N·m (2.5 kgf-m, 18.1 ft-lb)


(H): 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

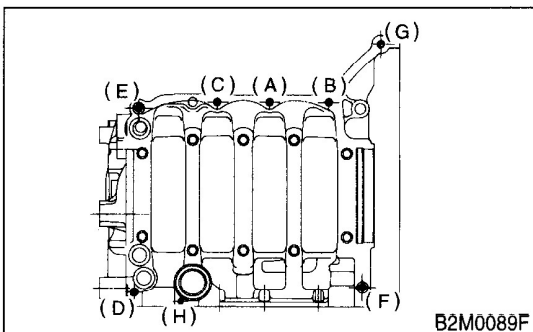

6) Install the rear oil seal using ST1 and ST2.

ST1 499597100 OIL SEAL GUIDE


ST2 499587200 OIL SEAL INSTALLER

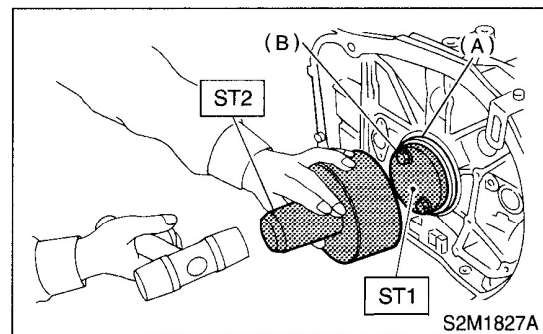

(A) Rear oil seal


(B) Flywheel attaching bolt

7) Position the top ring gap at (A) or (B) in the figure.

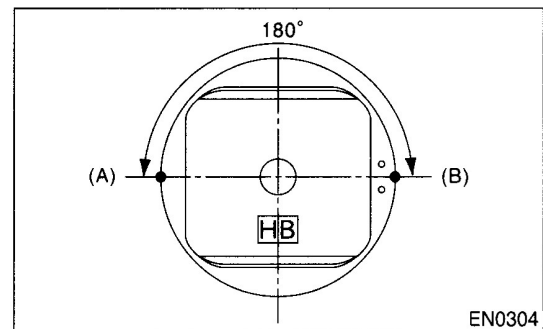

8) Position the second ring gap at 180° on the reverse side for the top ring gap.

9) Position the upper rail gap at (C) or (D) in the figure.

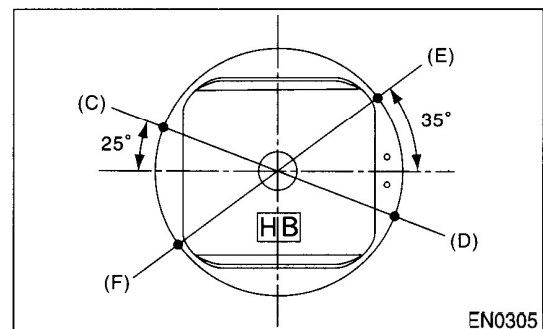

10) Position the expander gap at 180° of the reverse side for the upper rail gap.


CYLINDER BLOCK

MECHANICAL

11) Position the lower rail gap at (E) or (F) in the figure.

CAUTION:

- Ensure ring gaps do not face the same direction.
- Ensure ring gaps are not within the piston skirt area.

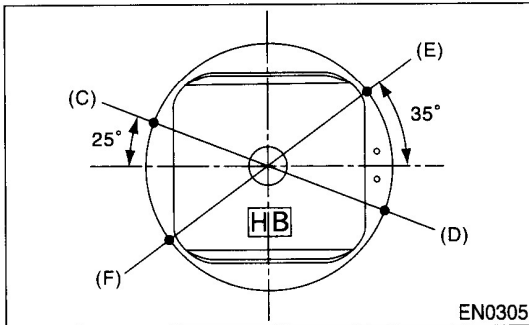


12) Installing the circlip:

Install the circlips in piston holes located opposite of the service holes in cylinder block, when positioning all pistons in the corresponding cylinders.


CAUTION:

Use new circlips.

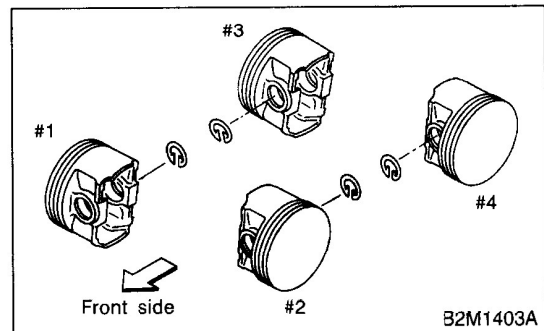


CAUTION:

Piston front mark faces towards the front of the engine.

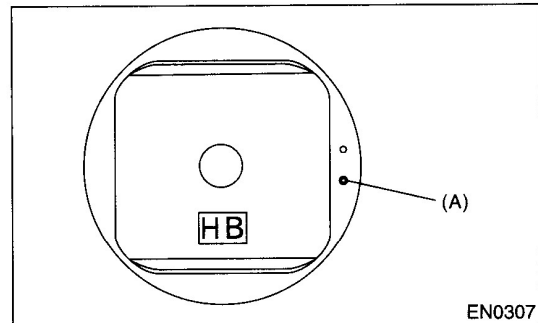

(A) Front mark

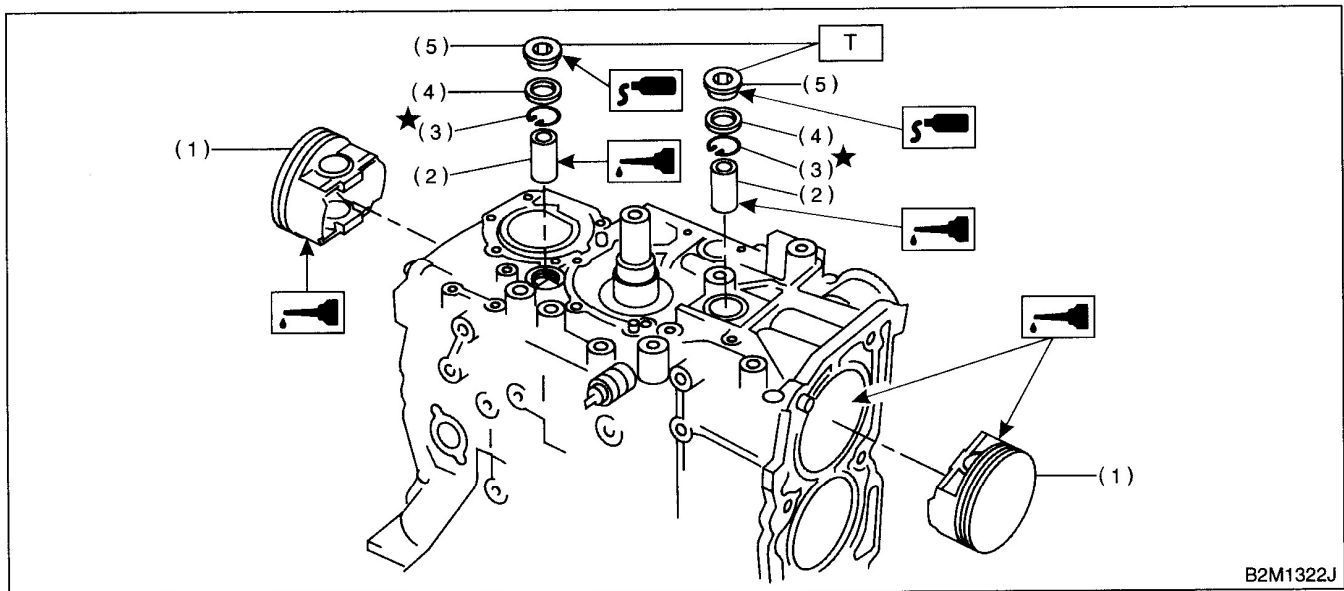

- | | |
|----------------|-----------------------|
| (1) Piston | (4) Gasket |
| (2) Piston pin | (5) Service hole plug |
| (3) Circlip | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 69 (7.0, 50.6)

ME(DOHC TURBO)-77

GETtheMANUALS.org

CYLINDER BLOCK

MECHANICAL


13) Installing the piston:

- (1) Turn the cylinder block so that #1 and #2 cylinders face upward.
- (2) Using ST1, turn the crankshaft so that #1 and #2 connecting rods are set at bottom dead center.

ST1 499987500 CRANKSHAFT SOCKET

- (3) Apply a coat of engine oil to the pistons and cylinders and insert pistons in their cylinders using ST2.

ST2 498744300 PISTON GUIDE

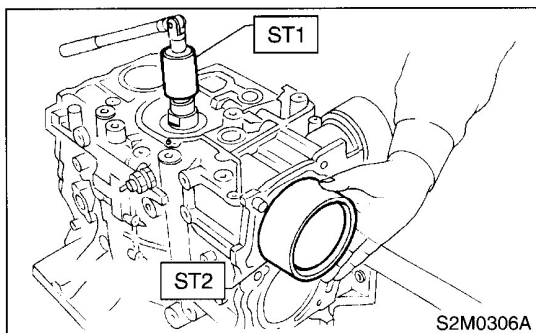


14) Installing piston pin:

- (1) Insert ST3 into service hole to align piston pin hole with connecting rod small end.

CAUTION:

Apply a coat of engine oil to ST3 before insertion.

ST3 499017100 PISTON PIN GUIDE

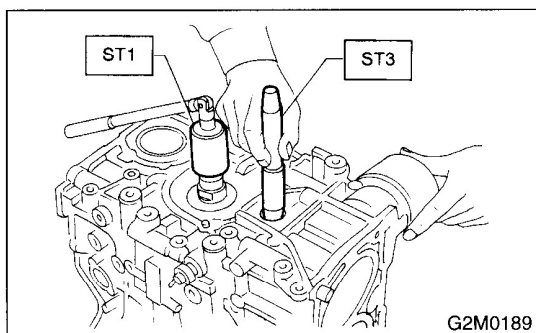


- (2) Apply a coat of engine oil to the piston pin and insert piston pin into piston and connecting rod through service hole.

- (3) Install the circlip.

CAUTION:


Use new circlips.

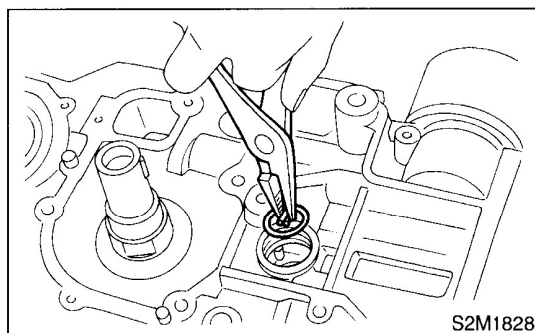

- (4) Apply fluid packing around the service hole plug.

Fluid packing:


THREE BOND 1215 or equivalent

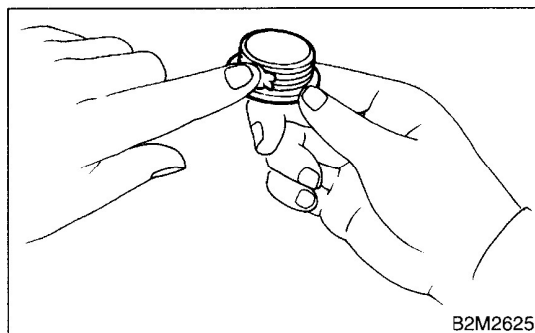

- (5) Install the service hole plug and gasket.


CAUTION:

Use a new gasket.

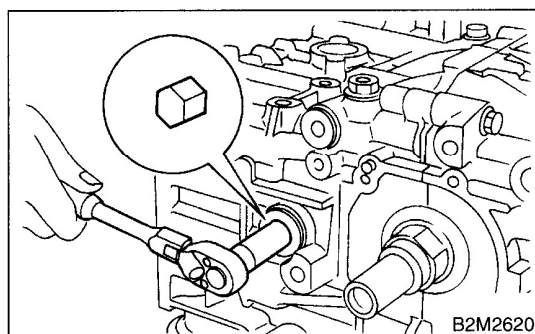

CYLINDER BLOCK

MECHANICAL

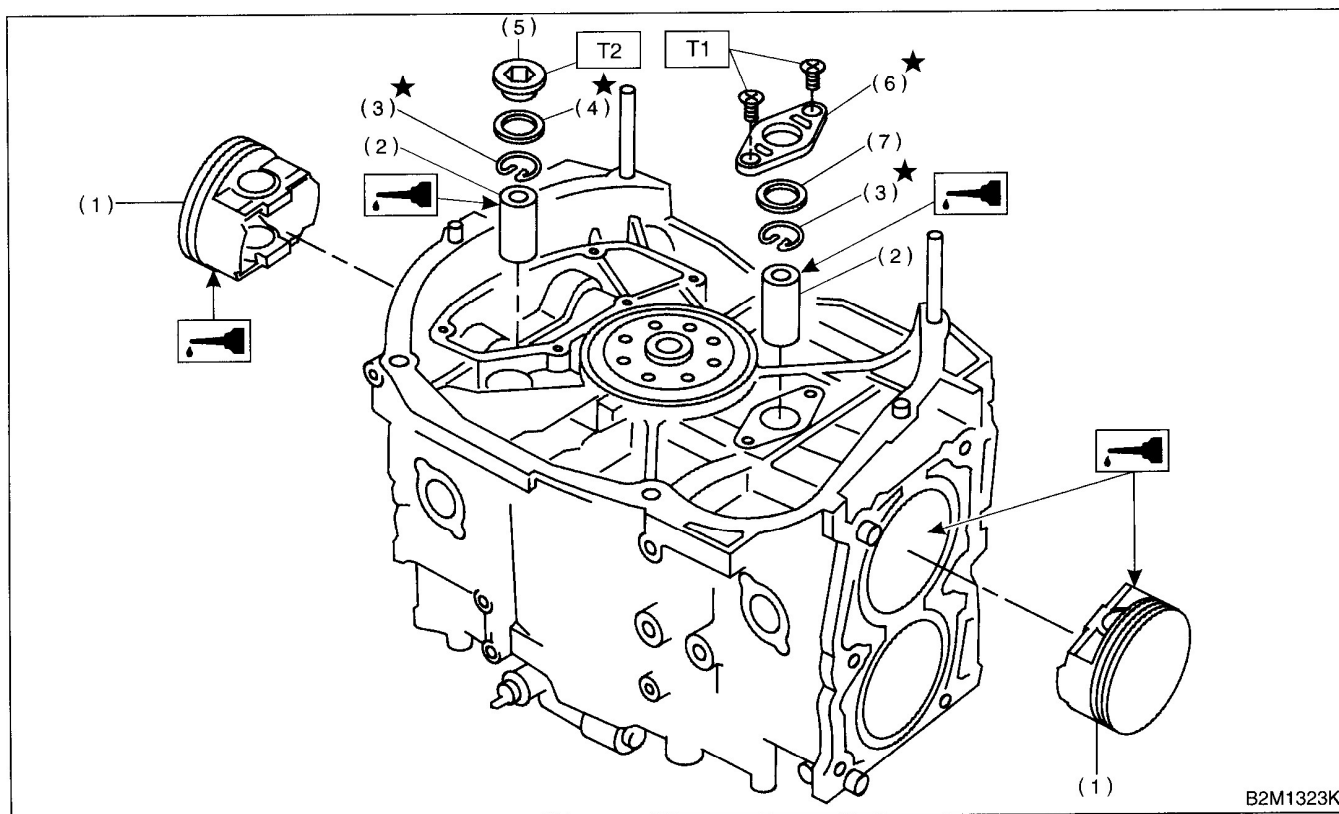

B2M1323K

- | | |
|----------------|------------------------|
| (1) Piston | (5) Service hole plug |
| (2) Piston pin | (6) Service hole cover |
| (3) Circlip | (7) O-ring |
| (4) Gasket | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6.4 (0.65, 4.7)

T2: 69 (7.0, 50.6)

(6) Turn the cylinder block so that #3 and #4 cylinders face upward. Using the same procedures as used for #1 and #2 cylinders, install the pistons and piston pins.

15) Install the water pipe.

16) Install the baffle plate.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

17) Install the oil strainer and O-ring

Tightening torque:


10 N·m (1.0 kgf-m, 7 ft-lb)

18) Install the oil strainer stay.

19) Apply fluid packing to matching surfaces and install the oil pan.

Fluid packing:

THREE BOND 1215 or equivalent

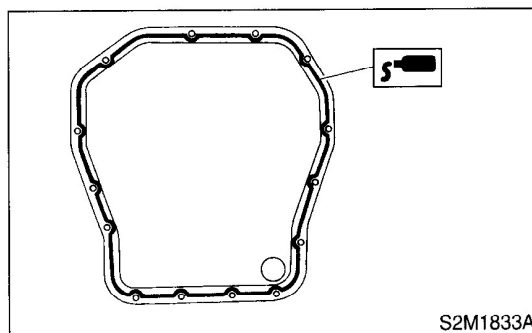

S2M1833A


CYLINDER BLOCK

MECHANICAL

20) Apply fluid packing to matching surfaces and install the oil separator cover.

Fluid packing:


THREE BOND 1215 or equivalent

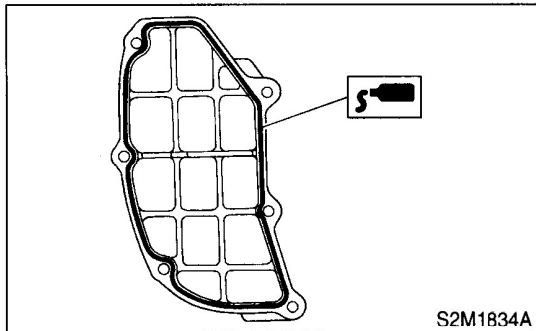

21) Install the drive plate. (AT vehicles)
To lock the crankshaft, use ST.
ST 498497100 CRANKSHAFT STOPPER

Tightening torque:

72 N·m (7.3 kgf-m, 52.8 ft-lb)

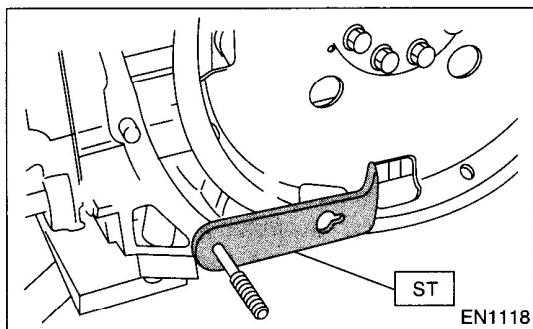


22) Install the flywheel. (MT vehicles) <Ref. to CL-14, INSTALLATION, Flywheel.>

23) Install the clutch disc and cover. (MT vehicles)
<Ref. to CL-11, INSTALLATION, Clutch Disc and Cover.>

24) Installation of oil pump:

(1) Discard the front oil seal after removal. Replace with a new one using ST.


ST 499587100 OIL SEAL INSTALLER

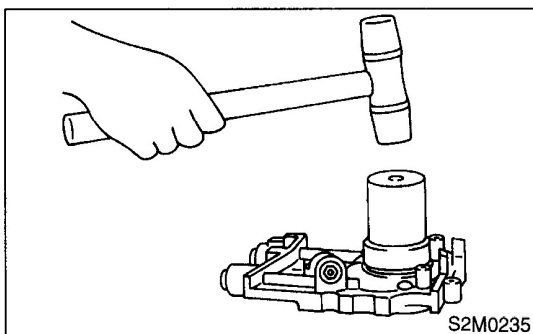

(2) Apply fluid packing to the matching surface of oil pump.


Fluid packing:

THREE BOND 1215 or equivalent

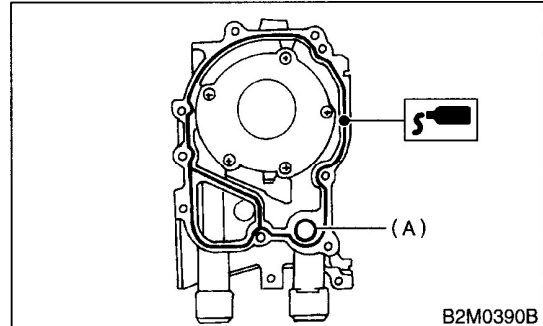

(A) O-ring

(3) Apply a coat of engine oil to the inside of the oil seal.

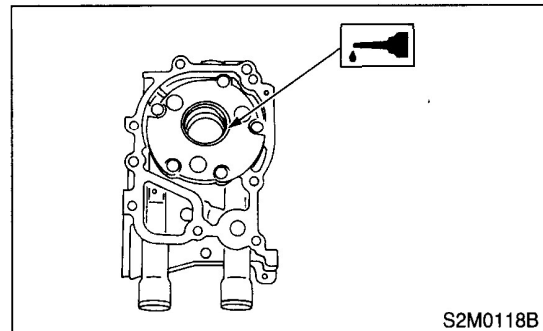

(4) Install the oil pump on cylinder block. Be careful not to damage the oil seal during installation.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

CAUTION:

- Do not forget to install the O-ring and seal when installing the oil pump.
- Align the flat surface of oil pump's inner rotor with crankshaft before installation.

CYLINDER BLOCK

MECHANICAL

25) Install the water pump and gasket.


Tightening torque:

First; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

Second; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

CAUTION:

- Be sure to use a new gasket.
- When installing the water pump, tighten bolts in two stages in alphabetical sequence as shown in the figure.

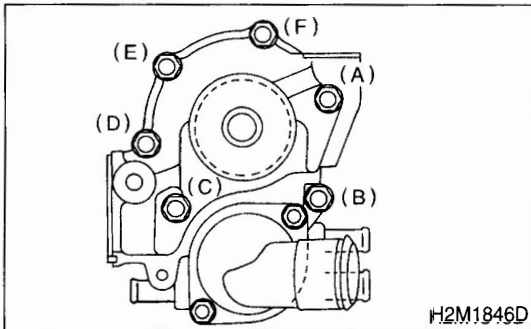


26) Install the water by-pass pipe for heater.

27) Install the oil cooler.

Tightening torque:

T1; 55 N·m (5.5 kgf-m, 40 ft-lb)

T2; 69 N·m (7.0 kgf-m, 50.6 ft-lb)

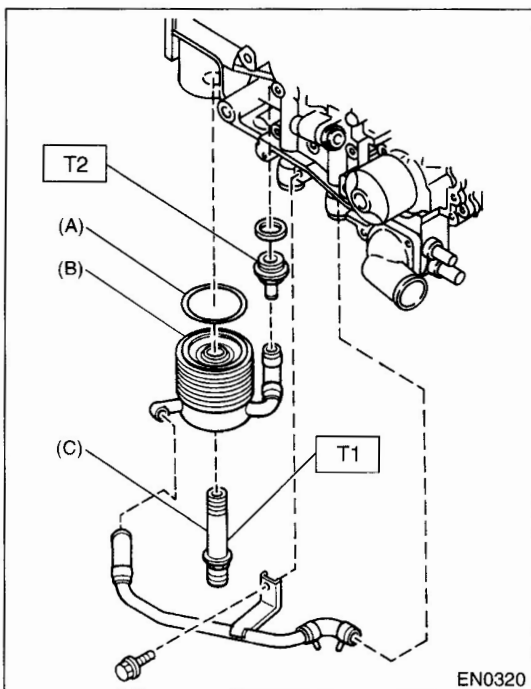


- (A) O-ring
- (B) Oil cooler
- (C) Connector

28) Install the oil filter using ST.

ST 498547000 OIL FILTER WRENCH

29) Install the water by-pass pipe between oil cooler and water pump.

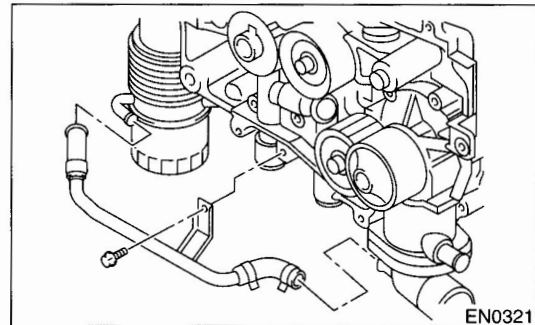

30) Install the water pipe.

NOTE:

Always use a new O-ring.

31) Install the cylinder head assembly. <Ref. to ME(DOHC TURBO)-64, INSTALLATION, Cylinder Head Assembly.>

32) Install the oil level gauge guide and tighten the attaching bolt (left side only).

33) Install the rocker cover.

34) Install the crankshaft sprocket. <Ref. to ME(DOHC TURBO)-58, INSTALLATION, Crankshaft Sprocket.>

35) Install the camshaft sprocket. <Ref. to ME(DOHC TURBO)-57, INSTALLATION, Camshaft Sprocket.>

36) Install the timing belt assembly. <Ref. to ME(DOHC TURBO)-50, INSTALLATION, Timing Belt Assembly.>

37) Install the belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

38) Install the crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>

39) Install the generator and A/C compressor brackets on cylinder head.

40) Install the V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>


41) Install the intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>

ME(DOHC TURBO)-81

GETTHEMANUALS.org

CYLINDER BLOCK

C: DISASSEMBLY

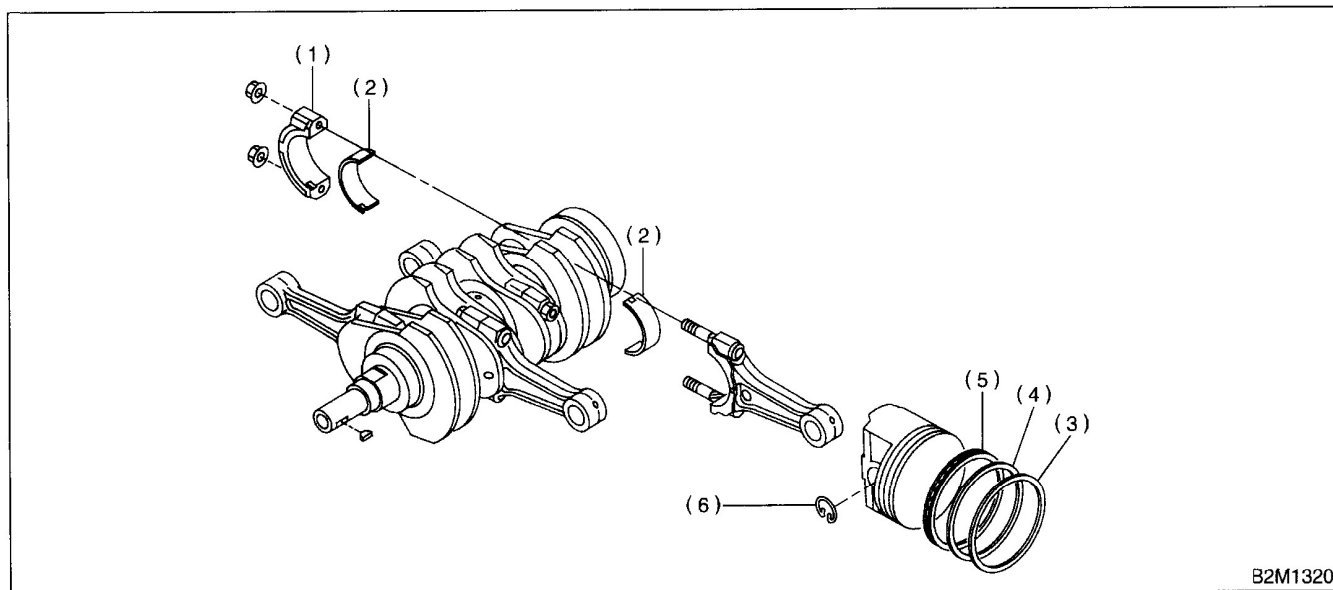

(1) Connecting rod cap

(3) Top ring

(5) Oil ring

(2) Connecting rod bearing

(4) Second ring

(6) Circlip

1) Remove the connecting rod cap.

2) Remove the connecting rod bearing.

CAUTION:

Arrange the removed connecting rod, connecting rod cap and bearing in order to prevent confusion.

3) Remove the piston rings using the piston ring expander.


4) Remove the oil ring by hand.

CAUTION:

Arrange the removed piston rings in proper order to prevent confusion.

5) Remove the circlip.

D: ASSEMBLY

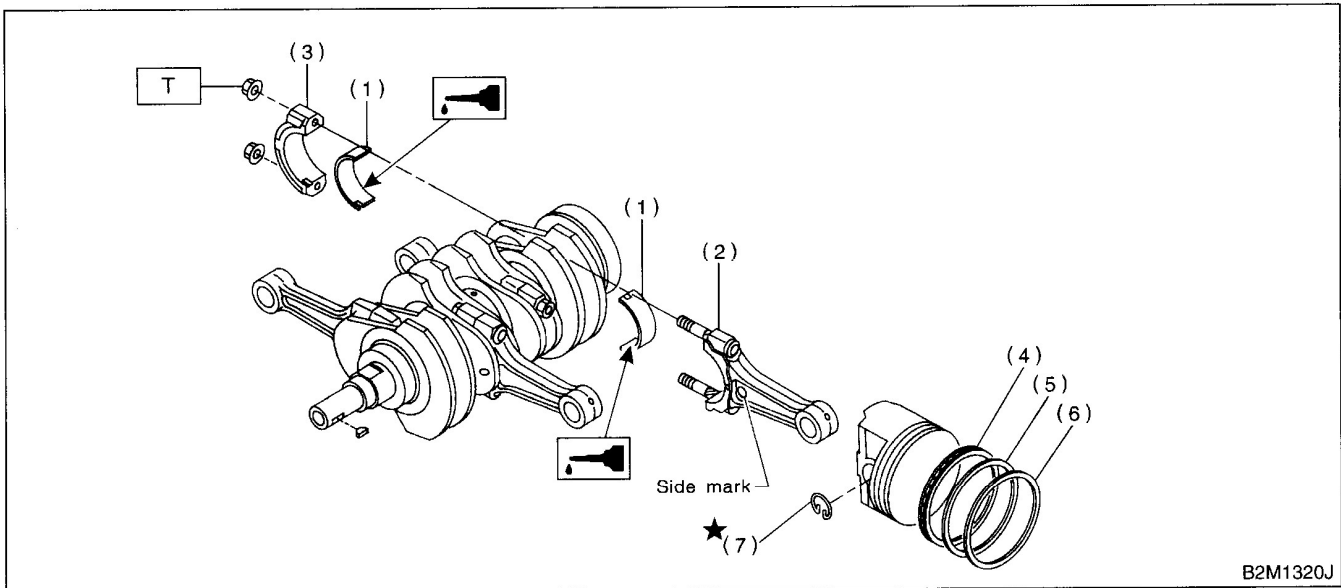

B2M1320J

- | | |
|----------------------------|-----------------|
| (1) Connecting rod bearing | (5) Second ring |
| (2) Connecting rod | (6) Top ring |
| (3) Connecting rod cap | (7) Circlip |
| (4) Oil ring | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 44.6 (4.55, 32.9)

1) Install the connecting rod bearings on connecting rods and connecting rod caps.

CAUTION:

Apply oil to the surfaces of the connecting rod bearings.

2) Install the connecting rod on crankshaft.

CAUTION:

Position each connecting rod with the side marked facing forward.

3) Install the connecting rod cap with connecting rod nut.

Ensure the arrow on connecting rod cap faces the front during installation.

CAUTION:

- Each the connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching number.

- When tightening the connecting rod nuts, apply oil on the threads.

4) Install the oil ring spacer, upper rail and lower rail in this order by hand. Then install the second ring and top ring with a piston ring expander.

E: INSPECTION

1. CYLINDER BLOCK

1) Visually check for cracks and damage. Especially, inspect the important parts by means of red lead check.

2) Check the oil passages for clogging.

3) Inspect the crankcase surface that mates with cylinder head for warping by using a straight edge, and correct by grinding if necessary.

Warping limit:

0.05 mm (0.0020 in)

Grinding limit:

0.1 mm (0.004 in)

Standard height of cylinder block:

201.0 mm (7.91 in)

CYLINDER BLOCK

MECHANICAL

2. CYLINDER AND PISTON

1) The cylinder bore size is stamped on the cylinder block's front upper surface.

CAUTION:

Measurement should be performed at a temperature of 20°C (68°F).


NOTE:

Standard sized pistons are classified into two grades, "A" and "B". These grades should be used as a guide line in selecting a standard piston.

Standard diameter:

A: 92.005 — 92.015 mm (3.6222 — 3.6226 in)

B: 91.995 — 92.005 mm (3.6218 — 3.6222 in)

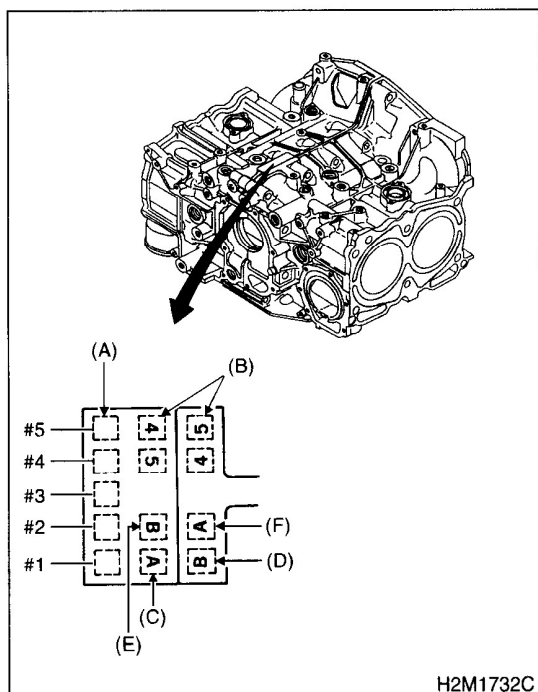

- (A) Main journal size mark
- (B) Cylinder block RH-LH combination mark
- (C) #1 cylinder bore size mark
- (D) #2 cylinder bore size mark
- (E) #3 cylinder bore size mark
- (F) #4 cylinder bore size mark

2) How to measure the inner diameter of each cylinder:

Measure the inner diameter of each cylinder in both the thrust and piston pin directions at the heights shown in the figure, using a cylinder bore gauge.

CAUTION:

Measurement should be performed at a temperature of 20°C (68°F).

Taper:

Standard

0.015 mm (0.0006 in)

Limit

0.050 mm (0.0020 in)


Out-of-roundness:

Standard

0.010 mm (0.0004 in)

Limit

0.050 mm (0.0020 in)

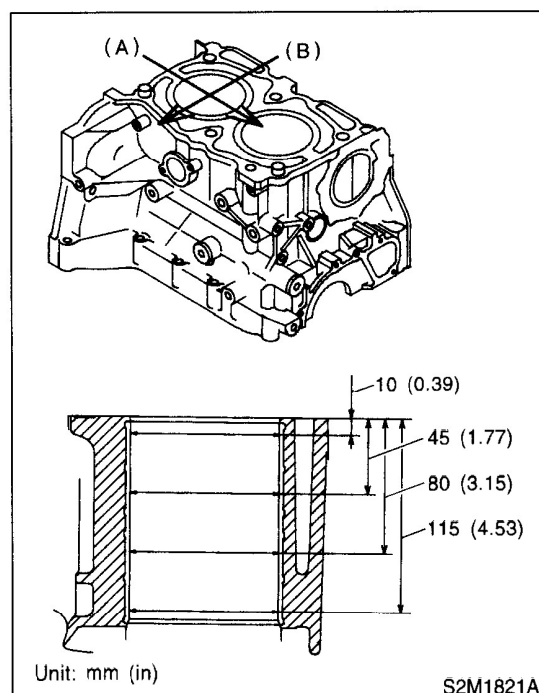

- (A) Piston pin direction
- (B) Thrust direction

3) When the piston is to be replaced due to general or cylinder wear, determine a suitable sized piston by measuring the piston clearance.

CYLINDER BLOCK

MECHANICAL

4) How to measure the outer diameter of each piston:

Measure the outer diameter of each piston at the height shown in the figure. (Thrust direction)

CAUTION:

Measurement should be performed at a temperature of 20°C (68°F).

Piston grade point H:

37.0 mm (1.457 in)

Piston outer diameter:

Standard

A: 91.985 — 91.995 mm

(3.6214 — 3.6218 in)

B: 91.975 — 91.985 mm

(3.6211 — 3.6214 in)

0.25 mm (0.0098 in) oversize


92.225 — 92.235 mm

(3.6309 — 3.6313 in)

0.50 mm (0.0197 in) oversize

92.475 — 92.485 mm

(3.6407 — 3.6411 in)

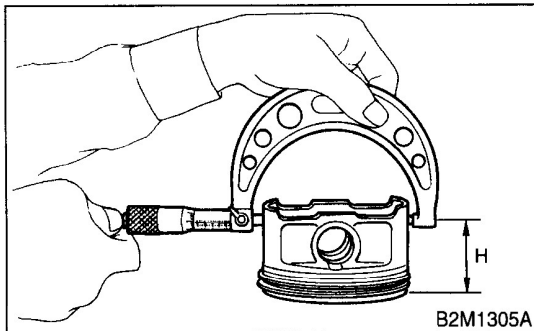

5) Calculate the clearance between cylinder and piston.

CAUTION:

Measurement should be performed at a temperature of 20°C (68°F).

Cylinder to piston clearance at 20°C (68°F):

Standard

0.010 — 0.030 mm (0.0004 — 0.0012 in)

Limit

0.050 mm (0.0020 in)

6) Boring and honing:

(1) If the value of taper, out-of-roundness, or cylinder-to-piston clearance measured exceeds the specified limit or if there is any damage on the cylinder wall, rebores it to use an oversize piston.

CAUTION:

When any of the cylinders needs reboring, all other cylinders must be bored at the same time, and use oversize pistons. Do not perform boring on one cylinder only, nor use an oversize piston for one cylinder only.

(2) If the cylinder inner diameter exceeds the limit after boring and honing, replace the crankcase.

CAUTION:

Immediately after reboring, the cylinder diameter may differ from its real diameter due to temperature rise. Thus, pay attention to this when measuring the cylinder diameter.

Limit of cylinder enlarging (boring):

0.5 mm (0.020 in)

CYLINDER BLOCK

MECHANICAL

3. PISTON AND PISTON PIN

1) Check the pistons and piston pins for damage, cracks, and wear and the piston ring grooves for wear and damage. Replace if defective.

2) Measure the piston-to-cylinder clearance at each cylinder. <Ref. to ME(DOHC TURBO)-84, CYLINDER AND PISTON, INSPECTION, Cylinder Block.> If any of the clearances is not within specification, replace the piston or bore the cylinder to use an oversize piston.

3) Make sure that the piston pin can be inserted into the piston pin hole with a thumb at 20°C (68°F). Replace if defective.



Standard clearance between piston pin and hole in piston:

Standard


0.004 — 0.008 mm (0.0002 — 0.0003 in)

Limit

0.020 mm (0.0008 in)

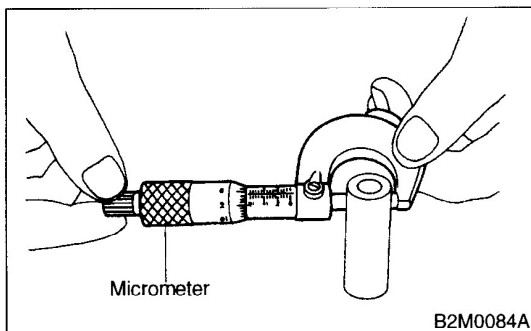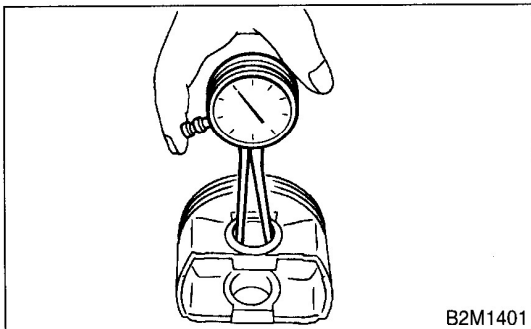

4) Check the circlip installation groove on the piston for burr (A). If necessary, remove burr from the groove so that the piston pin can lightly move.

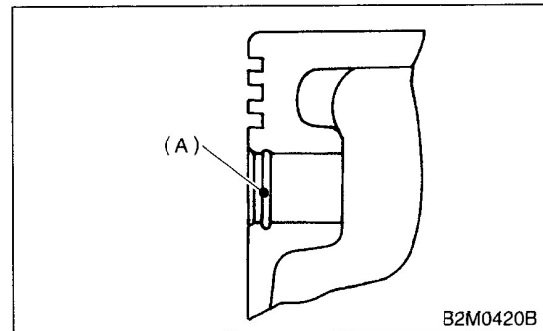


5) Check the piston pin circlip for distortion, cracks and wear.

4. PISTON RING


1) If the piston ring is broken, damaged, or worn, or if its tension is insufficient, or when the piston is replaced, replace the piston ring with a new one of the same size as the piston.

CAUTION:

• "N" is marked on the end of the top and second rings. When installing the rings to the piston, face this mark upward.

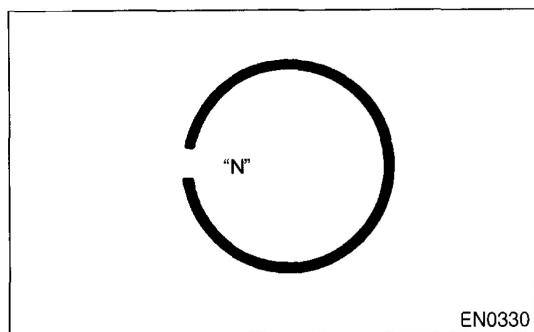


• The oil ring is a combined ring consisting of two rails and a spacer in between. When installing, be careful to assemble correctly.

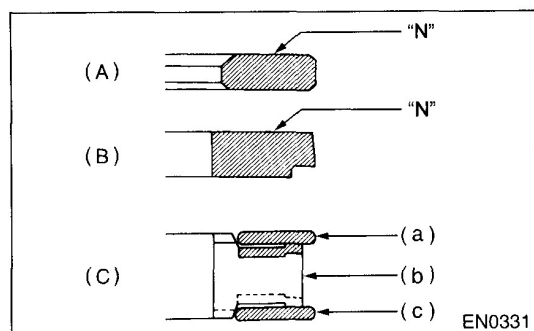

- (A) Top ring
- (B) Second ring
- (C) Oil ring
- (a) Upper rail
- (b) Spacer
- (c) Lower rail

2) Squarely place the piston ring and oil ring in cylinder, and measure the piston ring gap with a thickness gauge.

		Unit: mm (in)	
		Standard	Limit
Piston ring gap	Top ring	0.20 — 0.35 (0.0079 — 0.0138)	1.0 (0.039)
	Second ring	0.35 — 0.50 (0.0138 — 0.0197)	1.0 (0.039)
	Oil ring rail	0.20 — 0.70 (0.0079 — 0.0276)	1.5 (0.059)

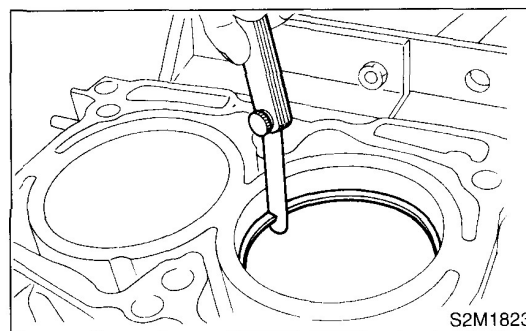


3) Measure the clearance between piston ring and piston ring groove with a thickness gauge.

CAUTION:

Before measuring the clearance, clean the piston ring groove and piston ring.

		Unit: mm (in)	
		Standard	Limit
Clearance between piston ring and piston ring groove	Top ring	0.040 — 0.080 (0.0016 — 0.0031)	0.15 (0.0059)
	Second ring	0.030 — 0.070 (0.0012 — 0.0028)	0.15 (0.0059)

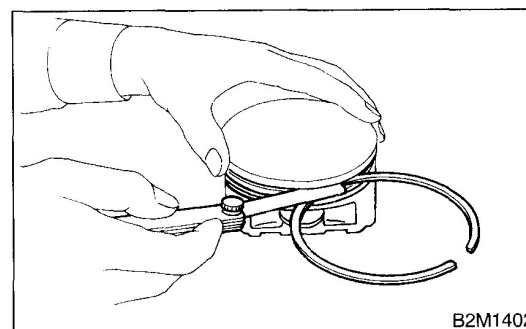

CYLINDER BLOCK


MECHANICAL

5. CONNECTING ROD

- 1) Replace the connecting rod, if the large or small end thrust surface is damaged.
- 2) Check for bend or twist using a connecting rod aligner. Replace the connecting rod if the bend or twist exceeds the limit.

Limit of bend or twist per 100 mm (3.94 in) in length:

0.10 mm (0.0039 in)

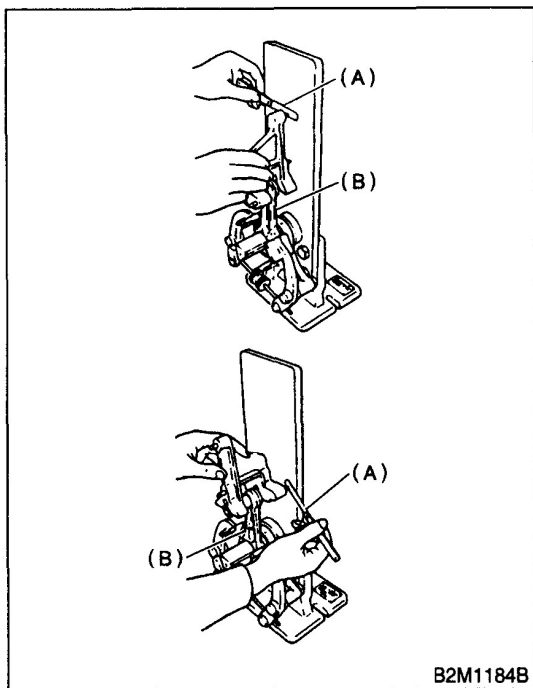

- (A) Thickness gauge
(B) Connecting rod

- 3) Install the connecting rod fitted with bearing to crankshaft and measure the side clearance (thrust clearance). Replace the connecting rod if the side clearance exceeds the specified limit.


Connecting rod side clearance:

Standard

0.070 — 0.330 mm (0.0028 — 0.0130 in)

Limit

0.4 mm (0.016 in)

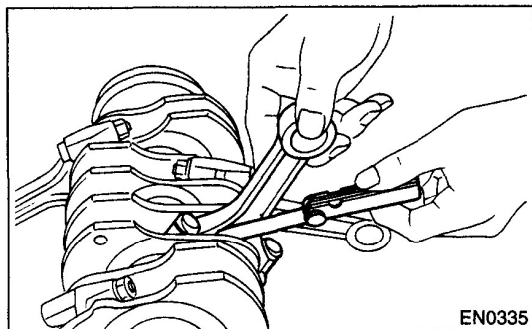

- 4) Inspect the connecting rod bearing for scar, peeling, seizure, melting, wear, etc.

- 5) Measure the oil clearance on individual connecting rod bearings by means of plastigauge. If any oil clearance is not within specification, replace the defective bearing with a new one of standard size or undersize as necessary. (See the table below.)

Connecting rod oil clearance:

Standard

0.020 — 0.046 mm (0.0008 — 0.0018 in)

Limit

0.05 mm (0.0020 in)

Unit: mm (in)		
Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.492 — 1.501 (0.0587 — 0.0591)	47.984 — 48.000 (1.8891 — 1.8898)
0.03 (0.0012) undersize	1.510 — 1.513 (0.0594 — 0.0596)	47.954 — 47.970 (1.8879 — 1.8886)
0.05 (0.0020) undersize	1.520 — 1.523 (0.0598 — 0.0600)	47.934 — 47.950 (1.8872 — 1.8878)
0.25 (0.0098) undersize	1.620 — 1.623 (0.0638 — 0.0639)	47.734 — 47.750 (1.8793 — 1.8799)

ME(DOHC TURBO)-88

GETtheMANUALS.org

6) Inspect the bushing at connecting rod small end, and replace if worn or damaged. Also measure the piston pin clearance at the connecting rod small end.



Clearance between piston pin and bushing:

Standard

0 — 0.022 mm (0 — 0.0009 in)

Limit


0.030 mm (0.0012 in)

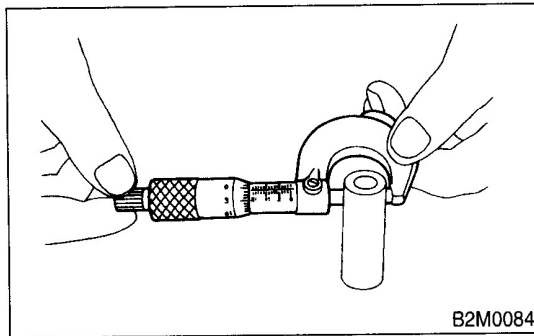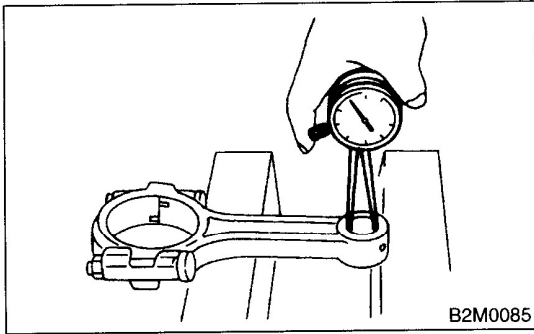

7) Replacement procedure is as follows:

- (1) Remove the bushing from connecting rod with ST and press.
- (2) Press the bushing with ST after applying oil on the periphery of bushing.

ST 499037100 CONNECTING ROD BUSHING REMOVER AND INSTALLER

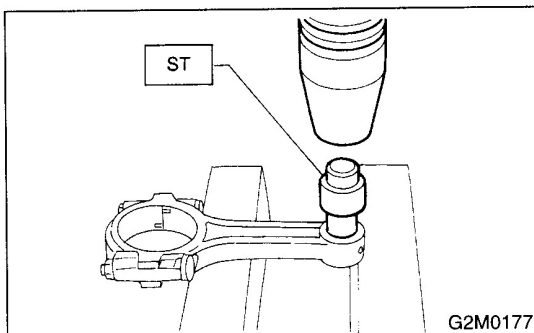

(3) Make two 3 mm (0.12 in) holes in bushing. Ream the inside of bushing.

(4) After completion of reaming, clean the bushing to remove chips.

6. CRANKSHAFT AND CRANKSHAFT BEARING

1) Clean the crankshaft completely and check for cracks by means of red lead check etc., and replace if defective.


2) Measure the crankshaft bend, and correct or replace if it exceeds the limit.

CAUTION:

If a suitable V-block is not available, install #1 and #5 crankshaft bearing on cylinder block, position crankshaft on these bearings and measure the crankshaft bend using a dial gauge.

Crankshaft bend limit:

0.035 mm (0.0014 in)

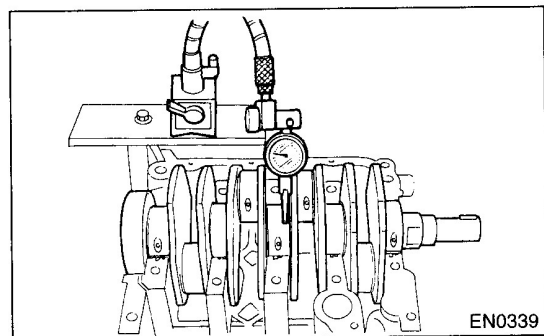

3) Inspect the crank journal and crank pin for wear. If they are not within the specifications, replace the bearing with a suitable (undersize) one, and replace or recondition crankshaft as necessary. When grinding the crank journal or crank pin, finish them to the specified dimensions according to the undersize bearing to be used.

Crank pin and crank journal:

Out-of-roundness


0.020 mm (0.0008 in) or less

Taper limit

0.07 mm (0.0028 in)

Grinding limit

0.250 mm (0.0098 in)

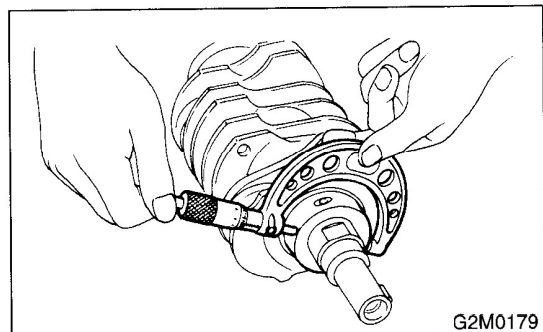

CYLINDER BLOCK

MECHANICAL

		Unit: mm (in)		
		Crank journal diameter		Crank pin diameter
		#1, #3, #5	#2, #4	
Standard	Journal O.D.	59.992 — 60.008 (2.3619 — 2.3625)	59.992 — 60.008 (2.3619 — 2.3625)	47.984 — 48.000 (1.8891 — 1.8898)
	Bearing size (Thickness at center)	1.998 — 2.011 (0.0787 — 0.0792)	2.000 — 2.013 (0.0787 — 0.0793)	1.492 — 1.510 (0.0587 — 0.0591)
0.03 (0.0012) undersize	Journal O.D.	59.962 — 59.978 (2.3607 — 2.3613)	59.962 — 59.978 (2.3607 — 2.3613)	47.954 — 47.970 (1.8879 — 1.8886)
	Bearing size (Thickness at center)	2.017 — 2.020 (0.0794 — 0.0795)	2.019 — 2.022 (0.0795 — 0.0796)	1.510 — 1.513 (0.0594 — 0.0596)
0.05 (0.0020) undersize	Journal O.D.	59.942 — 59.958 (2.3599 — 2.3605)	59.942 — 59.958 (2.3599 — 2.3605)	47.934 — 47.950 (1.8872 — 1.8878)
	Bearing size (Thickness at center)	2.027 — 2.030 (0.0798 — 0.0799)	2.029 — 2.032 (0.0799 — 0.0800)	1.520 — 1.523 (0.0598 — 0.0600)
0.25 (0.0098) undersize	Journal O.D.	59.742 — 59.758 (2.3520 — 2.3527)	59.742 — 59.758 (2.3520 — 2.3527)	47.734 — 47.750 (1.8793 — 1.8799)
	Bearing size (Thickness at center)	2.127 — 2.130 (0.0837 — 0.0839)	2.129 — 2.132 (0.0838 — 0.0839)	1.620 — 1.623 (0.0638 — 0.0639)

O.D.: Outer Diameter

4) Measure the thrust clearance of crankshaft at center bearing. If the clearance exceeds the limit, replace the bearing.


Crankshaft thrust clearance:

Standard

0.030 — 0.115 mm (0.0012 — 0.0045 in)

Limit

0.25 mm (0.0098 in)

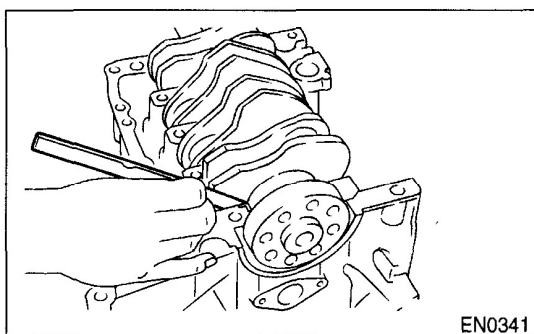

EN0341

5) Inspect individual crankshaft bearings for signs of flaking, seizure, melting, and wear.

6) Measure the oil clearance on each crankshaft bearing by means of plastigauge. If the measurement is not within the specification, replace the defective bearing with an undersize one, and replace or recondition the crankshaft as necessary.

Unit: mm (in)	
Crankshaft oil clearance	
Standard	0.010 — 0.030 (0.0004 — 0.0012)
Limit	0.040 (0.0016)

21.Engine Trouble in General

A: INSPECTION

NOTE:

"RANK" shown in the chart refers to the possibility of reason for the trouble in order ("Very often" to "Rarely")

A — Very often

B — Sometimes

C — Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
1. Engine will not start.			
1) Starter does not turn.	• Starter	• Defective battery-to-starter harness	B
		• Defective starter switch	C
		• Defective inhibitor switch or neutral switch	C
		• Defective starter	B
	• Battery	• Poor terminal connection	A
		• Run-down battery	A
		• Defective charging system	B
	• Friction	• Seizure of crankshaft and connecting rod bearing	C
		• Seized camshaft	C
		• Seized or stuck piston and cylinder	C
2) Initial combustion does not occur.	• Starter	• Defective starter	C
	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Fuel line	• Defective fuel pump and relay	A
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B
3) Initial combustion occur.	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
	• Fuel line	• Defective fuel pump and relay	C
		• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
4) Engine stalls after initial combustion.	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	B
		• Loosened or cracked PCV hose	C
		• Loosened or cracked vacuum hose	C
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Dirty air cleaner element	C
	• Fuel line	• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective	B
		• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	B
		• Improper engine oil (low viscosity)	B
2. Rough idle and engine stall	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	A
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	C
		• Loosened oil filler cap	B
		• Dirty air cleaner element	C
	• Fuel line	• Defective fuel pump and relay	C
		• Clogged fuel line	C
		• Lack of or insufficient fuel	B
	• Belt	• Defective timing	C
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	B
		• Loosened cylinder head bolts or defective gasket	B
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	B
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Lubrication system	• Incorrect oil pressure	B
		• Defective rocker cover gasket	C
	• Cooling system	• Overheating	C
	• Others	• Malfunction of evaporative emission control system	A
		• Stuck or damaged throttle valve	B
		• Accelerator cable out of adjustment	C

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and poor acceleration	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	B
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	B
		• Loosened oil filler cap	B
		• Dirty air cleaner element	A
	• Fuel line	• Defective fuel pump and relay	B
		• Clogged fuel line	B
		• Lack of or insufficient fuel	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	B
		• Loosened cylinder head bolts or defective gasket	B
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	B
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Lubrication system	• Incorrect oil pressure	B
	• Cooling system	• Overheating	C
		• Over cooling	C
	• Others	• Malfunction of evaporative emission control system	A
4. Surging	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	A
		• Loosened or cracked PCV hose	A
		• Loosened or cracked vacuum hose	A
		• Defective intake manifold gasket	B
		• Defective throttle body gasket	B
		• Defective PCV valve	B
		• Loosened oil filler cap	B
		• Dirty air cleaner element	B
	• Fuel line	• Defective fuel pump and relay	B
		• Clogged fuel line	B
		• Lack of or insufficient fuel	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	C
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
		• Improper engine oil (low viscosity)	B
	• Cooling system	• Overheating	B
	• Others	• Malfunction of evaporative emission control system	C

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to idle.	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked vacuum hose	A
	• Others	• Stuck or damaged throttle valve	A
		• Accelerator cable out of adjustment	B
6. Dieseling (Run-on)	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Cooling system	• Overheating	B
	• Others	• Malfunction of evaporative emission control system	B
7. After burning in exhaust system	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened or cracked intake duct	C
		• Loosened or cracked PCV hose	C
		• Loosened or cracked vacuum hose	B
		• Defective PCV valve	B
		• Loosened oil filler cap	C
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	C
		• Incorrect valve timing	A
	• Lubrication system	• Incorrect oil pressure	C
	• Cooling system	• Over cooling	C
	• Others	• Malfunction of evaporative emission control system	C
8. Knocking	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Loosened oil filler cap	B
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	C
		• Incorrect valve timing	B
	• Cooling system	• Overheating	A
9. Excessive engine oil consumption	• Intake system	• Loosened or cracked PCV hose	A
		• Defective PCV valve	B
		• Loosened oil filler cap	C
	• Compression	• Defective valve stem	A
		• Worn or stuck piston rings, cylinder and piston	A
	• Lubrication system	• Loosened oil pump attaching bolts and defective gasket	B
		• Defective oil filter o-ring	B
		• Defective crankshaft oil seal	B
		• Defective rocker cover gasket	B
		• Loosened oil drain plug or defective gasket	B
		• Loosened oil pan fitting bolts or defective oil pan	B

ENGINE TROUBLE IN GENERAL

MECHANICAL

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consumption	• Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	• Intake system	• Dirty air cleaner element	A
	• Belt	• Defective timing	B
	• Compression	• Incorrect valve clearance	B
		• Loosened spark plugs or defective gasket	C
		• Loosened cylinder head bolts or defective gasket	C
		• Improper valve seating	B
		• Defective valve stem	C
		• Worn or broken valve spring	C
		• Worn or stuck piston rings, cylinder and piston	B
		• Incorrect valve timing	B
	• Lubrication system	• Incorrect oil pressure	C
	• Cooling system	• Over cooling	C
	• Others	• Accelerator cable out of adjustment	B

ENGINE NOISE

MECHANICAL

22.Engine Noise

A: INSPECTION

Type of sound	Condition	Possible cause
Regular clicking sound	Sound increases as engine speed increases.	- Valve mechanism is defective. - Incorrect valve clearance - Worn valve rocker - Worn camshaft - Broken valve spring
Heavy and dull clank	Oil pressure is low.	- Worn crankshaft main bearing - Worn connecting rod bearing (big end)
	Oil pressure is normal.	- Loose flywheel mounting bolts - Damaged engine mounting
High-pitched clank (Spark knock)	Sound is noticeable when accelerating with an overload.	- Ignition timing advanced - Accumulation of carbon inside combustion chamber - Wrong spark plug - Improper gasoline
Clank when engine speed is medium (1,000 to 2,000 rpm).	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	- Worn crankshaft main bearing - Worn bearing at crankshaft end of connecting rod
Knocking sound when engine is operating under idling speed and engine is warm	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	- Worn cylinder liner and piston ring - Broken or stuck piston ring - Worn piston pin and hole at piston end of connecting rod
	Sound is not reduced if each fuel injector connector is disconnected in turn. (NOTE*)	- Unusually worn valve lifter - Worn cam gear - Worn camshaft journal bore in crankcase
Squeaky sound	—	Insufficient generator lubrication
Rubbing sound	—	Defective generator brush and rotor contact
Gear scream when starting engine	—	- Defective ignition starter switch - Worn gear and starter pinion
Sound like polishing glass with a dry cloth	—	- Loose drive belt - Defective water pump shaft
Hissing sound	—	- Loss of compression - Air leakage in air intake system, hoses, connections or manifolds
Timing belt noise	—	- Loose timing belt - Belt contacting case/adjacent part
Valve tappet noise	—	Incorrect valve clearance

NOTE*:

When disconnecting the fuel injector connector, Malfunction Indicator Light (CHECK ENGINE light) illuminates and trouble code is stored in ECM memory.

Therefore, carry out the CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-49, OPERATION, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(DOHC TURBO)-46, OPERATION, Inspection Mode.> after connecting the fuel injector connector.