

Lexus LX450 (J80; 1996-1997) fuses

*In this article, we consider the first-generation Lexus LX (J80), produced from 1995 to 1997. Here you will find fuse box diagrams of **Lexus LX 450 1996 and 1997**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Lexus LX:

Fuse Layout Lexus LX 450 1996-1997



Cigar lighter (power outlet) fuse in the Lexus LX450 is the fuse #1 "CIG" in the Instrument panel fuse box.

Passenger Compartment Fuse Box

Fuse box location

The fuse box is located behind the cover on the driver's side of the instrument panel.



Fuse box diagram



Assignment of the fuses in the passenger compartment

Nº	Name	Ampere Rating	Description
1	CIG	15	Cigarette lighter; Power rear view mirrors; Digital clock display;

No	Name	Ampere Rating	Description
			Radio; Cassette tape player; Power antenna; Automatic transmission shift lock system; SRS airbag system
2	TAIL	15	Tail lights; License plate lights; Parking and front side marker lights; Instrument panel lights; Clock; Glovebox light
3	OBD	15	On-board diagnosis system
4	STOP	10	Stop lights; Multiport fuel injection system/sequential multiport fuel injection system; Cruise control cancel device; Automatic transmission shift lock system
5	DEFOG	20	Rear window defogger
6	WIPER	20	Windshield wipers and washer; Rear window wiper and washer
7	GAUGE	10	Gauges and meters; Service reminder indicators and warning buzzers (except discharge and open door warning lights); Back-up lights
8	TURN	7.5	Turn signal lights
9	ECU-IG	10	Cruise control system
10	ECU-B	10	SRS airbag system
11	REAR-HTR	20	Air conditioning system

No	Name	Ampere Rating	Description
12	IGN	7.5	Multiport fuel injection system/sequential multiport fuel injection system; Emission control system; SRS airbag system
13	A.C.	10	Air conditioning system
14	DIFF	30	Differential lock system
25	FL HEATER	40	Air conditioning system
26	FL POWER	30	Power windows; Power door lock system; Electric moon roof

Advertisements


Engine Compartment Fuse Box

Fuse box location

It is located near the battery.



Fuse box diagram

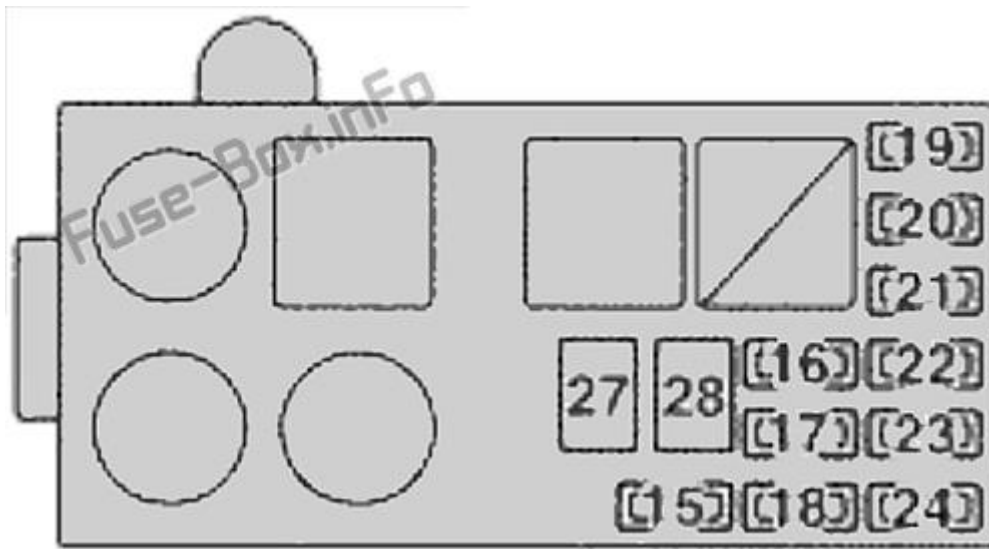

Assignment of the fuses in the engine compartment

No	Name	Ampere Rating	Description
15	EFI	15	Canada: Multiport fuel injection system/sequential multiport fuel injection system
16	CHARGE	7.5	U.S.A.: Charging system; Discharge warning light
16	DRL	7.5	Canada: Daytime Running Light System
17	EFI	15	U.S.A.: Multiport fuel injection system/sequential multiport fuel injection system
17	RADIO	20	Canada: Audio system
18	CDS-FAN	20	U.S.A.: Not Used
18	TEL	15	Canada: Telephone

№	Name	Ampere Rating	Description
19	HEAD (RH)	15	U.S.A.: Right-hand headlights
19	HEAD (RH-UPR)	15	Canada: Right-hand headlights (High beam)
20	HEAD (LH)	15	U.S.A.: Left-hand headlights
20	HEAD (LH-UPR)	15	Canada: Left-hand headlights (High beam)
21	RADIO	20	U.S.A.: Audio system
21	HEAD (RH-UWR)	15	Canada: Right-hand headlights (Low beam)
22	TEL	15	U.S.A.: Telephone
22	HEAD (LH-UWR)	15	Canada: Left-hand headlights (Low beam)
23	HAZ-HORN	15	Emergency flashers; Horns
24	DOME	10	Interior lights; Personal light; Luggage compartment light; Ignition switch light; Open door warning light; Clock; Radio; Cassette tape player; Power antenna; Vanity lights
27	AM 1	50	All components in "CIG", "WIPER", "GAUGE", "TURN", "EGU-IG", "REAR-HTR", "IGN", "DIFF" and "FL POWER" circuits

No	Name	Ampere Rating	Description
28	ABS	60	Anti-lock brake system