

Dodge Journey 2018 fuse box diagram

Power outlet fuses



Dodge Journey – fuse box – power outlet

fuses

Cavity		Ampere rating [A]	Description
1	F103	20	Power Outlet Console Bin & Power Outlet Console Rear
2	F102	20	Cigar Lighter Instrument Panel & Power Outlet Left Rear Cargo Area

Interior Fuses

The interior fuse panel is located on the passenger side under the instrument panel.

Cavity	Cartridge fuse	Mini fuse	Description
F100	30		110V AC Inverter – If Equipped
F101		10	Interior Lights
F102		20	Cigar Lighter in Instrument Panel/Left Rear Power Outlet
F103		20	Power Outlet in Console Bin/Power Outlet in Rear of Console

F105		20	Heated Seats – If Equipped
F106		20	Rear Power Outlet
F107		10	Rear Camera – If Equipped
F108		15	Instrument Panel
F109		10	Climate Control/HVAC
F110		10	Occupant Restraint Controller
F112		10	Spare
F114		20	Rear HVAC Blower/Motor
F115		20	Rear Wiper Motor
F116	30		Rear Defroster (EBL)
F117		10	Heated Mirrors
F118		10	Occupant Restraint Controller
F119		10	Steering Column Control Module
F120		10	All Wheel Drive – If Equipped
F121		15	Wireless Ignition Node

F122		25	Driver Door Module
F123		25	Passenger Door Module
F124		10	Mirrors
F125		10	Steering Column Control Module
F126		10	Audio Amplifier
F127		20	Trailer Tow – If Equipped
F128		15	Radio
F129		15	Video/DVD – If Equipped
F130		15	Climate Control/Instrument Panel
F131		10	Passenger Assistance/Hands Free System – If Equipped
F132		10	Tire Pressure Module
F133		10	Cyber Security Gateway

Underhood Fuses (Power Distribution Center)

The power distribution center is located in the engine compartment.

Cavity	Cartridge fuse	Mini fuse	Description
--------	----------------	-----------	-------------

F101	60		Interior Power Distribution Center Rail
F102	60		Interior Power Distribution Center Rail
F103	60		Interior Power Distribution Center Rail
F105	60		Interior Power Distribution Center Rail Ignition Run Relay
F106	60		Interior Power Distribution Center Rail Run/Accessory Relays
F139	40		Climate Control System Blower
F140	30		Power Locks
F141	40		Anti-Lock Brake System
F142	40		Glow Plugs – If Equipped
F143	40		Exterior Lights 1
F144	40		Exterior Lights 2
F145	30		To Body Computer – Lamp
F146	30		Spare
F147	30		Spare
F148	40		Radiator Fan Motor

F149	30		Starter Solenoid
F150		25	Powertrain Control Modules
F151	30		Headlamp Washer Motor – If Equipped
F152		25	Diesel Fuel Heater – If Equipped
F153		20	Fuel Pump
F156		10	Brake/Electronic Stability Control Module
F157		10	Power Transfer Unit Module – If Equipped
F158		10	Active Hood Module – If Equipped
F159		10	Spare
F160		20	Interior Lights
F161		20	Horn
F162	40		Cabin Heater #1/Vacuum Pump – If Equipped
F163	50		Cabin Heater #2 – If Equipped
F164		25	Powertrain Auto Shutdown
F165		20	Powertrain Shutdown

F166		20	Spare
F167		30	Powertrain Shutdown
F168		10	Air Conditioner Clutch
F169	40		Emissions – Partial Zero Emissions Vehicle Motor
F170		15	Emissions – Partial Zero Emissions Vehicle Actuators
F172		20	Spare
F173		25	Anti Lock Brake Valves
F174		20	Siren – If Equipped
F175		30	Spare
F176		10	Powertrain Control Modules
F177		20	All Wheel Drive Module – If Equipped
F178		25	Sunroof – If Equipped
F179		10	Battery Sensor
F181	100		Electrohydraulic Steering (EHPS) – If Equipped
F182	50		Cabin Heater #3 – If Equipped

F184	30		Front Wiper Motor
------	----	--	-------------------