

**2008 Scion xD**

2008 SCION xD

**2008 SCION**

xD

**BUZZERS, RELAYS & TIMERS****BUZZERS, RELAYS & TIMERS LOCATION**

| Component                 | Location                                                            |
|---------------------------|---------------------------------------------------------------------|
| FLASH Relay               | In instrument panel J/B. See <a href="#">Fig. 7.</a>                |
| H-LP/AMT Relay            | In engine room R/B No. 2. See <a href="#">Fig. 6.</a>               |
| HTR Relay                 | In instrument panel J/B. See <a href="#">Fig. 7.</a>                |
| HTR SUB2 Relay            | In engine room R/B No. 2. See <a href="#">Fig. 6.</a>               |
| HTR SUB3 Relay            | In engine room R/B No. 2. See <a href="#">Fig. 6.</a>               |
| IG 1 Relay                | In instrument panel J/B. See <a href="#">Fig. 7.</a>                |
| No. 2 ACC Relay           | On fuse block. See <a href="#">Fig. 2.</a>                          |
| Wireless Door Lock Buzzer | Left rear corner of engine compartment. See <a href="#">Fig. 9.</a> |

**CIRCUIT PROTECTION DEVICES****CIRCUIT PROTECTION DEVICES LOCATION**

| Component             | Location                                                      |
|-----------------------|---------------------------------------------------------------|
| Engine Room J/B       | Left side of engine compartment. See <a href="#">Fig. 1.</a>  |
| Engine Room R/B       | Left side of engine compartment. See <a href="#">Fig. 1.</a>  |
| Engine Room R/B No. 2 | Right side of engine compartment. See <a href="#">Fig. 1.</a> |
| Fuse Block            | Behind left end of dash. See <a href="#">Fig. 2.</a>          |
| Fusible Link Block    | Left rear of engine compartment. See <a href="#">Fig. 1.</a>  |
| Instrument Panel J/B  | Behind left end of dash. See <a href="#">Fig. 2.</a>          |
| J/B No. 5             | Behind left kick panel. See <a href="#">Fig. 2.</a>           |
| J/B No. 6             | Behind right kick panel. See <a href="#">Fig. 2.</a>          |

**CONTROL UNITS****CONTROL UNITS LOCATION**

| Component                           | Location                                                      |
|-------------------------------------|---------------------------------------------------------------|
| ECM (Engine Control Module)         | Right rear of engine compartment. See <a href="#">Fig. 1.</a> |
| Generator Regulator Assembly        | Lower left front of engine. See <a href="#">Fig. 8.</a>       |
| Main Body ECU                       | On fuse block. See <a href="#">Fig. 2.</a>                    |
| Occupant Detection ECU              | Under front passenger's seat. See <a href="#">Fig. 4.</a>     |
| Power Steering ECU                  | Behind left side of dash. See <a href="#">Fig. 2.</a>         |
| Shift Lock Control ECU Sub-Assembly | Under center console. See <a href="#">Fig. 2.</a>             |
| Skid Control ECU                    | Left side of engine compartment. See <a href="#">Fig. 1.</a>  |

Microsoft

Monday, June 07, 2010 11:14:19 AM

Page 1

© 2006 Mitchell Repair Information Company, LLC.

**2008 Scion xD**

2008 SCION xD

Tire Pressure Warning ECU

Behind right side of dash. See [Fig. 2.](#)**MOTORS****MOTORS LOCATION**

| Component                                       | Location                                                       |
|-------------------------------------------------|----------------------------------------------------------------|
| Back Door Lock Assembly                         | Bottom center of back door. See <a href="#">Fig. 13.</a>       |
| Canister Pump Module                            | Under left rear of vehicle. See <a href="#">Fig. 12.</a>       |
| Cooling Fan Motor                               | Behind radiator. See <a href="#">Fig. 9.</a>                   |
| Door Lock Motor (Left/Right Front)              | Rear of respective front door. See <a href="#">Fig. 13.</a>    |
| Door Lock Motor (Left/Right Rear)               | Rear of respective rear door. See <a href="#">Fig. 13.</a>     |
| Front Blower Motor W/Fan Motor Assembly         | Lower right side of dash. See <a href="#">Fig. 11.</a>         |
| Front Washer Motor & Pump Assembly              | Right front of engine compartment. See <a href="#">Fig. 9.</a> |
| Outer Rear View Mirror Assembly (Left/Right)    | At mirror. See <a href="#">Fig. 13.</a>                        |
| Power Steering Motor                            | Behind left side of dash. See <a href="#">Fig. 11.</a>         |
| Power Window Regulator Motor (Left/Right Front) | In respective front door. See <a href="#">Fig. 13.</a>         |
| Power Window Regulator Motor (Left/Right Rear)  | In respective rear door. See <a href="#">Fig. 13.</a>          |
| Rear Washer Motor & Pump Assembly               | Right front of engine compartment. See <a href="#">Fig. 9.</a> |
| Rear Wiper Motor                                | Center of back door. See <a href="#">Fig. 13.</a>              |
| Starter Assembly                                | Lower left rear of engine. See <a href="#">Fig. 8.</a>         |
| Throttle Body Assembly                          | Left rear of engine. See <a href="#">Fig. 8.</a>               |
| Windshield Washer Motor & Pump Assembly         | Right front of engine compartment. See <a href="#">Fig. 9.</a> |
| Windshield Wiper Motor                          | Left side of firewall. See <a href="#">Fig. 9.</a>             |

**SENDING UNITS & SENSORS****SENDING UNITS & SENSORS LOCATION**

| Component                                      | Location                                                       |
|------------------------------------------------|----------------------------------------------------------------|
| Accelerator Pedal Assembly                     | At accelerator pedal. See <a href="#">Fig. 11.</a>             |
| A/C Pressure Sensor (Liquid Tube Sub-Assembly) | Front of engine. See <a href="#">Fig. 9.</a>                   |
| Airbag Sensor (Left Front)                     | Left front of engine compartment. See <a href="#">Fig. 9.</a>  |
| Airbag Sensor (Right Front)                    | Right front of engine compartment. See <a href="#">Fig. 9.</a> |
| Air Fuel Ratio Sensor (Bank 1 Sensor 1)        | Right side of engine. See <a href="#">Fig. 8.</a>              |
| Ambient Air Temperature Sensor                 | Behind center of dash. See <a href="#">Fig. 11.</a>            |
| Camshaft Position Sensor                       | Front of cylinder head. See <a href="#">Fig. 8.</a>            |
| Center Airbag Sensor                           | Under front of center console. See <a href="#">Fig. 2.</a>     |
| Deceleration Sensor                            | Under center console. See <a href="#">Fig. 10.</a>             |
| E.F.I. Engine Coolant Temperature Sensor       | Rear of engine. See <a href="#">Fig. 8.</a>                    |
| Fuel Gauge Sender                              | In fuel tank. See <a href="#">Fig. 12.</a>                     |
| Knock Control Sensor (Bank 1)                  | Left side of engine. See <a href="#">Fig. 8.</a>               |
| Mass Air Flow Meter                            | Rear of engine. See <a href="#">Fig. 8.</a>                    |

Microsoft

Monday, June 07, 2010 11:14:10 AM

Page 2

© 2006 Mitchell Repair Information Company, LLC.

**2008 Scion xD**

2008 SCION xD

|                                              |                                                                            |
|----------------------------------------------|----------------------------------------------------------------------------|
| Occupant Detection Sensor (Left/Right Front) | Under front passenger's seat. See <a href="#">Fig. 14.</a>                 |
| Occupant Detection Sensor (Left/Right Rear)  | Under front passenger's seat. See <a href="#">Fig. 14.</a>                 |
| Oxygen Sensor (Bank 1 Sensor 2)              | On exhaust system, after catalytic converter. See <a href="#">Fig. 10.</a> |
| Power Steering Torque Sensor                 | Behind left side of dash. See <a href="#">Fig. 11.</a>                     |
| Side Airbag Sensor (Left Front)              | Base of left "B" pillar. See <a href="#">Fig. 12.</a>                      |
| Side Airbag Sensor (Left Rear)               | Left "C" pillar. See <a href="#">Fig. 12.</a>                              |
| Side Airbag Sensor (Right Front)             | Base of right "B" pillar. See <a href="#">Fig. 12.</a>                     |
| Side Airbag Sensor (Right Rear)              | Right "C" pillar. See <a href="#">Fig. 12.</a>                             |
| Speed Sensor (Left/Right Front)              | At respective front wheel hub. See <a href="#">Fig. 9.</a>                 |
| Speed Sensor (Left/Right Rear)               | At respective rear wheel hub. See <a href="#">Fig. 13.</a>                 |
| Steering Sensor                              | On steering column. See <a href="#">Fig. 10.</a>                           |
| Transmission Revolution Sensor (Turbine)     | Left rear of transmission. See <a href="#">Fig. 8.</a>                     |
| VVT Sensor (Exhaust)                         | Right rear of engine. See <a href="#">Fig. 8.</a>                          |
| VVT Sensor (Intake)                          | Right rear of engine. See <a href="#">Fig. 8.</a>                          |
| Yaw Rate Sensor                              | Under center console. See <a href="#">Fig. 10.</a>                         |

**SOLENOIDS & SOLENOID VALVES****SOLENOIDS & SOLENOID VALVES LOCATION**

| <b>Component</b>                                | <b>Location</b>                                              |
|-------------------------------------------------|--------------------------------------------------------------|
| Camshaft Timing Oil Control Valve (Exhaust)     | Right front of engine. See <a href="#">Fig. 8.</a>           |
| Camshaft Timing Oil Control Valve (Intake)      | Right front of engine. See <a href="#">Fig. 8.</a>           |
| Electronically Controlled Transmission Solenoid | Left rear of transmission. See <a href="#">Fig. 8.</a>       |
| Fuel Injectors No. 1, 2, 3 & 4                  | Top of engine. See <a href="#">Fig. 8.</a>                   |
| Key Inter Lock Solenoid                         | In steering column. See <a href="#">Fig. 10.</a>             |
| Purge VSV                                       | Left rear of engine compartment. See <a href="#">Fig. 8.</a> |

**SWITCHES****SWITCHES LOCATION**

| <b>Component</b>                   | <b>Location</b>                                            |
|------------------------------------|------------------------------------------------------------|
| Back Up Light Switch Assembly      | Top of transmission. See <a href="#">Fig. 8.</a>           |
| Brake Fluid Level Warning Switch   | On brake fluid reservoir. See <a href="#">Fig. 9.</a>      |
| Clutch Start Switch                | On clutch pedal assembly. See <a href="#">Fig. 11.</a>     |
| Clutch Switch                      | Top of clutch pedal assembly. See <a href="#">Fig. 11.</a> |
| Door Courtesy Switch (Left Front)  | On left "B" pillar. See <a href="#">Fig. 12.</a>           |
| Door Courtesy Switch (Left Rear)   | On left "C" pillar. See <a href="#">Fig. 12.</a>           |
| Door Courtesy Switch (Right Front) | On right "B" pillar. See <a href="#">Fig. 12.</a>          |
| Door Courtesy Switch (Right Rear)  | On right "C" pillar. See <a href="#">Fig. 12.</a>          |
| Engine Oil Pressure Switch         | Front of cylinder head. See <a href="#">Fig. 8.</a>        |

Microsoft

Monday, June 07, 2010 11:14:10 AM

Page 3

© 2006 Mitchell Repair Information Company, LLC.

**2008 Scion xD**

2008 SCION xD

|                              |                                                              |
|------------------------------|--------------------------------------------------------------|
| Parking Brake Switch         | On base of park brake lever. See <a href="#">Fig. 10</a> .   |
| Park/Neutral Position Switch | Left rear of transmission. See <a href="#">Fig. 8</a> .      |
| Stop Light Switch            | On bracket, above brake pedal. See <a href="#">Fig. 11</a> . |

**MISCELLANEOUS****MISCELLANEOUS LOCATION**

| <b>Component</b>                         | <b>Location</b>                                                          |
|------------------------------------------|--------------------------------------------------------------------------|
| Air Conditioning Amplifier               | Behind center of dash. See <a href="#">Fig. 2</a> .                      |
| Antenna Amplifier                        | Behind right end of dash. See <a href="#">Fig. 10</a> .                  |
| Blower Resistor                          | Behind right side of dash. See <a href="#">Fig. 11</a> .                 |
| Cooler Compressor Assembly               | Right front of engine compartment. See <a href="#">Fig. 8</a> .          |
| Cooling Fan Resistor                     | Left front of engine compartment. See <a href="#">Fig. 9</a> .           |
| Curtain Shield Airbag Assembly (Left)    | In roof above left doors. See <a href="#">Fig. 12</a> .                  |
| Curtain Shield Airbag Assembly (Right)   | In roof above right doors. See <a href="#">Fig. 12</a> .                 |
| Diode (Rear Room Lamp)                   | Behind left quarterpanel. See <a href="#">Fig. 12</a> .                  |
| Diode (Starting)                         | Behind left end of dash. See <a href="#">Fig. 10</a> .                   |
| DLC3 (Data Link Connector)               | Lower left end of dash. See <a href="#">Fig. 10</a> .                    |
| Door Control Receiver                    | Left "C" pillar. See <a href="#">Fig. 3</a> .                            |
| Driver Side Squib 2nd Step Circuit       | In steering wheel. See <a href="#">Fig. 11</a> .                         |
| Front Pretensioner (Left)                | Near base of left "B" pillar. See <a href="#">Fig. 12</a> .              |
| Front Pretensioner (Right)               | Near base of right "B" pillar. See <a href="#">Fig. 12</a> .             |
| Horn (High Pitch)                        | Right front of engine compartment. See <a href="#">Fig. 9</a> .          |
| Horn (Low Pitch)                         | Left front of engine compartment. See <a href="#">Fig. 9</a> .           |
| Ignition Coil Assemblies No. 1, 2, 3 & 4 | On top of cylinder head cover. See <a href="#">Fig. 8</a> .              |
| Junction Connector A26                   | Left side of engine compartment. See <a href="#">Fig. 9</a> .            |
| Junction Connector A27                   | Left side of engine compartment. See <a href="#">Fig. 9</a> .            |
| Junction Connector B8                    | Left side of engine compartment. See <a href="#">Fig. 9</a> .            |
| Junction Connector F47                   | Behind right end of dash. See <a href="#">Fig. 10</a> .                  |
| Junction Connector G9                    | Behind center of dash. See <a href="#">Fig. 11</a> .                     |
| Junction Connector L30                   | In left "C" pillar. See <a href="#">Fig. 12</a> .                        |
| Junction Connector L31                   | In left "C" pillar. See <a href="#">Fig. 12</a> .                        |
| Junction Connectors F39, F40, F43 & F45  | Behind right side of dash. See <a href="#">Fig. 10</a> .                 |
| Junction Connectors F41 & F42            | Behind center of dash. See <a href="#">Fig. 10</a> .                     |
| Junction Connectors F45 & F46            | Behind left end of dash. See <a href="#">Fig. 10</a> .                   |
| Noise Filter (Ignition)                  | Right rear of engine. See <a href="#">Fig. 8</a> .                       |
| Noise Filter (Rear Window Defogger)      | In left "C" pillar. See <a href="#">Fig. 12</a> .                        |
| Side Airbag Squib Circuit (Left)         | Left side of driver's seat back. See <a href="#">Fig. 14</a> .           |
| Side Airbag Squib Circuit (Right)        | Right side of front passenger's seat back. See <a href="#">Fig. 14</a> . |
| Side Squib Circuit (Driver)              | In steering wheel. See <a href="#">Fig. 11</a> .                         |

Microsoft

Monday, June 07, 2010 11:14:10 AM

Page 4

© 2006 Mitchell Repair Information Company, LLC.

**2008 Scion xD**

2008 SCION xD

|                                          |                                                               |
|------------------------------------------|---------------------------------------------------------------|
| Side Squib Circuit (Front Passenger)     | Behind right end of dash. See <a href="#">Fig. 11.</a>        |
| Spiral Cable Sub-Assembly                | In steering column. See <a href="#">Fig. 10.</a>              |
| Thermistor Assembly                      | Behind left side of front bumper. See <a href="#">Fig. 9.</a> |
| Tire Pressure Warning Antenna & Receiver | Left "C" pillar. See <a href="#">Fig. 3.</a>                  |

**CONNECTORS****CONNECTORS LOCATION**

| Component           | Location                                                      |
|---------------------|---------------------------------------------------------------|
| AA1 (White, 25 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AF1 (Yellow, 4 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AF2 (White, 10 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AF3 (Black, 22 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AF4 (Gray, 18 Pin)  | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AF5 (Blue, 17 Pin)  | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AG1 (White, 10 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| AL1 (White, 14 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| BA1 (White, 17 Pin) | Left side of engine compartment. See <a href="#">Fig. 15.</a> |
| CA1 (White, 15 Pin) | Left side of engine compartment. See <a href="#">Fig. 15.</a> |
| CA2 (White, 17 Pin) | Left side of engine compartment. See <a href="#">Fig. 15.</a> |
| CE1 (Gray, 2 Pin)   | Left side of engine. See <a href="#">Fig. 15.</a>             |
| FG1 (White, 18 Pin) | Behind center of dash. See <a href="#">Fig. 16.</a>           |
| Fz1 (Yellow, 4 Pin) | Behind right side of dash. See <a href="#">Fig. 16.</a>       |
| GF1 (White, 2 Pin)  | Behind left side of dash. See <a href="#">Fig. 16.</a>        |
| HL1 (White, 17 Pin) | In left "B" pillar. See <a href="#">Fig. 18.</a>              |
| IF1 (White, 20 Pin) | Behind right kick panel. See <a href="#">Fig. 16.</a>         |
| IF2 (White, 18 Pin) | Behind right kick panel. See <a href="#">Fig. 16.</a>         |
| JF1 (White, 20 Pin) | Behind left kick panel. See <a href="#">Fig. 16.</a>          |
| JF2 (White, 18 Pin) | Behind left kick panel. See <a href="#">Fig. 16.</a>          |
| KL1 (White, 17 Pin) | In right "B" pillar. See <a href="#">Fig. 18.</a>             |
| LF1 (White, 18 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| LF2 (White, 20 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| LF3 (White, 20 Pin) | Behind left end of dash. See <a href="#">Fig. 16.</a>         |
| Lz1 (Yellow, 2 Pin) | Under front passenger's seat. See <a href="#">Fig. 19.</a>    |
| Lz2 (Yellow, 2 Pin) | Under driver's seat. See <a href="#">Fig. 19.</a>             |
| NL1 (White, 17 Pin) | In left "C" pillar. See <a href="#">Fig. 18.</a>              |
| NO1 (White, 5 Pin)  | Left side of back door. See <a href="#">Fig. 18.</a>          |
| NO2 (White, 14 Pin) | Left side of back door. See <a href="#">Fig. 18.</a>          |
| zL1 (White, 2 Pin)  | In right "C" pillar. See <a href="#">Fig. 18.</a>             |
| zL2 (White, 2 Pin)  | In left "C" pillar. See <a href="#">Fig. 18.</a>              |

Microsoft

Monday, June 07, 2010 11:14:11 AM

Page 5

© 2006 Mitchell Repair Information Company, LLC.

|               |  |
|---------------|--|
| 2008 Scion xD |  |
| 2008 SCION xD |  |

**GROUND
S**

GROUND
S LOCATION

| Component | Location                                       |
|-----------|------------------------------------------------|
| A1        | Left side of engine compartment. See Fig. 15.  |
| A2        | Left side of engine compartment. See Fig. 15.  |
| A3        | Behind left end of dash. See Fig. 17.          |
| B1        | Left front of engine compartment. See Fig. 15. |
| C1        | Top center of engine. See Fig. 15.             |
| C2        | Top center of engine. See Fig. 15.             |
| F1        | Behind left kick panel. See Fig. 17.           |
| F2        | Behind right kick panel. See Fig. 17.          |
| F3        | Behind center of dash. See Fig. 17.            |
| L1        | In right "C" pillar. See Fig. 18.              |
| L2        | In left "C" pillar. See Fig. 18.               |
| O1        | In back door. See Fig. 18.                     |

COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

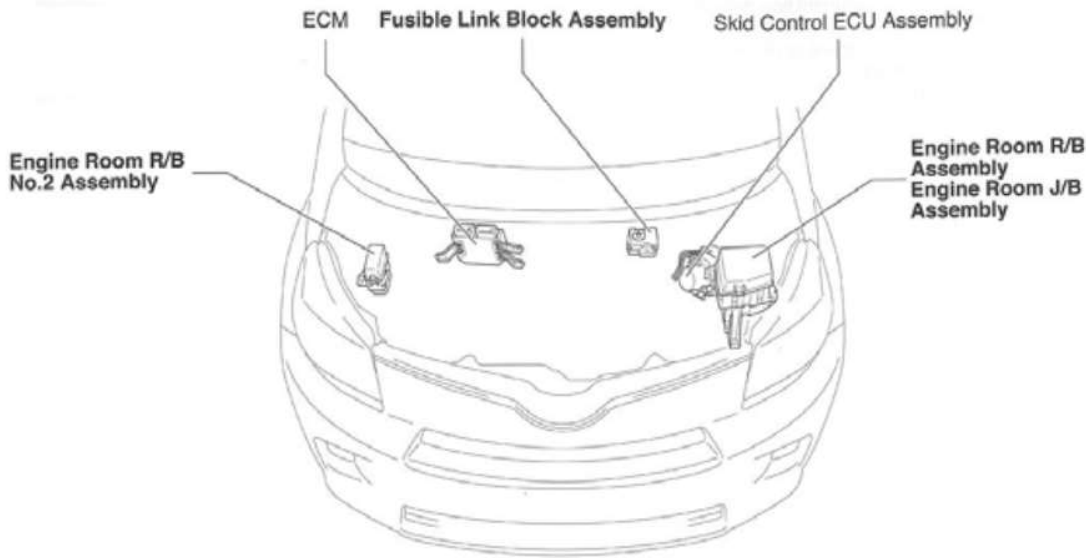


**Fig. 1: Engine Compartment**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

|                                   |        |                                                  |  |
|-----------------------------------|--------|--------------------------------------------------|--|
| Microsoft                         |        |                                                  |  |
| Monday, June 07, 2010 11:14:11 AM | Page 6 | © 2006 Mitchell Repair Information Company, LLC. |  |

2008 Scion xD

2008 SCION xD

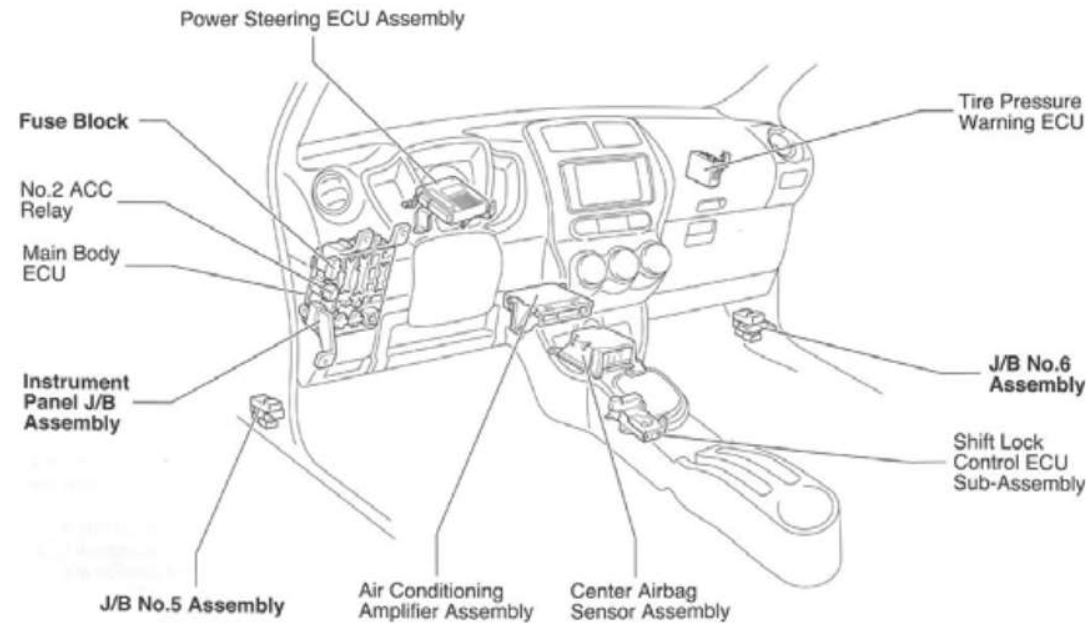


**Fig. 2: Dash & Center Console**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

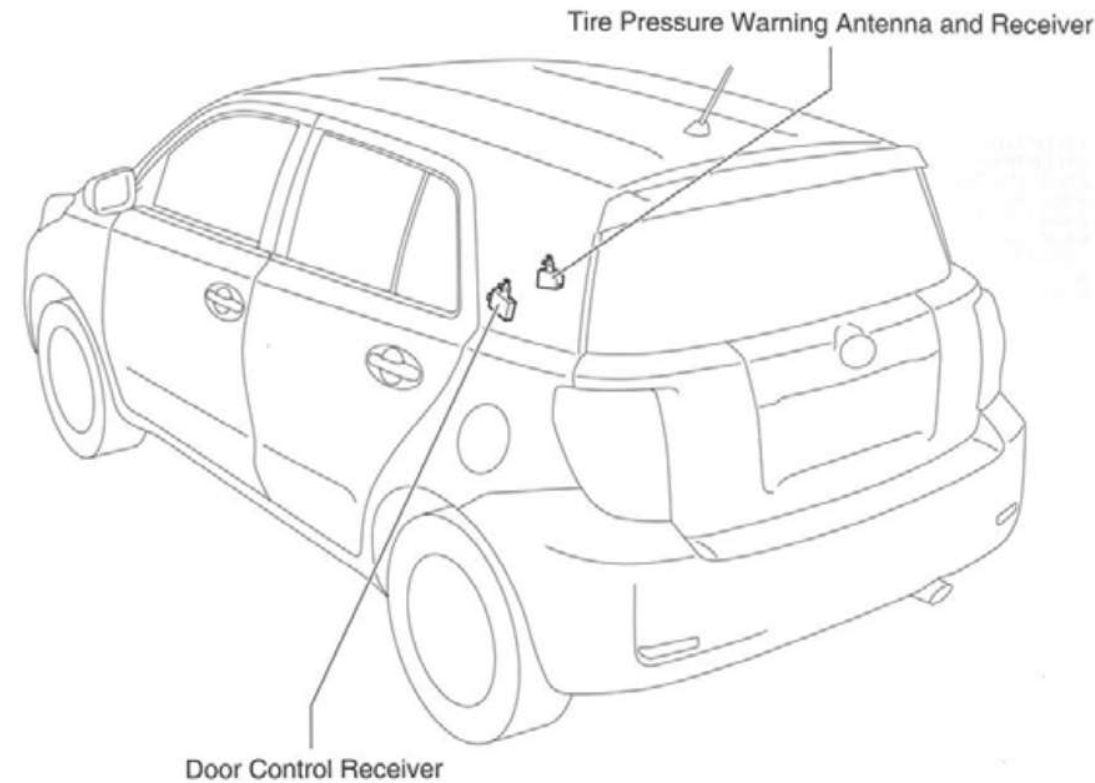


**Fig. 3: Left Rear Of Vehicle**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

|               |  |
|---------------|--|
| 2008 Scion xD |  |
| 2008 SCION xD |  |

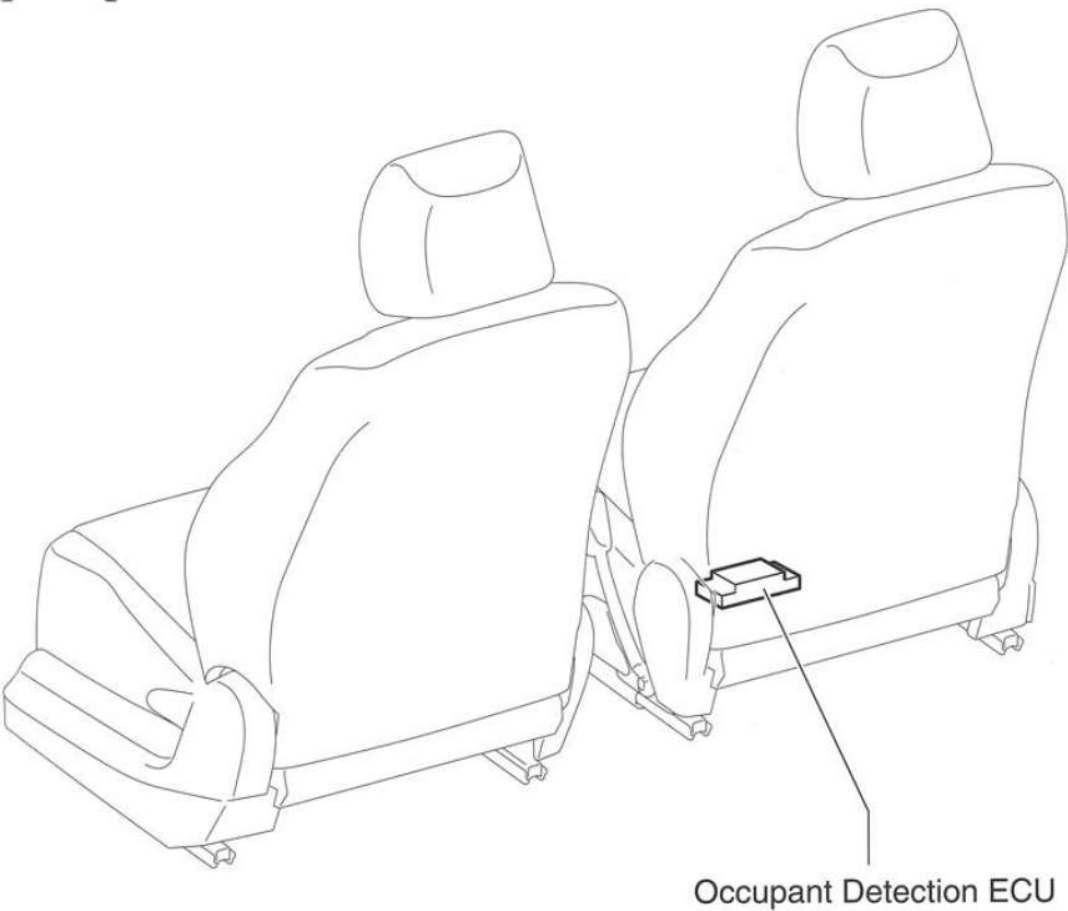


**Fig. 4: Front Passenger's Seat**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

cardiagn.com

|                                   |        |                                                  |
|-----------------------------------|--------|--------------------------------------------------|
| Microsoft                         |        |                                                  |
| Monday, June 07, 2010 11:14:12 AM | Page 8 | © 2006 Mitchell Repair Information Company, LLC. |

## 2008 Scion xD

2008 SCION xD

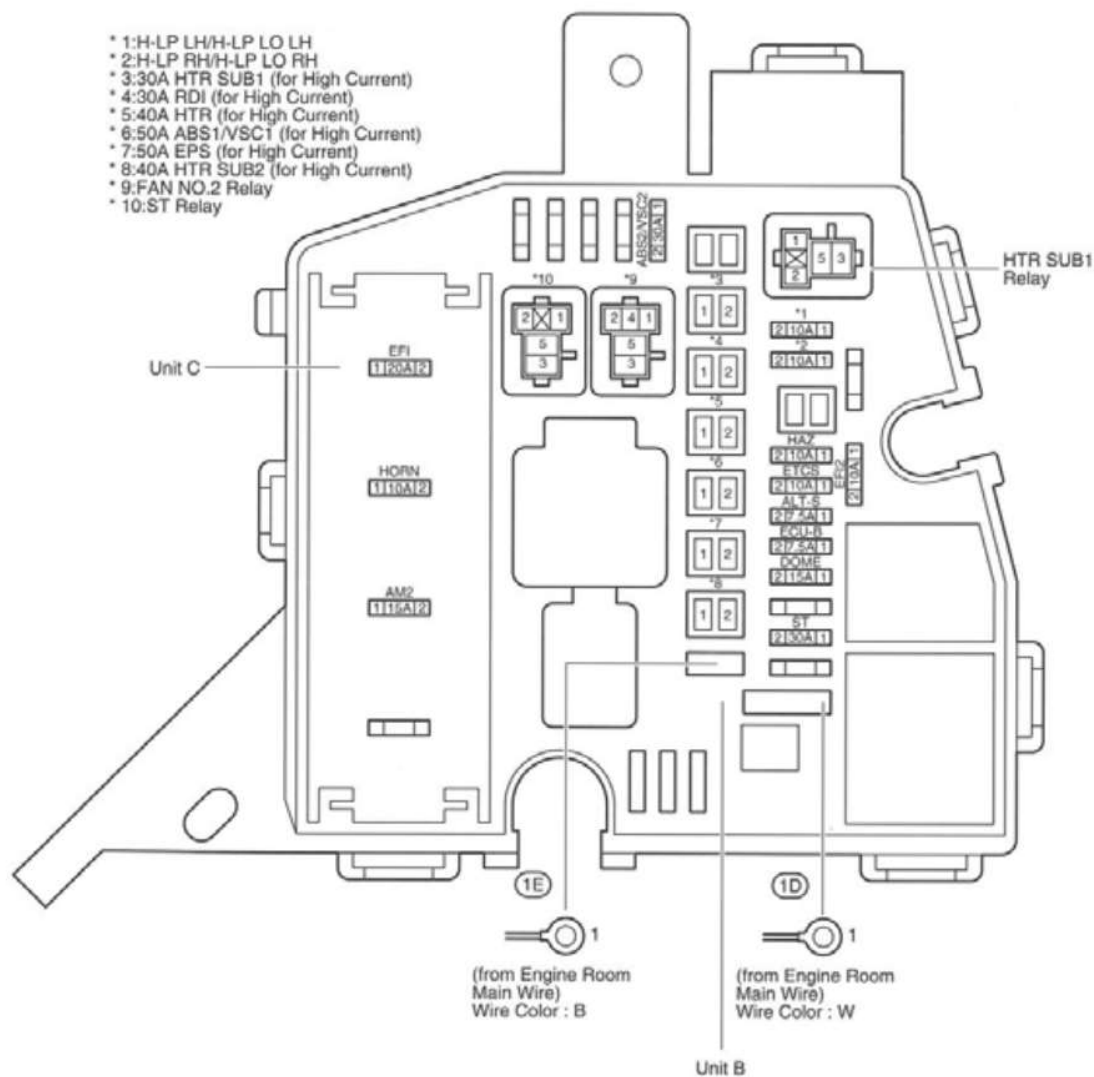


**Fig. 5: Engine Room R/B Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

| 2008 Scion xD |
|---------------|
| 2008 SCION xD |

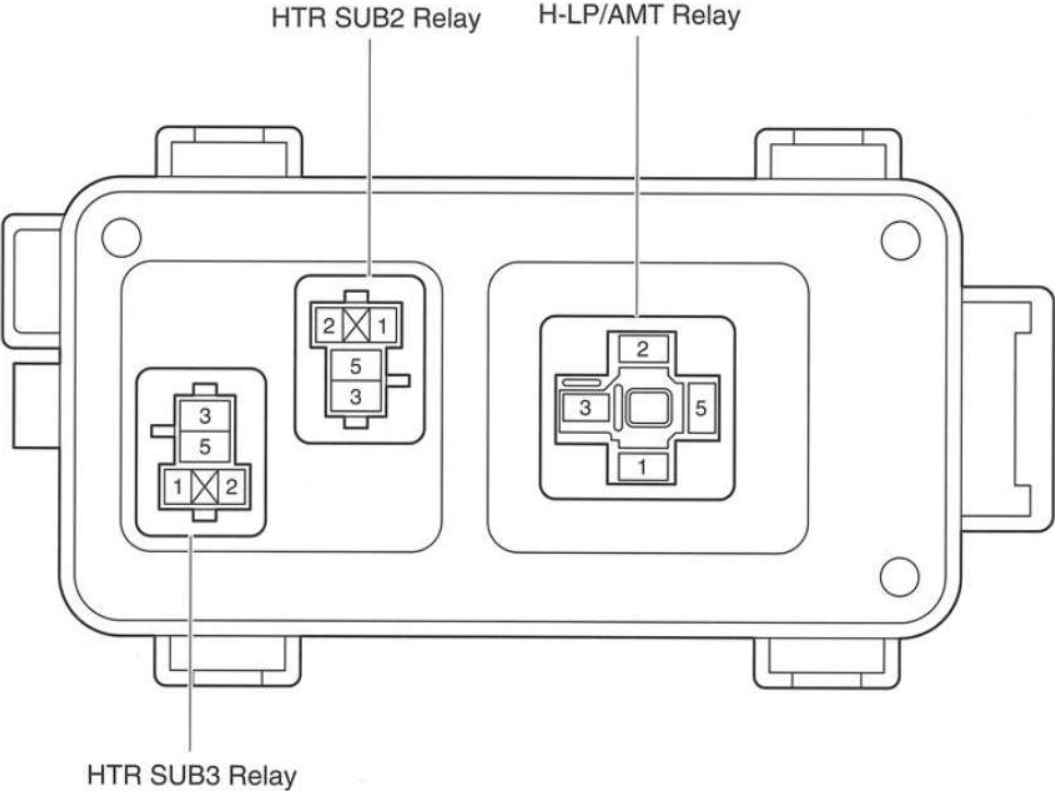
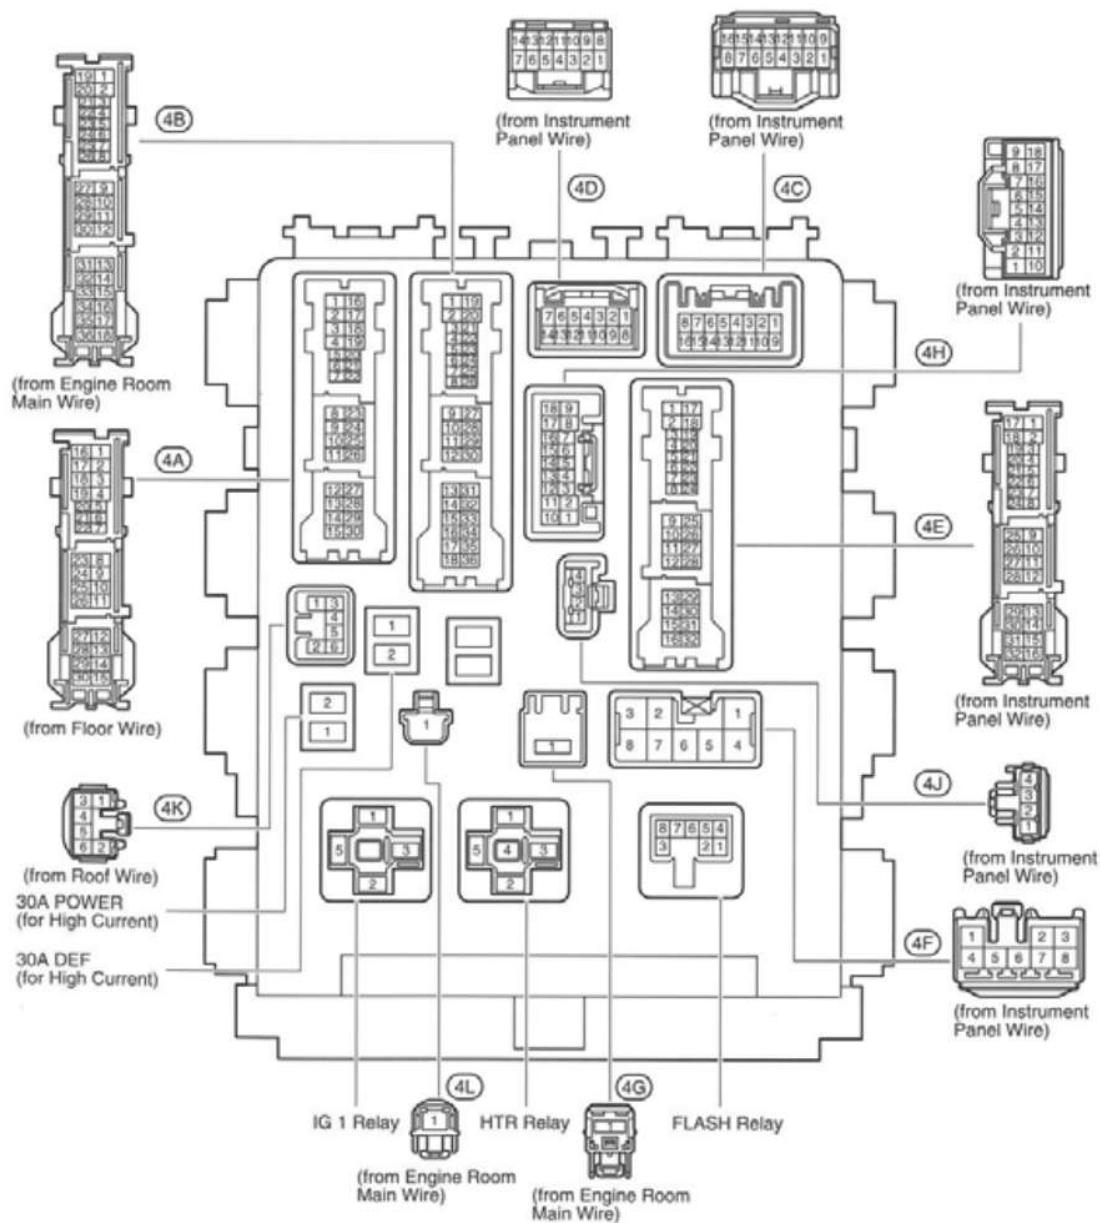


**Fig. 6: Engine Room R/B No. 2**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

|                                   |                                                          |
|-----------------------------------|----------------------------------------------------------|
| Microsoft                         |                                                          |
| Monday, June 07, 2010 11:14:12 AM | Page 10 © 2006 Mitchell Repair Information Company, LLC. |

**2008 Scion xD**

2008 SCION xD

**Fig. 7: Instrument Panel J/B Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Microsoft


Monday, June 07, 2010 11:14:12 AM

Page 11

© 2006 Mitchell Repair Information Company, LLC.

**2008 Scion xD**

2008 SCION xD

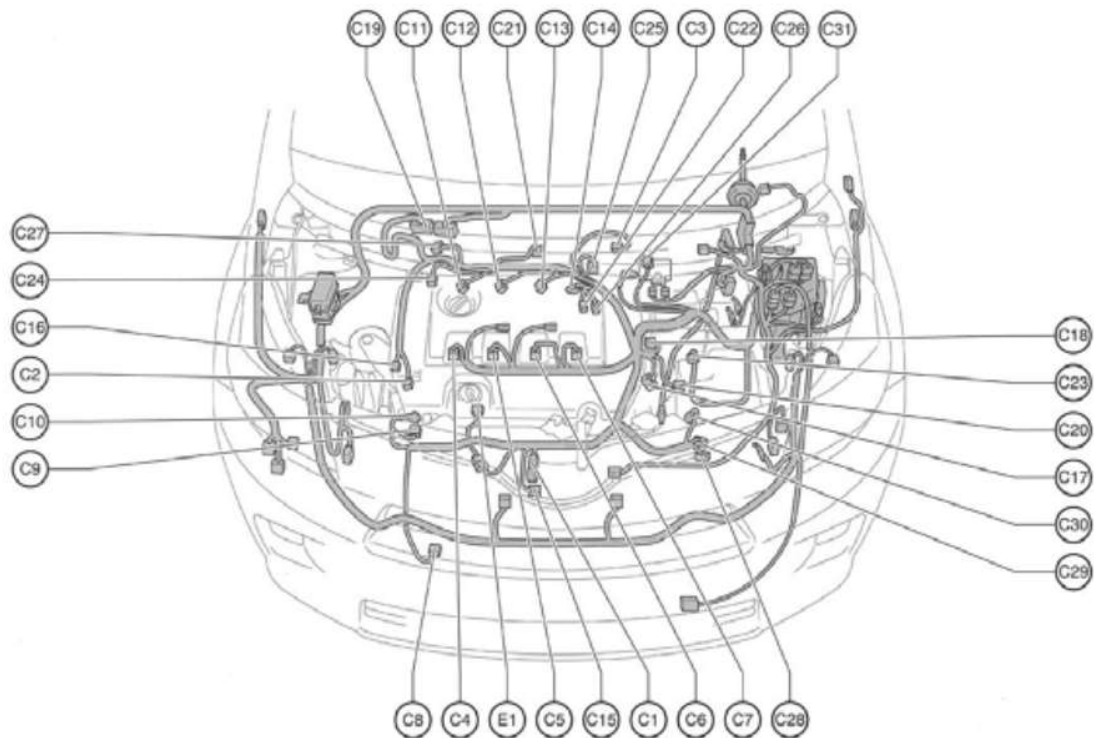

C1 Starter Assembly  
 C2 Crankshaft Position Sensor  
 C3 Purge VSV  
 C4 Fuel Injector Assembly No.1  
 C5 Fuel Injector Assembly No.2  
 C6 Fuel Injector Assembly No.3  
 C7 Fuel Injector Assembly No.4  
 C8 With Pulley Cooler Compressor Assembly  
 C9 Generator Regulator Assembly  
 C10 Generator Regulator Assembly  
 C11 Ignition Coil Assembly No.1  
 C12 Ignition Coil Assembly No.2  
 C13 Ignition Coil Assembly No.3  
 C14 Ignition Coil Assembly No.4  
 C15 Starter Assembly  
 C16 Engine Oil Pressure Switch Assembly

C17 Throttle Body Assembly  
 C18 E.F.I. Engine Coolant Temperature Sensor  
 C19 ECM  
 C20 Back Up Light Switch Assembly  
 C21 Air Fuel Ratio Sensor (Bank 1 Sensor 1)  
 C22 Noise Filter (Ignition)  
 C23 Mass Air Flow Meter  
 C24 Camshaft Timing Oil Control Valve Assembly (Intake Side)  
 C25 VVT Sensor (Exhaust Side)  
 C26 VVT Sensor (Intake Side)  
 C27 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)  
 C28 Park/Neutral Position Switch  
 C29 Electronically Controlled Transmission Solenoid  
 C30 Transmission Revolution Sensor (Turbine)  
 C31 Fusible Link Block Assembly

E1 Knock Control Sensor (Bank 1)

**Fig. 8: Engine**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Microsoft

Monday, June 07, 2010 11:14:12 AM

Page 12

© 2006 Mitchell Repair Information Company, LLC.

2008 Scion xD

2008 SCION xD


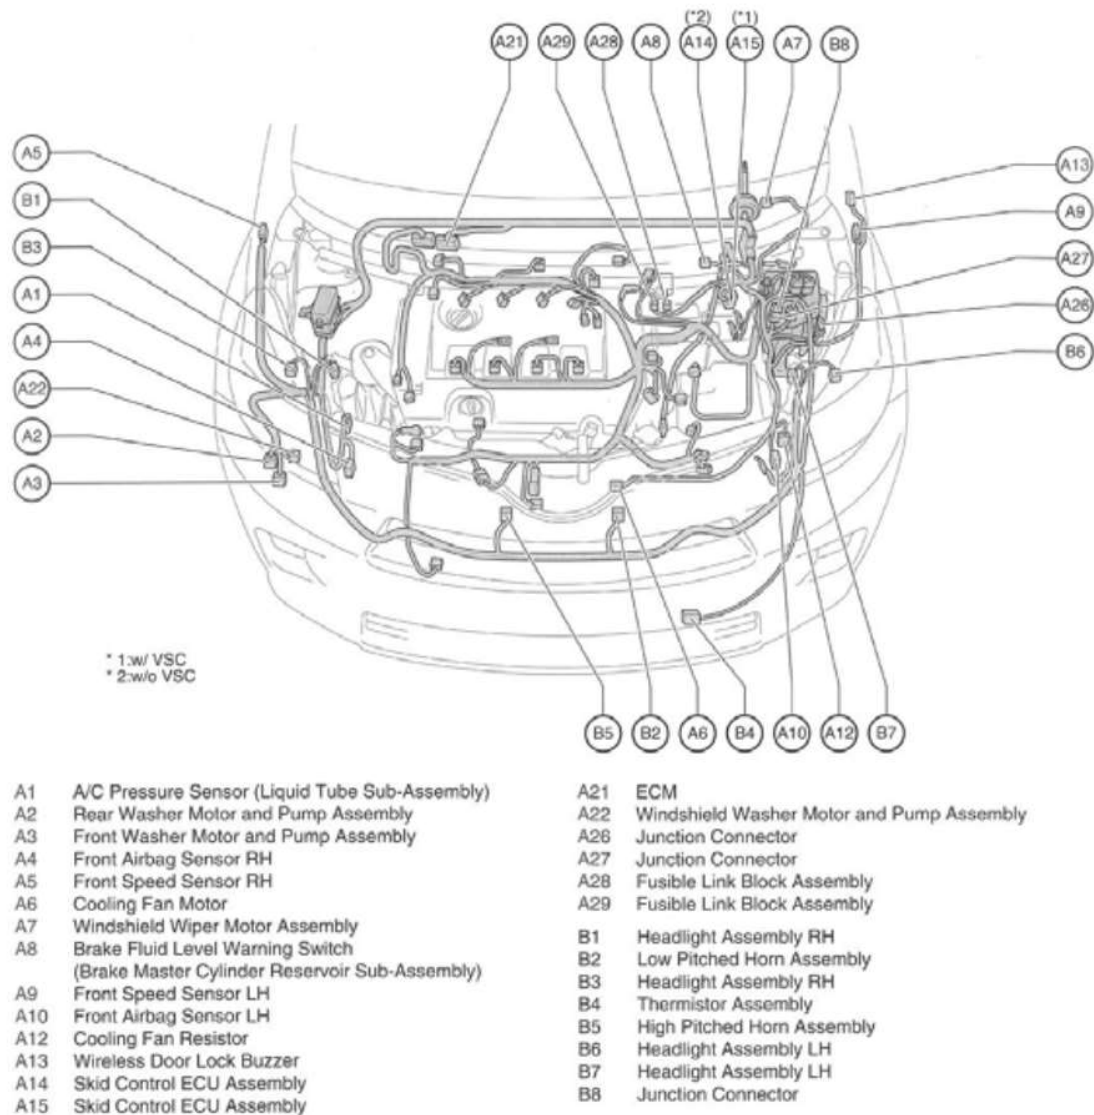


**Fig. 9: Engine Compartment**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

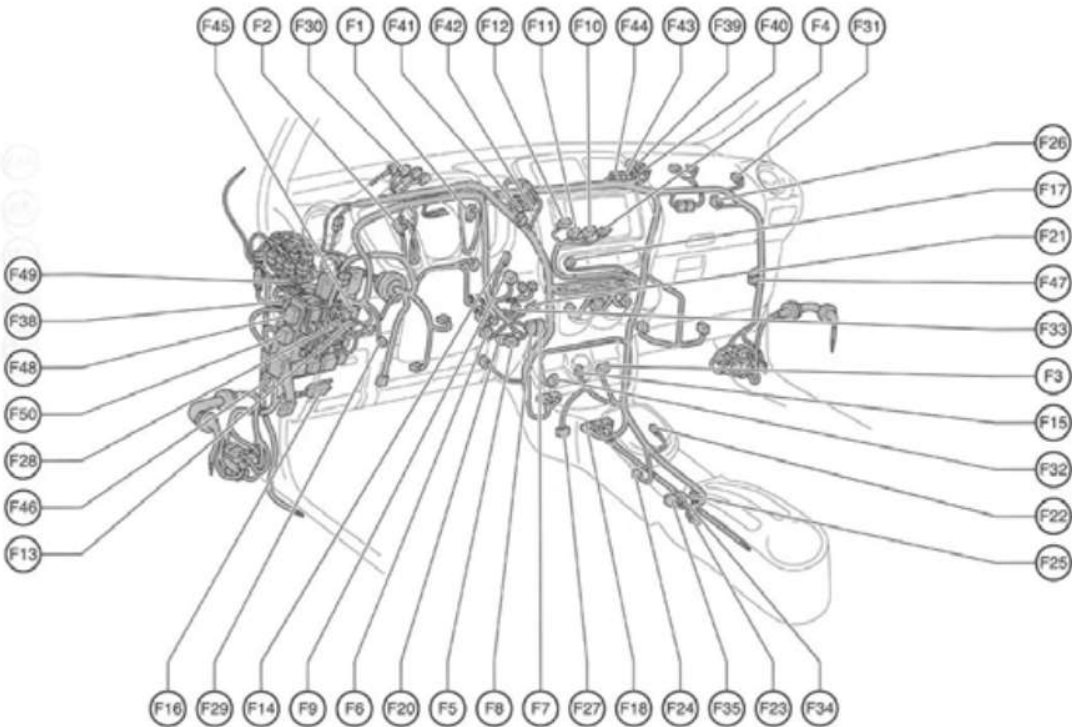


- |     |                                            |     |                                    |
|-----|--------------------------------------------|-----|------------------------------------|
| F1  | Combination Meter Assembly                 | F26 | Tire Pressure Warning ECU          |
| F2  | Combination Meter Assembly                 | F27 | Oxygen Sensor (Bank 1 Sensor 2)    |
| F3  | No.2 Stereo Jack Adapter Assembly          | F28 | Light Control Rheostat             |
| F4  | Radio Receiver Assembly                    | F29 | Tire Pressure Warning Reset Switch |
| F5  | Spiral Cable Sub-Assembly                  | F30 | Power Steering ECU Assembly        |
| F6  | Headlight Dimmer Switch Assembly           | F31 | Amplifier Antenna Assembly         |
| F7  | Windshield Wiper Switch Assembly           | F32 | No.1 Stereo Jack Adapter Assembly  |
| F8  | Windshield Wiper Switch Assembly           | F33 | Steering Sensor                    |
| F9  | Ignition or Starter Switch Assembly        | F34 | Yaw Rate Sensor                    |
| F10 | Radio Receiver Assembly                    | F35 | Deceleration Sensor                |
| F11 | Radio Receiver Assembly                    | F38 | Main Body ECU                      |
| F12 | Radio Receiver Assembly                    | F39 | Junction Connector                 |
| F13 | Outer Mirror Switch Assembly               | F40 | Junction Connector                 |
| F14 | Key Inter Lock Solenoid                    | F41 | Junction Connector                 |
| F15 | Power Outlet Socket Assembly               | F42 | Junction Connector                 |
| F16 | DLC3                                       | F43 | Junction Connector                 |
| F17 | Passenger Seat Belt Warning Light Assembly | F44 | Junction Connector                 |
| F18 | Center Airbag Sensor Assembly              | F45 | Junction Connector                 |
| F20 | Spiral Cable Sub-Assembly                  | F46 | Junction Connector                 |
| F21 | Un-Lock Warning Switch Assembly            | F47 | Junction Connector                 |
| F22 | Indicator Lamp Wire Sub-Assembly           | F48 | Fuse Block                         |
| F23 | Parking Brake Switch Assembly              | F49 | Diode (Starting)                   |
| F24 | Shift Lock Control ECU Sub-Assembly        | F50 | No.2 ACC Relay                     |
| F25 | Vehicle Stability Control Switch           |     |                                    |

**Fig. 10: Dash & Center Console**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

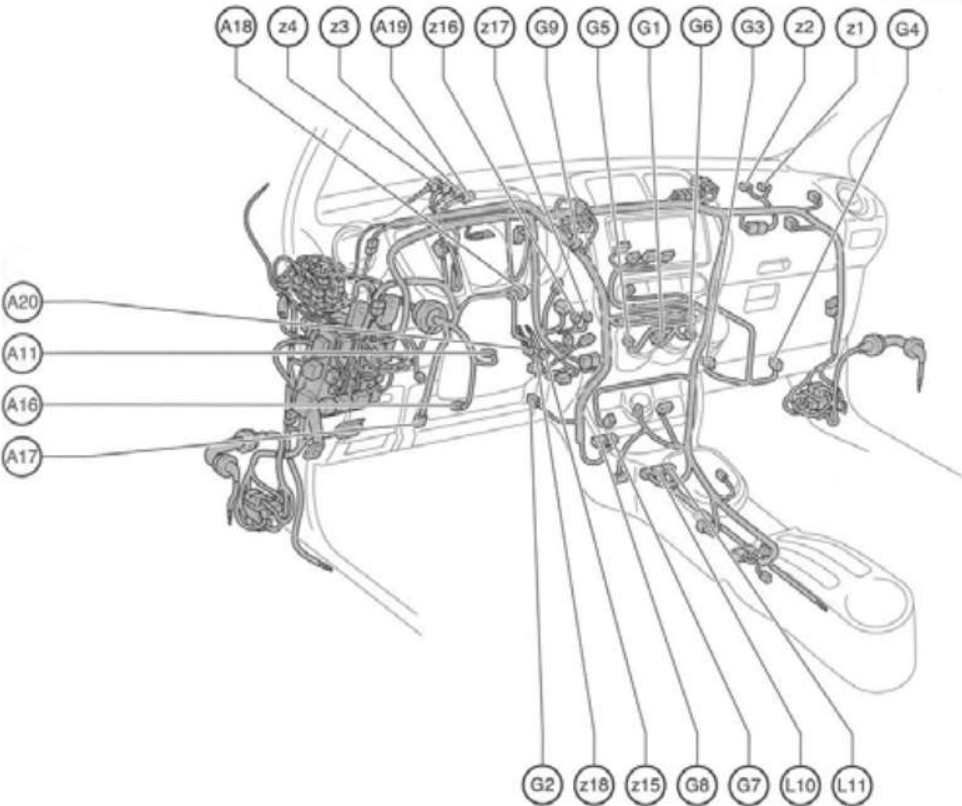

- A11

Stop Light Switch Assembly
- A16

Clutch Switch Assembly
- A17

Clutch Start Switch Assembly
- A18

Quick Heater Assembly
- A19

Power Steering ECU Assembly
- A20

Accelerator Pedal Assembly
- G1

Heater Control Sub-Assembly
- G2

Ambient Temperature Sensor
- G3

Blower Resistor
- G4

Front Blower with Fan Motor Sub-Assembly
- G5

Heater Control Base Sub-Assembly
- G6

No.2 Heater Control Knob
- G7

Air Conditioning Amplifier Assembly
- G8

Air Conditioning Amplifier Assembly
- G9

Junction Connector
- L10

Center Airbag Sensor Assembly
- L11

Center Airbag Sensor Assembly
- z1

Front Passenger Side Squib Circuit
- z2

Front Passenger Side Squib Circuit
- z3

Power Steering ECU Assembly  
Power Steering Motor Assembly
- z4

Power Steering ECU Assembly  
Power Steering Torque Sensor Assembly
- z15

Spiral Cable Sub-Assembly
- z16

Cruise Control Main Switch Assembly
- z17

Driver Side Squib Circuit  
Spiral Cable Sub-Assembly
- z18

Steering Pad Switch LH  
Spiral Cable Sub-Assembly

**Fig. 11: Dash & Center Console**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD


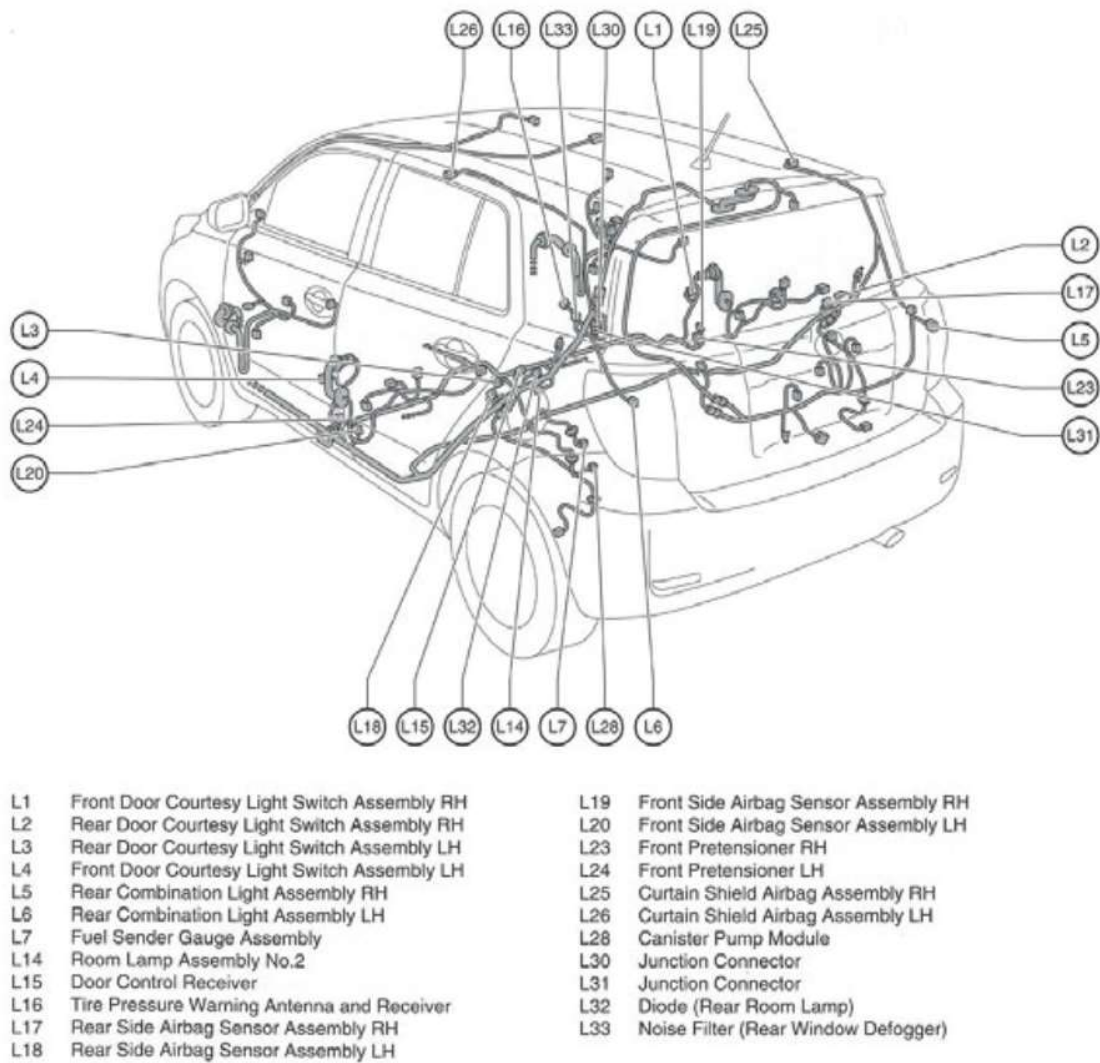


**Fig. 12: Vehicle Overview**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

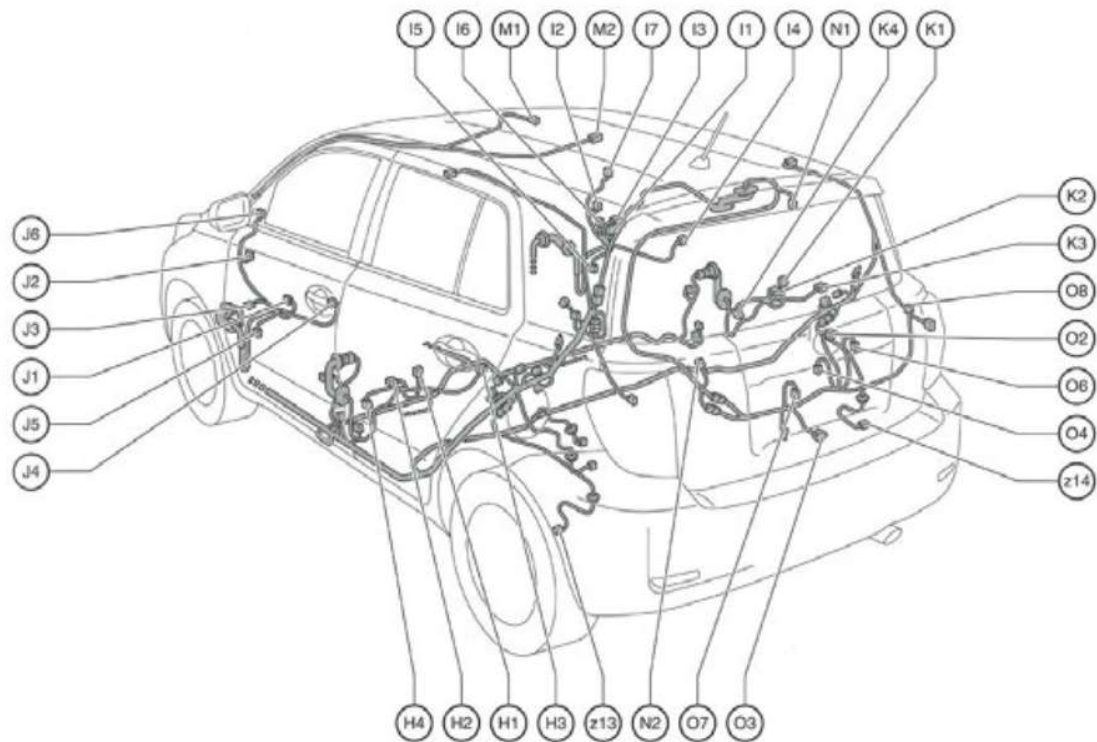


- |    |                                                 |     |                                                |
|----|-------------------------------------------------|-----|------------------------------------------------|
| H1 | Rear Power Window Regulator Switch Assembly LH  | K1  | Rear Power Window Regulator Switch Assembly RH |
| H2 | Rear Power Window Regulator Motor Assembly LH   | K2  | Rear Power Window Regulator Motor Assembly RH  |
| H3 | Rear Door with Motor Lock Assembly LH           | K3  | Rear Door with Motor Lock Assembly RH          |
| H4 | Rear Speaker Assembly LH                        | K4  | Rear Speaker Assembly RH                       |
| I1 | Front Power Window Regulator Switch Assembly RH | M1  | Map Lamp Assembly                              |
| I2 | Outer Rear View Mirror Assembly RH              | M2  | No.1 Room Light Assembly                       |
| I3 | Front Power Window Regulator Motor Assembly RH  | N1  | Center Stop Light Assembly                     |
| I4 | Front Door with Motor Lock Assembly RH          | N2  | Rear Window Defogger (Back Door Glass)         |
| I5 | Front No.1 Speaker Assembly RH                  | O2  | Rear Wiper Motor Assembly                      |
| I6 | Front Door Control Switch Assembly RH           | O3  | Back Door Lock Assembly                        |
| I7 | Front No.2 Speaker Assembly RH                  | O4  | Back Door Opener Switch Assembly               |
| J1 | Power Window Regulator Master Switch Assembly   | O6  | License Plate Light Assembly RH                |
| J2 | Outer Rear View Mirror Assembly LH              | O7  | License Plate Light Assembly LH                |
| J3 | Front Power Window Regulator Motor Assembly LH  | O8  | Rear Window Defogger (Back Door Glass)         |
| J4 | Front Door with Motor Lock Assembly LH          | z13 | Rear Speed Sensor LH                           |
| J5 | Front No.1 Speaker Assembly LH                  | z14 | Rear Speed Sensor RH                           |
| J6 | Front No.2 Speaker Assembly LH                  |     |                                                |

**Fig. 13: Vehicle Overview**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

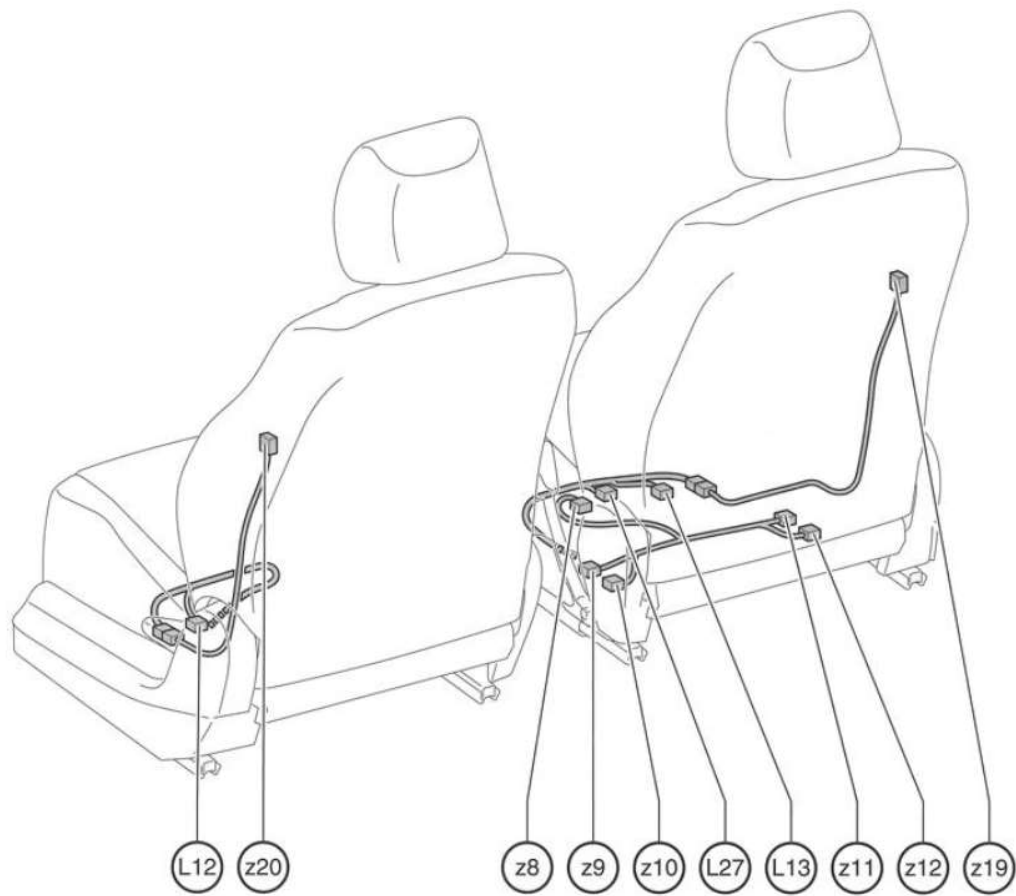

- |     |                                    |     |                                    |
|-----|------------------------------------|-----|------------------------------------|
| L12 | Front Seat Inner Belt Assembly LH  | z10 | Rear Occupant Detection Sensor LH  |
| L13 | Front Seat Inner Belt Assembly RH  | z11 | Front Occupant Detection Sensor RH |
| L27 | Occupant Detection ECU             | z12 | Rear Occupant Detection Sensor RH  |
| z8  | Occupant Detection ECU             | z19 | Side Airbag Squib Circuit RH       |
| z9  | Front Occupant Detection Sensor LH | z20 | Side Airbag Squib Circuit LH       |

**Fig. 14: Front Seats**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

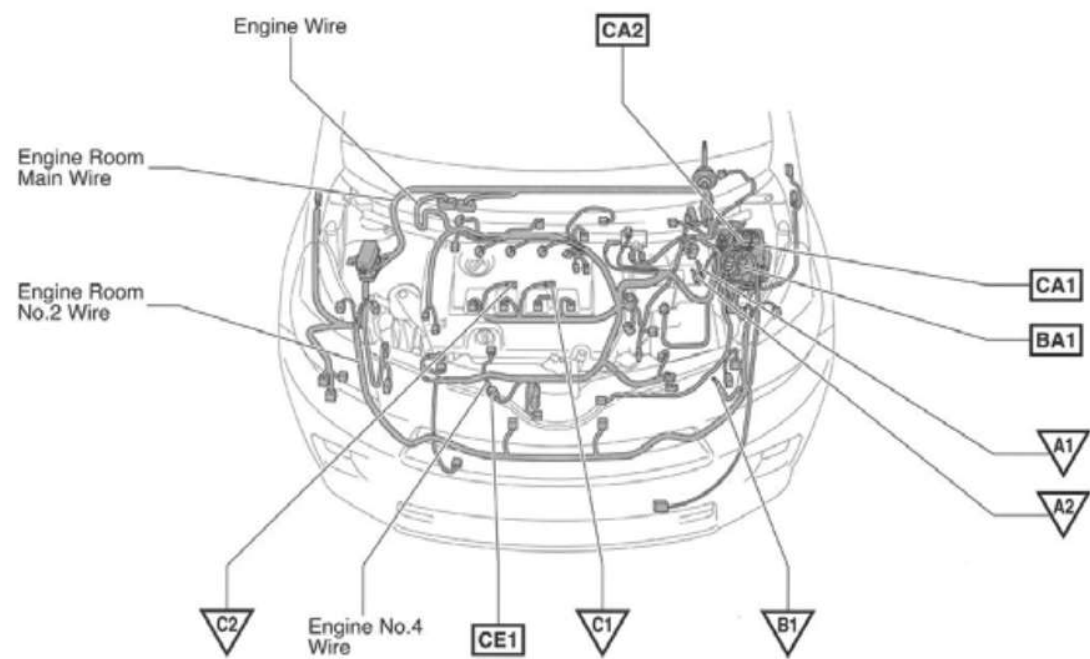


**Fig. 15: Engine Compartment**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

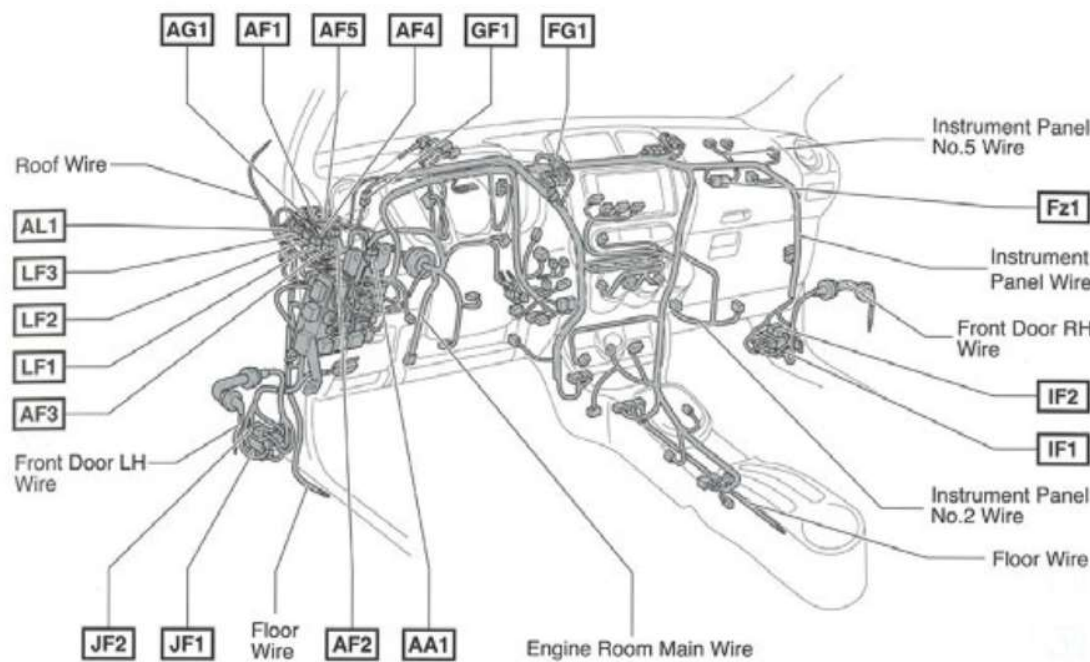


**Fig. 16: Dash & Kick Panels**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2008 Scion xD

2008 SCION xD

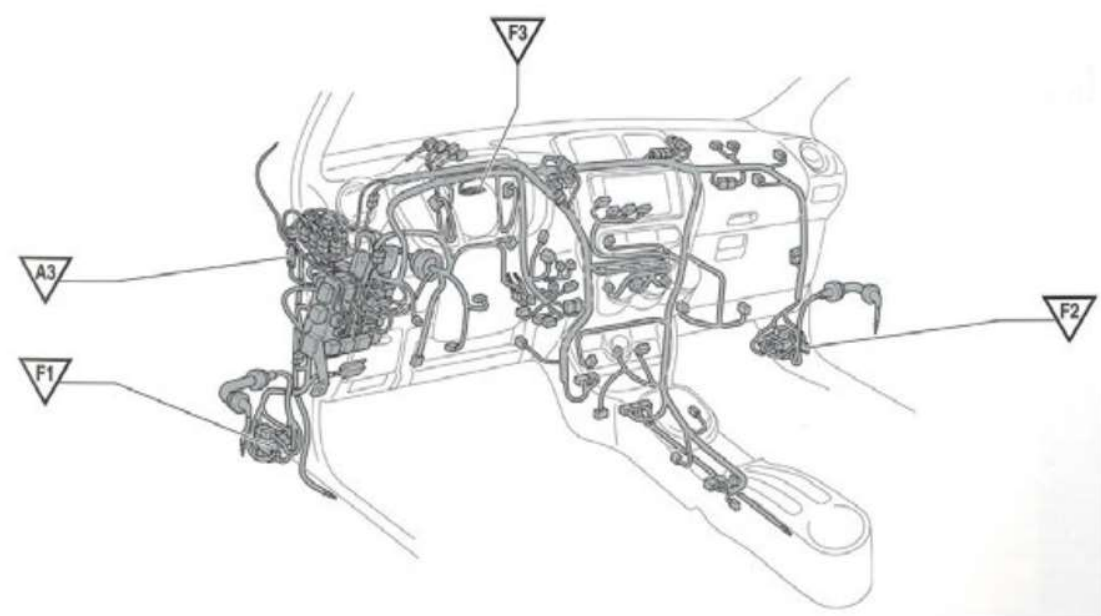


**Fig. 17: Dash & Kick Panels**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

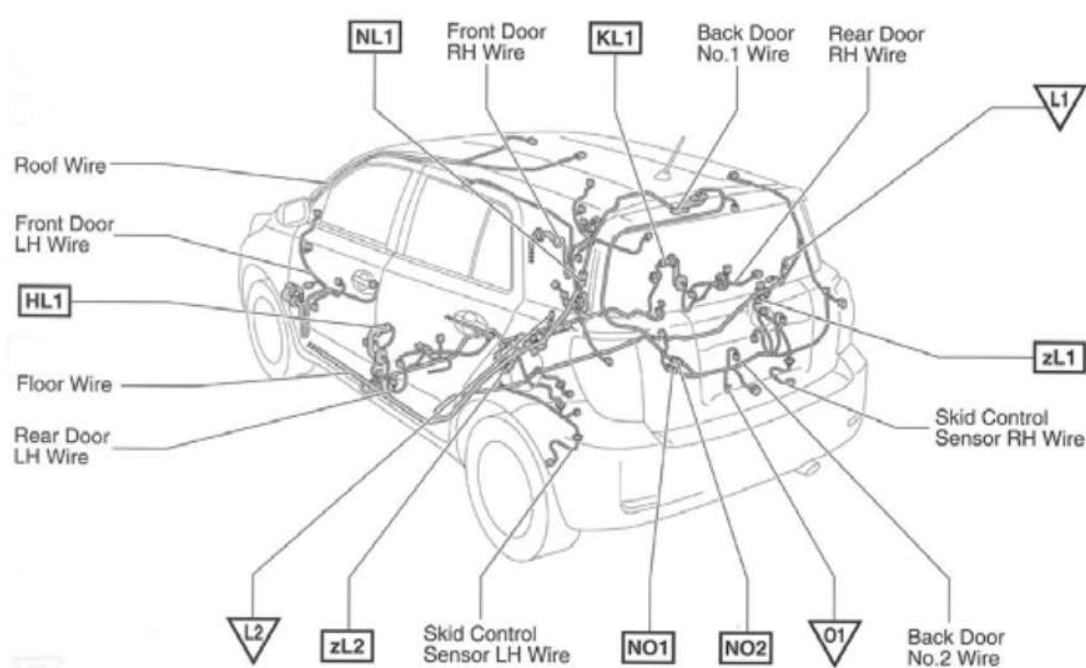


**Fig. 18: Vehicle Overview**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

|               |  |
|---------------|--|
| 2008 Scion xD |  |
| 2008 SCION xD |  |

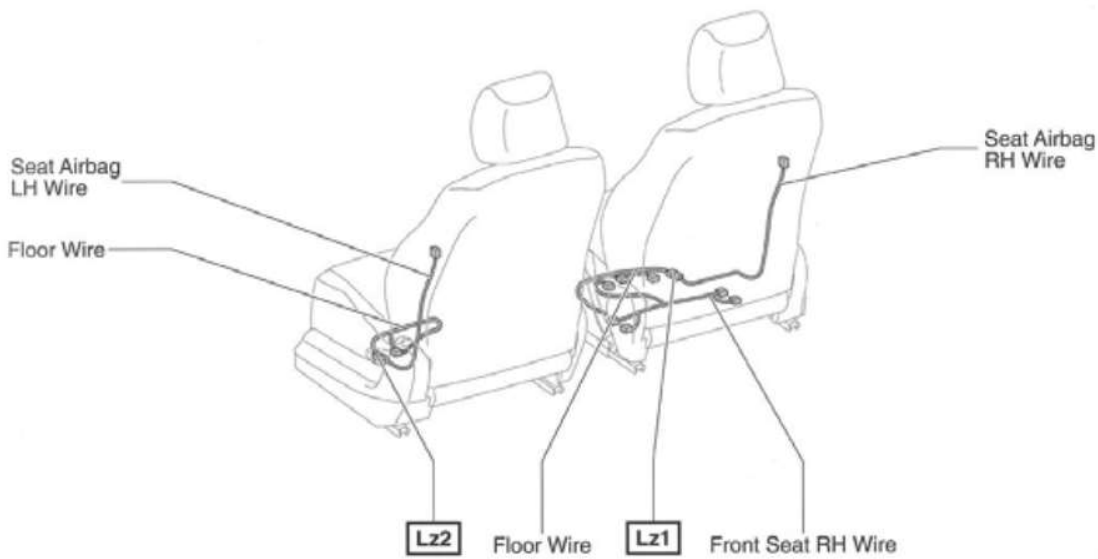


**Fig. 19: Front Seats**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

cardiagn.com

|                                   |         |                                                  |
|-----------------------------------|---------|--------------------------------------------------|
| Microsoft                         |         |                                                  |
| Monday, June 07, 2010 11:14:12 AM | Page 21 | © 2006 Mitchell Repair Information Company, LLC. |