


Chevrolet Malibu 2003 fuse box diagram

Instrument Panel Fuse Block-Left

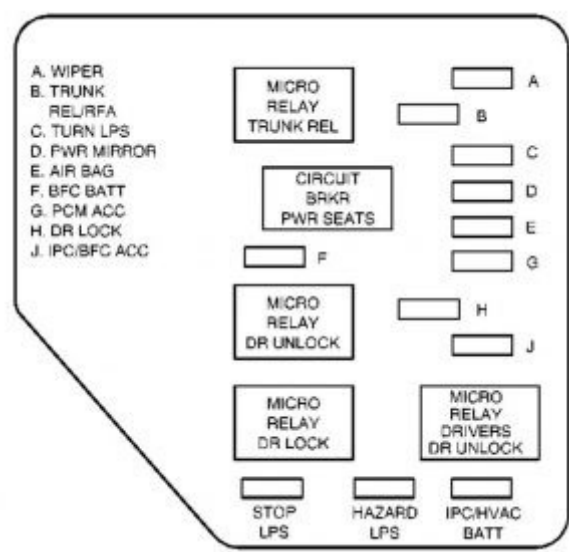


Chevrolet Malibu – fuse box diagram – instrument

panel (left side)

Fuse	Usage
A	Wipers
B	Trunk relase and remotekeyless entry
C	Turn signal
D	Power mirrors
E	Air bag
F	Body Function Control Module
G	Powertrain Control Module (PCM)
H	Door Locks
J	Body Function Control Module/Instrument Panel Cluster
MICRO RELAY TRUNK REL	Remote Trunk Release
CIRCUIT BRKR PWR SEATS	Power Seats
MICRO RELAY DR UNLOC	Door Locks
MICRO RELAY DR LOCK	Door Locks
MICRO RELAY DRIVERS DR UNLOCK	Door Locks
STOP LPS	Stoplamps

HAZARD LPS	Hazard Lamps
IPC/HVAC BATT	Instrument Panel Cluster, Climate Control

Instrument Panel Fuse Block-Right

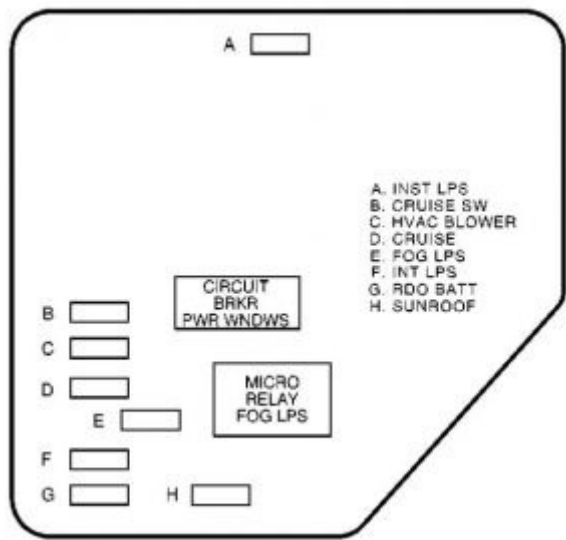


Chevrolet Malibu – fuse box diagram – instrument

panel (right side)

Fuse	Usage
A	Instrument Panel Lights, Brightness Control
B	Cruise Control Switches
C	Climate Control System
D	Cruise Control
E	Fog Lamps
F	Interior Lamps, Body Function Control Module
G	Radio
H	Sunroof
CIRCUIT BRKR PWR WNDWS	Power Windows
MICRO RELAY FOG LPS	Fog Lamps

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver’s side of the engine compartment, near the air cleaner filter.

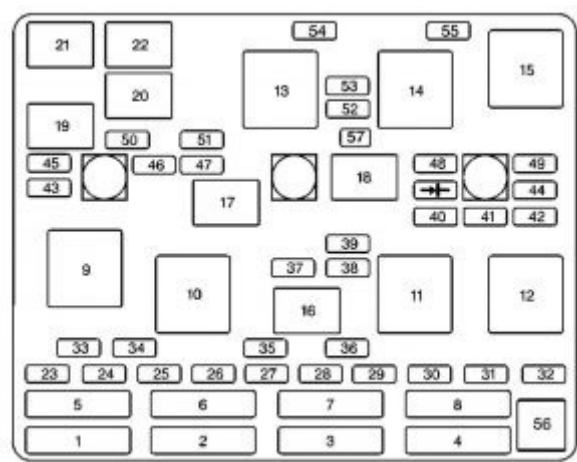

Chevrolet Malibu – fuse box diagram – engine

compartment

Fuses	Usage
1	Ignition Switch
2	Right Electrical Center-Fog Lamps, Radio, Body Function Control Module, Interior Lamps
3	Left Electrical Center -Stoplamps, Hazard Lamps, Body Function Control Module, Cluster, Climate Control System
4	Anti-Lock Brakes
5	Ignition Switch
6	Not Used
7	Left Electrical Center-Power Seats, Power Mirrors, Door Locks, Trunk Release and Remote Lock Control
8	Cooling Fans #1

Relays	Usage
9	Rear Defogger
10	Not Used
11	Not Used
12	Cooling Fan #1
13	HVAC Blower (Climate Control)
14	Cooling Fan #2

15	Cooling Fan
16	Air Conditioning Compressor
17	Not Used
18	Fuel Pump
19	Automatic Headlamp System
20	Automatic Headlamp System
21	Horn
22	Daytime Running Lamps (DRL)

Micro-Relays	Usage
16	Air Conditioning Compressor
17	Not Used
18	Fuel Pump
19	Automatic Light Control
20	Automatic Light Control
21	Horn
22	Daytime Running Lamps (DRL)

Fuses	Usage
23	Spare Fuse Holder
24	Spare Fuse Holder
25	Spare Fuse Holder
26	Spare Fuse Holder
27	Spare Fuse Holder
28	Spare Fuse Holder
29	Spare Fuse Holder
30	Spare Fuse Holder

31	Spare Fuse Holder
32	Spare Fuse Holder
33	Rear Defogger
34	Accessory Power Outlets, Cigar Lighter
35	Generator
36	Not Used
37	Air Conditioning Compressor, Body Function Control Module
38	Automatic Transaxle
39	Powertrain Control Module (PCM), Ignition
40	Anti-Lock Brakes (ABS)
41	Ignition System
42	Back-Up Lamps, Brake Transaxle Shift Interlock
43	Horn
44	PCM
45	Parking Lamps
46	Climate Control System
47	Canister Purge Valve, PCM, Exhaust Gas Recirculation, Heated Oxygen Sensor
48	Fuel Pump, Injectors
49	Not Used
50	Right Headlamp
51	Left Headlamp
52	Cooling Fan
53	HVAC Blower (Climate Control)
54	Not Used
55	Cooling Fan #2 Ground
56	Fuse Puller
57	Not Used