


Buick Park Avenue 2000 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located to the far right side under the instrument panel.

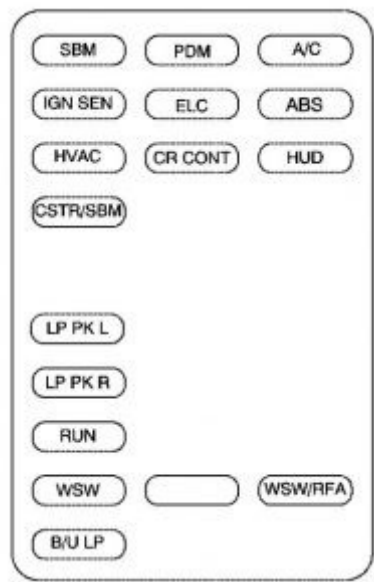


Buick Park Avenue – fuse box – main instrument fuse panel

Fuses	Usage
SBM	Interior Lamps
PDM	PDM Module
A/C	HVAC Motor, HVAC Mix Motors
IGN SEN	EC Mirror, Driver HTS Seat, Rear Defog Relay, MEM Module, Cool LVL Sensor, Pass Heated Seat
ELC	HVAC Flat Pk Mtrs, Electronic Level Control Sensor, Electronic Level Control Sensor (R Bec)
ABS	Anti-Lock Brake System Module
HVAC	HVAC Main Con Head, HVAC Programmer, IPC
CR CONT	Stepper Motor Cruise, Cruise Switch
HUD	HUD Switch, HUD Display
CSTR/SBM	HVAC Programmer, Instrument Panel Cluster, SBM (275 to LCM) (1135 to BTSI SL)
LP PK L	Underhood Lamp, L PK/ Sidemarker, L Park/Turn Lamp, SBM, L Tail Signal Lamp, L Tail/Stoplamp, L Rear Sidemarker
LP PK R	Rt Pk/Sidemarker Lamp, Rt PK/Turn Lamp, Rt Tail/Sign Lamp, Rt Tail/Stoplamp, Rt Rear Sidemarker, Stop/Taillamp, Tail/Signal Lamp, License Lamp, RFA
RUN	Run/Accessory
WSW	Wiper Motor

Blank	Not Used
WSW/RFA	Wiper Switch, RFA, Rain Sense
B/U LP	EC Mirror, Back-Up Lamps

Underhood Fuse Block

There are additional fuses located in the engine compartment on the passenger's side of the vehicle.

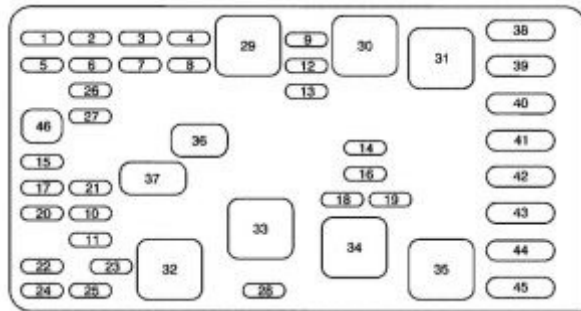

Buick Park Avenue – fuse box – underhood

Mini Fuses	Usage
1	Air Sol
2	SBM, LCM
3	Turn Signal
4	Pre-Oxygen Sensor, Post-Oxygen Sensor
5	Air Bag (SIR)
6	PCM
7	AC Clutch
8	Ignition Feed
9	Horn Relay
10	Spare
11	Spare
12	Injectors #1-6
13	C-31
14	Right High Beam
15	Spare
16	Left High Beam
17	Spare
18	Right Low Beam
19	Left Low Beam
20	Stop
21	Fuel Pump Relay (Wire in BEC)
22	Run/Crank
23	PCM
24	Parking Lamps

25	Hazard Flashers
26	Spare
27	Spare
28	ABS #2


Mini Relays	Usage
29	Ignition
30	Horn
31	Cool Fan #2
32	Starter
33	Air Pump
34	Cooling Fan SP
35	Cooling Fan 1

Micro Relays	Usage
36	A/C CLU
37	Fuel Pump

Maxi Fuses	Usage
38	Bat #1
39	Blower Motor
40	Cooling Fan 1
41	Headlamp
42	BAT #2
43	Ignition
44	Starter
45	ABS
46	Fuse Puller

Rear Compartment Fuse Block

Additional fuses are located in the fuse center under the rear seat. The rear seat cushion must be removed to access the fuses.

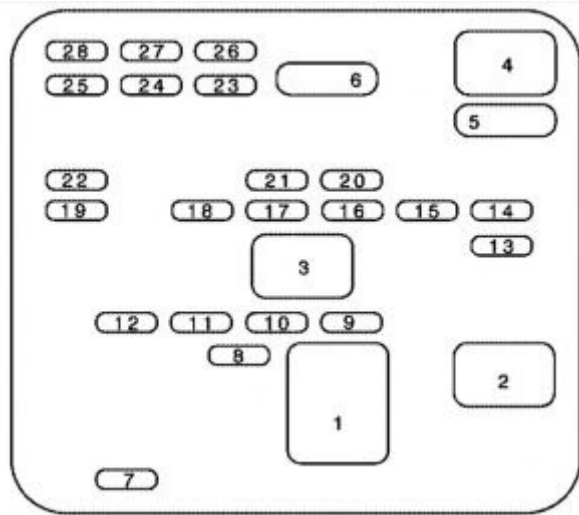

Buick Park Avenue – fuse box – rear

compartment

Mini Relays	Usage
1	Heated Backlite

Relays	Usage
2	Retained Accessory Power (RAP)
3	Trunk Release
4	ELC

Circuit Breaker	Usage
5	Power Seat
6	ELC Sensor, ELC Compressor Solenoid

Mini Fuses	Usage
7	Crank
8	Accessory Outlet
9	PCM/CRU
10	SBM Module
11	Radio/Phone
12	Sunroof
13	Spare
14	CD Changer, Phone
15	Driver Door Module
16	Spare
17	Radio
18	Driver Heated Seat Module

19	Rear Door Module
20	Trunk Release
21	Spare
22	Instrument Panel Ashtray Cigarette Lighter
23	Spare
24	Spare
25	Passenger Heated Seat Module
26	Right Rear Cig Lighter
27	Left Rear Cig Lighter
28	RFA, Memory Seat Module, Driver Seat Switch