


## Cadillac STS 2005 – 2006 fuse box diagram

## Underhood Fuse Block

The underhood fuse block is located in the front of the engine compartment on the passenger's side of the vehicle.

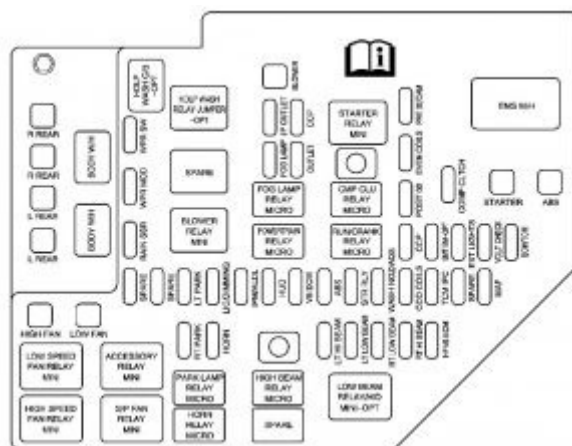

Cadillac STS mk1 – fuse box – engine

compartment

| Fuses      | Usage                                    |
|------------|------------------------------------------|
| BLOWER     | Blower Motor                             |
| R REAR     | Passenger's Side Rear Fuse Block         |
| I/P OUTLET | Front Auxiliary Outlet                   |
| CCP        | Climate Control, Headlamp Leveling       |
| PRE 02/CAM | Oxygen Sensor, CAM Phasers               |
| ENG W/H    | Engine W/H                               |
| R REAR     | Passenger's Side Rear Fuse Block         |
| WPR SW     | Wiper/Washer Switch                      |
| BODY W/H   | Body W/H                                 |
| FOG LAMP   | Fog Lamps                                |
| OUTLET     | Rear Auxiliary Outlet                    |
| EVEN COILS | Even Ignition Coils, Even Fuel Injectors |
| L REAR     | Left Rear Fuse Block                     |
| WPR MOD    | Wiper Module                             |
| POST 02    | Oxygen Sensor                            |
| COMP CLTCH | Air Conditioner Compressor Clutch        |
| STARTER    | Starter Solenoid                         |
| ABS        | Anti-Lock Brake Pump                     |
| L REAR     | Driver's Side Rear Fuse Block            |

|                        |                                                                                               |
|------------------------|-----------------------------------------------------------------------------------------------|
| BODY W/H               | Body W/H                                                                                      |
| RAIN SSR               | Rain Sensor, Headlamp Washer, Tire Pressure Monitor                                           |
| CCP                    | Climate Control                                                                               |
| SMT BM-OPT             | Smart Beam Relay (Option)                                                                     |
| EXT LIGHTS             | Low Beam Relay, High Beam Relay, Park Lamp Relay                                              |
| VOLT CHECK             | Instrument Panel Module                                                                       |
| ECM/TCM                | Engine Control Module, Transmission Control Module, Easy Key Module, Instrument Panel Cluster |
| SPARE                  | Spare                                                                                         |
| SPARE                  | Spare                                                                                         |
| LT PARK                | Left Park Lamp, Left Taillamp                                                                 |
| LIC DIMMING            | License Plate, Instrument Panel Dimming                                                       |
| IPM ALDL               | Instrument Panel Module Assembly Line Data Link Connector                                     |
| HUD                    | Heads-Up Display, Column Lock Module                                                          |
| V8 ECM                 | V8 ECM, Evap Solenoid                                                                         |
| ABS                    | Anti-Lock Brake Controller                                                                    |
| STR RLY                | Starter Relay                                                                                 |
| WASH NOZ/AQS           | Heated Washer Nozzles, Air Quality Sensor™                                                    |
| ODD COILS              | Odd Ignition Coils, Odd Fuel Injectors                                                        |
| TCM IPC                | Transmission, Instrument Panel, Engine Control                                                |
| SPARE                  | Spare                                                                                         |
| MAF                    | Mass Air Flow Sensor                                                                          |
| HIGH FAN               | Cooling Fan – High Speed                                                                      |
| LOW FAN                | Cooling Fan – Low Speed                                                                       |
| RT PARK                | Right Park Lamp, Right Taillamp                                                               |
| HORN                   | Horn                                                                                          |
| LT HI BEAM             | Left Headlamp High Beam                                                                       |
| LT LOW BEAM            | Left Headlamp Low Beam                                                                        |
| RT LOW BEAM            | Right Headlamp Low Beam                                                                       |
| RT HI BEAM             | Right Headlamp High Beam                                                                      |
| HFV6 ECM               | High Feature V6 Engine Control Module                                                         |
| HDLP                   | Headlamp Washer                                                                               |
| WASH RELAY JUMPER -OPT |                                                                                               |
| STARTER RELAY MINI     | Starter                                                                                       |
| SPARE                  | Spare                                                                                         |



|                      |                                                                |
|----------------------|----------------------------------------------------------------|
| REAR DR MOD          | Rear Door Modules                                              |
| ELC SOL (OPT)        | Exhaust Solenoid                                               |
| DRIVER DR MOD        | Driver Door Module                                             |
| TV/VICS              | Infotainment (Export Only)                                     |
| REAR HTD SEATS       | Rear Heated Seats                                              |
| SPARE                | Spare                                                          |
| SPARE                | Spare                                                          |
| IGN3                 | Front Passenger Heated Seat, Auto Shifter, Occupant Protection |
| RR SHLF SPEAKER      | Rear Shelf Speaker                                             |
| DPM                  | Memory Seat, Lumbar                                            |
| TRUNK DR VALET       | Trunk Release, Valet                                           |
| REVERSE LAMP         | Reverse Lamps, Rear Parking Aid, Inside Rearview Mirror        |
| AIR BAG              | Airbag                                                         |
| POSITION LAMPS (OPT) | Rear Taillamps                                                 |
| JOINT CONNECTOR      | Joint Connector                                                |

| Relays                   | Usage                                        |
|--------------------------|----------------------------------------------|
| ELC RELAY (OPT)          | ELC Compressor (Option)                      |
| L POSITION RELAY MICRO   | Left Rear Taillamp, Position Lamps (Option)  |
| TRUNK DR REL RELAY MICRO | Trunk Release Motor                          |
| REV LAMP RELAY MICRO     | Reverse Lamps, Rear Parking Aid              |
| R POSITION RELAY MICRO   | Right Rear Taillamp, Position Lamps (Option) |
| RUN RELAY MICRO          | Ignition 3                                   |
| STNDBY LAMP RLY (OPT)    | Rear Taillamps, Position Lamps (Option)      |

| Circuit Breakers | Usage      |
|------------------|------------|
| SEATS C/B        | Power Seat |

## Passenger's Side



Cadillac STS mk1 – fuse box – rear compartment

(passenger's side)

| Fuses       | Usage       |
|-------------|-------------|
| SPARE       | Spare       |
| TRUNK DIODE | Trunk Diode |

|                     |                                             |
|---------------------|---------------------------------------------|
| CANISTER VENT       | Canister Vent Solenoid                      |
| RT TURN-RIM         | Right Turn Signal                           |
| SUNROOF (OPT)       | Sunroof Module (Option)                     |
| STOP LAMPS          | Stoplamps                                   |
| FUEL PUMP           | Fuel Pump                                   |
| RF HTD ST/S-BAND    | Front Passenger Heated Seat, S-Band Antenna |
| RADIO/ONSTAR        | Radio/OnStar®                               |
| AIR BAG             | Airbags                                     |
| RIM                 | Battery to RIM                              |
| RUN/CRANK           | Ignition 1                                  |
| HTD STG/CLM         | Heated Steering Wheel                       |
| REAR DEFOG          | Rear Defogger                               |
| INTERIOR LAMP       | Interior Lamps                              |
| PSG DR MOD          | Front Passenger Door Module                 |
| LT TURN-RIM         | Left Turn Signal                            |
| REAR FOG LAMP (OPT) | Rear Fog Lamps (Option)                     |
| AFTERBOIL (OPT)     | After Boil Pump                             |
| RIM                 | Ignition to RIM                             |
| JOINT CONNECTOR     | Joint Connector                             |

|                               |                          |
|-------------------------------|--------------------------|
| Relays                        | Usage                    |
| SPARE                         | Spare                    |
| REAR DEFOG RELAY MINI         | Rear Defog               |
| FUEL PUMP RELAY MICRO         | Fuel Pump                |
| REAR FOG LAMP RLY MICRO (OPT) | Rear Fog Lamps (Option)  |
| STOP LAMP RELAY MICRO         | Stoplamps                |
| INT LAMP RELAY MICRO          | Interior Lamps           |
| RUN/CRANK RELAY MICRO         | Ignition 1               |
| AFTERBOIL RELAY MICRO (OPT)   | After Boil Pump (Option) |

|                  |                                     |
|------------------|-------------------------------------|
| Circuit Breakers | Usage                               |
| WINDOW MTRS C/B  | Power Window Motors Circuit Breaker |