



POWER SOURCE LOCATION

6804Q-02

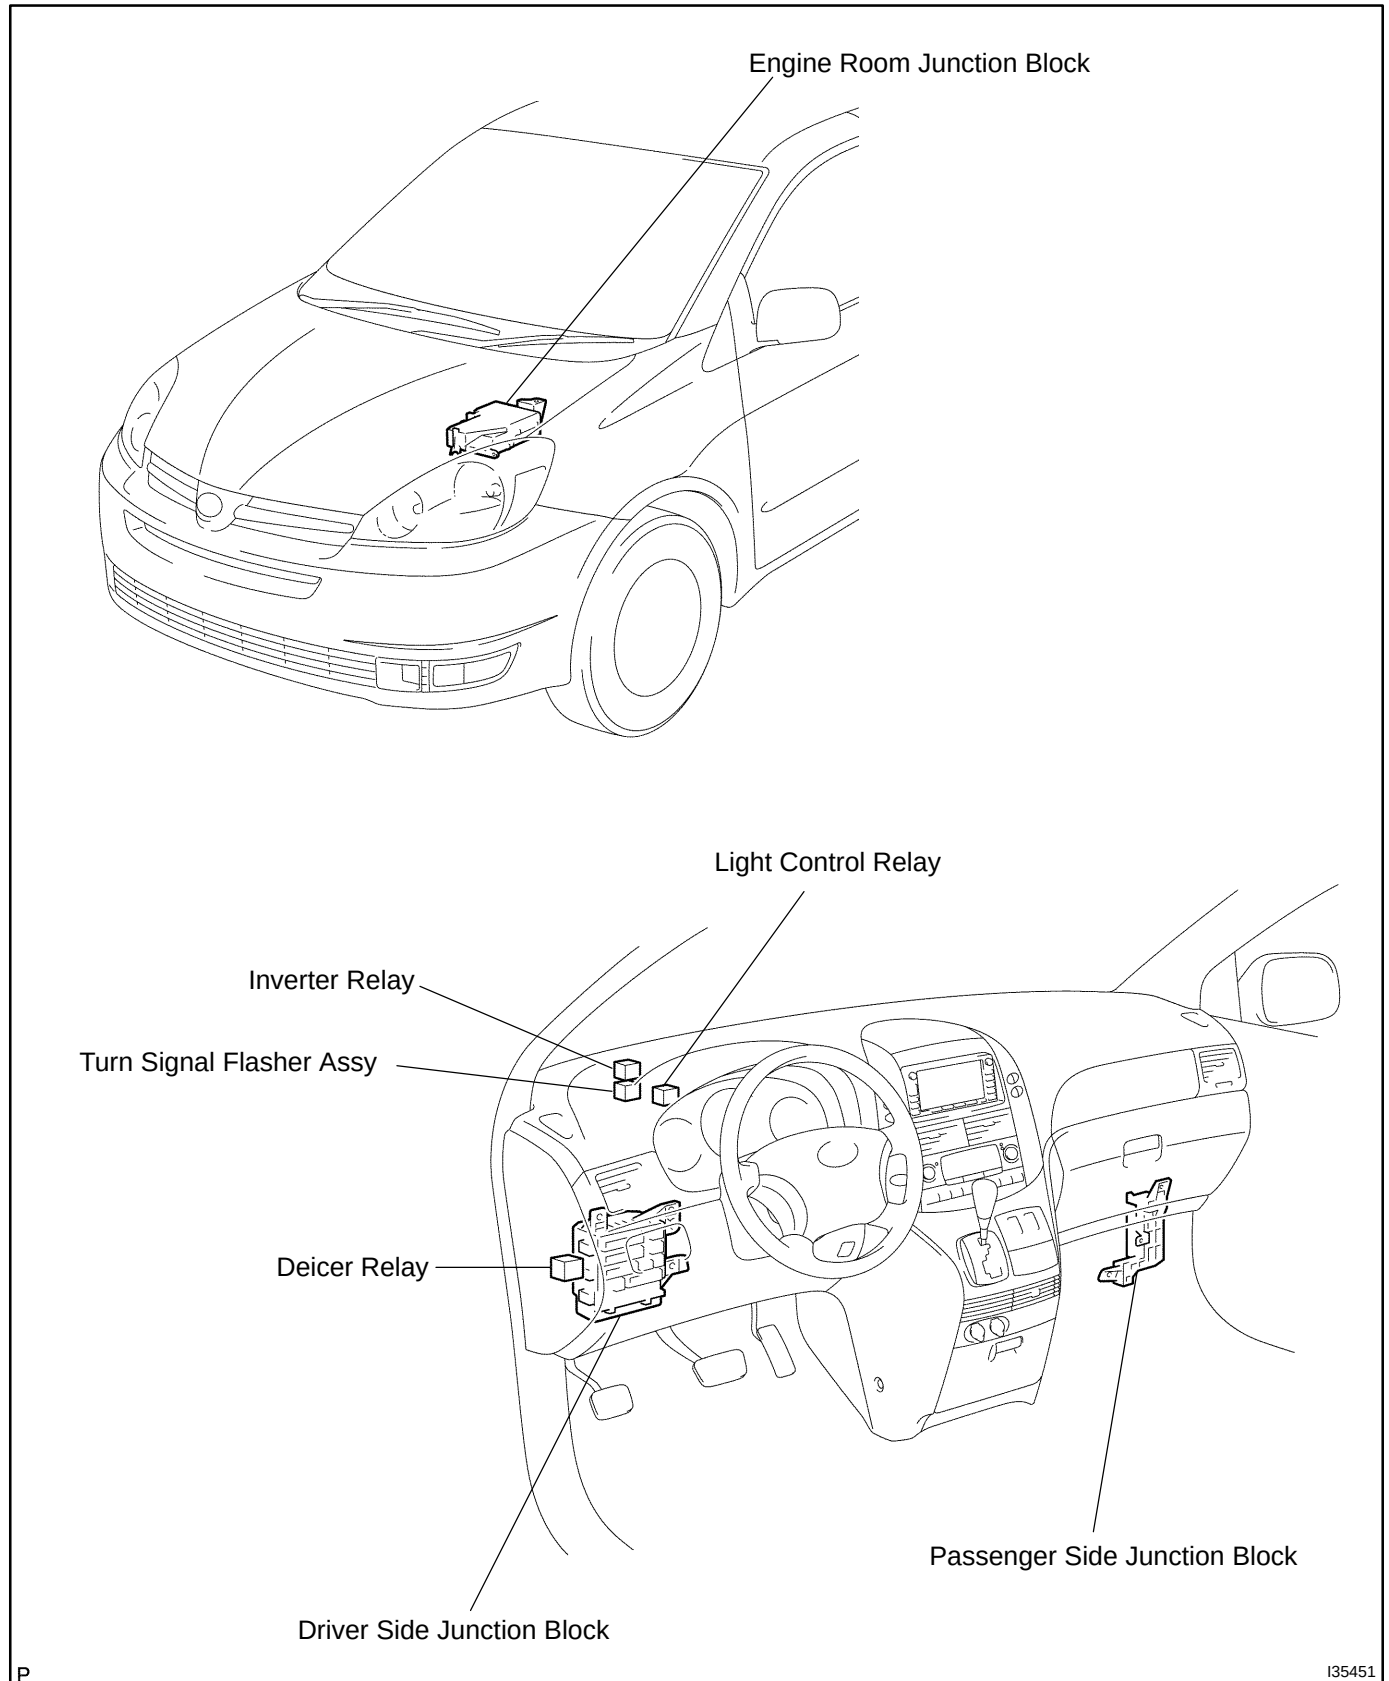


P

I35451

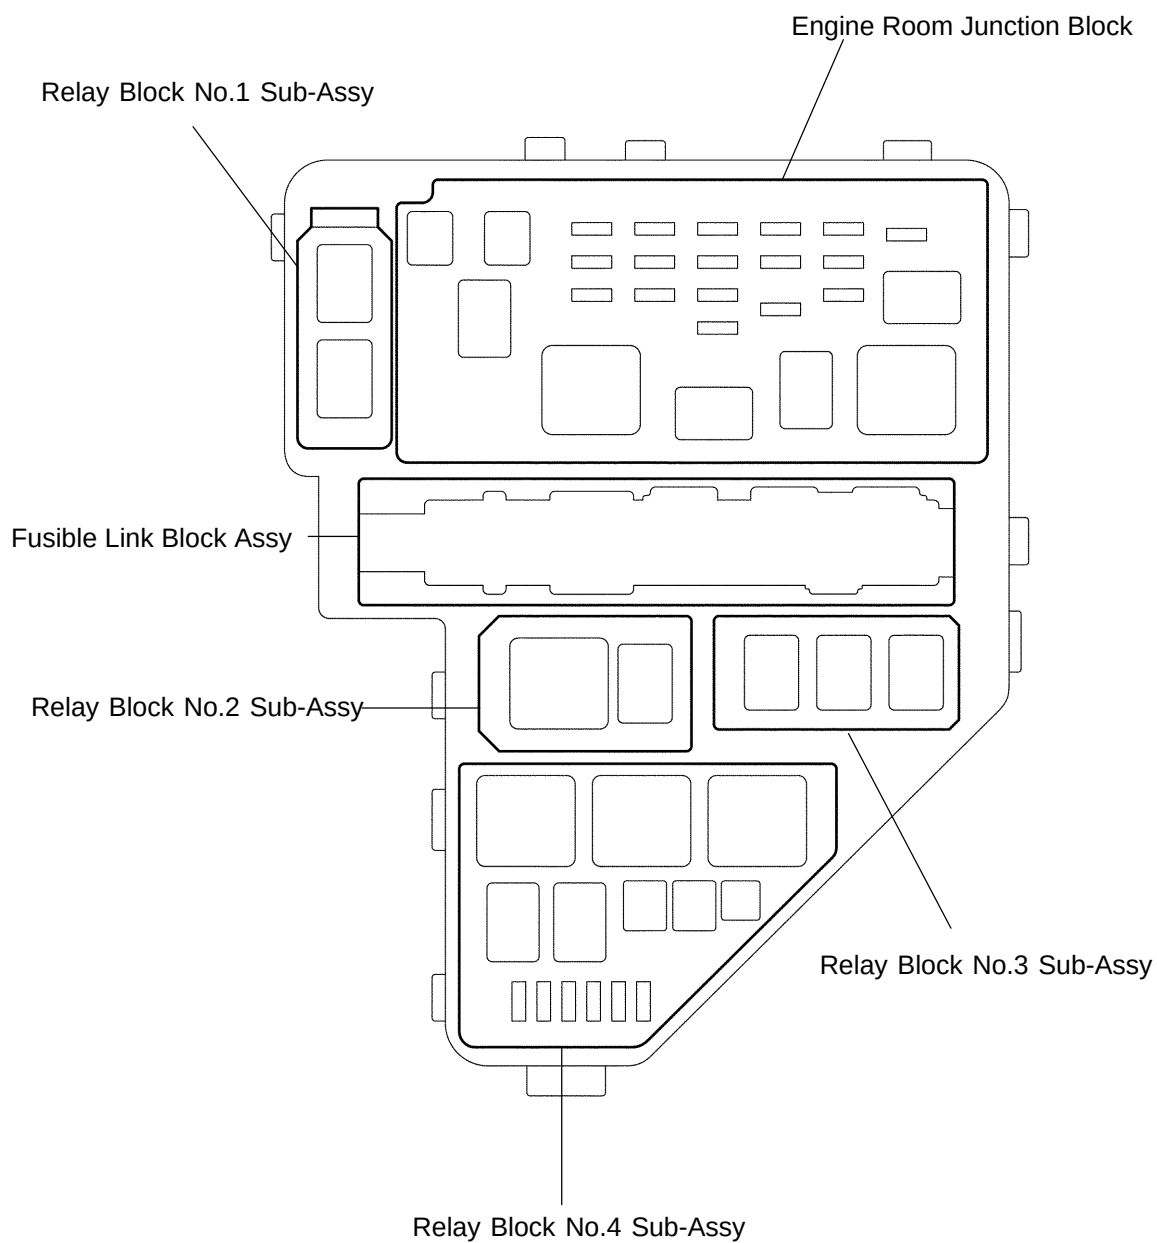Engine Room Relay Block

Engine Room Junction Block

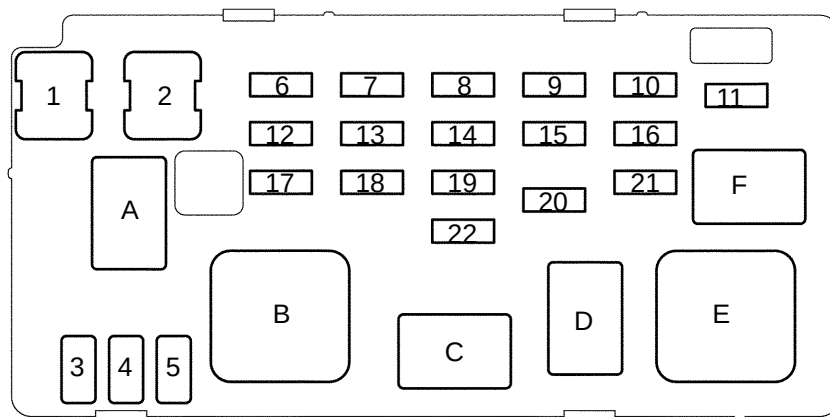


FUSE

1. MAIN	30A	8. DOOR No.2	25A	15. D.C.C	
2. AM2	30A	9. HORN	10A	16. ECU-B	10A
3. -		10. DOME	10A	17. H-LP RH	15A
4. -		11. RAD No.1	20A	18. H-LP LL	15A
5. -		12. EFI No.1	20A	19. RAD No.3	30A
6. ETCS	10A	13. ALT-S	7.5A	20. EFI No.2	10A
7. DRL	20A	14. HAZ	15A	21. -	
				22. A/F	25A

RELAY

A. C/OPEN
B. HEAD
C. EFI
D. SHORT
E. DEFOG
F. HORN


Relay Block No.1 Sub-Assy

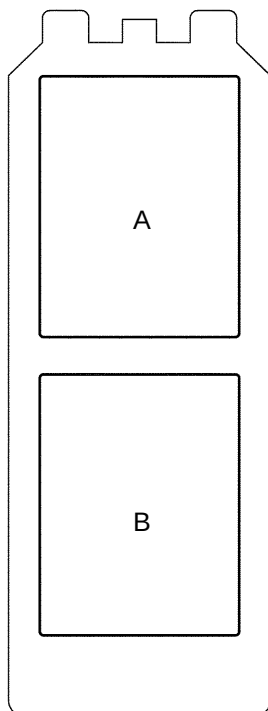

RELAY

A. BRK
B. A/F


Relay Block No.2 Sub-Assy

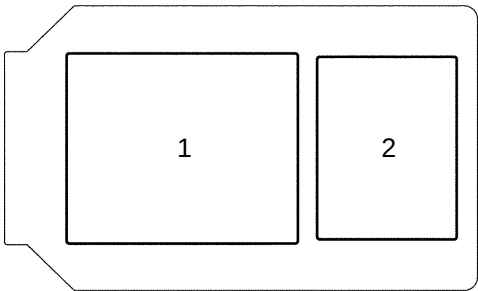

RELAY

- 1. VSC MTR
- 2. VSC FAIL


Relay Block No.3 Sub-Assy

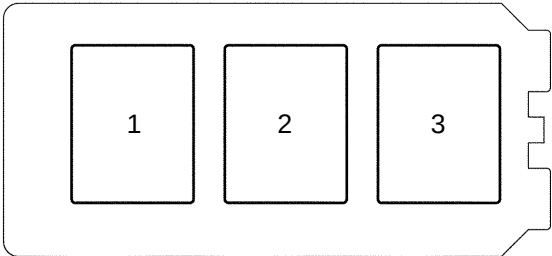

RELAY

- 1. DRL No.4
- 2. DRL No.2
- 3. DRL No.3


Fusible Link Block Assy

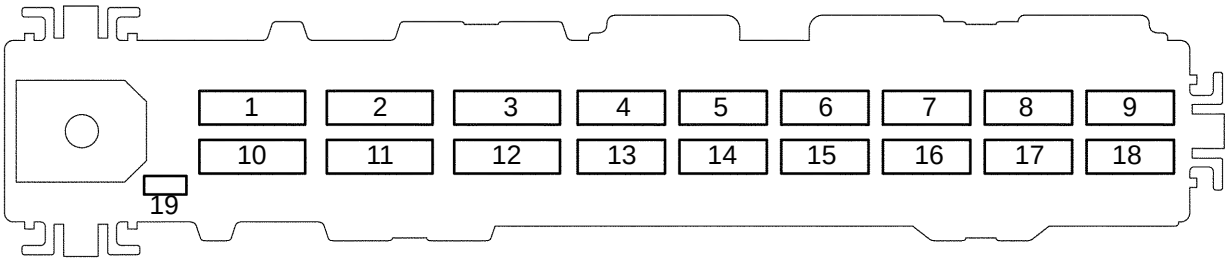

FUSE

- | | | | | |
|----------|----------|-----|----------|------|
| 1. - | 7. L-PSD | 30A | 13. ABS2 | 30A |
| 2. SPARE | 8. RR AC | 40A | 14. - | |
| 3. HTR | 9. DEF | 40A | 15. ST | 30A |
| 4. FAN | 10. ABS1 | 50A | 16. - | |
| 5. PBD | 11. - | | 17. - | |
| 6. R-PSD | 12. - | | 18. - | |
| | | | 19. ALT | 140A |


Relay Block No.4 Sub-Assy

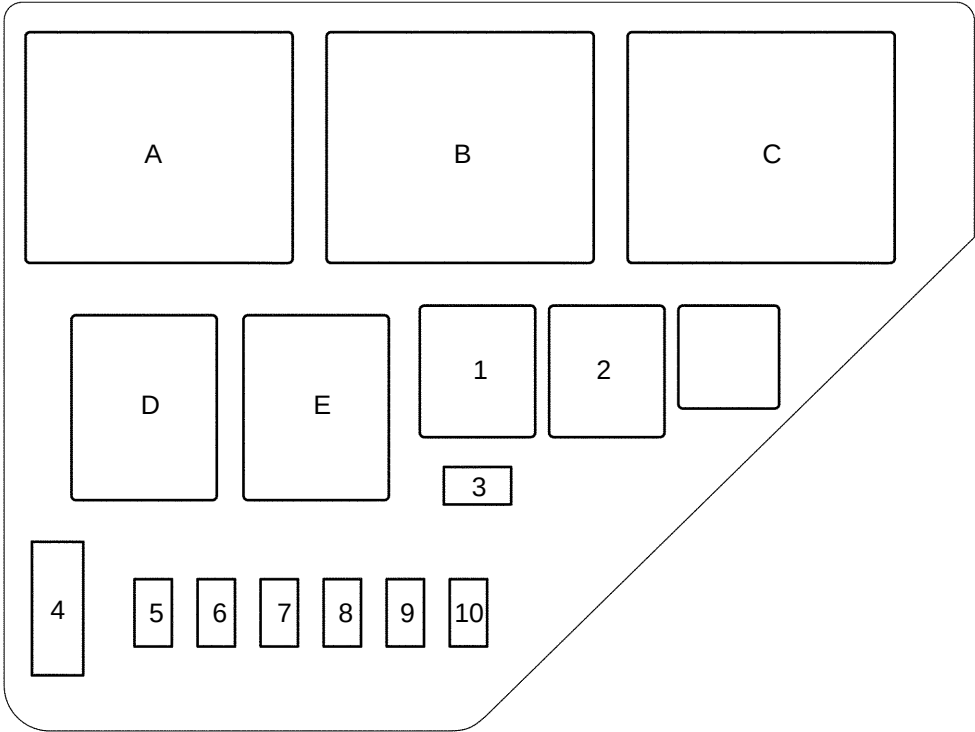

RELAY

FUSE

A. FAN	1. -	6. H-LP LH	10A
B. RR A/C	2. -	7. RSE	7.5A
C. HTR	3. -	8. -	
D. ST	4. -	9. -	
E. MG CLT	5. H-LP RH	10. -	10A

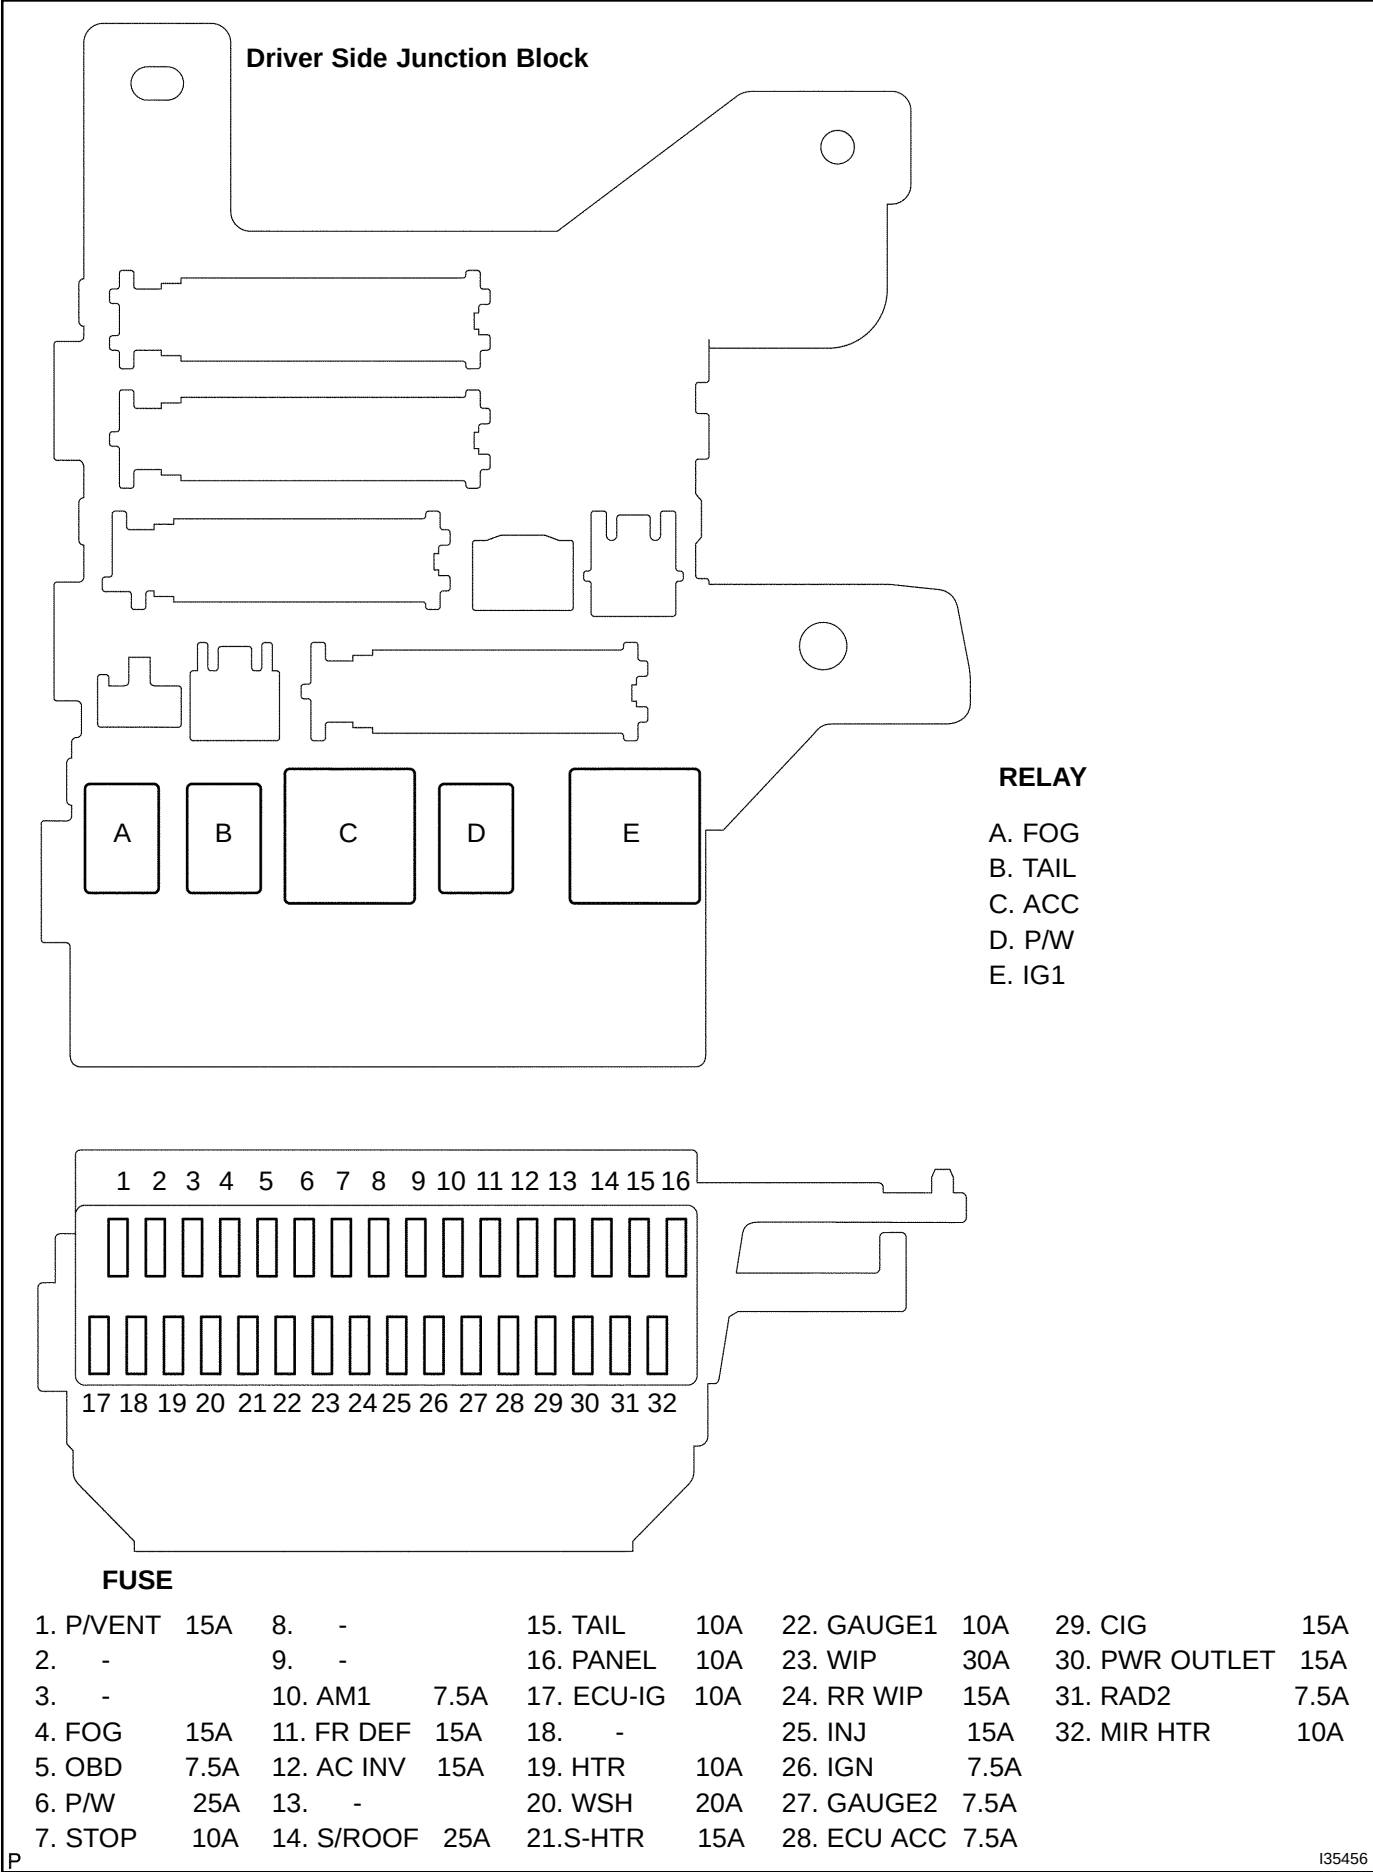

Passenger Side Junction Block

