

DTC INDEX - THEORY & OPERATION (N54)

Theory & Operation - 528i, 528xi, 535i, 535xi, X6

DIAGNOSTIC TROUBLE CODE INDEX

DTC	Definition
<u>P0420, P0430</u>	Catalyst Monitoring
<u>P0300, P0301, P0302, P0303, P0304, P0305, P0306, P1396</u>	Misfire Monitoring
<u>P0440</u>	EVAP - Functional check canister purge solenoid (CPS)
<u>P0442, P0456</u>	EVAP system leak measurement (Module DM-TL)
<u>P1434, P1447, P1448, P1449</u>	EVAP pump current (Comprehensive Component, appending to EVAP)
<u>P0171, P0174, P0172, P0175</u>	Fuel System Monitoring Lambda adaptation
<u>P2096, P2098, P2097, P2099</u>	Fuel System Monitoring Trim Control Plausibility Monitoring
<u>P119D, P119E</u>	Diagnosis of Injector Aging
<u>P140E, P142E, P142F</u>	Injection Deactivation
<u>P3283, P3284, P0088, P302C, P302E, P303A, P303C, P3049</u>	High Pressure Fuel Control System
<u>P0193, P0192, P0001, P0003, P0004</u>	Fuel Regulators/Valves/Sensors (Comprehensive Component, appending to Fuel System)
<u>P2068, P2067, P0463, P0462</u>	Fuel Level Sensor electrical circuit continuity check
<u>P144B</u>	Fuel Level Sensor signal correlation check
<u>P0131, P0151, P0132, P0152</u>	Upstream Oxygen Sensor - Short Circuit Monitoring
<u>P112C, P112D, P2626, P2629, P2243, P2247</u>	Upstream Oxygen Sensor - Open Circuit Monitoring
<u>P3022, P3023, P3024, P3025</u>	Upstream Oxygen Sensor - Signal Controller Monitoring
<u>P2414, P2415</u>	Upstream Oxygen Sensor - Signal Activity Check
<u>P0040</u>	Upstream Oxygen Sensor - Swapped Sensors Check
<u>P2195, P2197, P2196, P2198</u>	Upstream Oxygen Sensor - Active Signal Check (Shift to lean/rich)
<u>P0133, P0153</u>	Upstream Oxygen Sensor - Signal Dynamic Monitoring (Slow Response)
<u>P2297, P2298</u>	Upstream Oxygen Sensor - Signal Monitoring During DFCO (Deceleration fuel cut off)
<u>P3026, P3027, P0135, P0155, P165F, P166F</u>	Upstream Oxygen Sensor - Heater Monitoring
<u>P0030, P0050, P0031, P0051, P0032, P0052</u>	Upstream Oxygen Sensor - Heater Circuit Monitoring
<u>P0137, P157, P0138, P158, P0140, P0160</u>	Downstream Oxygen Sensor - Circuit Monitoring
<u>P013E, P014A</u>	Downstream Oxygen Sensor - Signal Dynamic

	Check during Deceleration Fuel Cut-off (DFCO)
<u>P013A, P013C</u>	Downstream Oxygen Sensor - Dynamic/Transition Time in Sensor Midpoint Range Monitoring
<u>P114A, P114C, P114B, P114D</u>	Downstream Oxygen Sensor - Signal Activity Check
<u>P2270, P2272, P2271, P2273, P0041</u>	Downstream Oxygen Sensor - Signal Check (Stuck lean/rich, Swap)
<u>P0141, P0161</u>	Downstream Oxygen Sensor - Heater Plausibility Monitoring
<u>P0036, P0056, P0037, P0057, P0038, P0058</u>	Downstream Oxygen Sensor - Heater Circuit Monitoring
<u>P0128</u>	Thermostat
<u>P0117, P0118</u>	Engine Coolant Temperature (ECT) Diagnosis - Electrical check
<u>P3198</u>	Engine Coolant Temperature (ECT) Gradient Diagnosis
<u>P3199</u>	Engine Coolant Temperature (ECT) Stuck Diagnosis
<u>P316A</u>	Engine Coolant Temperature (ECT) Stuck in Range Diagnosis
<u>P1515</u>	Engine off Timer (EOT) Monitoring
<u>P1561, P1562</u>	Cold Start Emission Reduction Strategy Monitoring
<u>P0012, P0015</u>	Variable Camshaft Timing (Vanos) (detection of mechanical IVVT error)
<u>P0340, P0365, P1300, P130A, P13B0, P13B4, P13B6, P13BA, P13BC</u>	Camshaft Position Sensor (CMP)
<u>P0016, P13B2</u>	Camshaft Crankshaft synchronization
<u>P0335, P0336, P0370, P138F</u>	Crankshaft Position Sensor (CRK)
<u>P0072, P0073</u>	CAN based Ambient Air Temperature - Signal Diagnosis
<u>P0071</u>	Ambient Air Temperature - Signal Plausibility Check
<u>P0112, P0113</u>	Electrical Intake Air Temperature Diagnosis
<u>P115E, P11BB</u>	Intake Air Gradient Check
<u>P0111, P111E, P111F</u>	Intake Air Plausibility Check
<u>P2100</u>	Electronic Throttle Control (ETC) Power Stage Diagnosis (H-bridge)
<u>P1694, P169A</u>	ETC spring check (start routine)
<u>P1632, P1633, P16BA, P1635, P1644</u>	ETC adaptation diagnosis
<u>P11AA, P1638, P1639</u>	Electronic Throttle Control (ETC) Motor Control Performance
<u>P1417</u>	Electronic Throttle Control (ETC) air supply rationality check

<u>P0506, P0507, P1561, P1562</u>	Idle Speed Control Rationality Diagnosis
<u>P112E, P112F</u>	Manifold Pressure Throttle Position Sensor - Rationality check
<u>P129B, P129C</u>	Manifold Pressure Sensor and Ambient Pressure - Rationality check
<u>P0503</u>	Vehicle speed sensor - signal plausibility check
<u>P0500</u>	Vehicle speed sensor - signal check
<u>P0326, P0327, P0328, P1327, P1328, P135B</u>	Knock Sensor