


FRONT BUMPER COMPONENTS


7816V-02

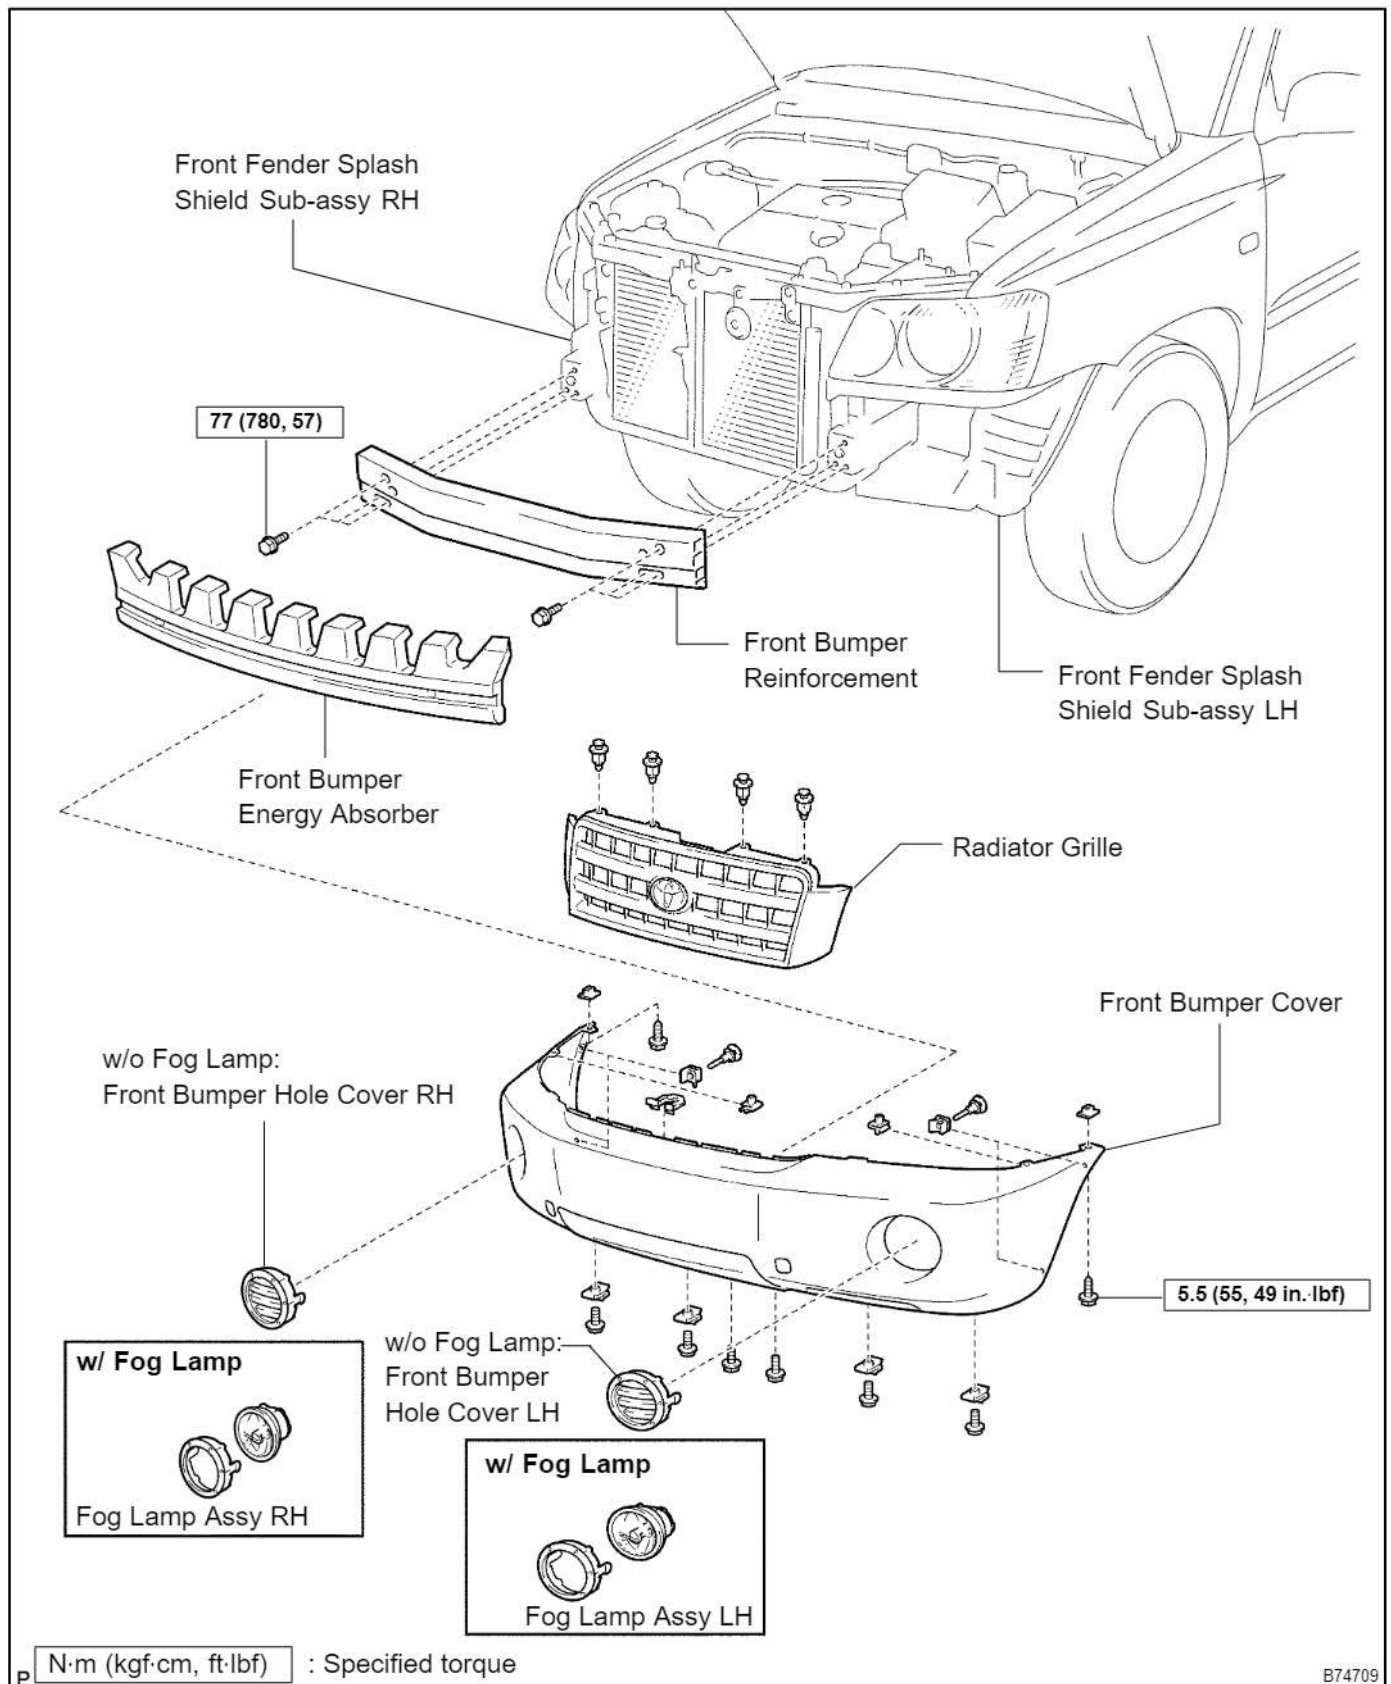

B74709

REAR BUMPER COMPONENTS

7816X-01


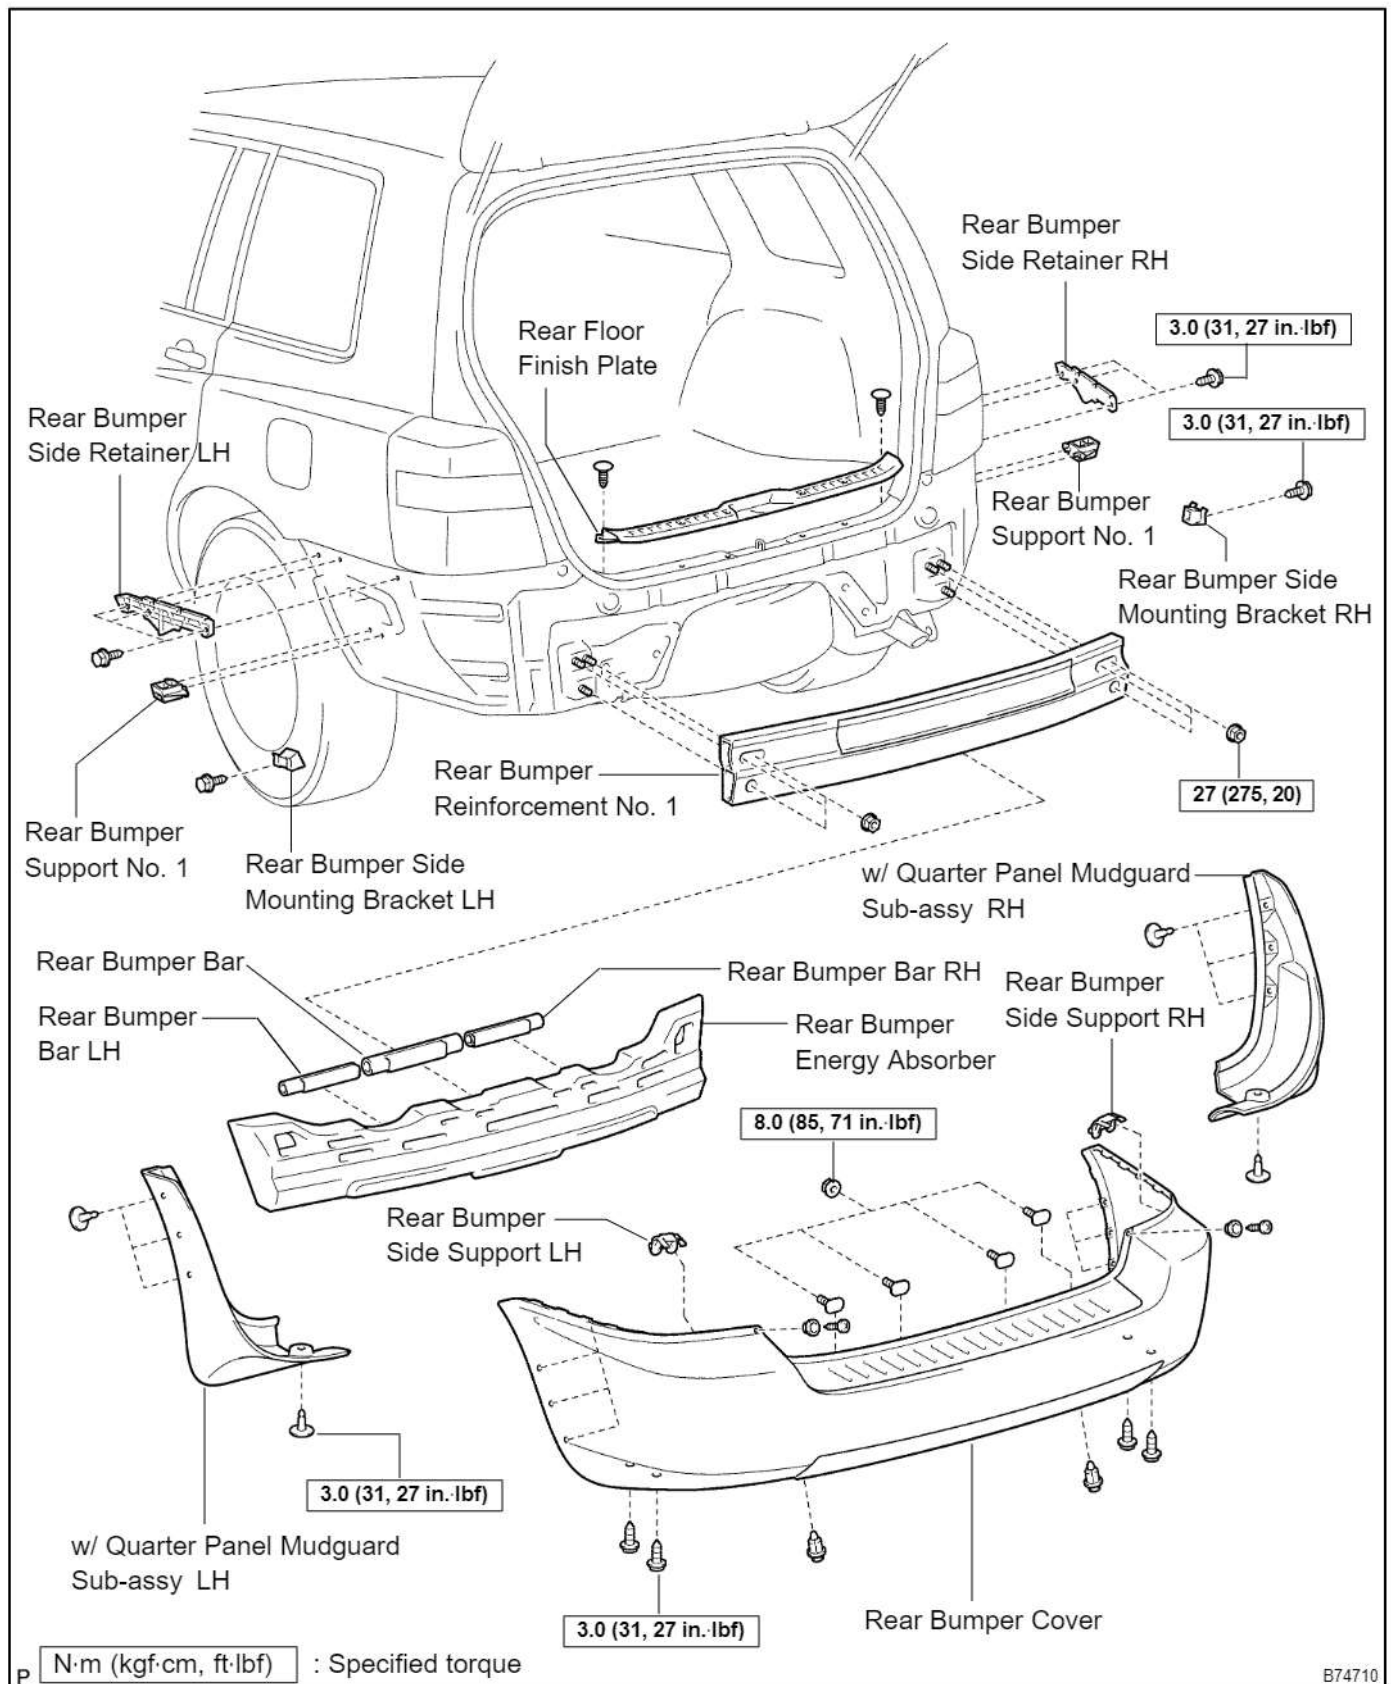


B74710

ROOF HEADLINING ASSY COMPONENTS


7816Z-01

w/ Sliding Roof

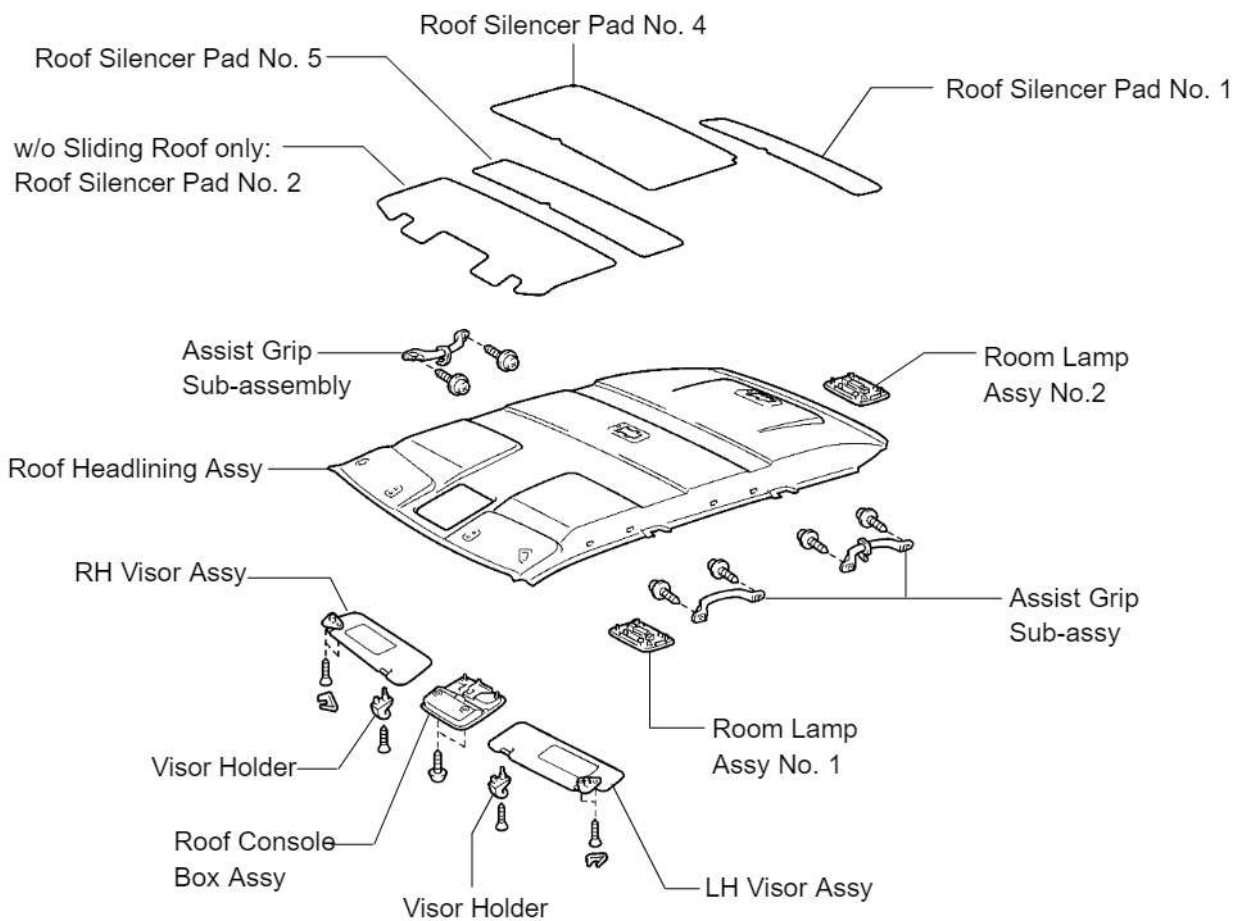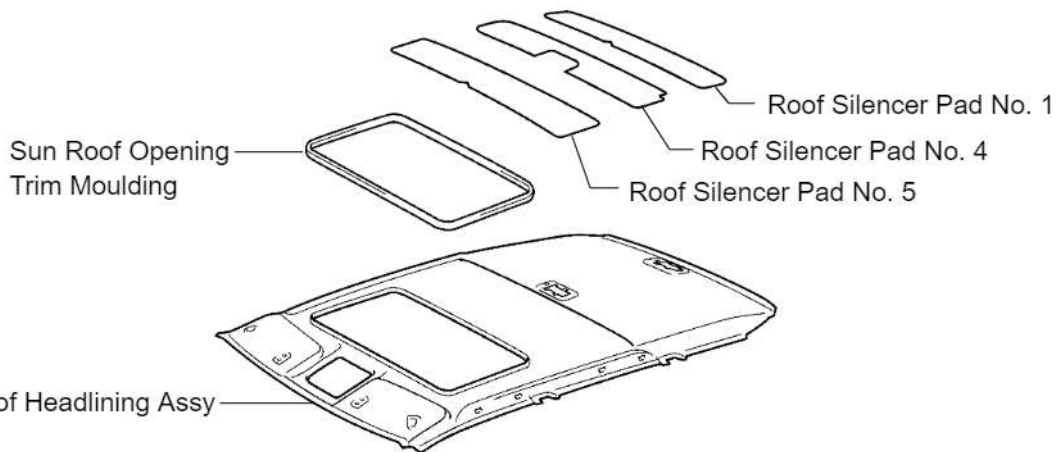


0

B77744

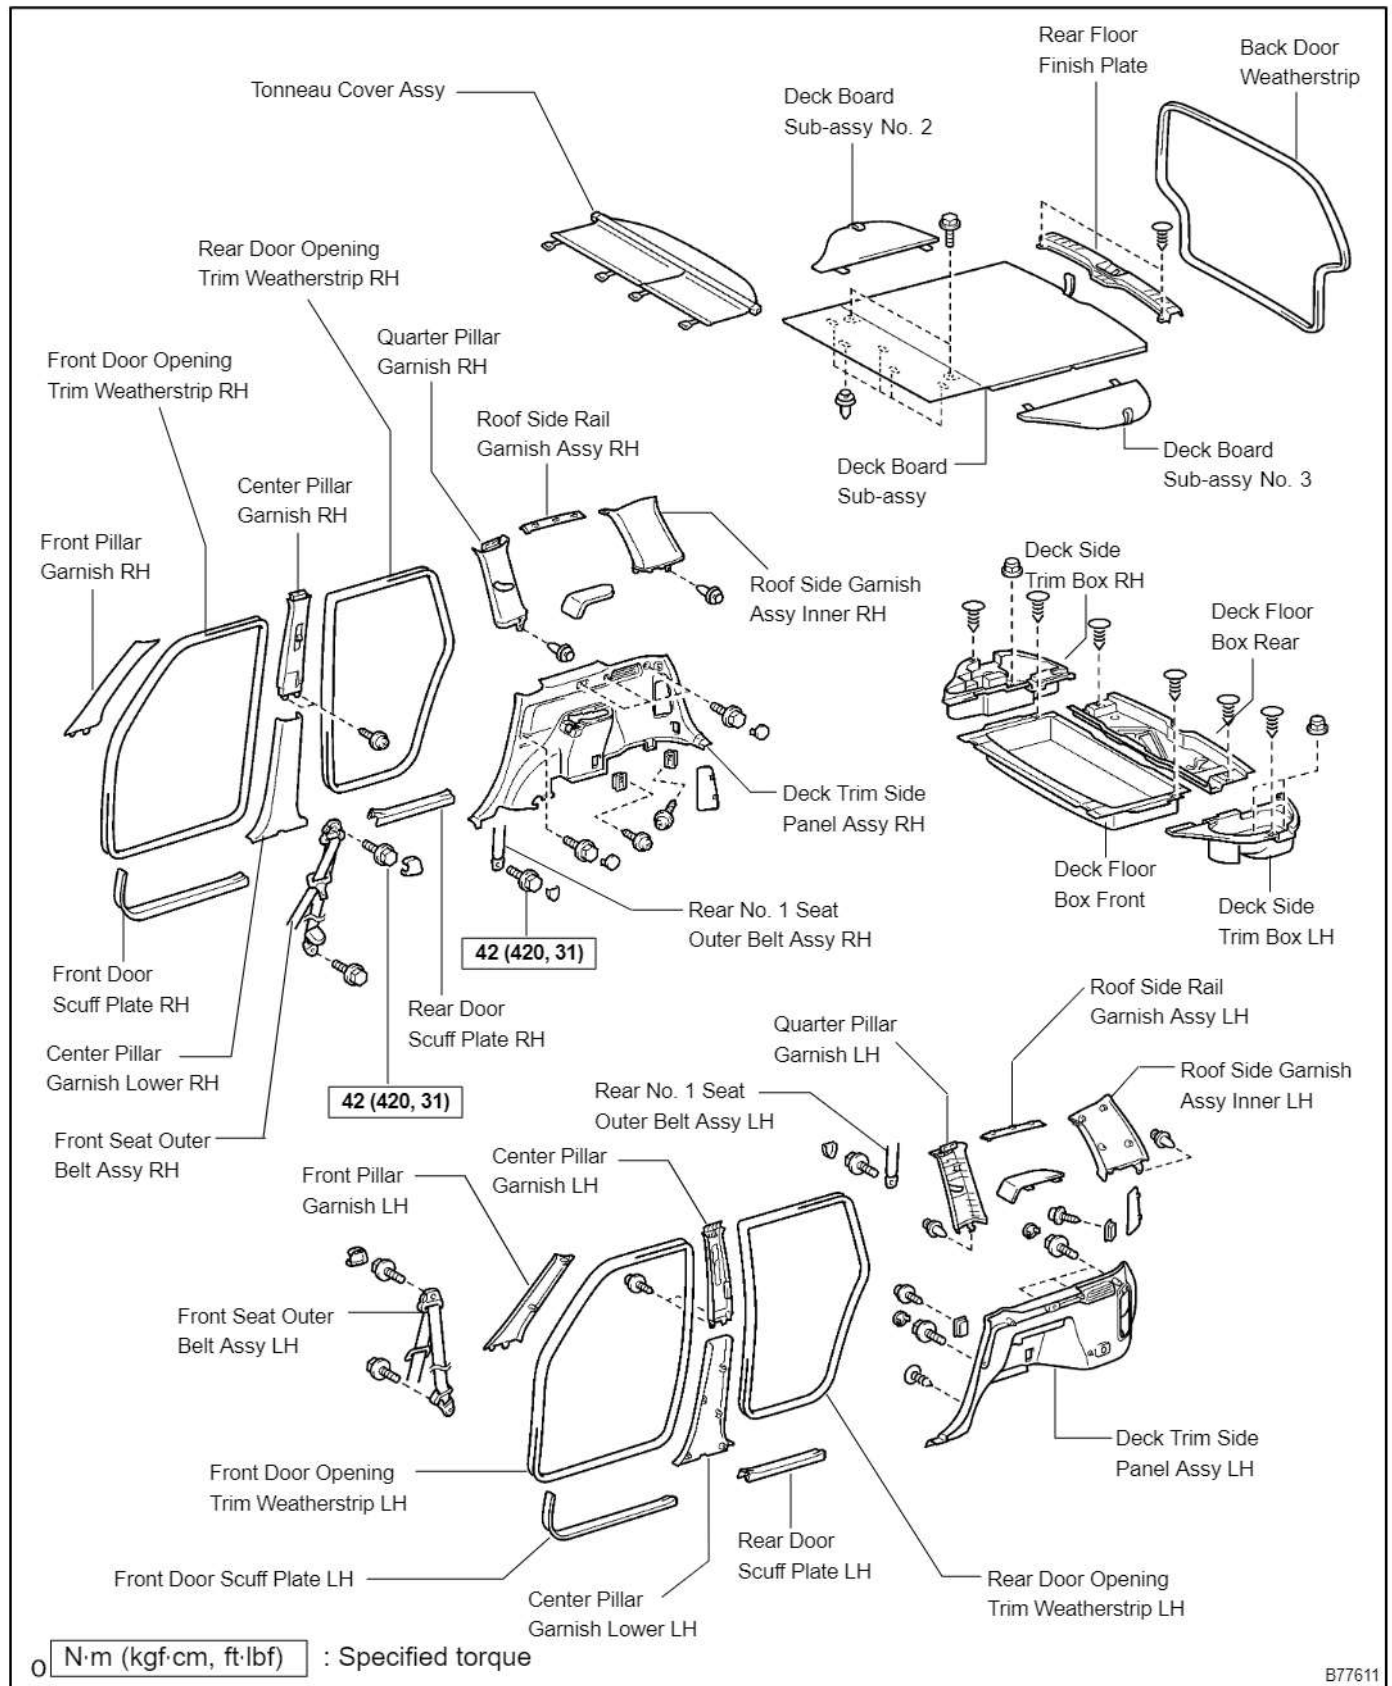

B77611

w/ Rear No. 2 Seat

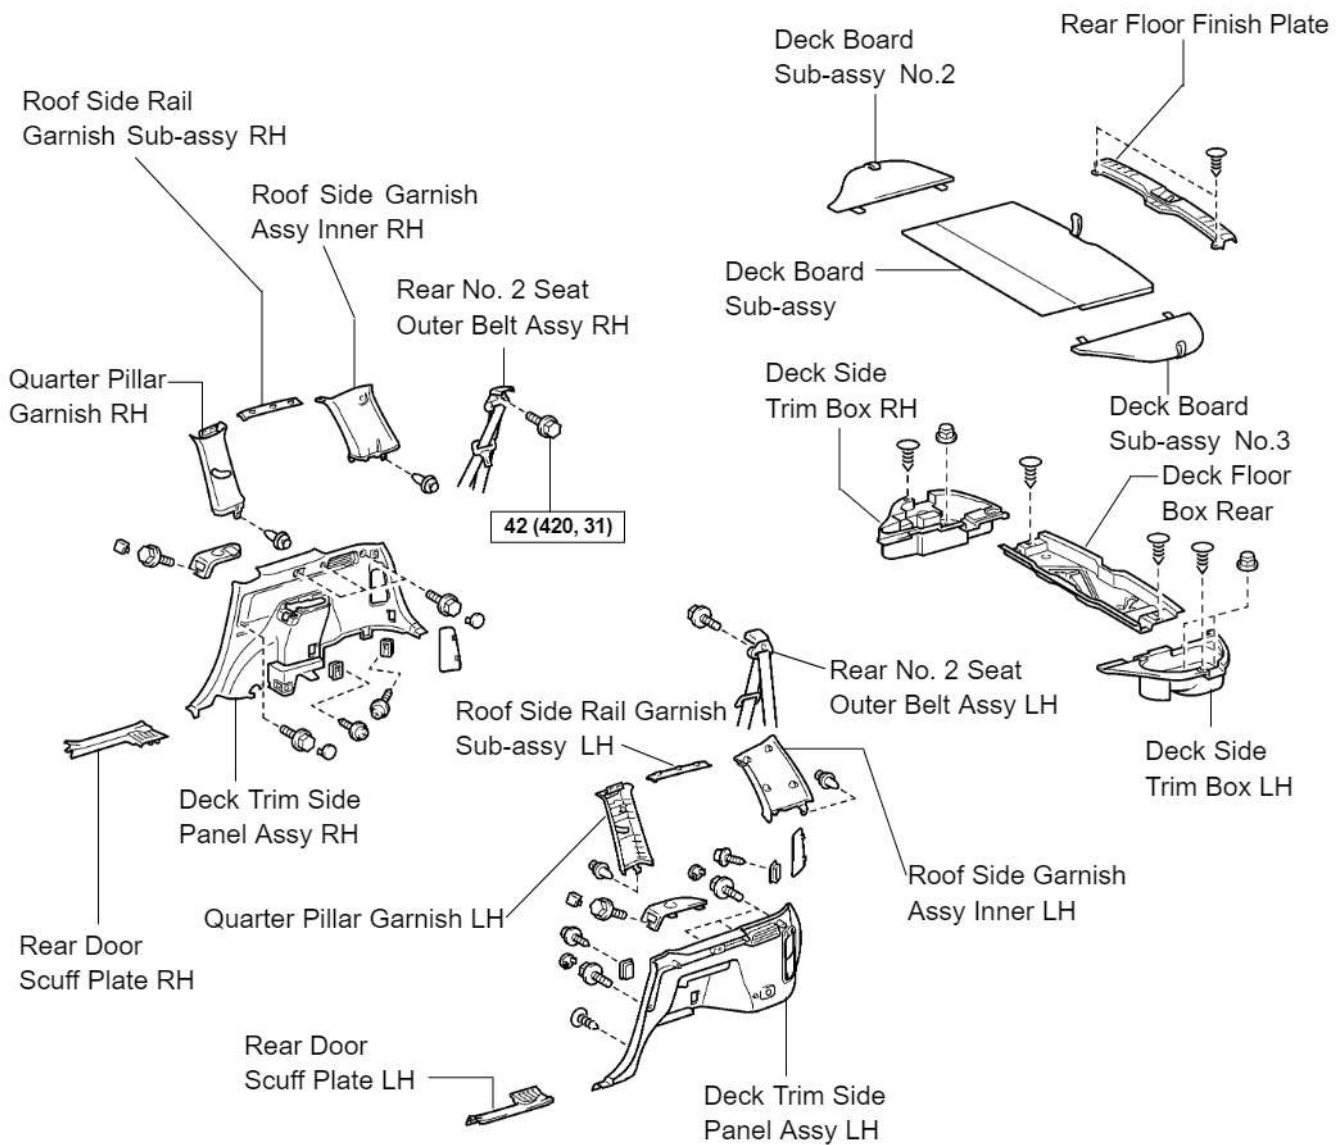


0 N·m (kgf·cm, ft·lbf) : Specified torque

B77612

REAR SPOILER REPLACEMENT

7802Y-03

1. REMOVE BACK WINDOW PANEL TRIM UPPER (See page 75-20)

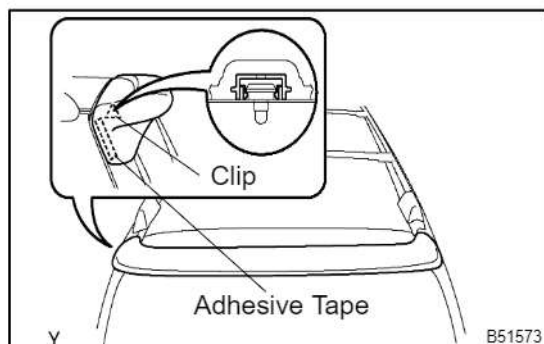

2. REMOVE REAR SPOILER

- Remove the 2 bolts and nut.
- Using a heat light, heat the body and rear spoiler to 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the rear spoiler excessively.

- Tie both piano wire ends to a wooden block or a similar object.
- Scrape the adhesive tape off by pulling the piano wire.

NOTICE:

- If reusing the rear spoiler, take care not to damage the rear spoiler.
- Do not damage the body.

- Remove the rear spoiler.

3. INSTALL REAR SPOILER

- Using a heat light, heat the body and rear spoiler surface to 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the body and rear spoiler excessively.

- Remove the adhesive tape from the body.
- Wipe off the stains with cleaner.
- If reusing the rear spoiler:
Clean the rear spoiler .
 - Using a heat light, heat the body and rear spoiler to 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the body and rear spoiler excessively.

- Remove the adhesive tape from the rear spoiler.
- Wipe off the stains with cleaner.

- Apply new adhesive tape to the rear spoiler as shown in the illustration.


- Using a heat light, heat the body and rear spoiler.

Heating temperature:

Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and rear spoiler excessively.

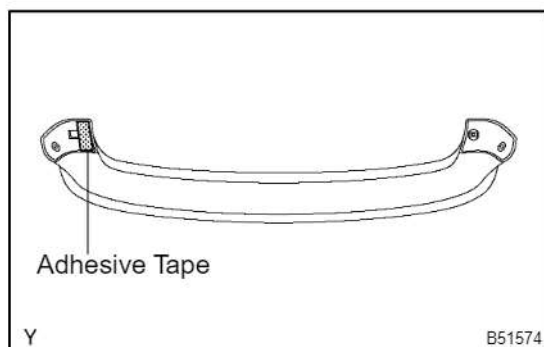

- (f) Lift the rear spoiler and release the release sheet from the surface of the rear spoiler.

NOTICE:


- **When the rear spoiler release sheet is removed, take care that no dirt or no dust can get onto the uncoated area.**
- **Do not apply excessive force onto the rear spoiler but steady pressure with your thumbs.**

FRONT DOOR BELT MOULDING ASSY LH REPLACEMENT

78026-07

HINT:

- The installation procedures are the removal procedures in reverse order.
 - Use the same procedures for the RH side and LH side.
1. **REMOVE POWER WINDOW REGULATOR SWITCH ASSY** (See page 75-6)
 2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page 75-6)
 3. **REMOVE DOOR PULL HANDLE** (See page 75-6)
 4. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH** (See page 75-6)

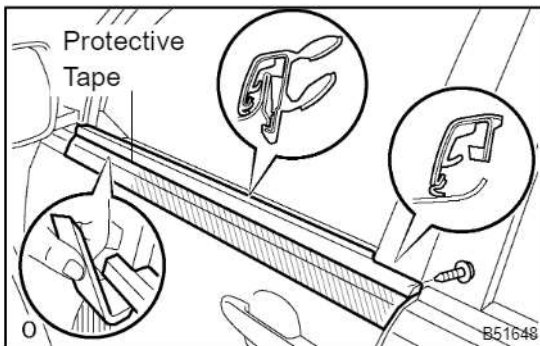

5. **REMOVE FRONT DOOR BELT MOULDING ASSY LH**
 - (a) Remove the screw.
 - (b) Put protective tape under the moulding.
 - (c) Using a moulding remover or scraper, remove the moulding.

REAR DOOR BELT MOULDING ASSY LH REPLACEMENT

7802A-06

HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.


1. **REMOVE DOOR PULL HANDLE** (See page [75-13](#))
2. **REMOVE REAR DOOR TRIM BOARD SUB-ASSY LH** (See page [75-13](#))



3. **REMOVE REAR DOOR BELT MOULDING ASSY LH**
 - (a) Remove the screw.
 - (b) Put protective tape under the moulding.
 - (c) Using a moulding remover or scraper, remove the moulding.


NAME PLATE REPLACEMENT

78025-07

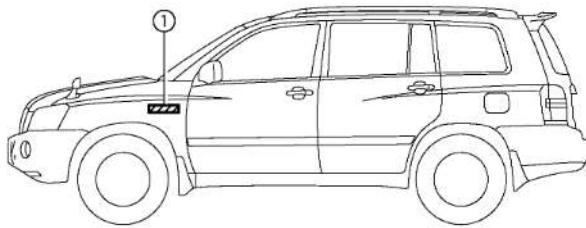


① FENDER NAME PLATE



(RH)

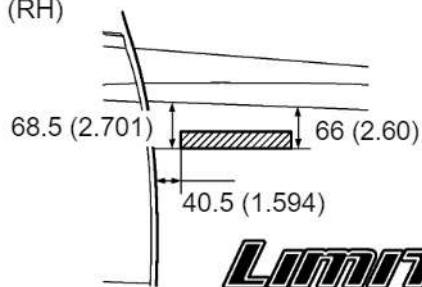


② BACK DOOR NAME PLATE (RIGHT)

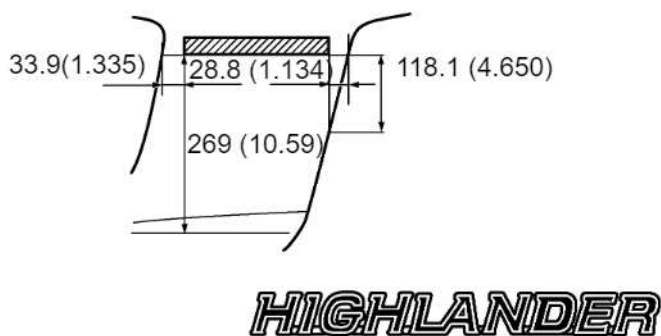

③ BACK DOOR NAME PLATE (LEFT)

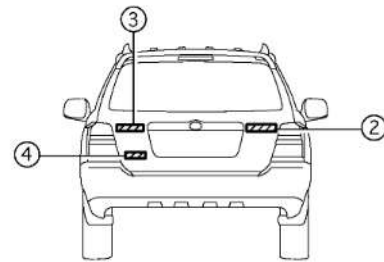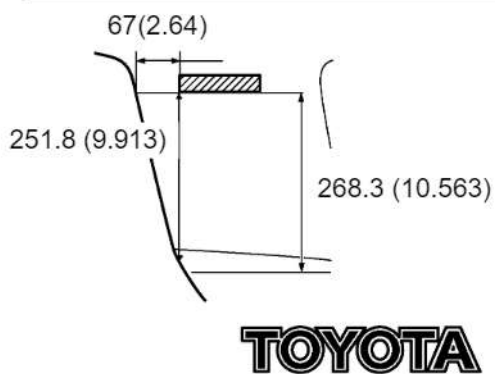


(LH)

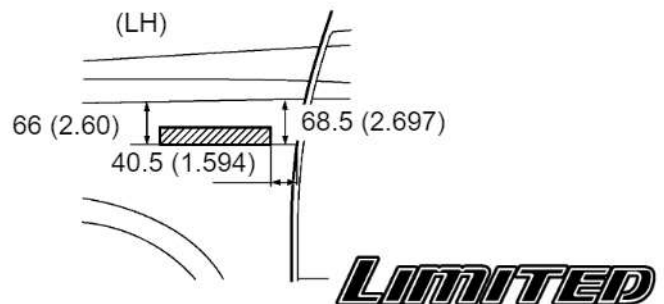


④ BACK DOOR NAME PLATE (LEFT)


(3MZ-FE 4WD)

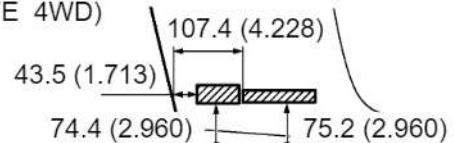

(4WD)

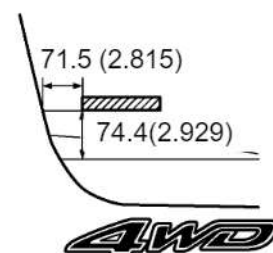

(3MZ-FE)

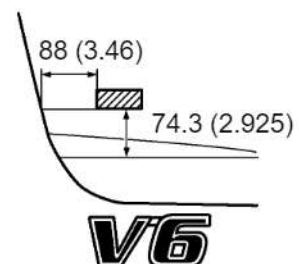

mm (in.)

B51620


ROOF DRIP SIDE FINISH MOULDING CENTER LH

REPLACEMENT

7802B-07

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

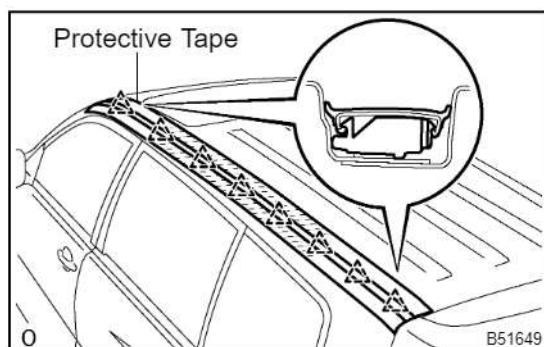

1. REMOVE ROOF DRIP SIDE FINISH MOULDING CENTER LH

- Cover the circumference of the moulding with protective tape for protection.
- Using a remover for the roof moulding, release the engagements of the clips in both front and rear ends of the moulding, and then remove the moulding.

NOTICE:

- Do not remove the clips.
- In case that the clips are damaged or removed accidentally, exchange them for supplied ones.

2. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP NO.2

NOTICE:

Only when exchanging the clips.

- Remove the adhesive tape that remains on the mounting surface of the body, and then clean the surface with white gasoline.
- Using a heat light, heat up the clip installation surfaces of the body and moulding.

Heating temperature:

Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)


NOTICE:

Do not heat the body and moulding excessively.

- Set the supplied clips into the positions as shown in the illustration, and press-fit those clips by hand to install them.
- Install the moulding when 30 minutes or more have passed after press-fitting the clips.

HINT:

- Initial hardening time: 30 minutes
- Prefect hardening time: 24 hours

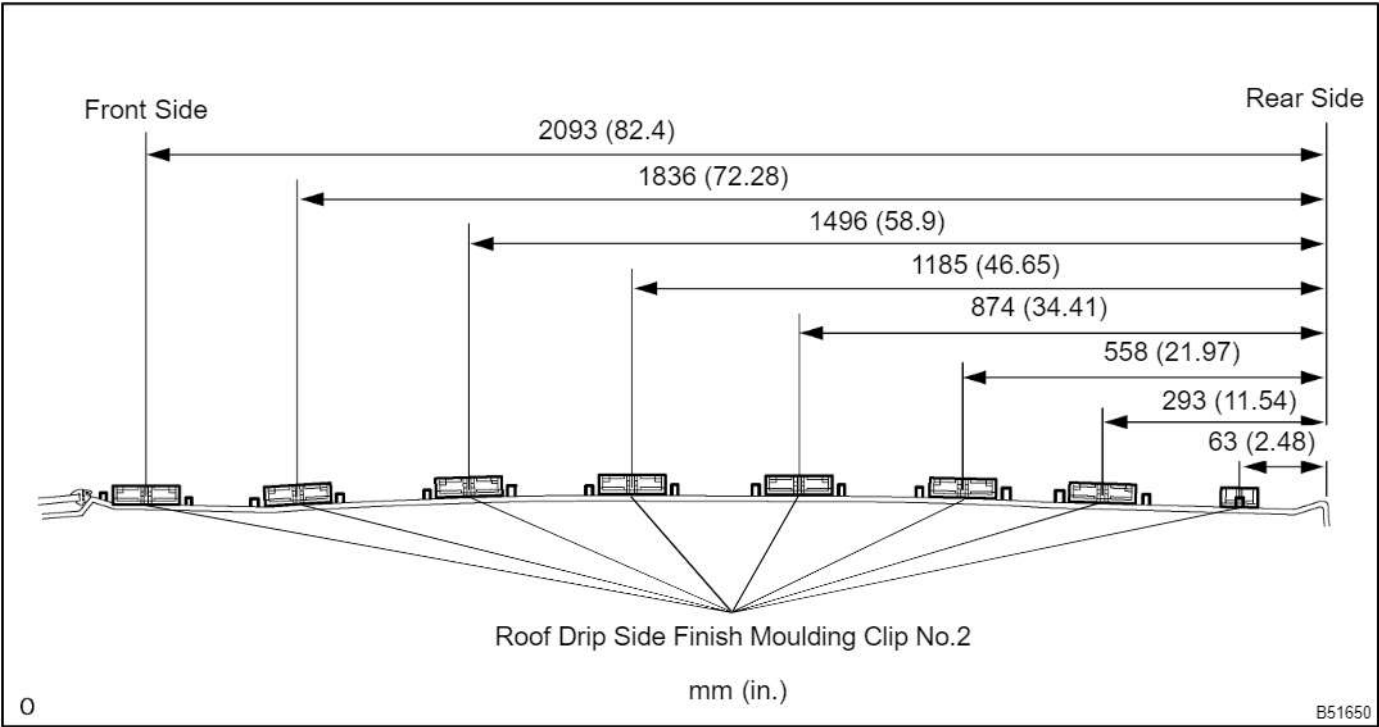

LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE

76027-07

REPLACEMENT

1. REMOVE BACK WINDOW PANEL TRIM UPPER (See page 75-20)
2. REMOVE BACK DOOR TRIM COVER RH (See page 75-20)
3. REMOVE BACK DOOR TRIM COVER LH (See page 75-20)
4. REMOVE BACK DOOR TRIM PANEL ASSY (See page 75-20)
5. REMOVE REAR SPOILER (W/ REAR SPOILER) (See page 75-20)
6. REMOVE BACK DOOR LOCK ASSY (See page 75-20)
7. REMOVE BACK DOOR HANDLE ASSY OUTSIDE (See page 75-20)
8. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE
 - (a) Remove the screws and the 2 licence plate lights.
 - (b) Remove the nut and garnish.
9. INSTALL LUGGAGE COMPARTMENT DOOR NAME PLATE NO.1
 - (a) Using white gasoline, clean the garnish installation surface.
 - (b) Using a heat light, heat the garnish and name plate to 20 to 30°C (68 to 86°F).
 - (c) Install the name plate.

NOTICE:


Do not heat the garnish and name plate excessively.

OUTSIDE MOULDING REPLACEMENT

7815W-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.

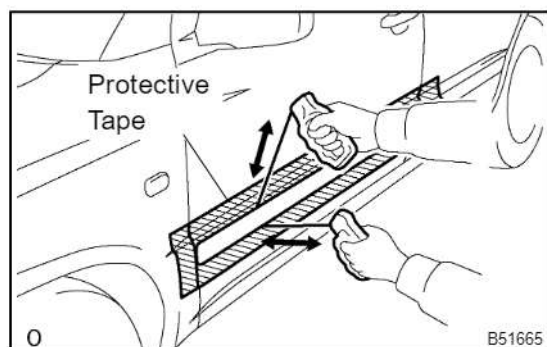**1. REMOVE OUTSIDE MOULDING**

- (a) Using a heat light, heat the body and moulding to 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the body and moulding excessively.

- (b) Tie both piano wire ends to a wooden block or a similar object.
- (c) Scrape the adhesive tape off by pulling the piano wire as shown in the illustration.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

2. INSTALL OUTSIDE MOULDING

- (a) Using a heat light, heat the body mounting surface to 40 to 60°C (104 to 140°F).

NOTICE:

Do not heat the body excessively.

- (b) Remove the protective tape from the body.
- (c) Wipe off the stains with cleaner.


(d) Clean the moulding (if reusing the moulding).

- (1) Using a heat light, heat the body and moulding to 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the body and moulding excessively.

- (2) Remove the double-sided tape from the moulding.
 (3) Wipe off the stains with cleaner.
 (4) Apply new double-sided tape to the moulding as shown in the illustration.

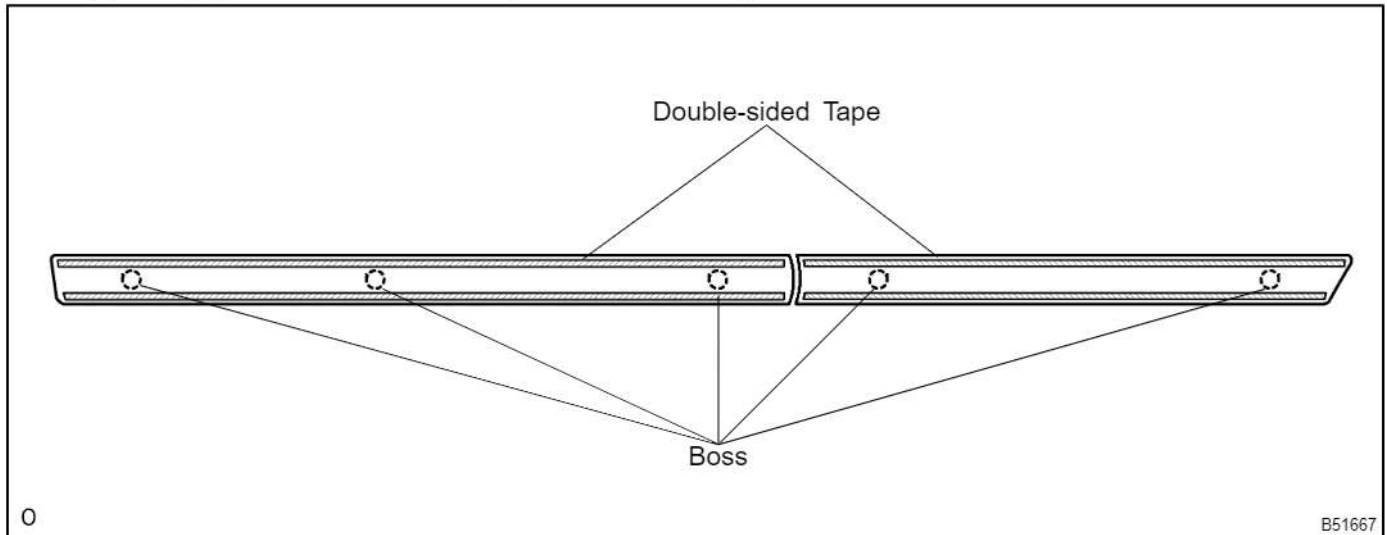

(e) Using a heat light, heat the body and moulding.

Heating temperature:

Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

(f) Remove the peeling paper from the moulding face.

NOTICE:

When the peeling paper is removed, take care that dirt or dust do not stick to the adhesive area.

(g) Attach the moulding securely to the body, as shown in the illustration.


NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

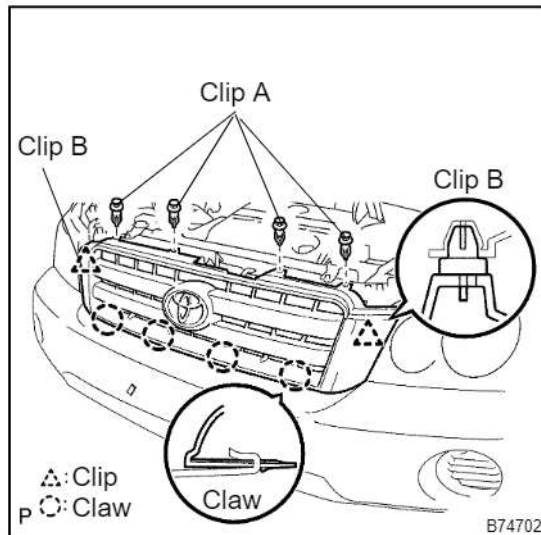


1. REMOVE RADIATOR GRILLE

- Using a screwdriver, disengage the 4 claws and remove the 4 clips labeled A, 2 clips labeled B and grille.

HINT:

Tape the screwdriver tip before use.

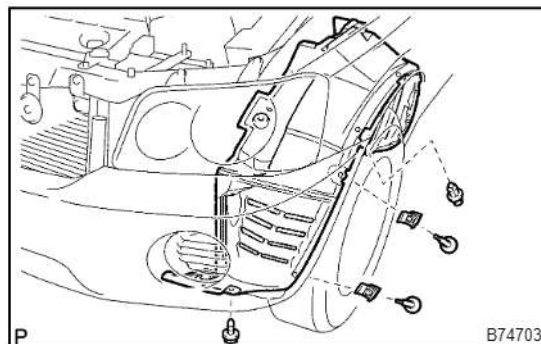

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSY LH

- Remove the screw and 3 clips.
- Partially remove the fender liner.


HINT:

It is not necessary to fully remove the fender liner completely. Partially remove it so that the bumper cover can be removed in step (4).

3. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSY RH

HINT:

Use the same procedure described for the LH side.

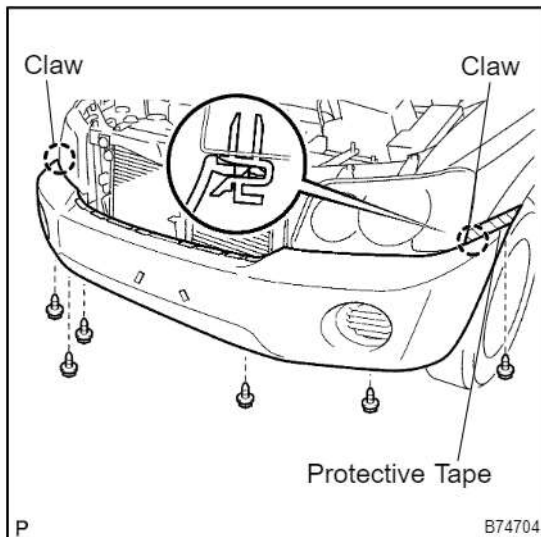

4. REMOVE FRONT BUMPER COVER


- Put protective tape under the front fender.
- Remove the 6 screws.
- Using a screwdriver, disengage the 2 claws and remove the bumper cover.

HINT:

Tape the screwdriver tip before use.

- w/ Fog lamp:
Disconnect the 2 connectors.

5. REMOVE FRONT BUMPER ENERGY ABSORBER

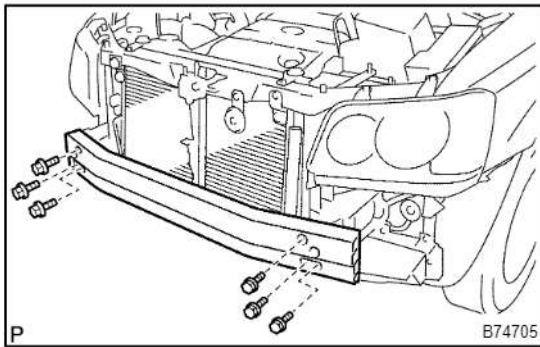


6. REMOVE FRONT BUMPER REINFORCEMENT

- Remove the 6 bolts and reinforcement.

7. REMOVE FOG LAMP ASSY LH (W/ FOG LAMP)

8. REMOVE FOG LAMP ASSY RH (W/ FOG LAMP)

9. REMOVE FRONT BUMPER HOLE COVER (W/O FOG LAMP)

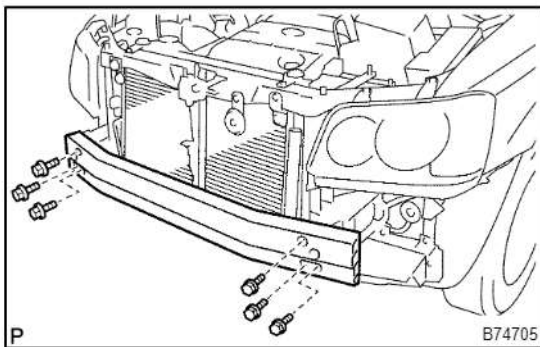

10. INSTALL FRONT BUMPER REINFORCEMENT

- Install the reinforcement with the 6 bolts.
Torque: 77 N·m (780 kgf·cm, 57 ft·lbf)

11. INSTALL FRONT BUMPER COVER


- Install the bumper cover with the 6 screws.
Torque: 5.5 N·m (55 kgf·cm, 49 in·lbf)

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

1. **REMOVE DECK FLOOR BOX FRONT**
2. **REMOVE DECK FLOOR BOX REAR**

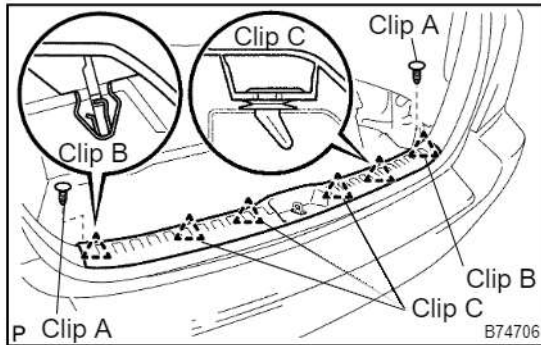


3. REMOVE REAR FLOOR FINISH PLATE

- (a) Using a screwdriver, remove the 2 clips labeled A and 2 clips labeled B, 4 clips labeled C and finish plate.

HINT:

Tape the screwdriver tip before use.

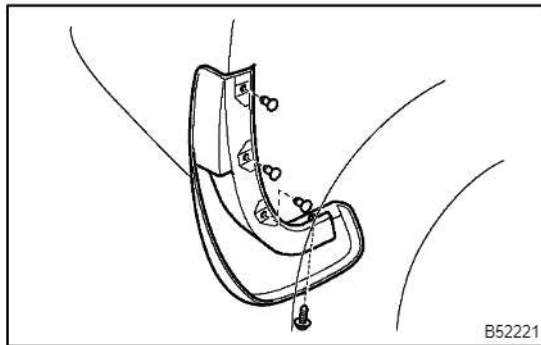


4. REMOVE QUARTER PANEL MUDGUARD SUB-ASSY REAR LH (W/ MUDGUARD)

- (a) Remove the 3 clips, screw and mudguard.

5. REMOVE QUARTER PANEL MUDGUARD SUB-ASSY REAR RH (W/ MUDGUARD)


HINT:

Use the same procedure described for the LH side.

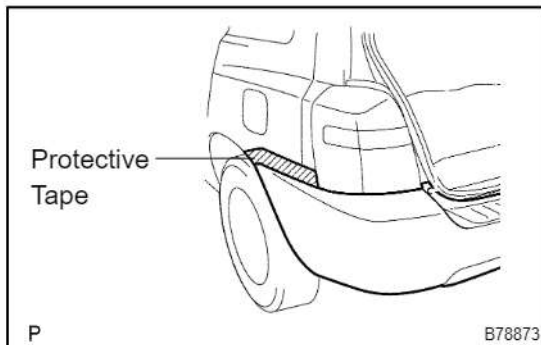

6. REMOVE REAR BUMPER COVER

- (a) Put protective tape under the quarter panel.

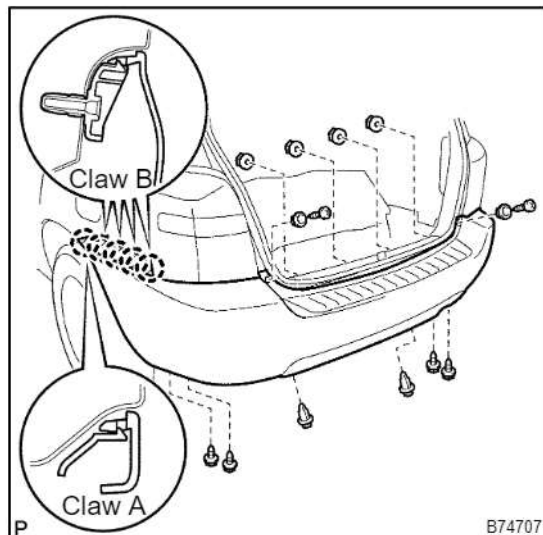


- (b) Remove the 6 screws, 4 nuts and 2 clips.
- (c) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B and bumper cover.

HINT:

Tape the screwdriver tip before use.

7. REMOVE REAR BUMPER ENERGY ABSORBER

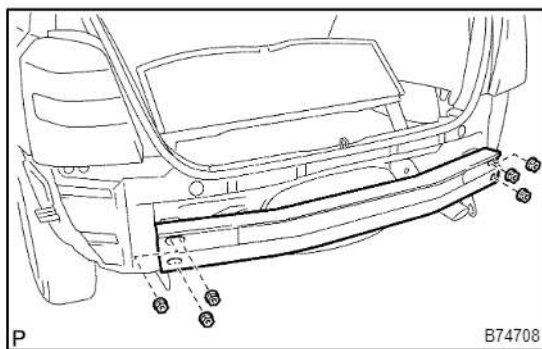

8. REMOVE REAR BUMPER REINFORCEMENT NO.1

- (a) Remove the 6 nuts and reinforcement.

9. REMOVE REAR BUMPER BAR

10. REMOVE REAR BUMPER BAR LH

11. REMOVE REAR BUMPER BAR RH

12. REMOVE REAR BUMPER SIDE RETAINER LH

- (a) Remove the 3 screws and side retainer.

13. REMOVE REAR BUMPER SIDE RETAINER RH

- (a) Remove the 3 screws and side retainer.

14. REMOVE REAR BUMPER SUPPORT NO.1

15. REMOVE REAR BUMPER SIDE MOUNTING BRACKET LH

- (a) Remove the screw and bracket.

16. REMOVE REAR BUMPER SIDE MOUNTING BRACKET RH

- (a) Remove the screw and bracket.

17. REMOVE REAR BUMPER SIDE SUPPORT LH

18. REMOVE REAR BUMPER SIDE SUPPORT RH

19. INSTALL REAR BUMPER SIDE MOUNTING BRACKET LH

- (a) Install the bracket with the screw.

Torque: 3.0 N·m (31 kgf·cm, 27 in·lbf)

20. INSTALL REAR BUMPER SIDE MOUNTING BRACKET RH

HINT:

Use the same procedure described for the LH side.

2005 HIGHLANDER REPAIR MANUAL (RM1144U)

21. INSTALL REAR BUMPER REINFORCEMENT NO.1

- (a) Install the reinforcement with the 6 nuts.

Torque: 27 N·m (275 kgf·cm, 20 ft·lbf)

22. INSTALL REAR BUMPER COVER

- (a) Engage the 10 claws.

- (b) Install the bumper cover with the 2 clips, 6 screws and 4 nuts.

Torque: 3.0 N·m (31 kgf·cm, 27 in·lbf) for bolt

Torque: 8.0 N·m (85 kgf·cm, 71 in·lbf) for nut

23. INSTALL QUARTER PANEL MUDGUARD SUB-ASSY REAR LH (W/ MUDGUARD)

- (a) Install the mudguard with the 3 clips and bolt.

Torque: 3.0 N·m (31 kgf·cm, 27 in·lbf)

24. INSTALL QUARTER PANEL MUDGUARD SUB-ASSY REAR RH (W/ MUDGUARD)

HINT:


Use the same procedure described for the LH side.

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

1. REMOVE TONNEAU COVER ASSY

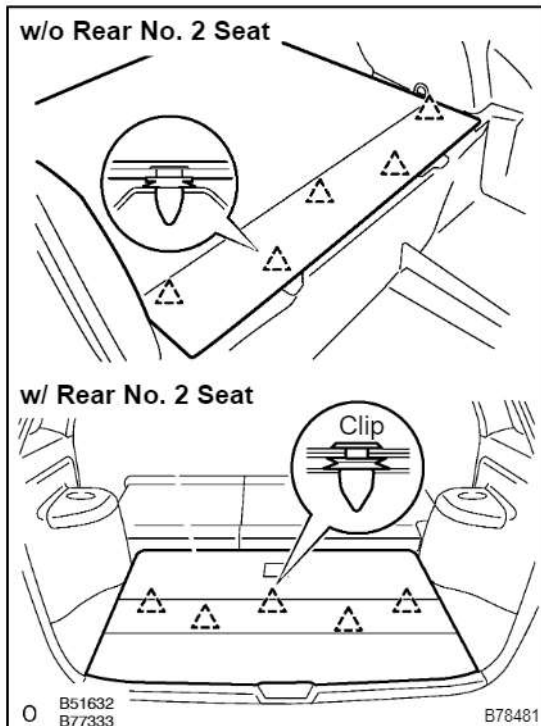

2. REMOVE DECK BOARD SUB-ASSY


- (a) Using a screwdriver, disengage the 5 clips, 2 bolts and deck board.

HINT:

Tape the screwdriver tip before use.

3. REMOVE DECK BOARD SUB-ASSY NO.2

4. REMOVE DECK BOARD SUB-ASSY NO.3

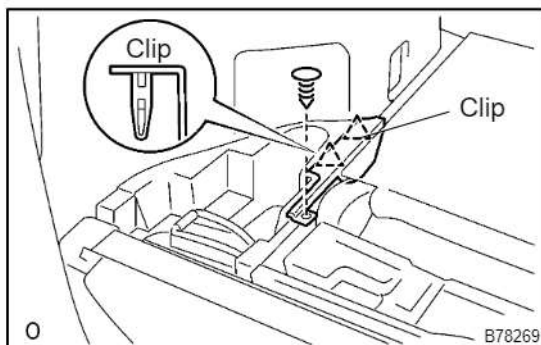

5. REMOVE REAR SEAT RECLINING COVER NO.2 RH (w/ REAR NO. 2 SEAT)

- (a) Using a screwdriver, disengage the 2 clips and remove the bolt and cover.


HINT:

Tape the screwdriver tip before use.

6. REMOVE REAR SEAT RECLINING COVER NO.2 LH (w/ REAR NO. 2 SEAT)

HINT:


Use the same procedures described for the LH side.

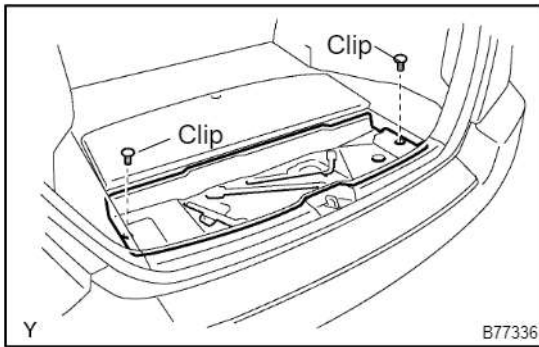**7. REMOVE DECK FLOOR BOX REAR**

- (a) Using a screwdriver, remove the 2 clips and box rear.

HINT:


Tape the screwdriver tip before use.

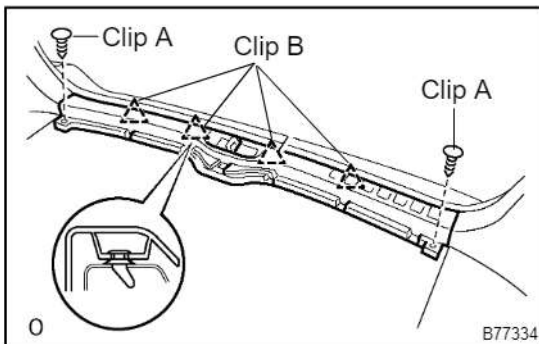8. REMOVE DECK FLOOR BOX FRONT (w/o REAR NO. 2 SEAT)**9. REMOVE REAR FLOOR FINISH PLATE**

- (a) Using a screwdriver, remove the 2 clips labeled A, 4 clips labeled B and finish plate.

HINT:

Tape the screwdriver tip before use.

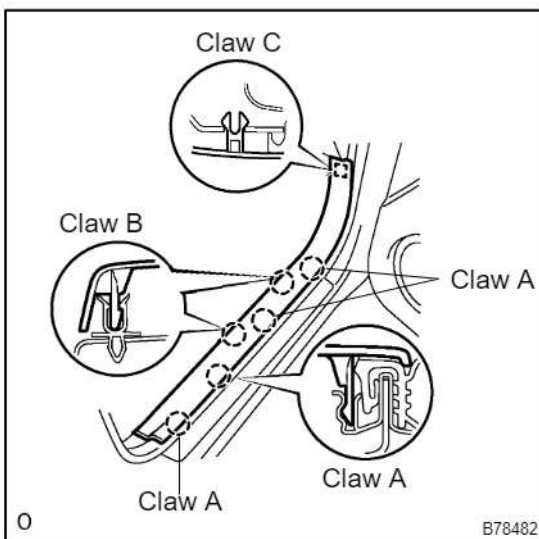10. REMOVE DECK SIDE TRIM BOX LH**11. REMOVE DECK SIDE TRIM BOX RH****12. REMOVE REAR NO.1 SEAT ASSY LH (See page 72-28 , 72-44)****13. REMOVE REAR NO.1 SEAT ASSY RH (See page 72-35 , 72-54)****14. REMOVE REAR NO.2 SEAT ASSEMBLY (w/ REAR NO. 2 SEAT) (See page 72-61)****15. REMOVE FRONT DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, disengage the 4 claws labeled A, 2 claws labeled B, claw labeled C and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

16. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

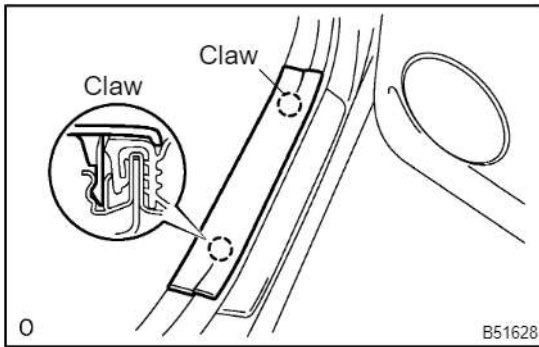**17. REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, disengage the 2 claws and remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

18. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

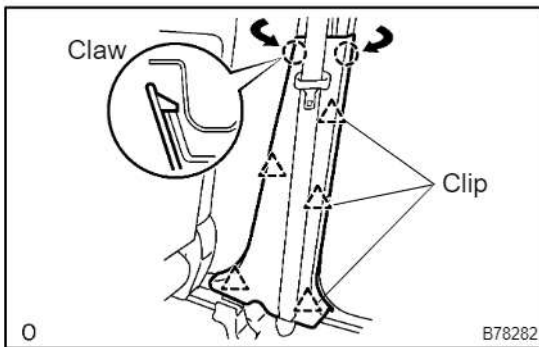19. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH****21. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH****22. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****23. REMOVE BACK DOOR WEATHERSTRIP****24. REMOVE CENTER PILLAR GARNISH LOWER LH**

- (a) Using a screwdriver, disengage the 2 claws and remove the 5 clips and garnish.


HINT:

Tape the screwdriver tip before use.

25. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described for the LH side.

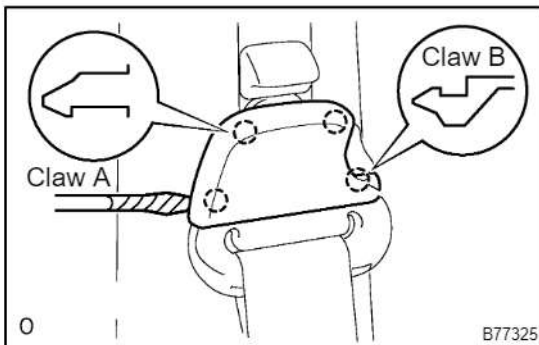
**26. REMOVE CENTER PILLAR GARNISH LH**

- (a) Using a screwdriver, disengage the 2 claws labeled A and 2 claws labeled B, Remove the cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the shoulder anchor bolt.

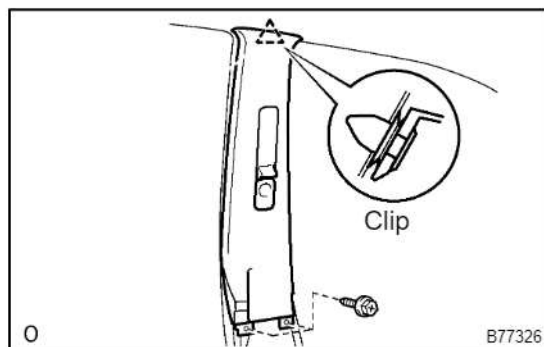

- (c) Remove the 2 screws.
- (d) Using a screwdriver, disengage the clip and remove the garnish.

HINT:


Tape the screwdriver tip before use.

27. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

28. REMOVE ROPE HOOK

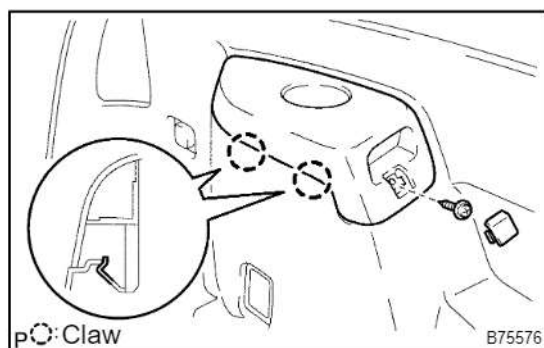

29. REMOVE DECK SIDE TRIM COVER LH

- (a) Using a screwdriver, remove the cover and screw.

HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, disengage the 2 claws and remove the trim box.


HINT:

Tape the screwdriver tip before use.

30. REMOVE DECK SIDE TRIM COVER RH

HINT:


Use the same procedures described for the LH side.

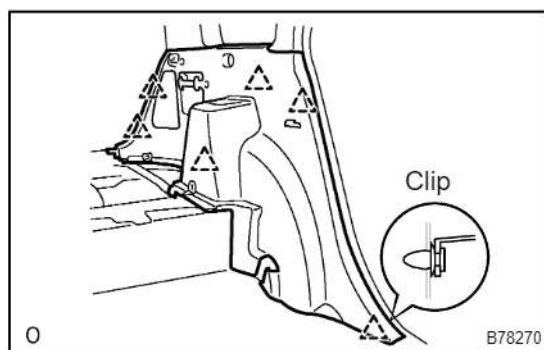

31. REMOVE DECK TRIM SIDE PANEL ASSY LH

- (a) w/o Rear No. 2 seat:

- (1) Remove the 5 bolts and rear seat outer belt floor anchor bolt.
- (2) Using a clip remover, remove the 6 clips and side panel.

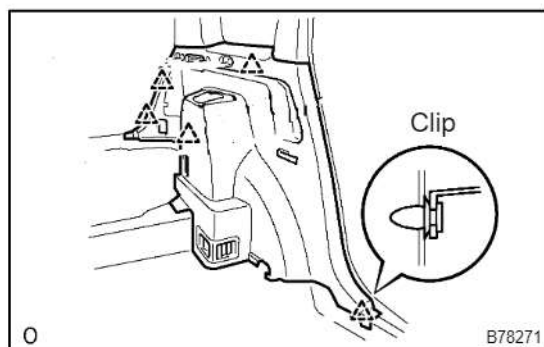


- (b) w/ Rear No. 2 seat:

- (1) Remove the 5 bolts and rear seat outer belt floor anchor bolt.
- (2) Using a clip remover, remove the 6 clips and side panel.

32. REMOVE DECK TRIM SIDE PANEL ASSY RH

HINT:

Use the same procedures described for the LH side.

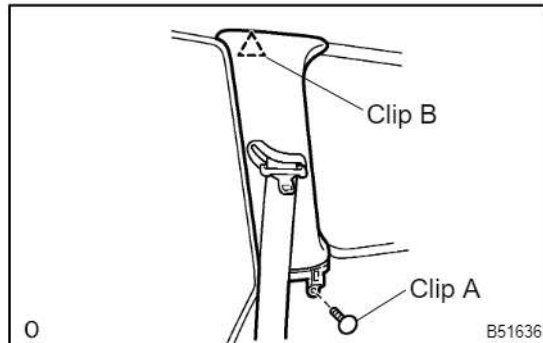**33. REMOVE QUARTER PILLAR GARNISH LH**

- (a) Using a screwdriver, remove the clip labeled A and clip labeled B and garnish.


HINT:

Tape the screwdriver tip before use.

34. REMOVE QUARTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

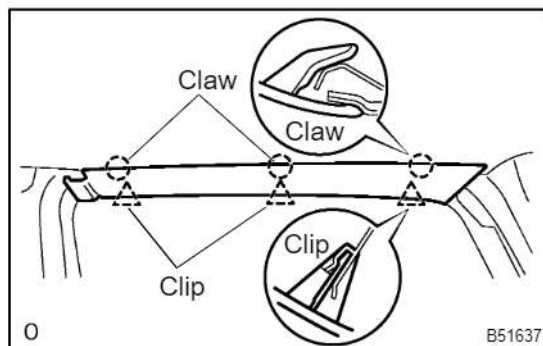**35. REMOVE ROOF SIDE RAIL GARNISH SUB-ASSY LH**

- (a) Using a screwdriver, disengage the 3 clips and remove the 3 claws and rail garnish.


HINT:

Tape the screwdriver tip before use.

36. REMOVE ROOF SIDE RAIL GARNISH SUB-ASSY RH

HINT:

Use the same procedures described for the LH side.

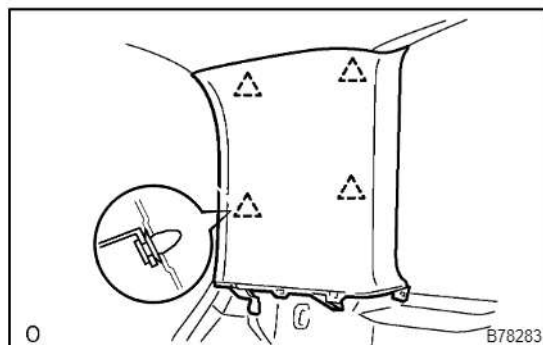
**37. REMOVE ROOF SIDE GARNISH ASSY INNER LH**

- (a) w/o Rear No. 2 seat:

- (1) Using a screwdriver, remove the 4 clips and side garnish.

HINT:

Tape the screwdriver tip before use.

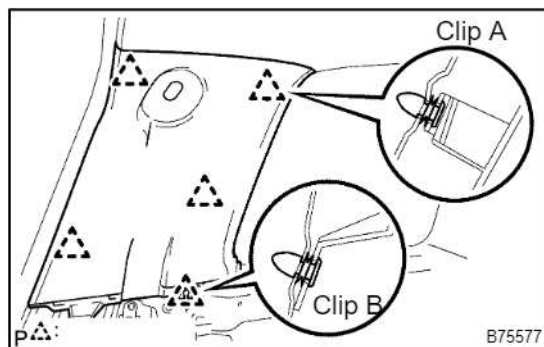

(b) w/ Rear No. 2 seat:

- (1) Using a screwdriver, remove the 4 clips labeled A, clip labeled B, remove the side garnish.


HINT:

Tape the screwdriver tip before use.

38. REMOVE ROOF SIDE GARNISH ASSY INNER RH

HINT:

Use the same procedures described for the LH side.

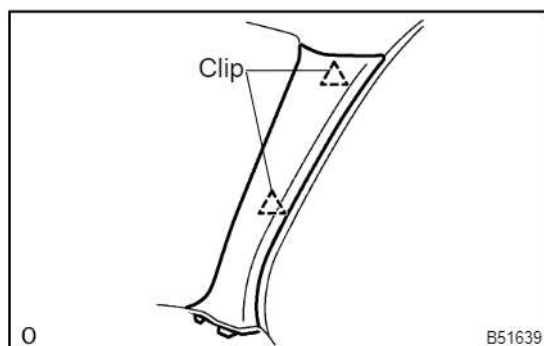


39. REMOVE FRONT PILLAR GARNISH LH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Pull the garnish upward and remove it from the instrument panel.

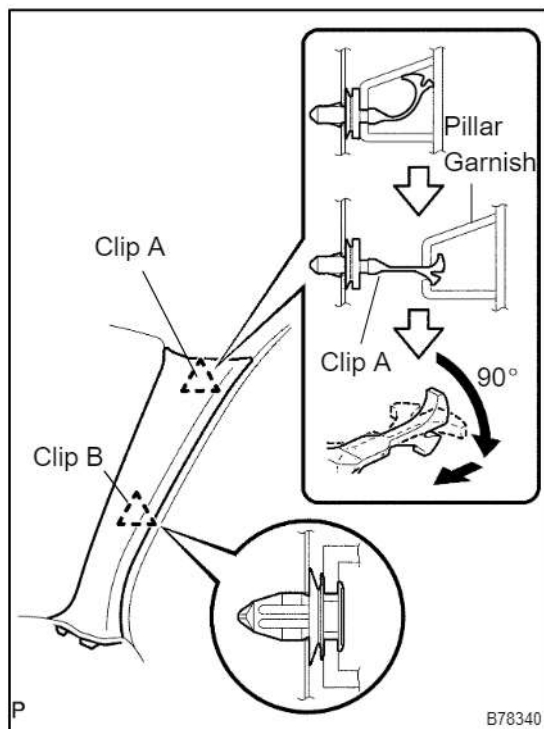

(c) w/ Curtain shield airbag:

- (1) Using a screwdriver, disengage the clips clip labeled A and clip labeled B.

HINT:


Tape the screwdriver tip before use.

- (d) Remove the pillar garnish.

- (1) Pull the pillar garnish until the clip marked A in the illustration stretches.
- (2) Turn the clip marked A in the illustration 90 degrees and remove the pillar garnish.

HINT:

Use the same procedures described for the LH side.

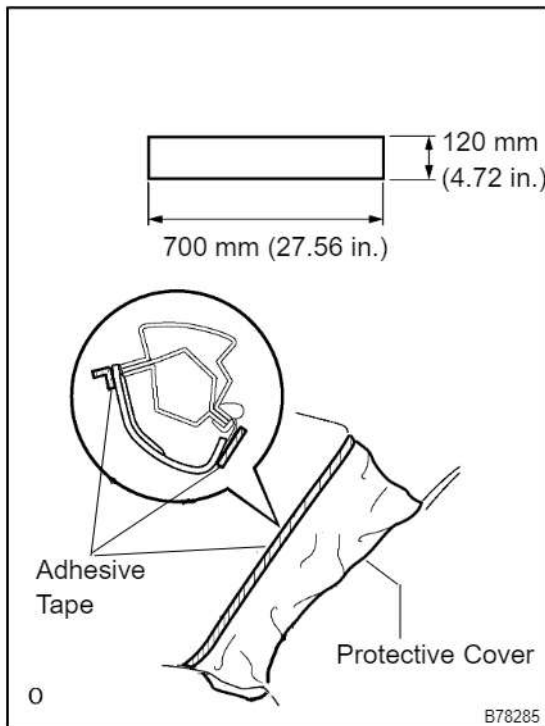

(e) Protect the curtain shield airbag LH.

- (1) Cover the airbag with cloth or a piece of nylon approximately 700 mm (27.56 in.) x 120 mm (4.72 in.) in size. Fix the ends of the cover with tape as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with the protective cover as soon as the front pillar garnish is removed.

40. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

41. REMOVE LH VISOR ASSY

- (a) Remove the 2 screws and visor.

42. REMOVE RH VISOR ASSY

- (a) Remove the 2 screws and visor.

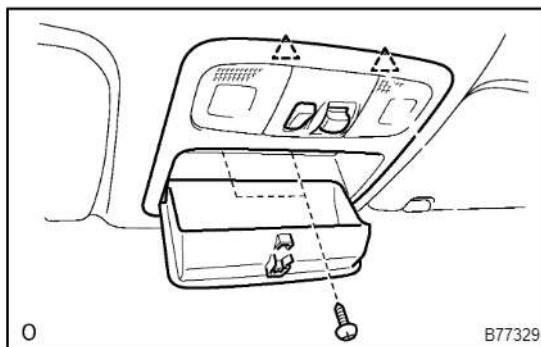


43. REMOVE ROOF CONSOLE BOX ASSY

- (a) Remove the 2 screws.
- (b) Using a screwdriver, remove the 2 clips.

HINT:

Tape the screwdriver tip before use.

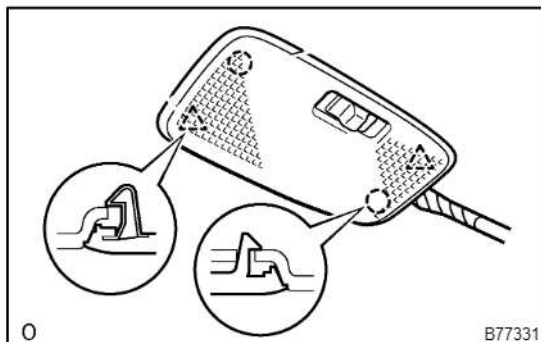


44. REMOVE ROOM LAMP ASSY NO.1

- (a) Using a screwdriver, disengage the 2 claws and remove the 2 clips and lamp.

HINT:

Tape the screwdriver tip before use.

45. REMOVE ROOM LAMP ASSY NO.2

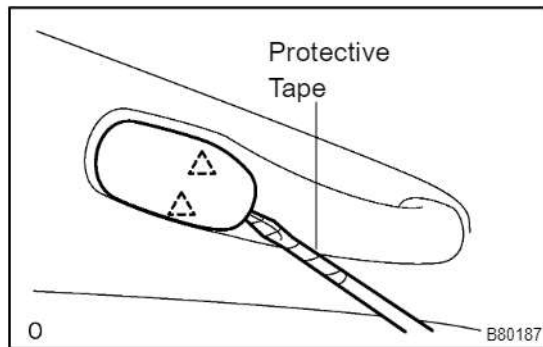
**46. REMOVE ASSIST GRIP SUB-ASSY**

- (a) Using a screwdriver, remove the assist grip plug.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.

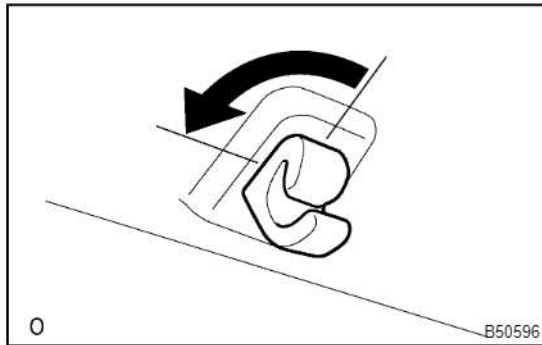
**47. REMOVE VISOR HOLDER**

- (a) Remove the holder of the sun visor by turning it to the left.

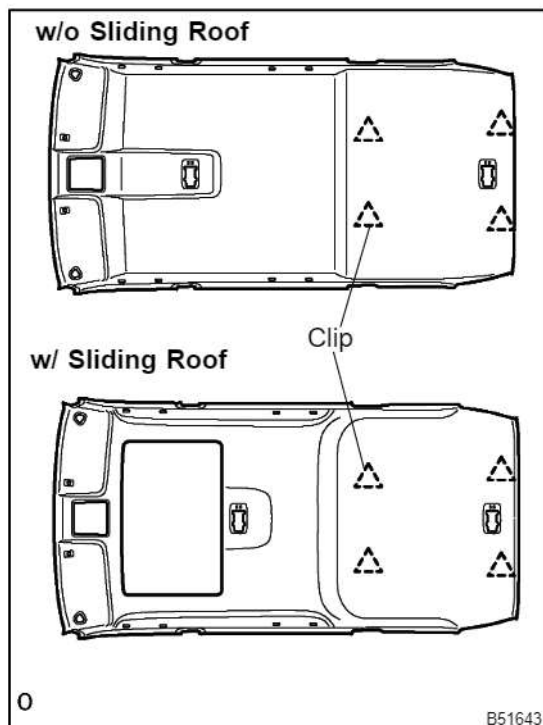48. REMOVE SUN ROOF OPENING TRIM MOULDING**49. REMOVE ROOF HEADLINING ASSY**

- (a) Using a clip remover, remove the 4 clips and roof headlining.
- (b) Remove the headlining from the back door.

50. REMOVE ROOF SILENCER PAD NO.4**51. REMOVE ROOF SILENCER PAD NO.1****52. REMOVE ROOF SILENCER PAD NO.5****53. REMOVE ROOF SILENCER PAD NO.2 (W/O SLIDING ROOF)**

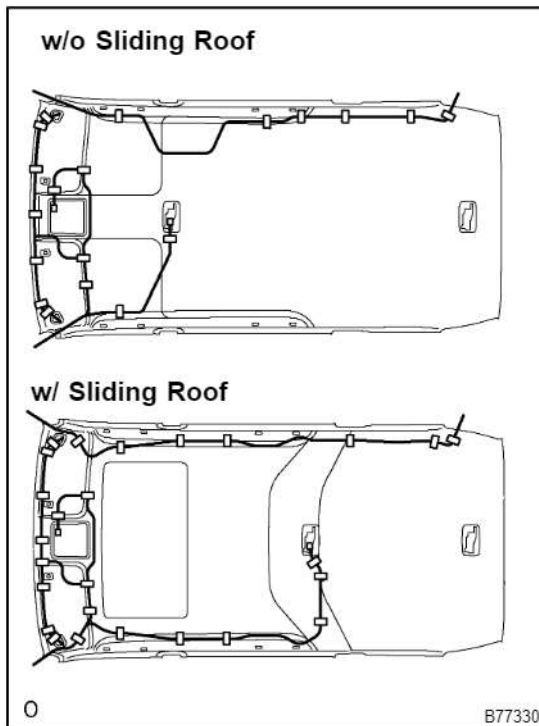**54. INSTALL ROOF HEADLINING ASSY**

- (a) Align the markings, and then install the wire harness with tape.

NOTICE:

Attach the roof wire harness securely.

- (b) Install the roof headlining with the 4 clips.

55. INSTALL QUARTER PILLAR GARNISH LH

- (a) Install the rear No. 2 seat outer belt shoulder anchor with the bolt.

Torque: 42.0 N·m (420 kgf·cm, 31 ft·lbf)

56. INSTALL QUARTER PILLAR GARNISH RH**HINT:**

Use the same procedures described for the LH side.

57. INSTALL DECK TRIM SIDE PANEL ASSY LH

- (a) Install the rear seat outer belt floor anchor with the bolt.

Torque: 42.0 N·m (420 kgf·cm, 31 ft·lbf)

58. INSTALL DECK TRIM SIDE PANEL ASSY RH**HINT:**

Use the same procedures described for the LH side.

59. INSTALL CENTER PILLAR GARNISH LH

- (a) Install the front seat outer belt shoulder anchor with the bolt.

Torque: 42.0 N·m (420 kgf·cm, 31 ft·lbf)

60. INSTALL CENTER PILLAR GARNISH RH**HINT:**

Use the same procedures described for the LH side.