


Last Modified: 11-27-2007		1.6 A
Service Category: Drivetrain	Section: Automatic Transmission/Transaxle	
Model Year: 2008	Model: LX570	Doc ID: RM000000O9L02EX
Title: AB60F AUTOMATIC TRANSMISSION / TRANSAXLE: VALVE BODY ASSEMBLY: DISASSEMBLY (2008 LX570)		

DISASSEMBLY


1. REMOVE SHIFT SOLENOID VALVE SL2

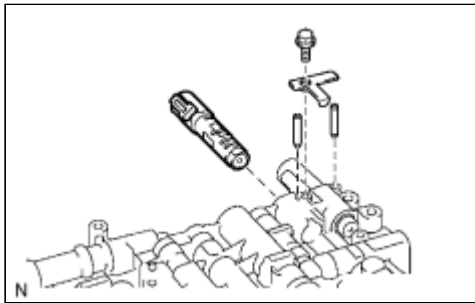


(a) Remove the bolt, lock plate and 2 straight pins.

(b) Remove the shift solenoid valve.

2. REMOVE SHIFT SOLENOID VALVE SLU

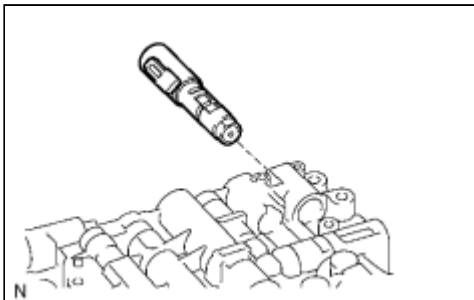


3. REMOVE SHIFT SOLENOID VALVE SLT

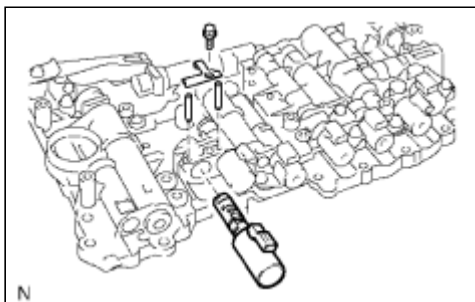


(a) Remove the bolt, lock plate and 2 straight pins.

(b) Remove the shift solenoid valve.

4. REMOVE SHIFT SOLENOID VALVE SL1

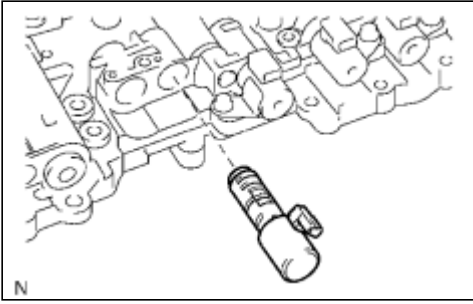


5. REMOVE SHIFT SOLENOID VALVE SR

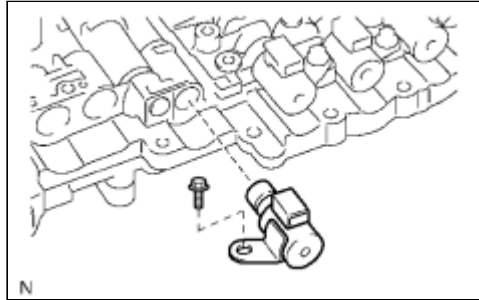


(a) Remove the bolt and shift solenoid valve.

6. REMOVE SHIFT SOLENOID VALVE S1

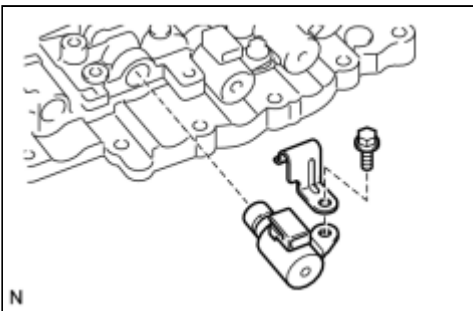


(a) Remove the bolt, valve body wire harness clamp and shift solenoid valve.

7. REMOVE SHIFT SOLENOID VALVE S4

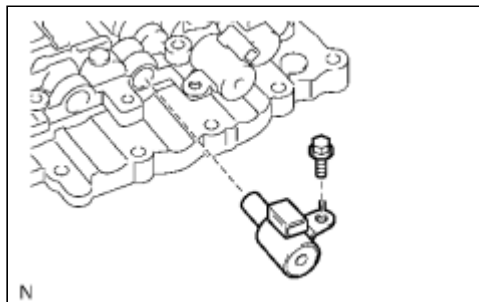


(a) Remove the bolt and shift solenoid valve.

8. REMOVE SHIFT SOLENOID VALVE S2

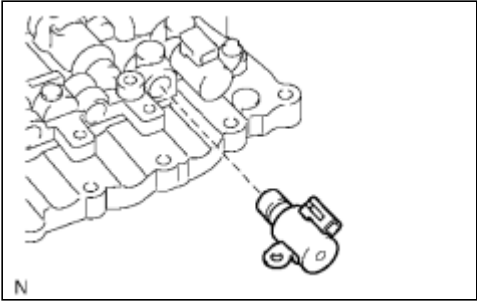

9. REMOVE SHIFT SOLENOID VALVE S3

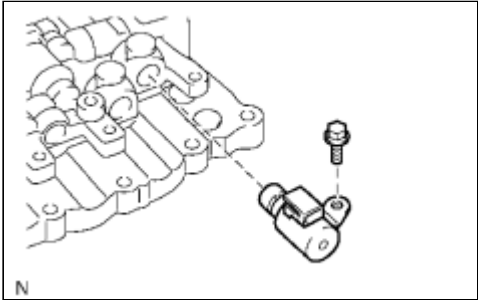

(a) Remove the bolt and shift solenoid valve.

