


Land Rover Freelander L359 2006 – 2016 fuse box diagram


Fuse box locations

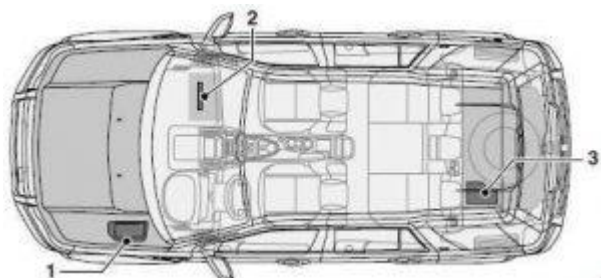

Land Rover Freelander (L359) – fuse box diagram – location

1. Engine compartment fuse box
2. Passenger compartment fuse box
3. Luggage compartment fuse box

Engine compartment fuse box

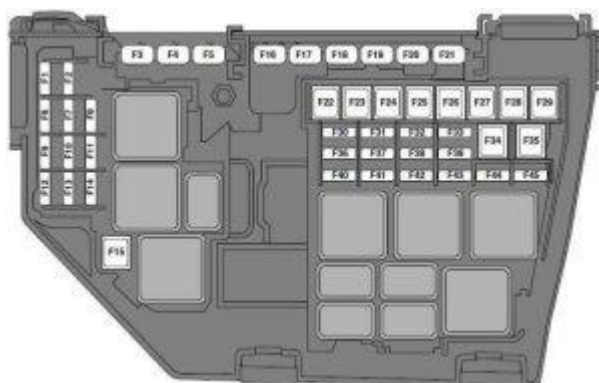

Land Rover Freelander (L359) – fuse box diagram – engine compartment

No.	A	Circuits protected
F1	5	up to 2011: Glow plugs from 2012: Auxiliary water pump from 2013: –
F2	15	up to 2012: Automatic transmission
F2	5	from 2013: Voltage module

F3	80	Cooling fans
F4	60	Glow plugs
F5	–	–
F6	10	up to 2012; diesel: Engine management
F6	15	up to 2012; petrol: Engine management
F6	15	from 2013: Engine management. Oxygen sensors
F7	5	Relays
F8	10	up to 2012; diesel: Engine management
F8	15	up to 2012; petrol: Engine management
F8	20	from 2013: Engine management
F9	10	up to 2012; diesel: Engine management
F9	15	up to 2012; petrol: Engine management
F9	10	from 2013: Engine management
F10	10	up to 2012; petrol: Engine management
F10	15	from 2013: Automatic transmission


F11	10	Engine management
F12	10	up to 2012; diesel: Engine management
F12	20	up to 2012; petrol: Engine management
F12	15	from 2013: Engine management
F13	15	up to 2012: Air Conditioning
F13	10	from 2013: Air Conditioning
F14	15	up to 2012; diesel: Engine management
F14	15	from 2013: Engine management. Air conditioning
F15	40	Starter motor
F16	100	Diesel PTC heater
F17	60	Passenger compartment fuse box supply
F18	60	Passenger compartment fuse box supply
F19	60	up to 2012: Luggage compartment fuse box supply
F19	60	from 2013: Luggage compartment fuse box supply. Audio system
F20	60	Luggage compartment fuse box supply

F21	60	up to 2012: Luggage compartment fuse box supply – Audio unit
F21	60	from 2013: Luggage compartment fuse box supply
F22	30	Windscreen wipers
F23	40	up to 2012: – from 2013: Passenger compartment fuse box supply
F24	30	up to 2012: Headlamp washers from 2013: –
F25	30	ABS
F26	40	ABS
F27	40	up to 2012: – from 2013: Passenger compartment fuse box supply
F28	40	Heater blower
F29	–	–
F30	15	up to 2012: – from 2013: Headlamp washer
F31	15	Horns
F32	20	Diesel auxiliary heater

F33	5	Relays
F34	40	Heated windscreen(LH)
F35	40	Heated windscreen (RH)
F36	5	up to 2012: – from 2013: Auxiliary heater water pump (diesel only)
F37	10	up to 2012: Heated washer jets
F37	20	from 2013: Fuel pump
F38	10	up to 2012: AFS (RH lamp motors)
F38	10	from 2013: Parking aid module
F39	10	up to 2012: Climate control from 2013: –
F40	10	up to 2010: – up to 2012: Auxiliary water pump from 2013: –
F41	20	up to 2012: Passenger compartment fuse box supply from 2013: –
F42	15	up to 2012: Engine management

F42	5	from 2013: Headlamp levelling control
F43	5	up to 2012: Headlamp levelling control -AFS
F43	5	from 2013: Automatic high beam. Rear view camera
F44	10	up to 2012: AFS (LH lamp motors)
F44	10	from 2013: Heated steering wheel
F45	15	up to 2012: Cigar lighter
F45	5	from 2013: Auxiliary heater water pump (diesel only)

Passenger compartment fuse box (up to 2012)

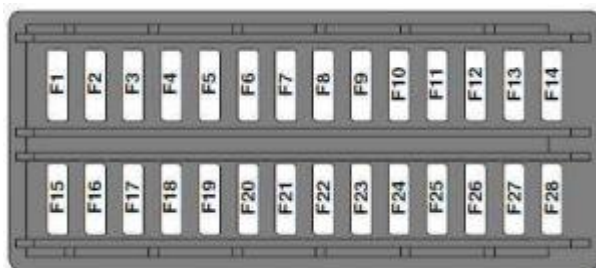


Land Rover Freelander (L359) – fuse box diagram – passenger compartment

No.	A	Circuits protected
F1	5	Rain sensor
F2	10	SRS
F3	5	ABS

F4	5	Instrument pack – Accelerator pedal – Light Switch Module
F5	5	–
F6	15	Audio unit
F7	7.5	Steering wheel controls
F8	5	Instrument pack
F9	15	Headlamp main beam
F10	15	Sunroof
F11	7.5	Reverse lights and interior mirror dip
F12	–	–
F13	15	Front fog lamps
F14	15	Screen wash
F15	–	–
F16	–	–
F17	7.5	Interior lighting
F18	–	–

F19	5	Electric seat adjustment
F20	15	Rear wiper
F21	5	Alarm
F22	20	Fuel pump
F23	20	Steering column lock
F24	–	–
F25	10	Tailgate – Fuel filler flap
F26	5	Diagnostic socket and alarm
F27	5	Start button and climate control
F28	5	Brake lights
F29	15	Voltage module

Passenger compartment fuse box (from 2013)

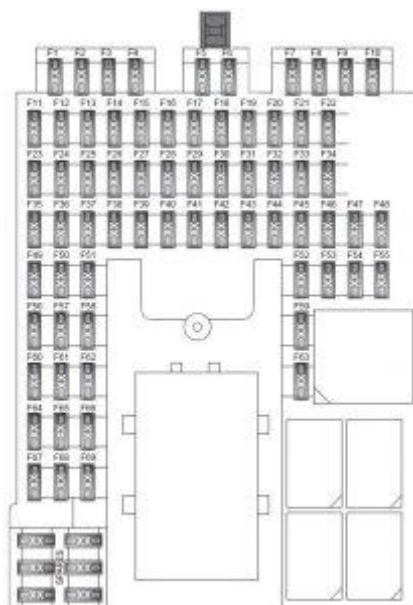

Land Rover Freelander (L359) – fuse box diagram – passenger compartment

No.	A	Circuits protected
F1	5	RF receiver. Interior motion sensor. Tyre Pressure Monitoring System (TPMS)
F2	–	–
F3	15	Front fog lamps
F4	–	–
F5	5	Slip control module
F6	5	Ignition supply for engine compartment fuse box and luggage compartment fuse box relays.
F7	–	–

F8	25	Front passenger door module
F9	5	EPB
F10	5	Heated washer jets
F11	10	Reverse light trailer
F12	10	Reverse lights. Mirror control
F13	–	–
F14	5	Brake pedal switch
F15	30	Heated rear screen
F16	–	–
F17	5	Keyless Vehicle Module (KVM)
F18	–	–
F19	5	Power-train Control Module (PCM)
F20	5	Accelerator pedal
F21	5	Instrument panel. Centre console. Electric booster heater
F22	5	Transmission Control Module (TCM)


F23	–	–
F24	5	Rear fog lamp (right side)
F25	5	Rear fog lamp (left side)
F26	–	–
F27	–	–
F28	–	–
F29	–	–
F30	–	–
F31	5	Voltage module. Rain sensor. Passenger Airbag Deactivation (PAD) lamp
F32	25	Driver door module
F33	–	–
F34	10	Fuel flap
F35	–	–
F36	5	Battery backed sounder
F37	5	Road pricing (Singapore only)

F38	15	Front screen washer
F39	25	Rear door module (left side)
F40	5	Clock. Door memory switch
F41	–	–
F42	30	Driver seat
F43	15	Rear screen washer
F44	25	Rear door module (right side)
F45	30	Front passenger seat
F46	–	–
F47	20	Sunroof and sunblind module
F48	15	Trailer connector
F49	–	–
F50	–	–
F51	5	Steering wheel switches
F52	20	Cigar lighter (front)

F53	–	–
F54	–	–
F55	20	Auxiliary socket (rear console)
F56	10	Restraints Control Module (RCM)
F57	10	Battery saver circuits. Vanity mirror lamp. Glove box lamp. Upper console lamp
F58	–	–
F59	–	–
F60	5	Occupant Classification Sensor Control Module (OCSCM)
F61	5	Immobiliser Antenna Unit (IAU)
F62	10	Climate control module
F63	20	Auxiliary socket (luggage compartment)
F64	–	–
F65	–	–
F66	5	On Board Diagnostic (OBD) connector

F67	–	–
-----	---	---

Luggage compartment fuse box (up to 2012)

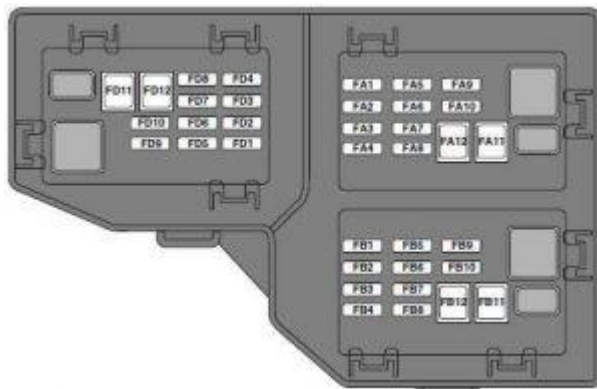

Land Rover Freelander (L359) – fuse box diagram – luggage compartment

No.	A	Circuits protected
FA1	25	Driver door controls
FA2	25	Passenger door controls
FA3	25	Rear left door controls
FA4	25	Rear right door controls
FA5	–	–
FA6	15	Rear accessory socket
FA7	30	Heated rear screen
FA8	–	–

FA9	15	Trailer power
FA10	30	Driver electric seat
FA11	40	Trailer power
FA12	–	–
FB1	10	Park distance control
FB2	–	–
FB3	15	Driver's seat heater
FB4	15	Front passenger's seat heater
FB5	15	Caravan fridge
FB6	15	Electronic centre differential
FB7	–	–
FB8	–	–
FB9	30	Passenger electric seat
FB10	–	–
FB11	–	–

FB12	–	–
FD1	10	Audio system and touch screen
FD2	–	–
FD3	10	DAB
FD4	5	Bluetooth telephone
FD5	–	–
FD6	10	Audio unit
FD7	–	–
FD8	–	–
FD9	30	Audio amplifier
FD10	–	–
FD11	–	–
FD12	–	–

Luggage compartment fuse box (from 2013)

No.	A	Circuits protected
FB1	15	Electronic centre differential

FB2	15	Caravan fridge
FB3	15	Driver seat heater
FB4	15	Front passenger seat heater
FB5	5	Auxiliary heater control
FB6	–	–
FB7	–	–
FB8	10	Instrument panel
FB9	5	Heating and ventilation system
FB10	–	–
FB11	–	–
FB12	–	–
FD1	10	Audio system. Touch screen
FD2	15	Audio system
FD3	10	Digital radio
FD4	–	–

FD5	5	Electric seat switches
FD6	30	Electric Park Brake (EPB)
FD7	15	Rear wiper
FD8	30	EPB
FD9	–	–
FD10	5	Audio amplifier
FD11	40	Audio amplifier
FD12	–	–