

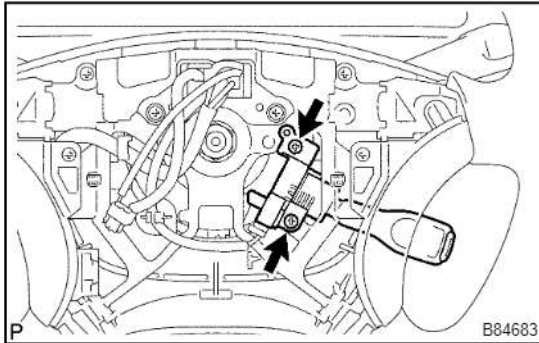
CRUISE CONTROL MAIN SWITCH ASSY REPLACEMENT

8205N-01

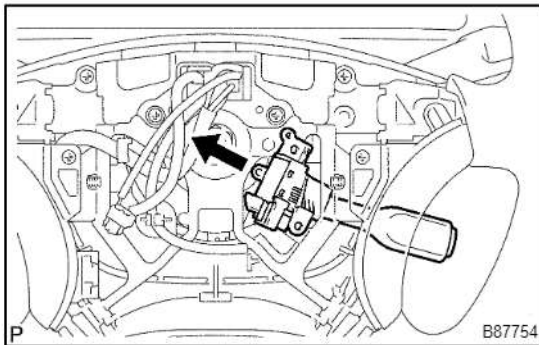
HINT:

Installation is in the reverse order of removal.

1. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
2. **REMOVE STEERING WHEEL COVER LOWER NO.2**
3. **REMOVE STEERING WHEEL COVER LOWER NO.3**
4. **REMOVE HORN BUTTON ASSY (SEE PAGE 60-25)**

**5. REMOVE CRUISE CONTROL MAIN SWITCH ASSY**

- (a) Disconnect the connector.
- (b) Remove the 2 screws.



- (c) Pull out the cruise control main switch assy in the direction shown by the arrow in the illustration.

6. **INSTALL HORN BUTTON ASSY (SEE PAGE 60-25)**
7. **INSPECT HORN BUTTON ASSY (SEE PAGE 60-17)**
8. **CONNECT BATTERY NEGATIVE TERMINAL**
9. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1456)**

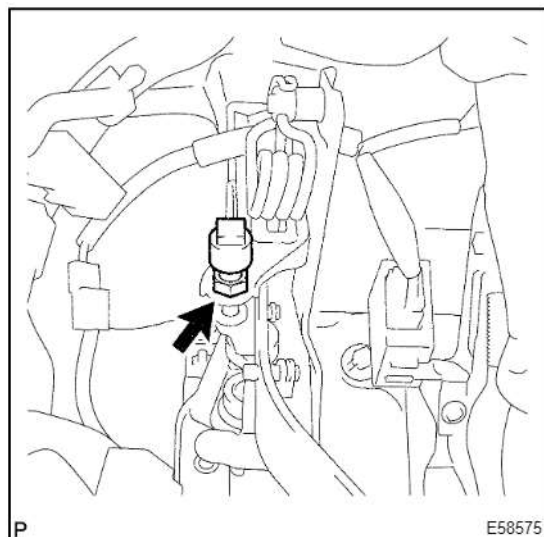
CLUTCH SWITCH ASSY REPLACEMENT

8201K-03

HINT:

Installation is in the reverse order of removal.

1. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 71-16)**
2. **REMOVE COWL SIDE TRIM SUB-ASSY LH (SEE PAGE 71-16)**
3. **REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (SEE PAGE 71-16)**
4. **REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (SEE PAGE 71-16)**

**5. REMOVE CLUTCH SWITCH ASSY**

- (a) Disconnect the connector.
- (b) Loosen the nut and remove the clutch switch assy.