


Toyota ProAce (from 2016) – fuse box diagram

Dashboard fuses

The fusebox is placed in the lower dashboard (left-hand side).

Version 1 (Eco)

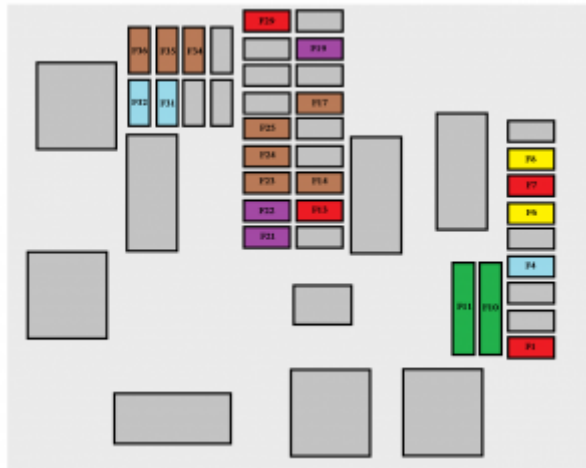


Toyota ProAce – fuse box – dashboard (version ECO)

Fuse	Ampere rating [A]	Functions
F1	10	Electric power steering, clutch switch
F4	15	Horn
F5	20	Front/rear screenwash pump
F6	20	Front/rear screenwash pump
F7	10	Rear 12 V accessory socket
F8	20	Single or double rear wipers.
F10	30	Front and rear, exterior, interior locks
F11		
F13	10	Front air conditioning controls, radio controls, gear lever, head-up display
F14	5	Alarm, ERA-GLONASS emergency call system
F17	5	Instrument panel
F19	3	Steering mounted controls
F21	3	“Smart Entry & Start System” system or ignition switch
F22	3	Rain and sunshine sensor, multifunction detection camera

F23	5	Seat belt unfastened or not fastened display screen
F24	5	Touch screen, reversing camera and parking sen
F25	5	Airbags
F29	20	Audio system, touch screen, CD player, navigation
F31	15	Audio system (battery +)
F32	15	Front 12 V accessory socket
F34	5	Blind spot monitoring system, door mirror electric controls
F35	5	Heated washer jets, headlamp beam height control
F36	5	Torch charger, rear courtesy lamp

Version 2 (Full)

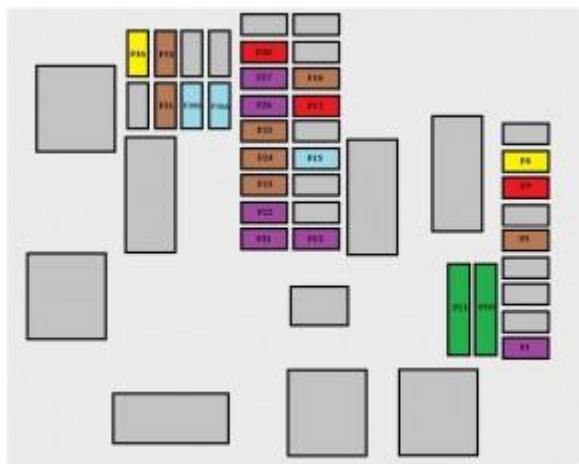

Toyota ProAce – fuse box – dashboard (version FULL)I

Fuse	Ampere rating [A]	Functions
F1	3	“Smart Entry & Start System” system or ignition switch
F5	5	Touch screen, reversing camera and parking sensors
F7	10	Rear air conditioning controls, Hi-Fi amplifier
F8	20	Single or double rear wiper
F10	30	Front and rear, exterior, interior locks
F11		
F12	3	Alarm
F17	10	Rear 12 V accessory socket
F18	5	ERA-GLONASS emergency call system
F21	3	Torch charger, rear courtesy lamp

F22	3	Glove box lamp, rear courtesy lamps
F23	5	Blind spot monitoring system, door mirror electric controls
F24	5	Steering mounted controls
F25	5	Headlamp beam height control
F26	3	Seat belt unfastened or not fastened display screen
F27	3	Rain and sunshine sensor, multifunction detection camera
F28	10	Front air conditioning controls, radio controls, gear lever, head-up display
F30A or B	15	Audio system (battery +)
F31	5	Airbags
F33	15	Front 12 V accessory socket
F35	5	Instrument panel
F36	20	Audio system, touch screen, CD player, navigation

Engine compartment fuses

The fusebox is located in the engine compartment near the battery.

Fuse	Ampere rating [A]	Functions
F12	5	Heated washer jets
F14	25	Front and rear screenwash pump
F15	5	Front radar and emergency braking, electric power steering
F17	10	Built-in systems interface
F19	30	Front wiper motor
F20	15	Front and rear screenwash pump
F21	20	Headlamp wash pump
F22	15	Horn
F23	15	Right hand main beam headlamp
F24	15	Left hand main beam headlamp

www.car-inform.com

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.