

Oldsmobile Aurora 1996 fuse box diagram

Instrument Panel Fuse Block

This is located on the left side of the instrument panel.



Oldsmobile Aurora – fuse box – instrument panel

Position	Circuitry
1	Supplemental Inflatable Restraint (Air Bag)
2	Injectors
3	Anti-Lock Brake System
4	Left Exterior Lamps
5	Turn Signal Lamps
6	Injectors
7	Climate Controls, Magnetic Speed
8	Right Exterior Lamps
9	Chime (Ignition I), Memory Set
10	Powertrain Control Module, VATS PASS-Key@II
11	Auxiliary Power
12	Interior Lamps
13	Shift Sols
14	Linear EGR

15	Cruise Control
16	Perimeter Lights
17	Driver Information Center
18	Converter Oxygen Sensors
19	Radio
20	Open
21	Climate Control Relay
22	Open
23	Windshield Wipers
24	Open
25	TMNSS
26	Cigarette Lighter
27	Crank, Air Bag Module
28	Climate Control Blower

Rear Compartment Driver Fuse Block



Oldsmobile Aurora –
fuse box – rear compartment driver side fuse block

Position	Circuitry
1	Open
2	Electronic Level Control Relay

3	Trunk Release Relay
4	Open
5	Fuel Pump Relay
6	Driver Door Unlock Relay
7	Open
8	Open
9	Open
10	Open
11	Rear Defogger Relay (Lower Zone)
12	Rear Defogger Relay (Upper Zone)
13	Open
14	Spare
15	Spare
16	Spare
17	Spare
18	Spare
19	Spare
20	Spare
21	Spare
22	Spare
23	Direct Accessory Power — Accessory Relay
24	Open

Rear Compartment Passenger Fuse Block




Oldsmobile Aurora –
fuse box – rear compartment passenger side fuse block

Position	Circuitry
1	Spare
2	Spare
3	Open
4	Breaker — Power Window, Sunroof
5	Spare
6	Spare
7	Open
8	Spare
9	Spare
10	Open
11	Breaker — Power Seat
12	Spare
13	Spare
14	Open
15	Power Seat
16	Breaker — Headlamps
17	HVAC Blower Motor

18	Powertrain Control Module, PASS-Key II
19	Ignition 3
20	Ignition 1
21	Rear Defogger
22	Trunk and Fuel Door Releases and Trunk Pull Down
23	Heated Seat
24	Electronic Level Control, Instrument Panel
25	Exterior Lamps
26	Base@ Stereo (If so equipped)
27	Power Door Locks
28	Interior Lamps
29	Hazard Lamps, Stoplamps
30	Parking Lamps
31	Heated Outside Mirror
32	Open
33	Fuel Door Release
34	Open
35	Battery Thermistor
36	Instrument Panel — Power Antenna, Remote CD Changer, Radio Chassis
37	Instrument Panel — Remote Accessory Power Module, Oil Level Indicator, ALDL
38	Electronic Level Control
39	Fuel Pump
40	Open
41	Rear Defog 1
42	Rear Defog 2

Engine compartment fuse block

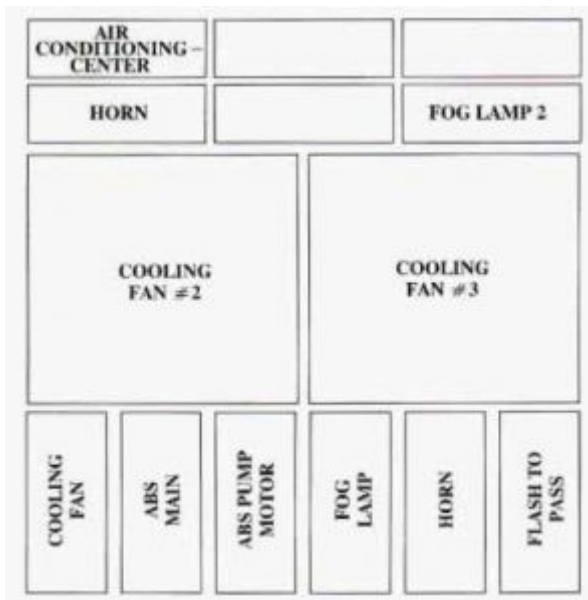

Oldsmobile Aurora – fuse box – engine compartment

Position	Circuitry
1	Air Conditioning Center
2	Open
3	Open
4	Horn
5	Open
6	Fog Lamp 2
7	Cooling Fan #2
8	Cooling Fan #3
9	Cooling Fan
10	ABS Main
11	ABS Pump Motor
12	Fog Lamp
13	Horn
14	Flash to Pass