



F RELAY LOCATIONS


[Engine Compartment]

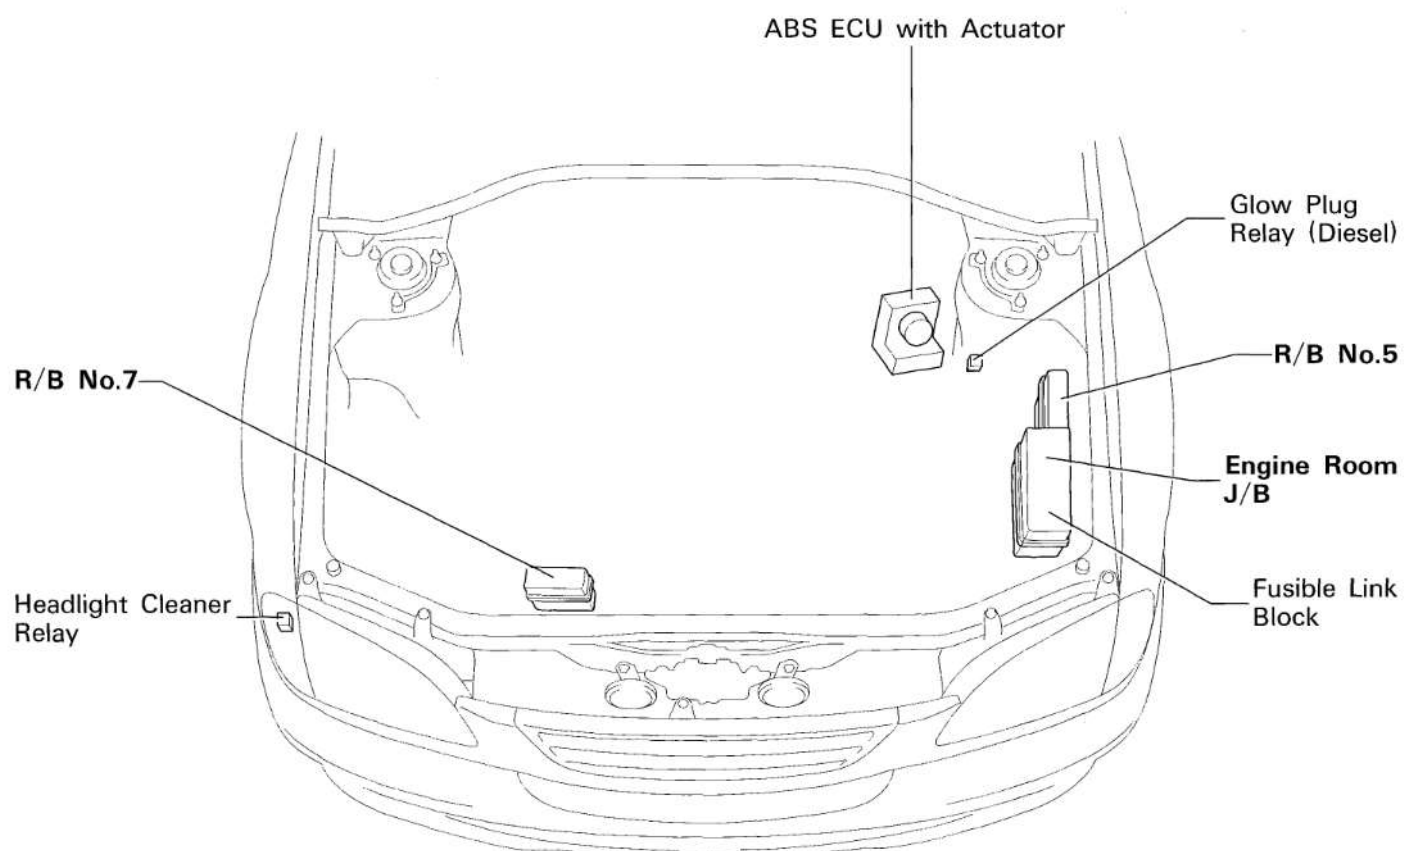

[Instrument Panel] (LHD)

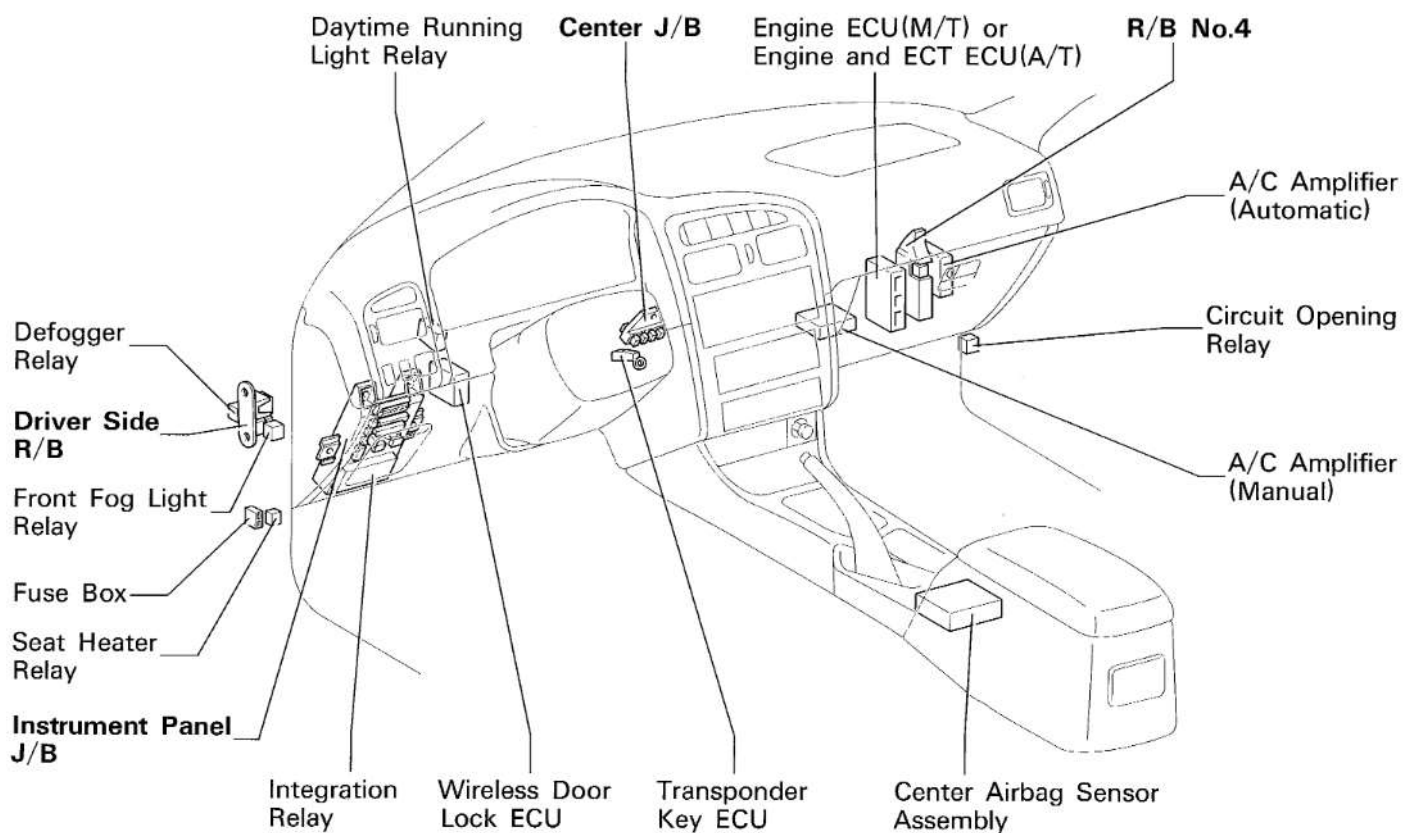


(RHD)

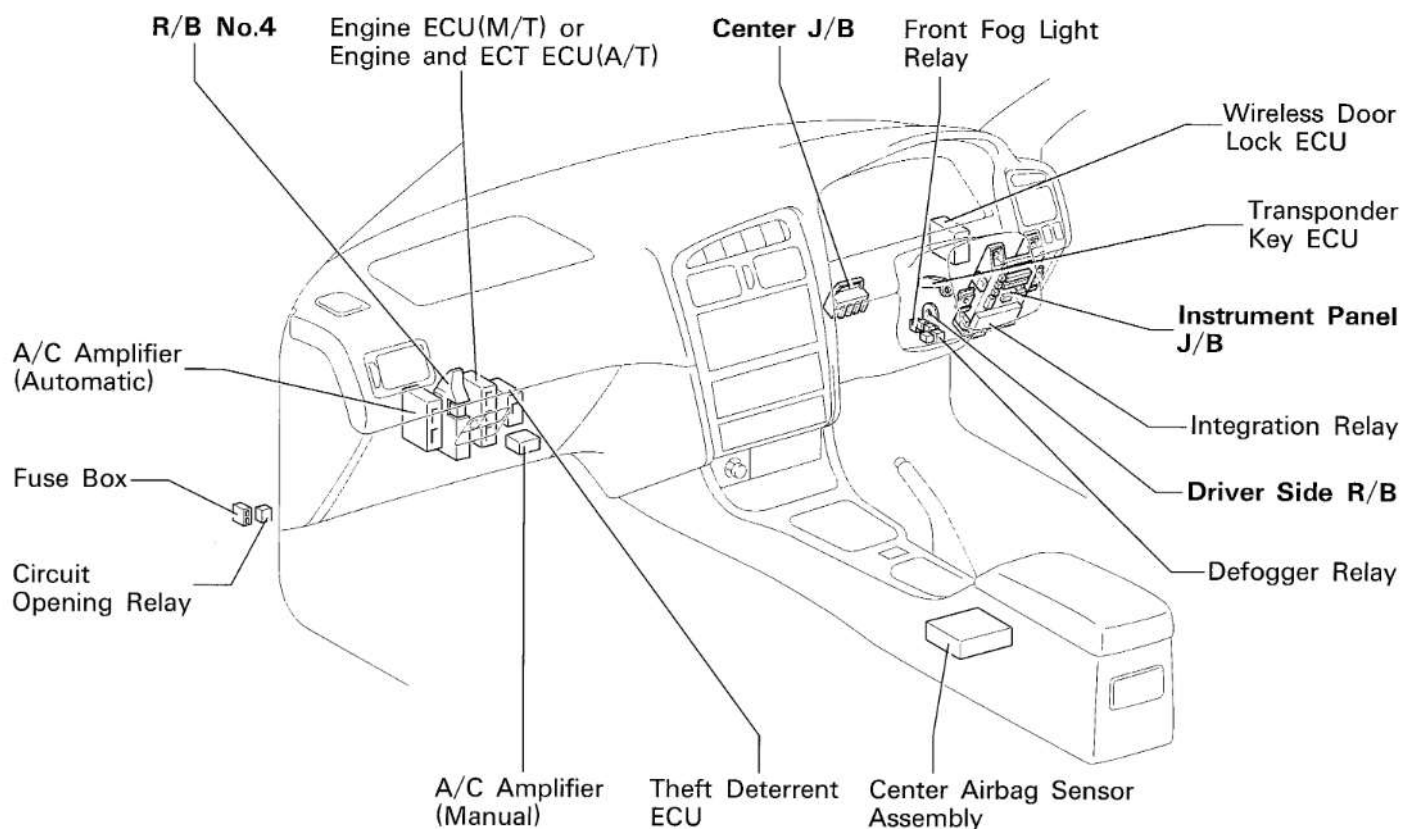


F RELAY LOCATIONS


[Body]
(S/D)

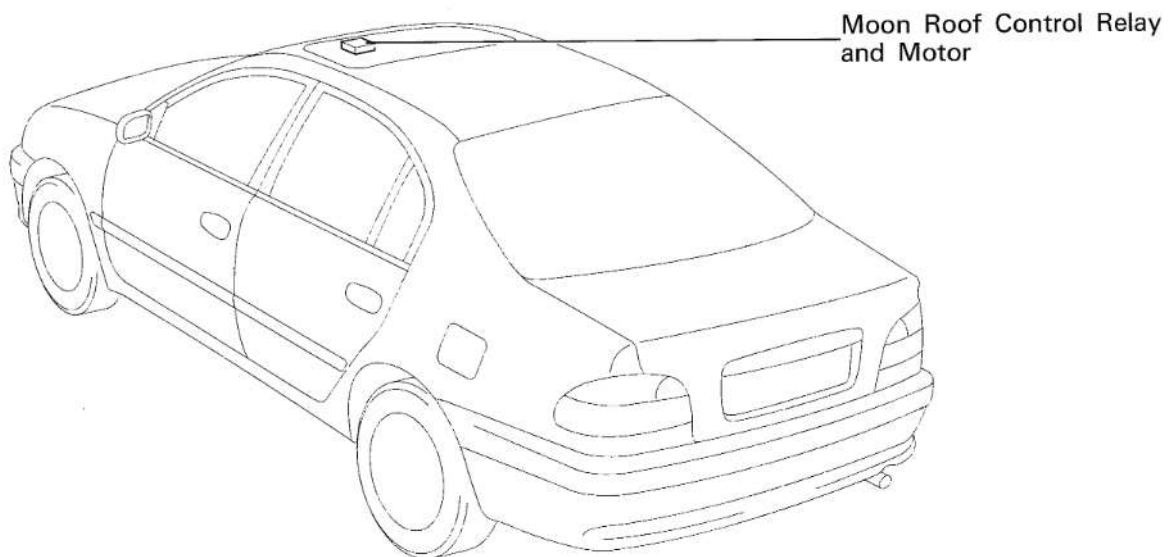

(L/B)

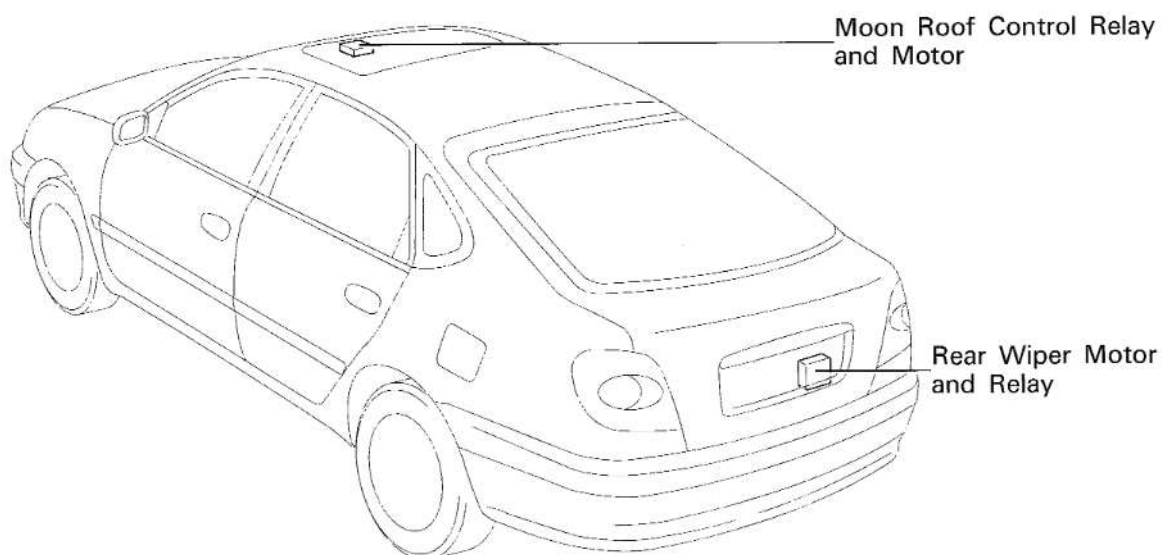


(W/G)

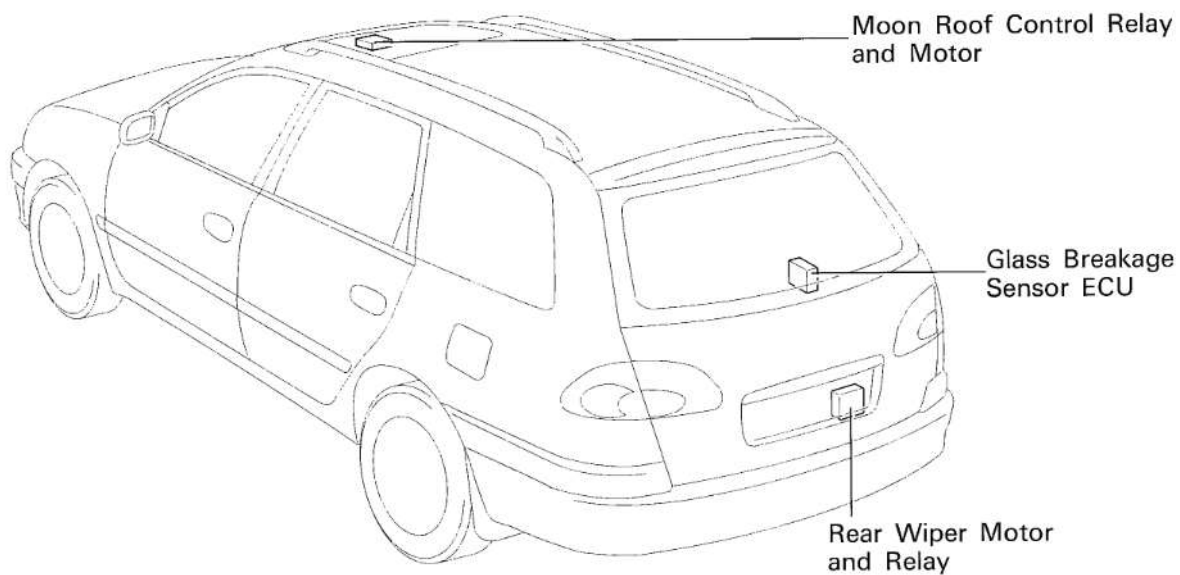

① : Driver Side R/B


LHD : Left Kick Panel (See Page 51)

RHD : Right Kick Panel (See Page 51)

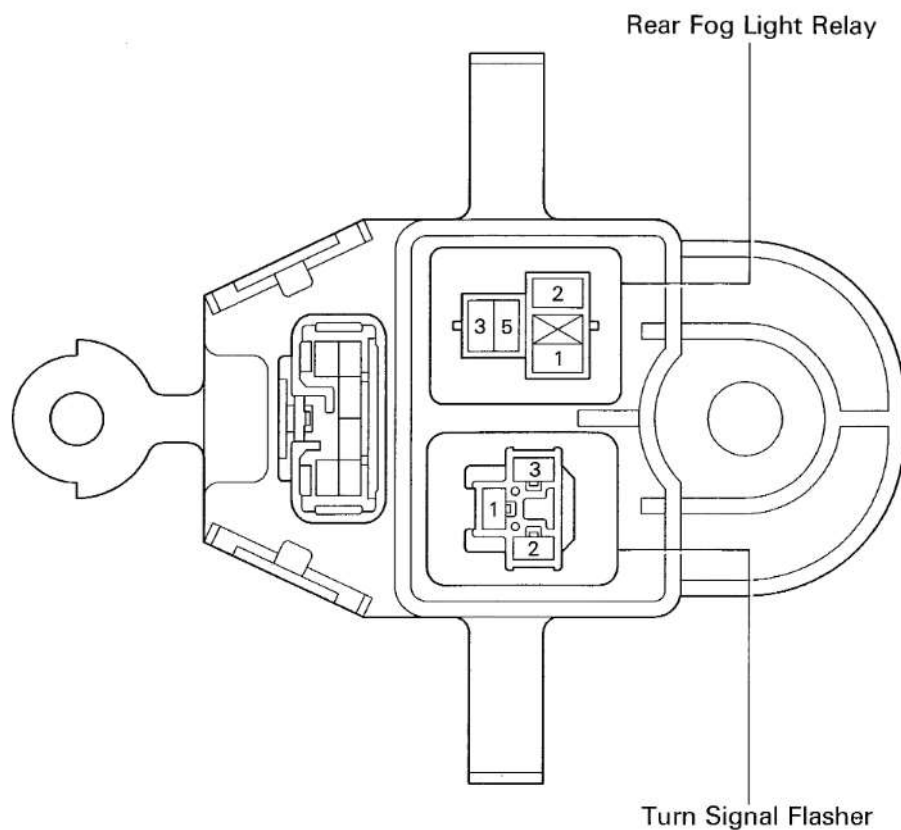

④ : R/B No.4


Passenger Side Dash Panel (See Page 51)

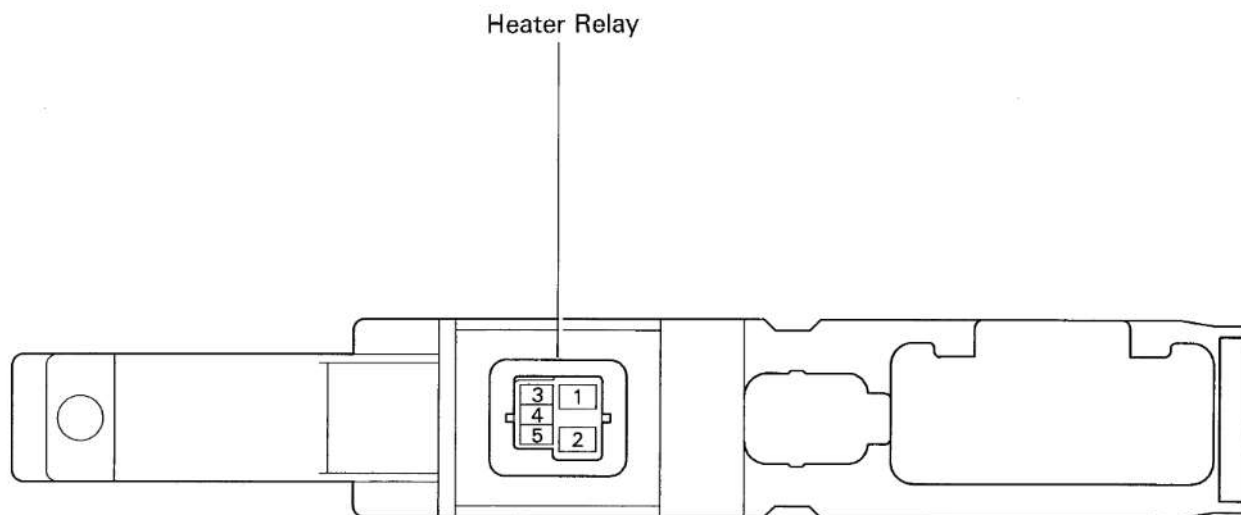

F RELAY LOCATIONS

⑤ : Engine Room R/B


Engine Compartment Left (See Page 50)
(Inside Engine Room J/B)

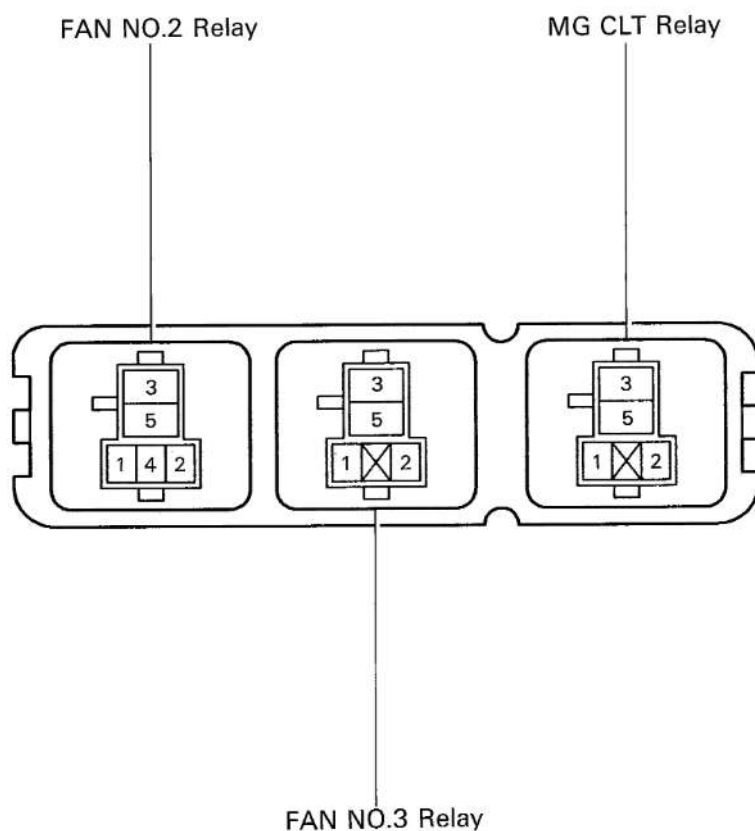

⑦ : R/B No.7


Radiator Upper Support RH (See Page 50)

(w/ Daytime Running Light)

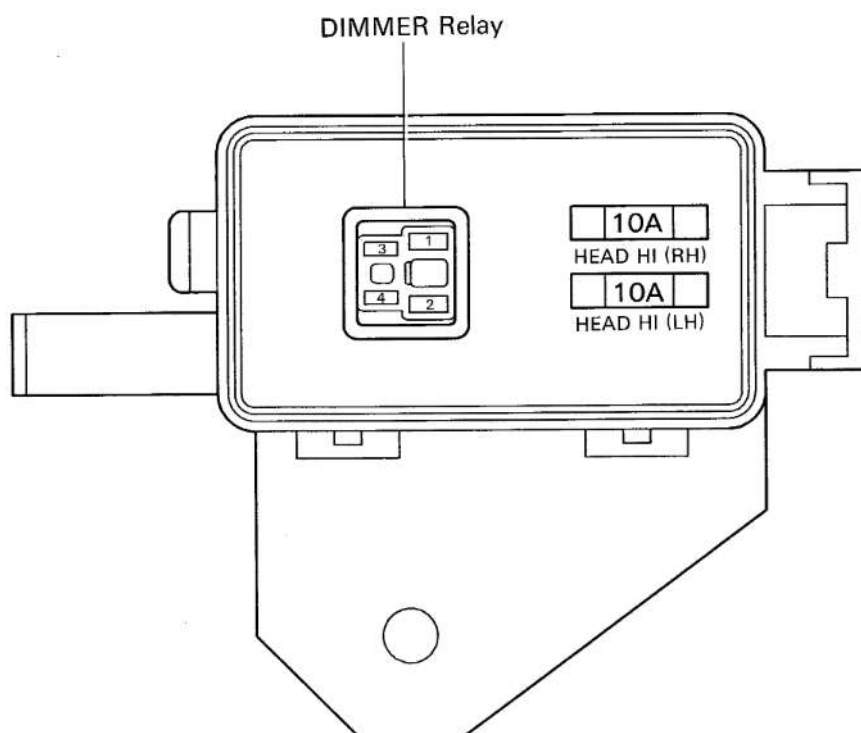

Fusible Link Block**Engine Compartment Left (See Page 50)
(Inside Engine Room J/B)**


English

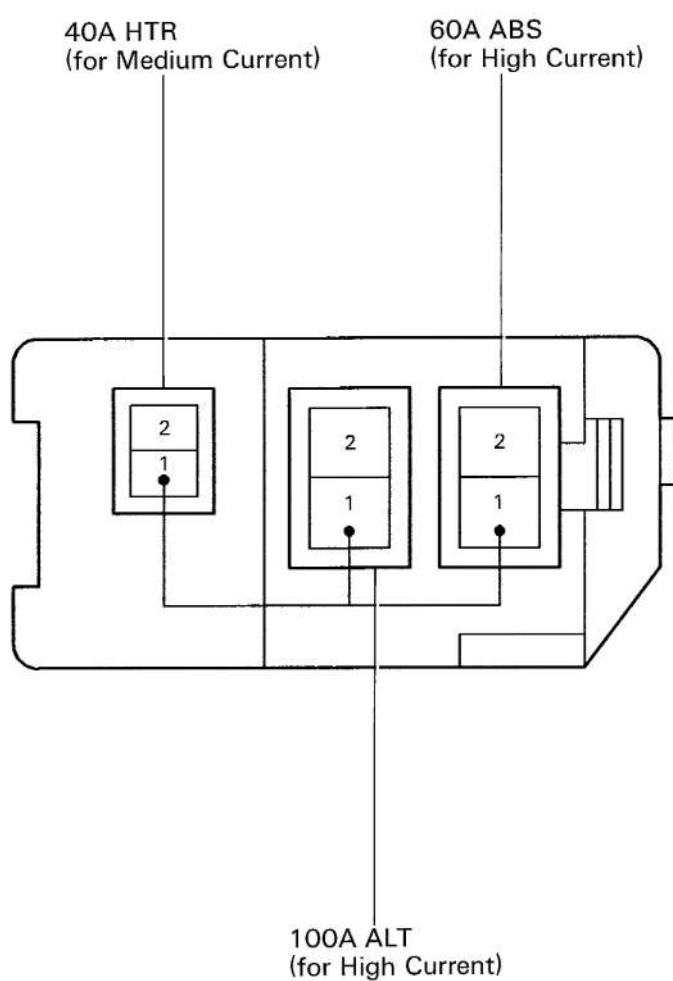


F RELAY LOCATIONS

○ : Engine Room J/B Engine Compartment Left (See Page 50)

English

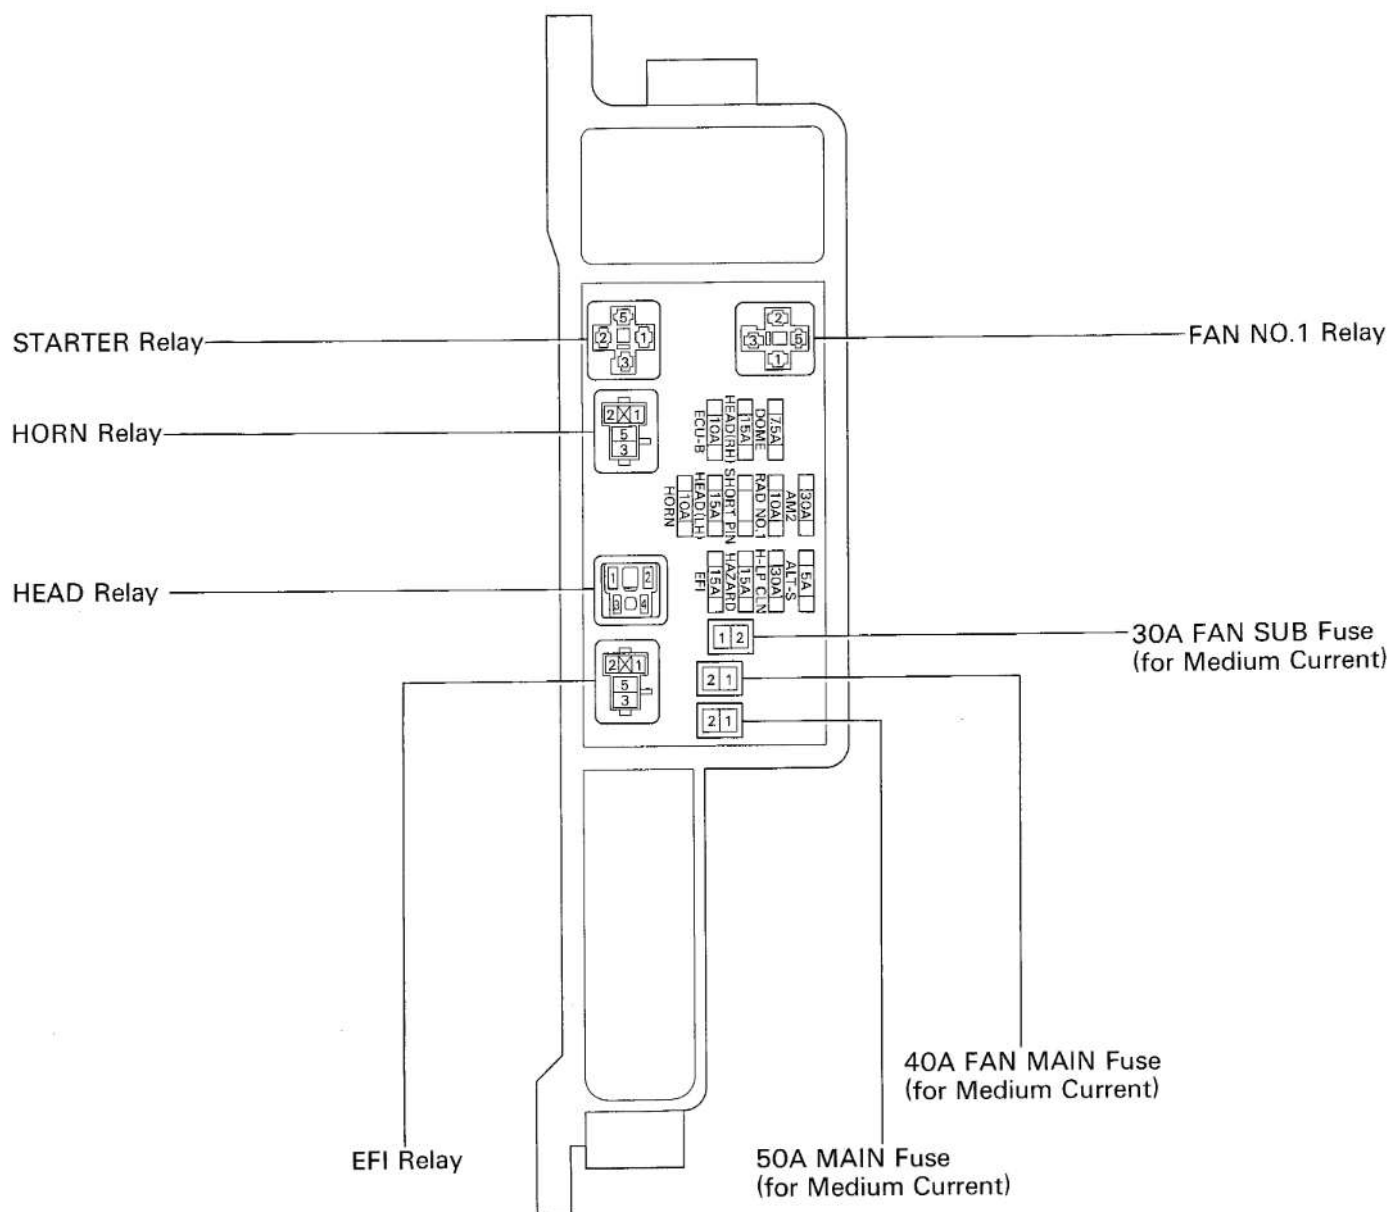


(Inner Circuit : See Page 62)

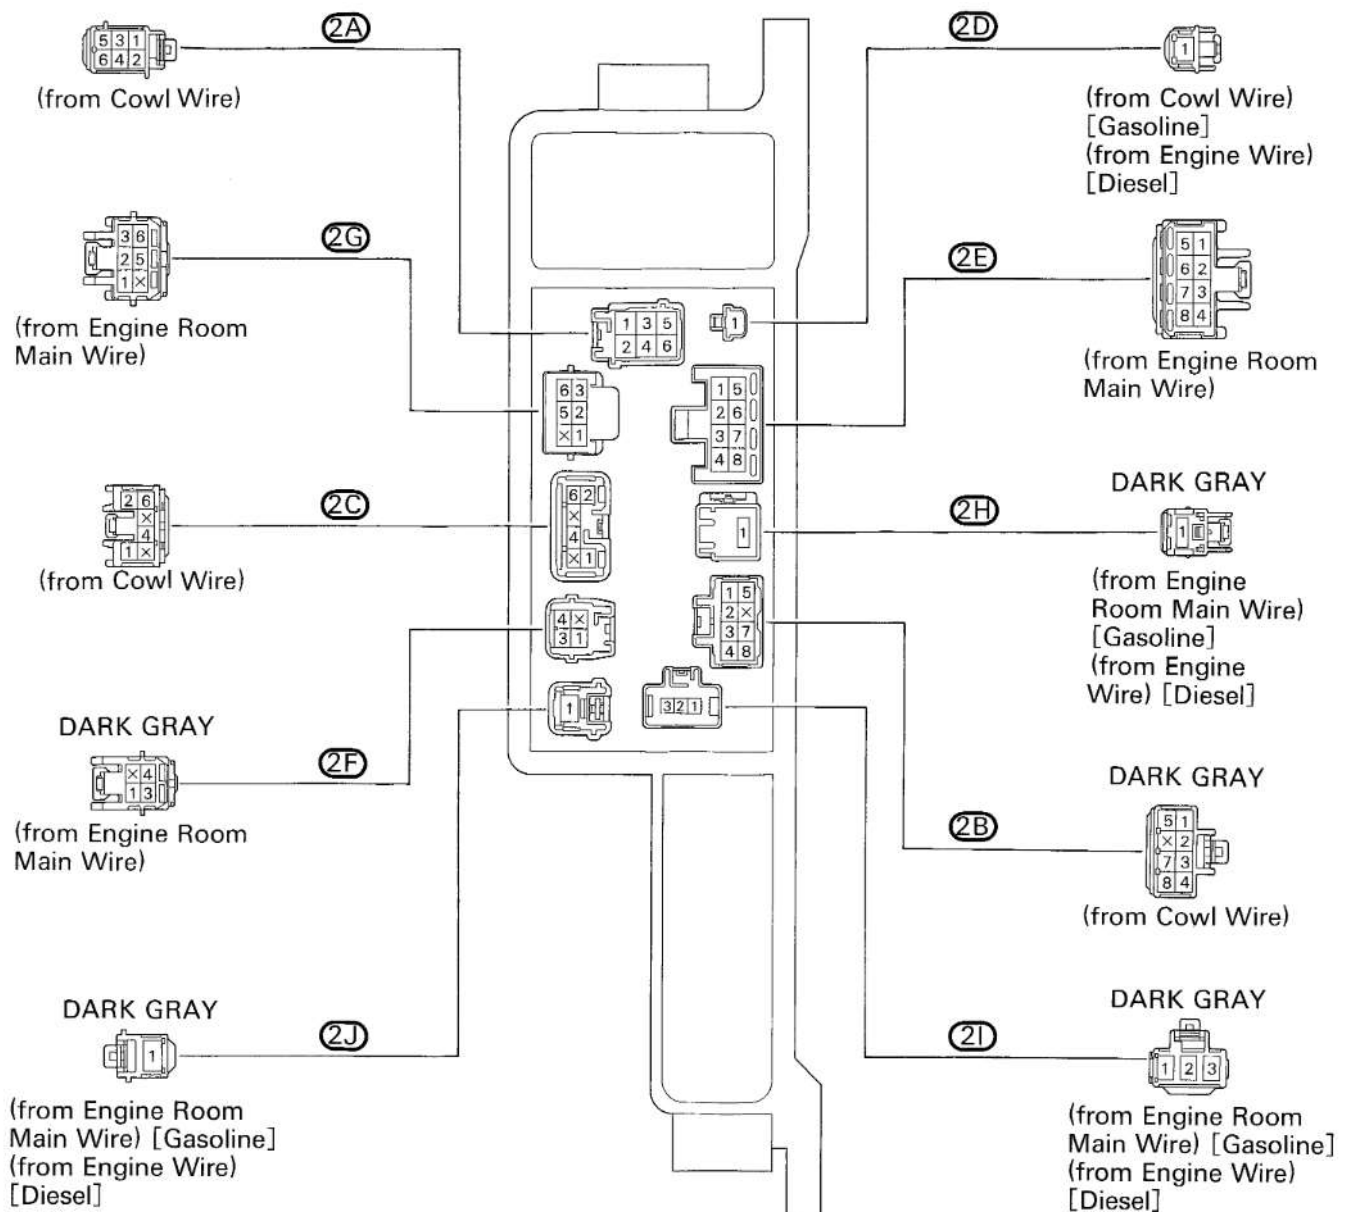


F RELAY LOCATIONS

 : Instrument Panel J/B


Lower Finish Panel (See Page 51)

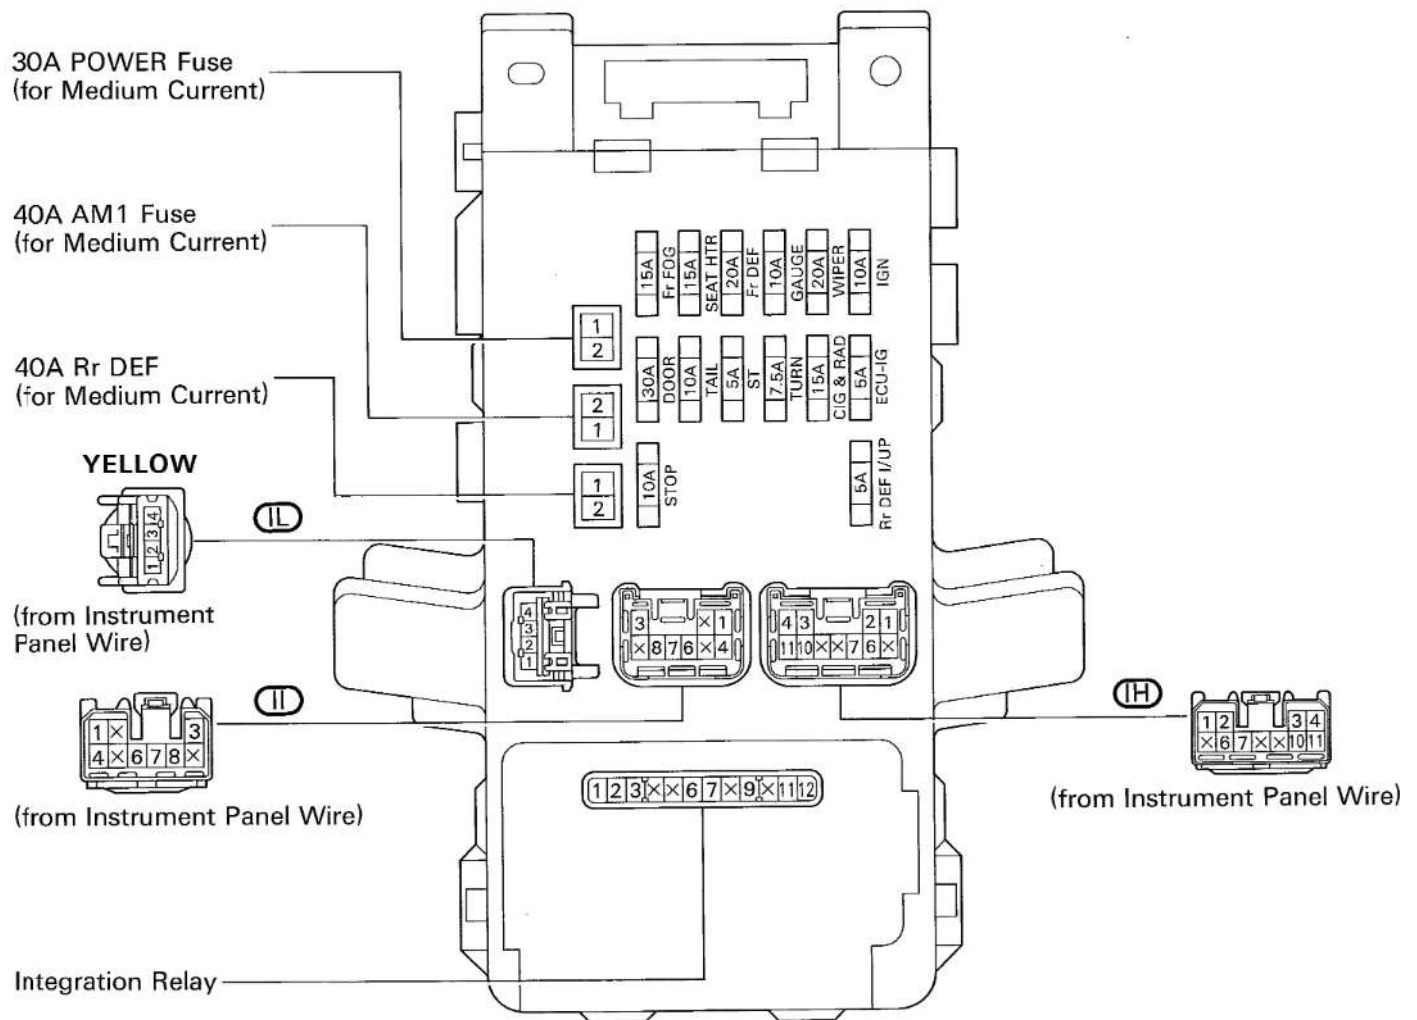


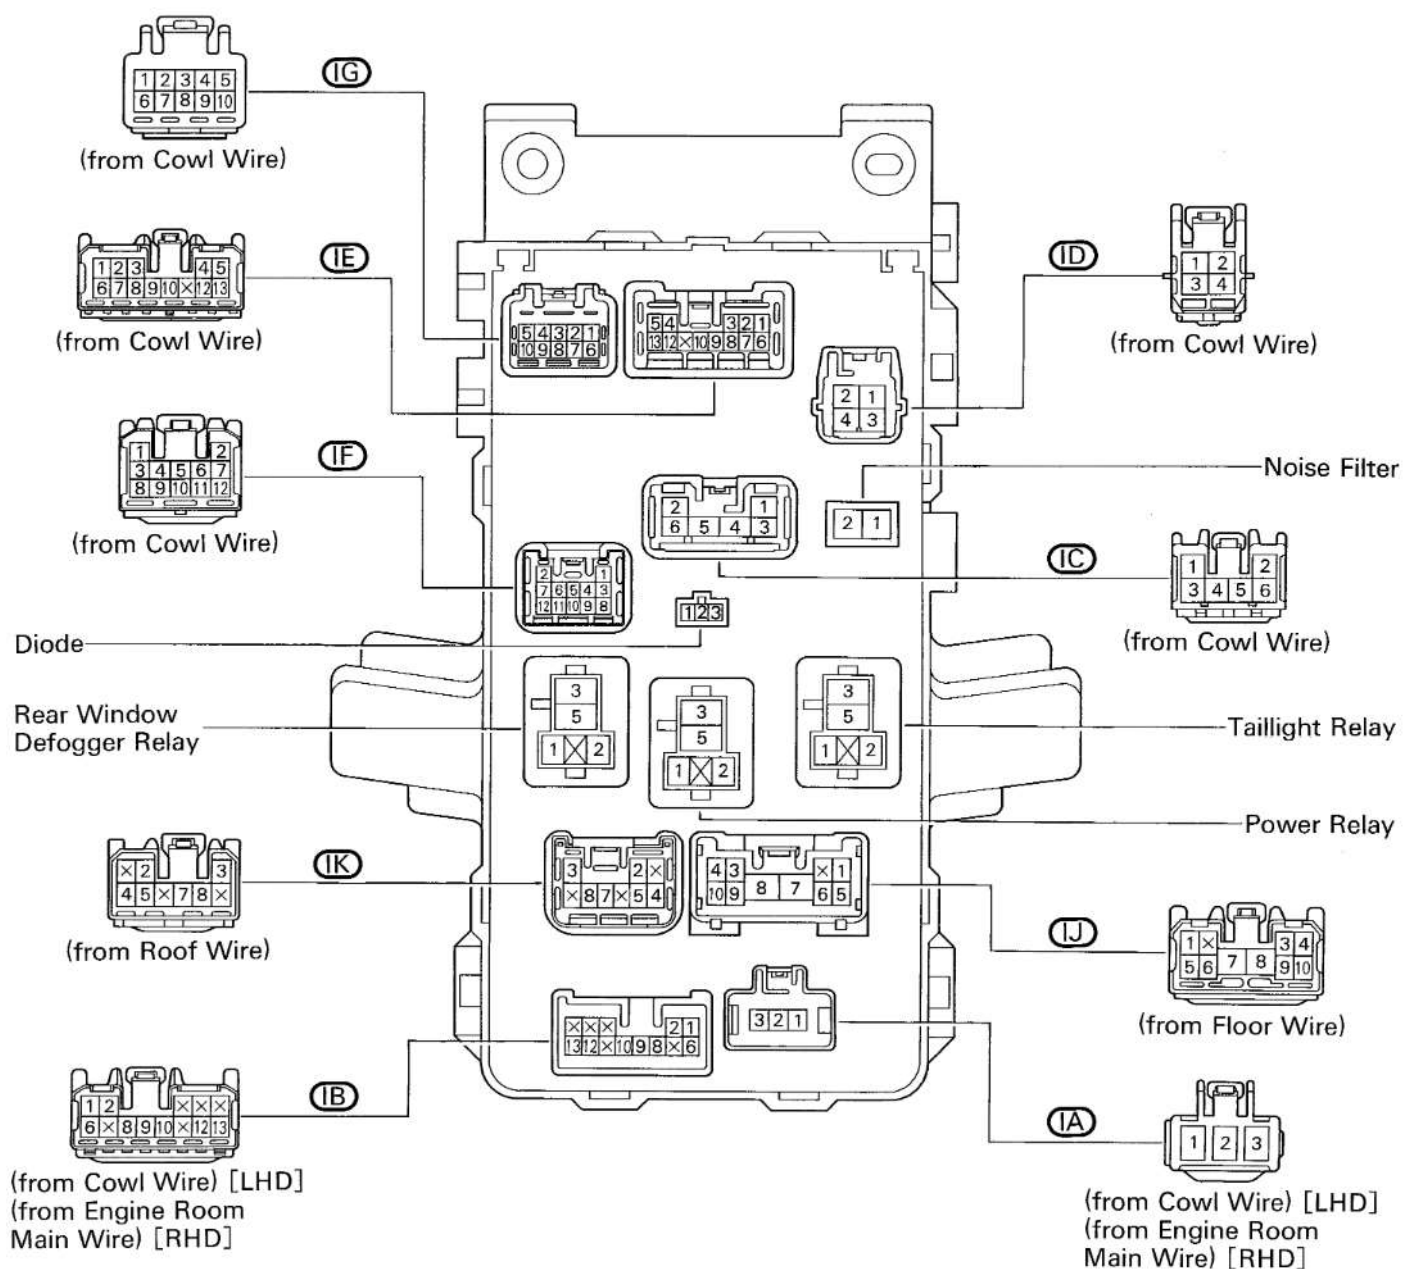

F RELAY LOCATIONS


○ : Center J/B	LHD : Left Side of Heater Unit (See Page 51)
	RHD : Right Side of Heater Unit (See Page 51)

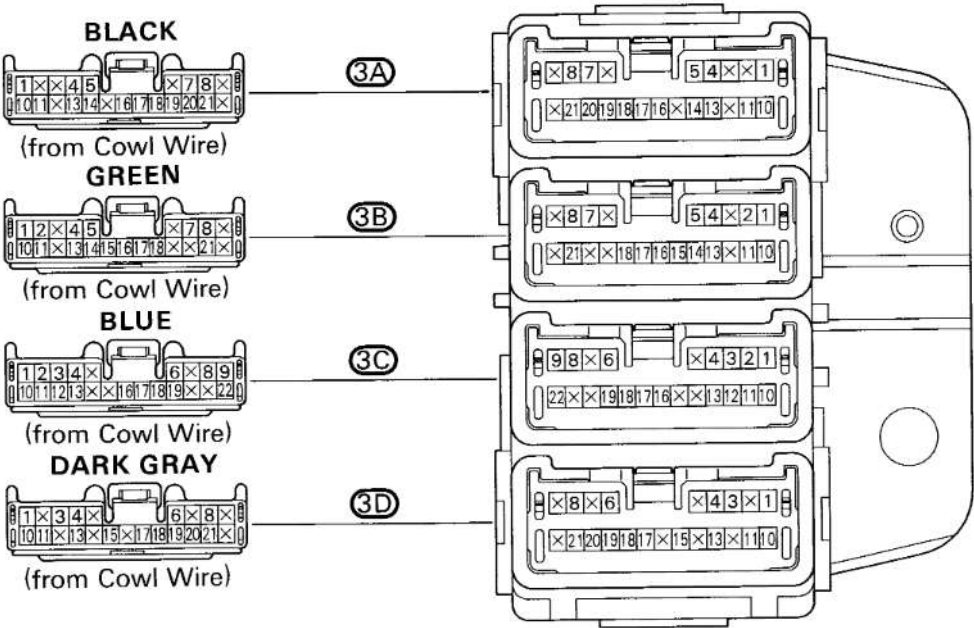

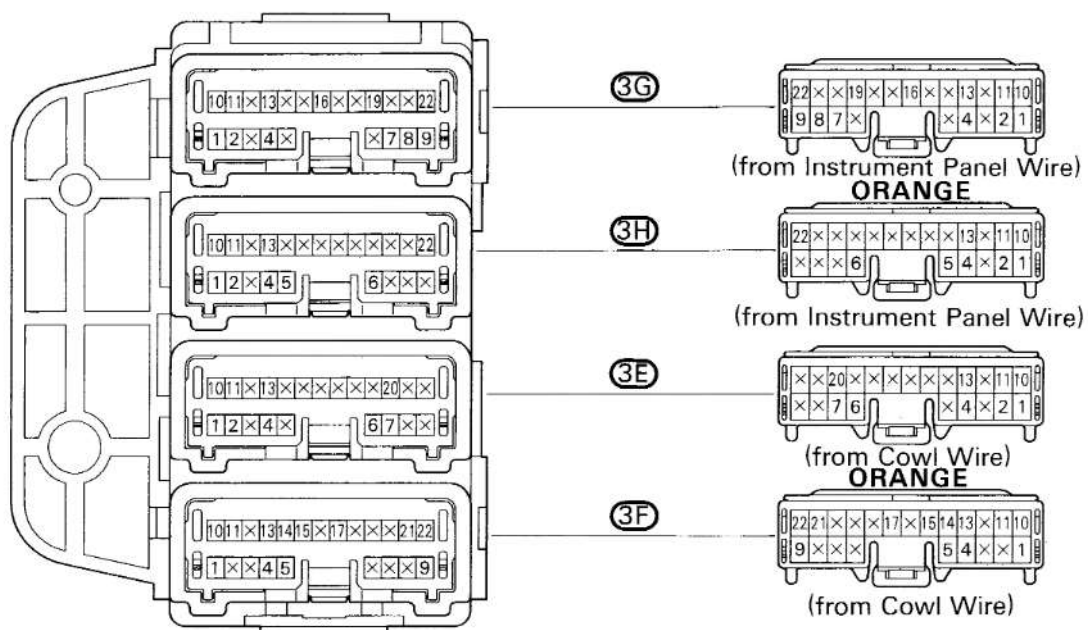


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

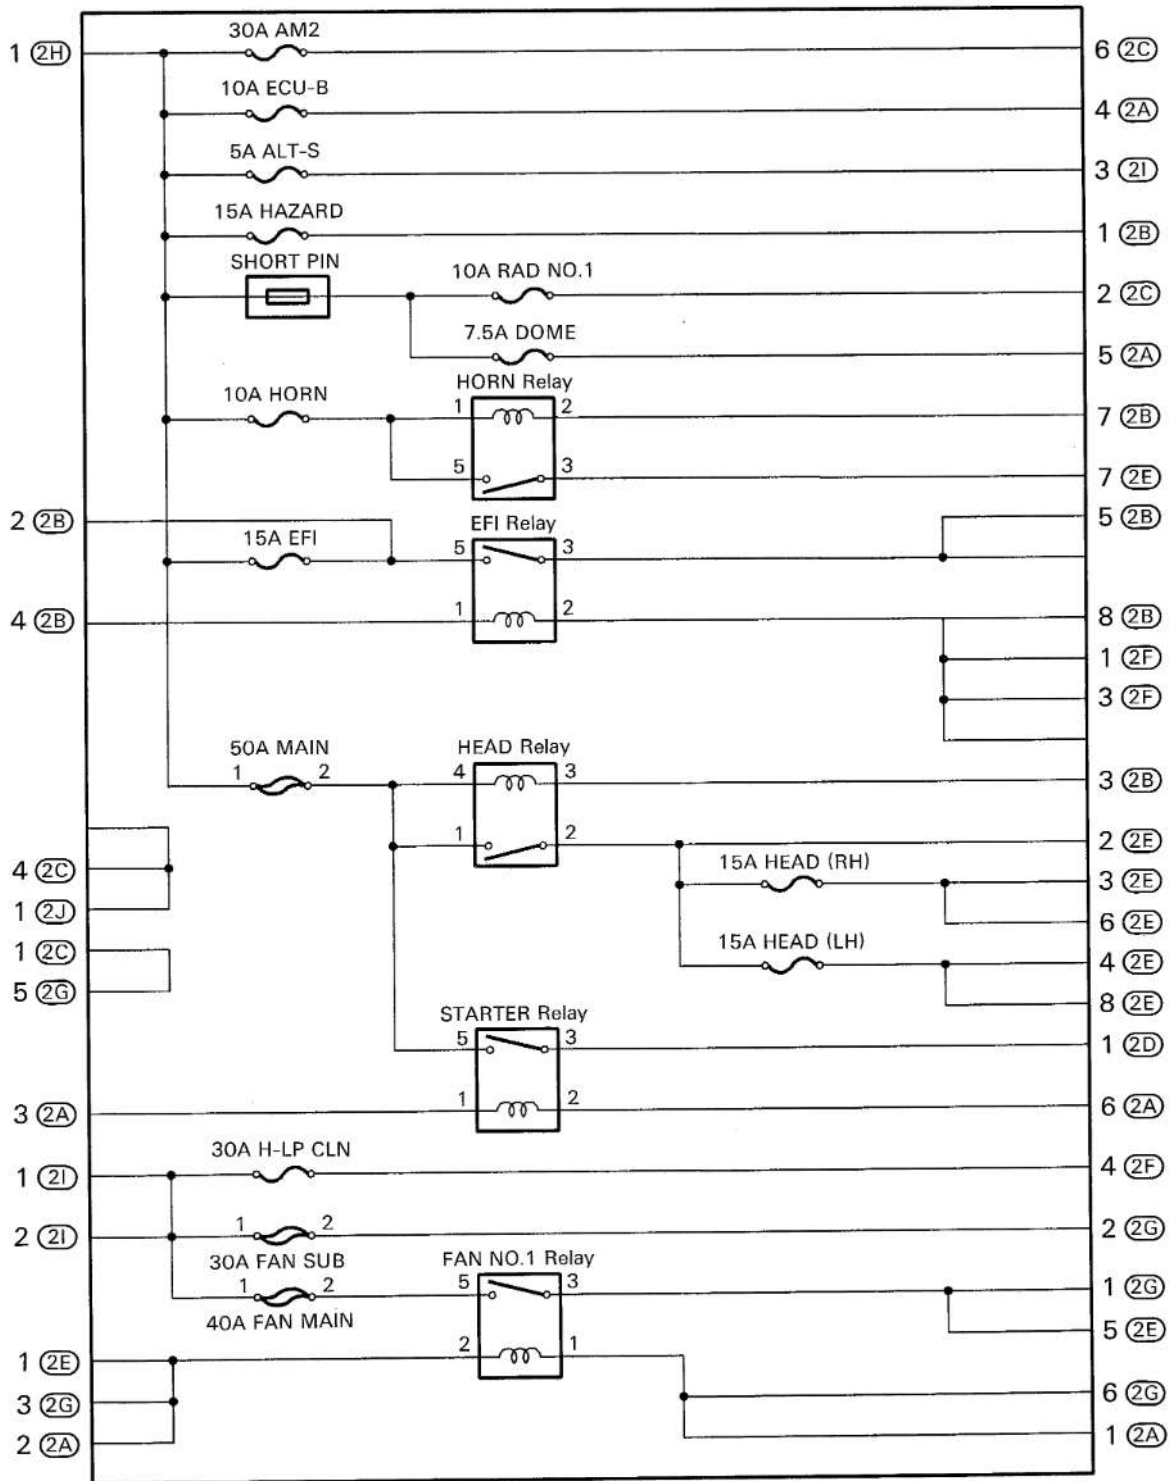

[Instrument Panel J/B Inner Circuit]

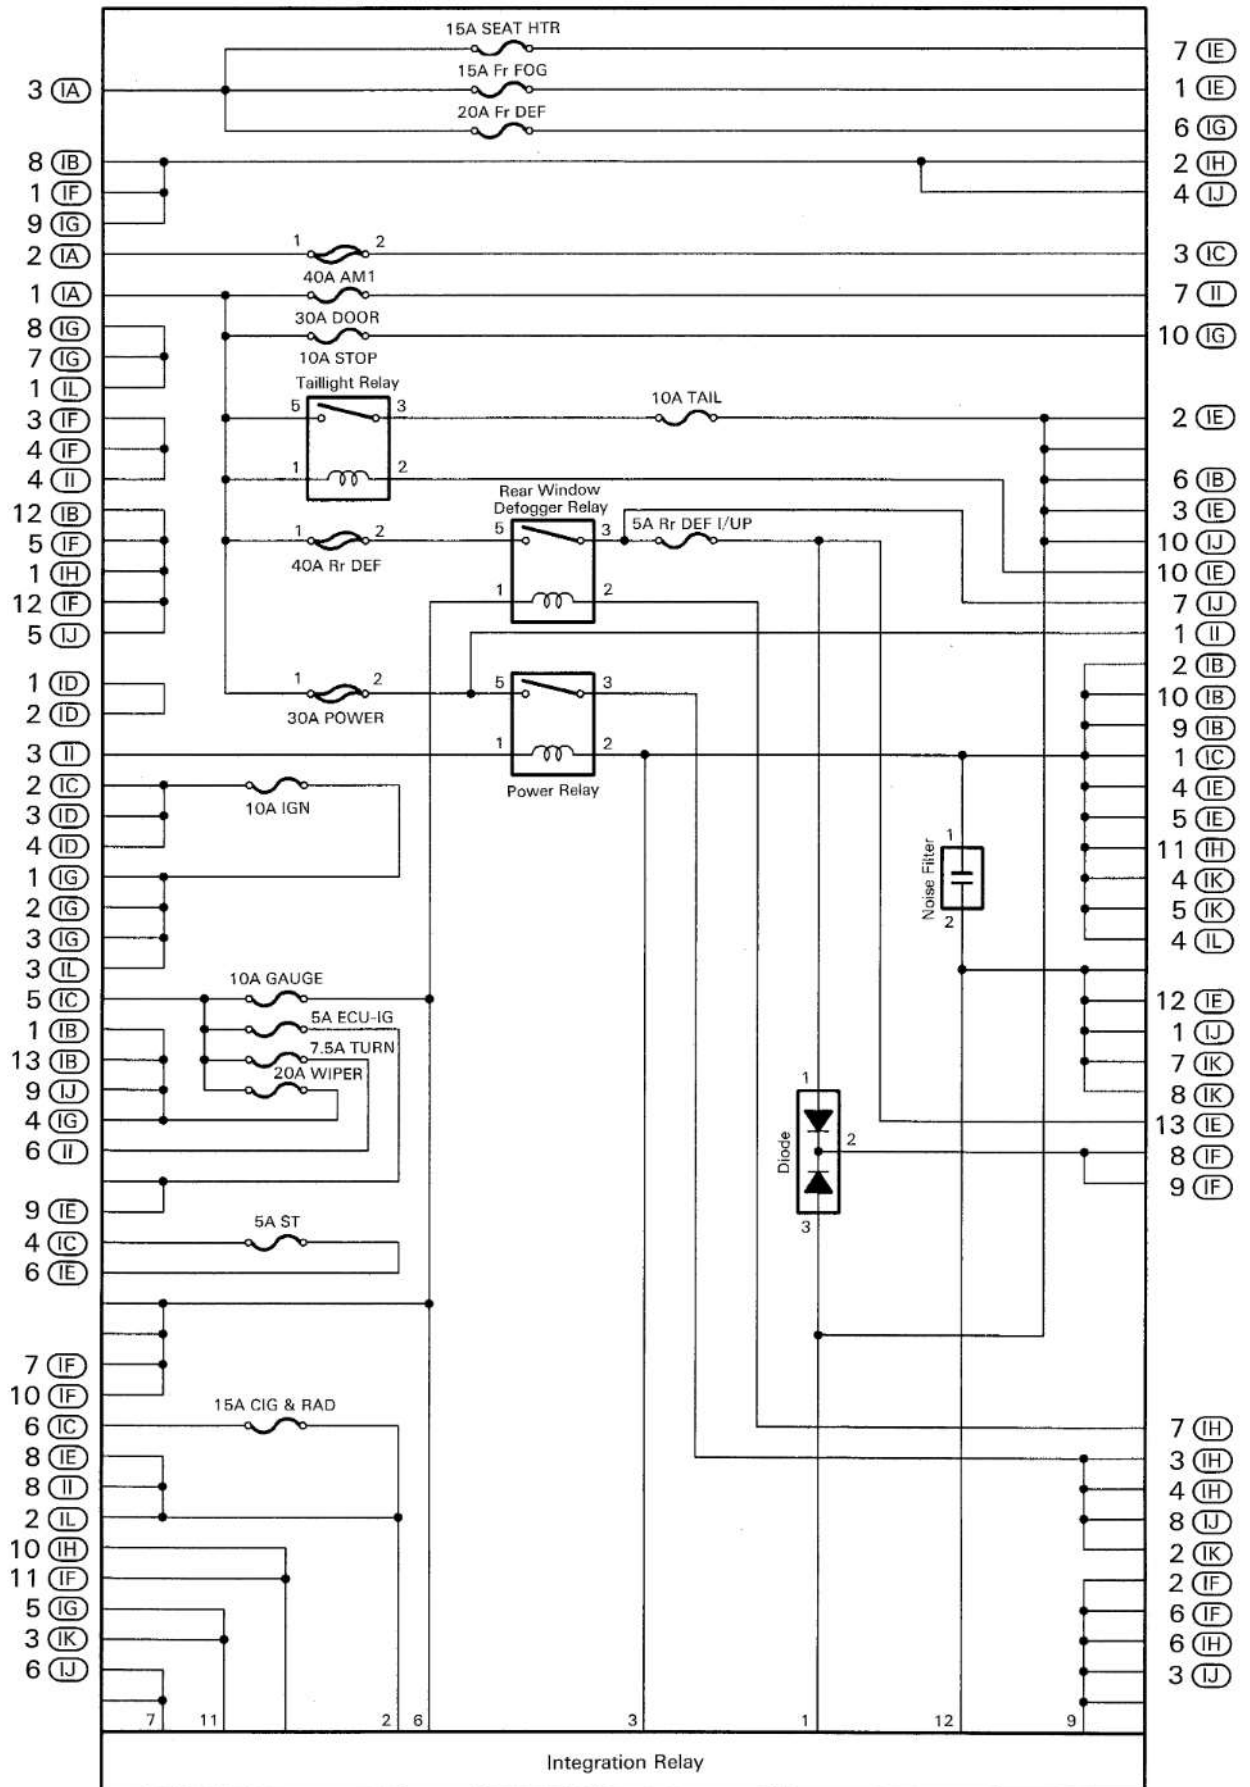

F RELAY LOCATIONS

[Center J/B Inner Circuit]

English

