

Pontiac Trans Sport 1997 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is to the right of the glove box.

FUSE USAGE CHART					
CIRCUIT BREAKER	SWC BACKLIGHT	DRL	PCM		
HEADLAMP	ELEC PRNDL		RR DEFOG	ELC	
	PWR MIRROR	CIGAR/DLC	FRT PWR SCKT	CTSY LAMP	
	CRUISE	T/SIG	SIR	IGN 1	PSD
PWR WDO/RR VEN	PWR QTR VENT	RR HVAC	FRT HVAC LOW/MED BLWR	SUNROOF	HVAC/DRL
	FRT WPR/WSHR	SWC ACCY	MALL/RADIO/DIC	RR WPR/WSHR	BCM PRGRM
PWR SEAT/PSD		HAZARD	STOP LAMP		
FRT HVAC/HI BLWR	PWR LOCK	RR PWR SCKT	ABS MOD BATT		
		ABS SOL	SWC BACK LIGHT		

Pontiac Trans Sport – fuse box –

instrument panel

Circuit Breakers	Ampere rating [A]	Usage
HEADLAMP	20	DRL Control Module, Headlamp and I/F Dimmer Switch
PWR WDO/RR VEN	30	Front Power Windows
PWR SEAT/PSD	30	6-Way Power Seat(s) and Rear Side Door Actuator Motor
FRT HVAC/HI BLWR	30	Blower Motor Hi Speed Relay in Module

Fuses	Ampere rating [A]	Usage
ABS MOL BATT	10	Electronic Brake Traction Control Module (EBTCM)
ABS SOL	30	LH and RH Front Brake Solenoid Valve


ABS/TCS IGN	10	Electronic Brake Control Relay and EBTCM
BCM PRGRM	10	Body Control Module (BCM)
CIGAR/DLC	15	Cigarette Lighter and Data Link Connector (DLC)
CRUISE	10	Cruise Control Module, Switch and Release Switch
CTSY LAMP		BCM
DRL	10	DRL Control Module
ELC	20	Electronic Level Control (ELC) Air Compressor and ELC Relay
ELEC PRNDL	10	Instrument Cluster to PRNDL Indicators
FRT HVAC LOW/ MED BLWR	20	Heater-A/C Control
FRT PWR SCKT	20	Front Electric Accessory Plug Housing
FRT WPR/WSHR	25	Windshield Wipermasher Motor and Switch
HAZARD	15	Turn Signal Switch
HVAC DRL	15	Air Recirculation Motor, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay

IGN1	10	ELC Sensor, BCM, Elec&onic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Motor, Rear Window W1perNasher and Multifunction Switch (Foglamp Switch/TCS Enable Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch
MALL/RADIO / DIC	10	BCM, Driver Information Display, Radio and Radio Rear Speaker Amplifier
PCM	10	Relay and PCM
PSD		Rear Side Door Actuator Motor
PWR LOCK	20	BCM
PWR MIRROR	10	Power Remote Control Mirr
PWR QTR VENT	10	Interior Lamps and Multifunction Switch (Power Vent Switch)
RR HVAC	25	Rear Blower Motor, Rear Heater-A/C Control, and Temperature Door Actuator (Rear)
RR DEFOG	25	Rear Window Defogger Relay
RR PWR SCKT	20	Rear Electric Accessory Plug Housing
RR WPR/WSHR	20	Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Wmdow Wipermasher Switch)
SIR	15	Inflatable Restraint Control Module

STOP LAMP	15	Stoplamp Switch to Stoplamps
SUNROOF		Sunroof Control Module
SWC ACCY	5	Steering Wheel Radio Control Switches
SWC BACK LIGHT	5	Steering Wheel Radio Control Switches (Illumination)
T/SIG	15	Turn Signal Switch

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

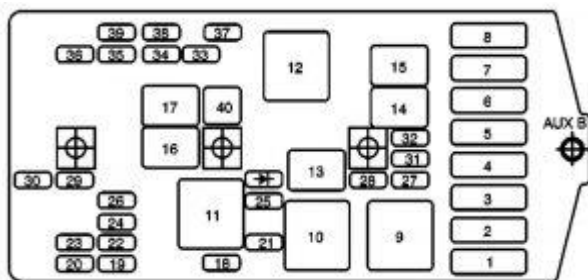

Pontiac Trans Sport – fuse box – engine

compartment

Maxi Fuses		Usage
1	COOL FAN	Coolant Fans
3	HEADLAM PS	Circuit Breakers: FRT WAC HI BLWR, and HEADLAMP Fuses (W): HAZARD and STOPLAM

4	BATT MAIN 2	Circuit Breaker: PWR SEAT/PSD. Fuses (UP): ELC and RR DEFOG
5	IGN MAIN 1	Ignition Switch to Fuses (UP): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK, IGN, IGN 1-U/H, INJ, TCC)
6	COOL FAN 1	Coolant Fans
7	BATT MAIN 1	Fuses (UP): ABS MOD BATT, CIGAE2/RLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT

Mini Fuses		Usage
18	INJ	Fuel Injectors 1-6
21	IGN1-U H	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor
25	ELEK IGN	Ignition Control Module (ICM)
26	SPARE	Not Used
27	B/U LAMP	Transaxle Range Switch to Back-up Lamps
28	A/C CLU	A/C CLU Relay to A/C Compressor Clutch Oil

29	RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft Deterrent Shock Sensor
30	ALT SENSE	Generator
31	TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32	FUEL PUMP	Fuel Pump Rela
33	ECM SENSE	Powertrain Control Module (PCM)
35	FOG LP	Fog Lamp Relay
36	HORN	Horn Relay
37	PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps and UP Dimmer Switch Theft-Deterrent Relay to Headlamps