



F RELAY LOCATIONS


[Engine Compartment]

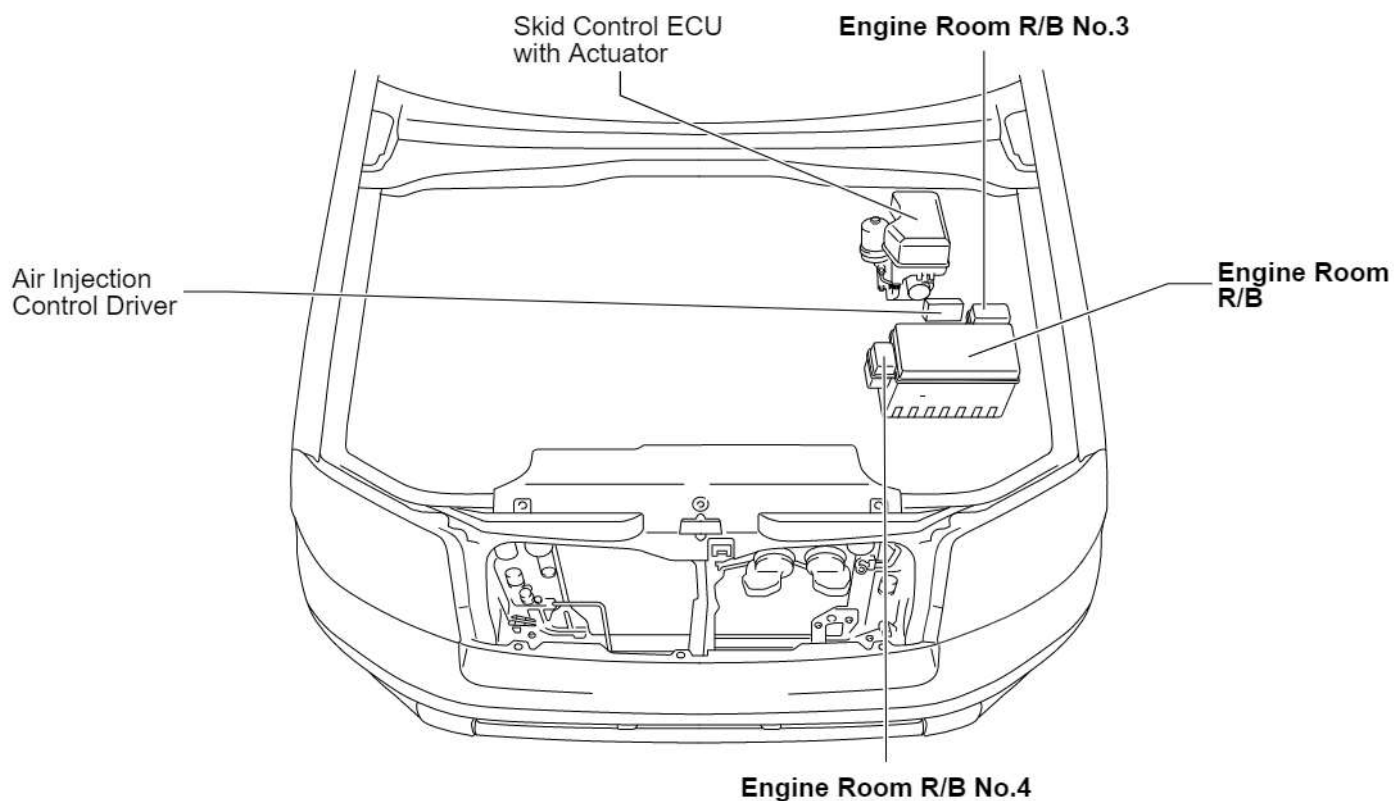


[Body]

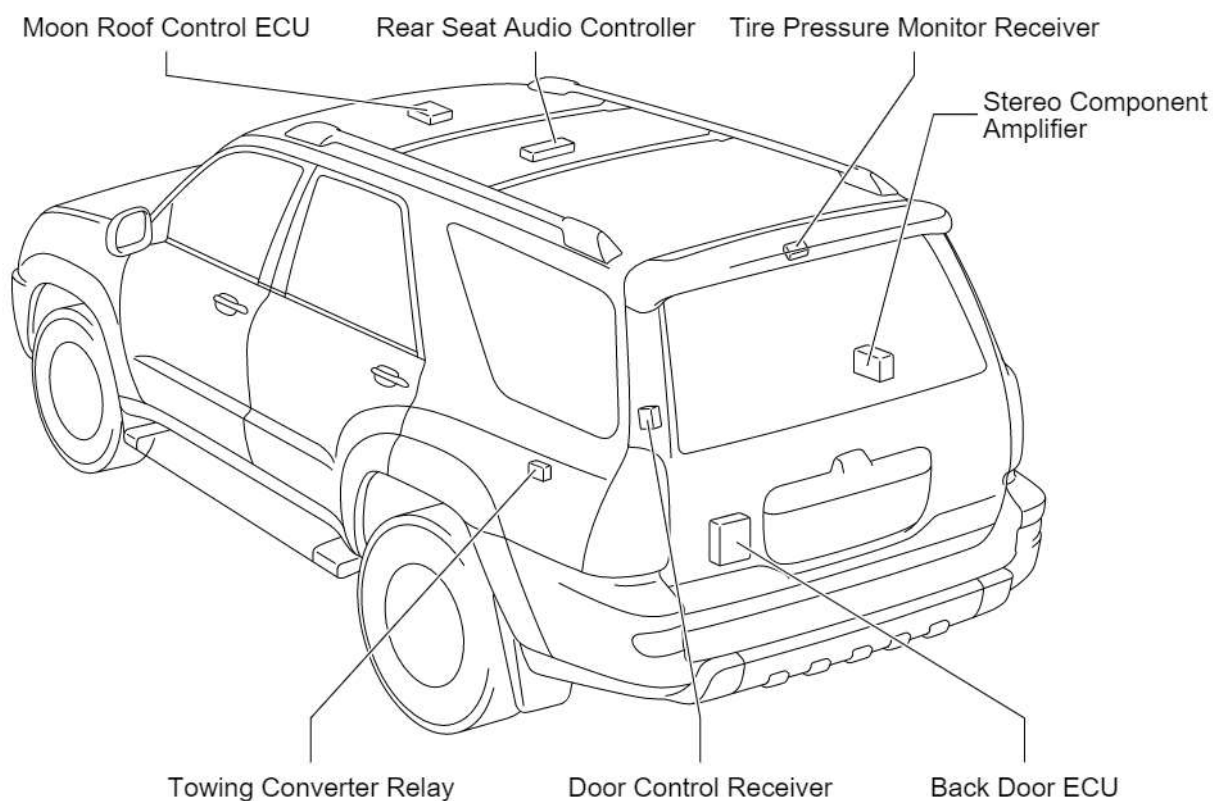

[Instrument Panel]

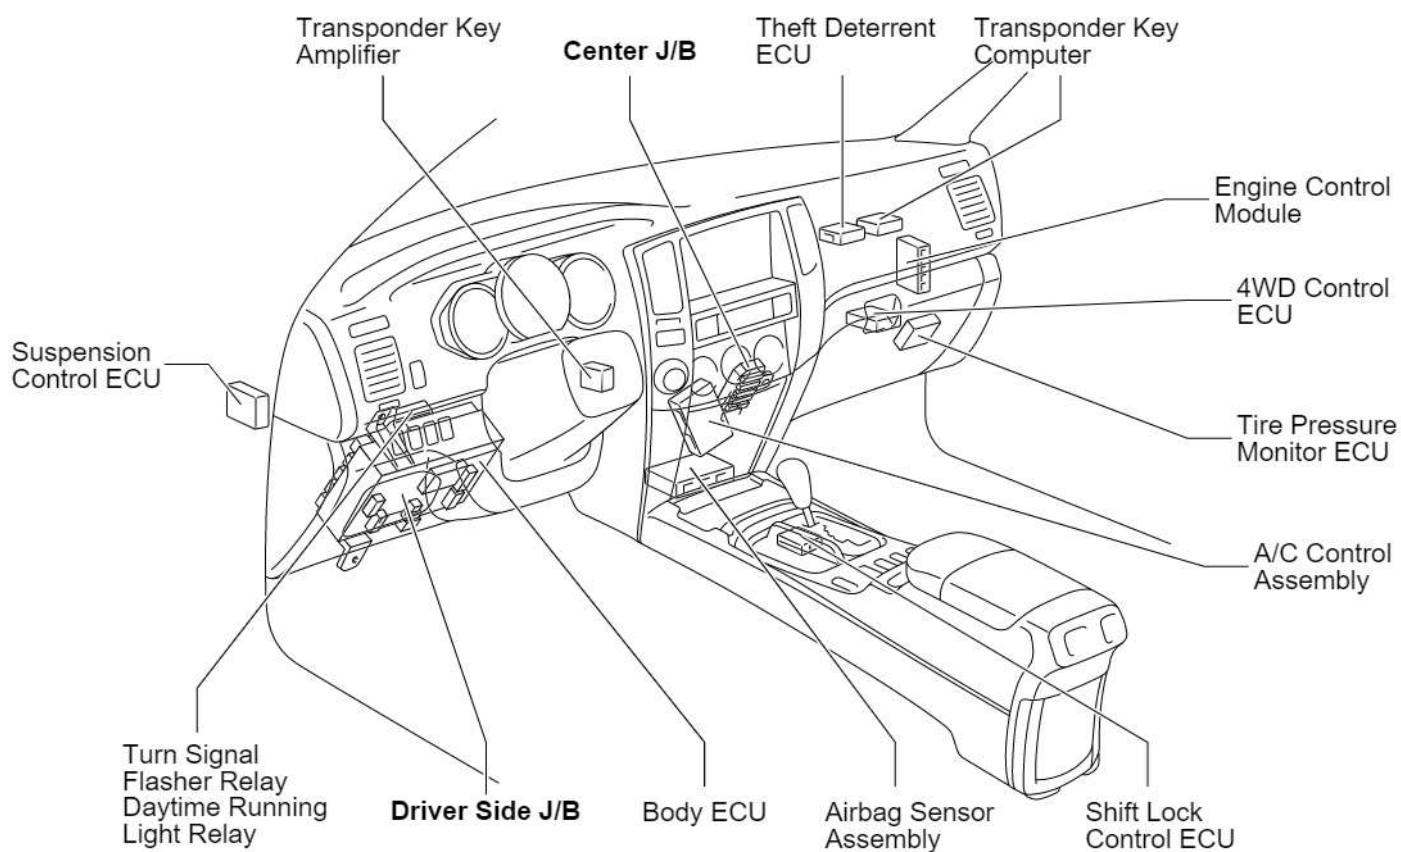


[Seat]

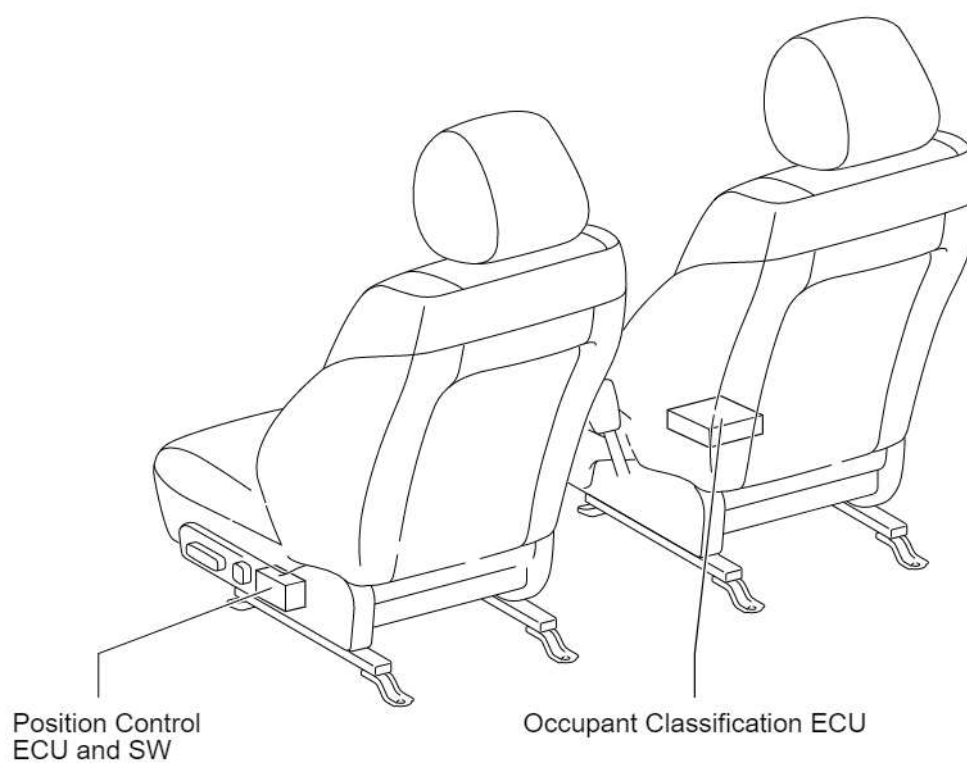


F RELAY LOCATIONS

② : Engine Room R/B


Engine Compartment Left (See Page 20)

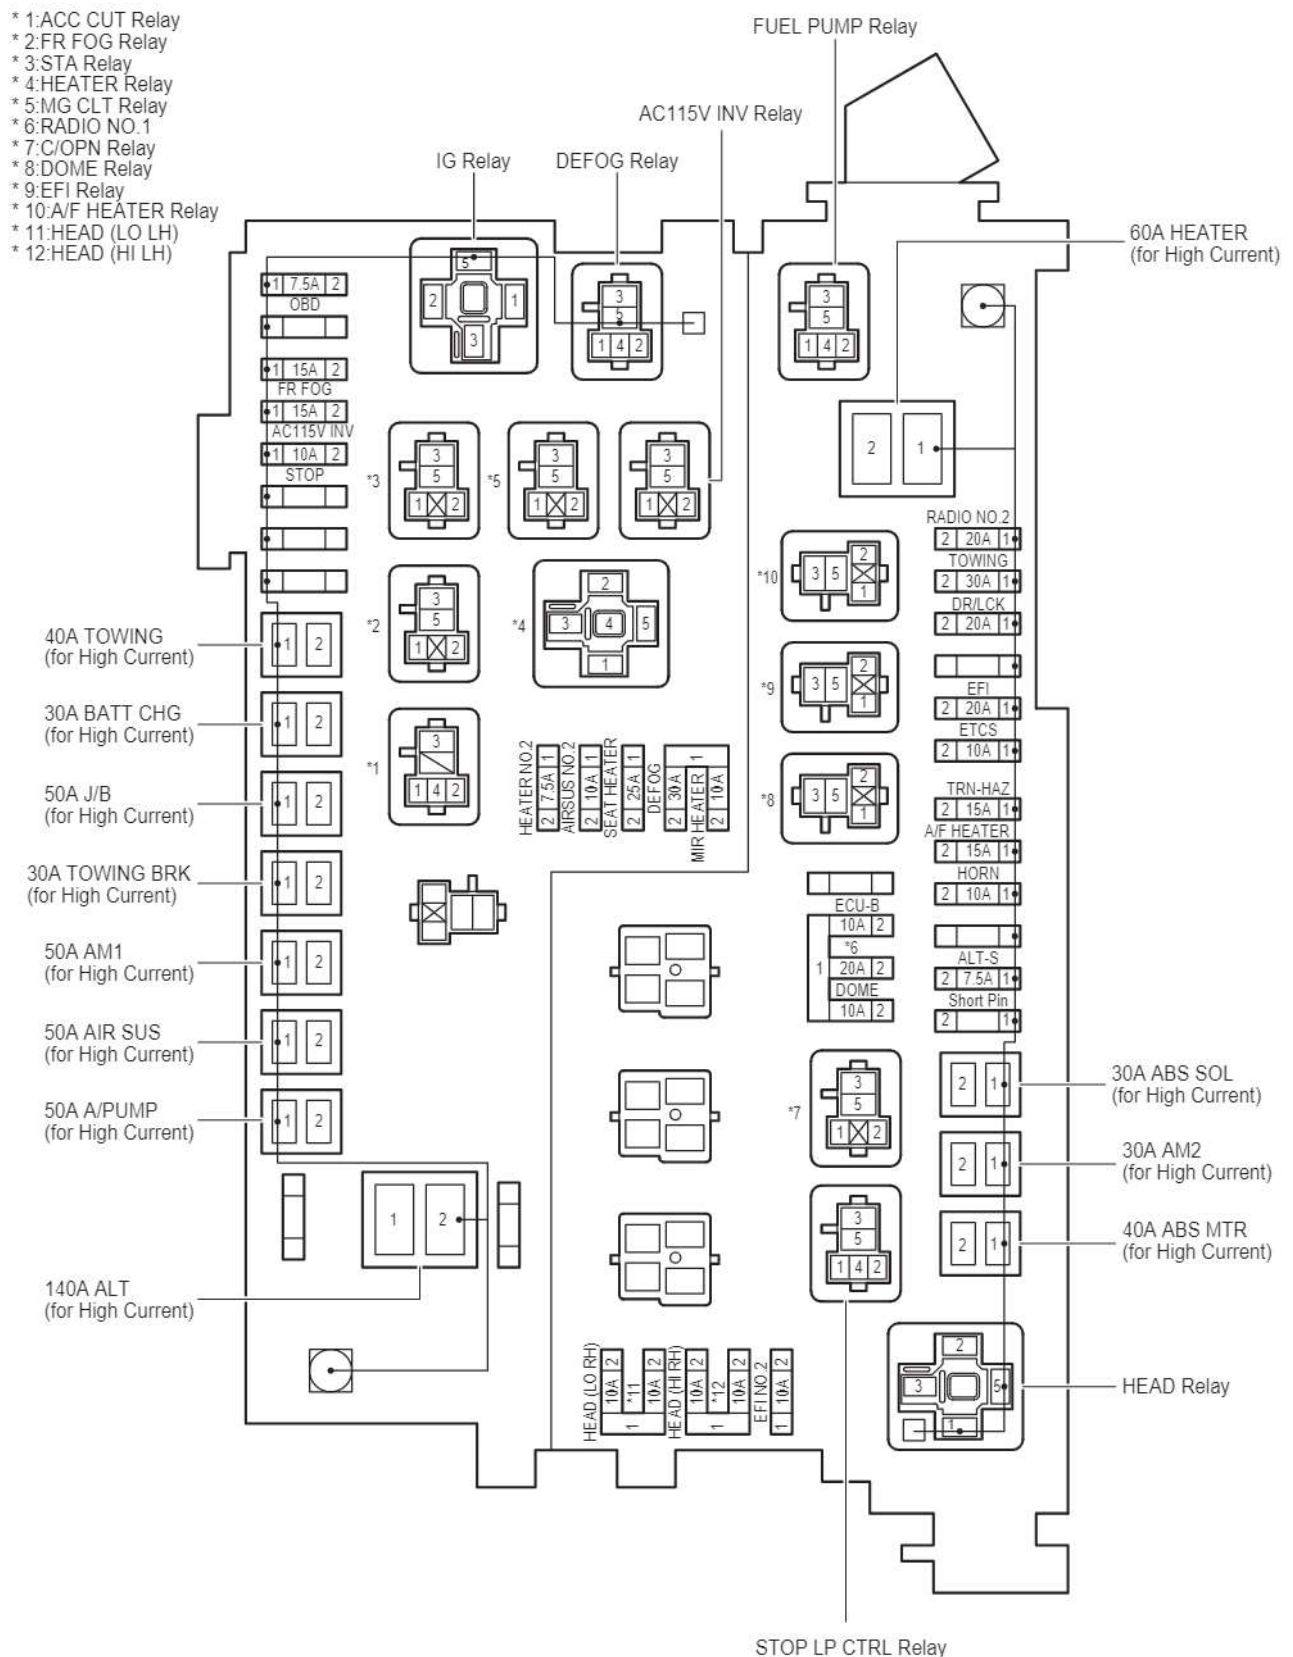

③ : Engine Room R/B No.3	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

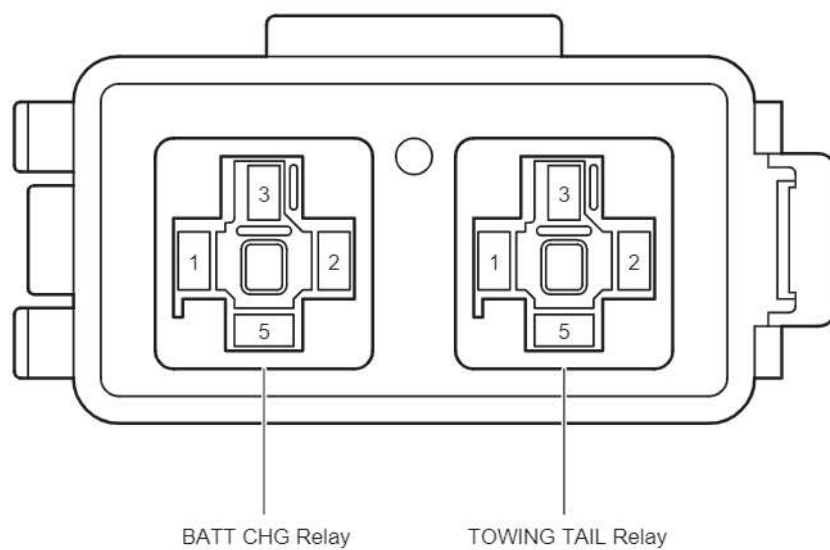


④ : Engine Room R/B No.4	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

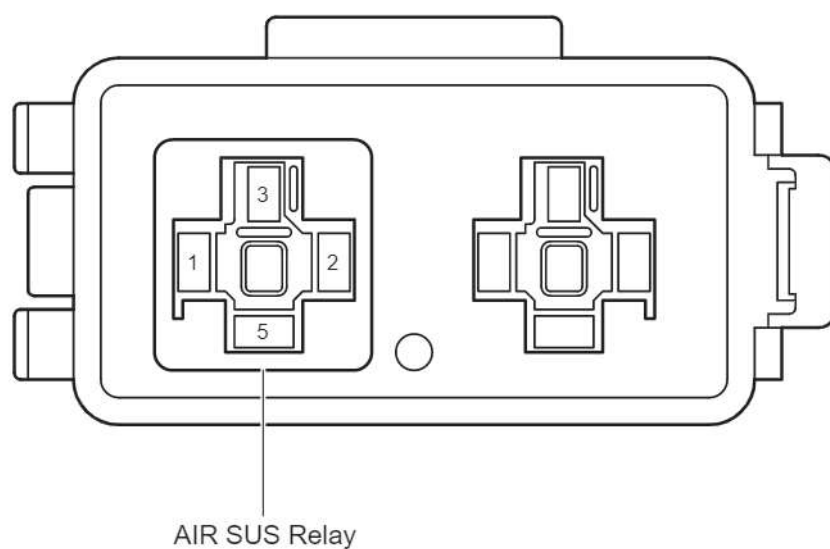


F RELAY LOCATIONS

○ : Driver Side J/B


Lower Finish Panel (See Page 21)

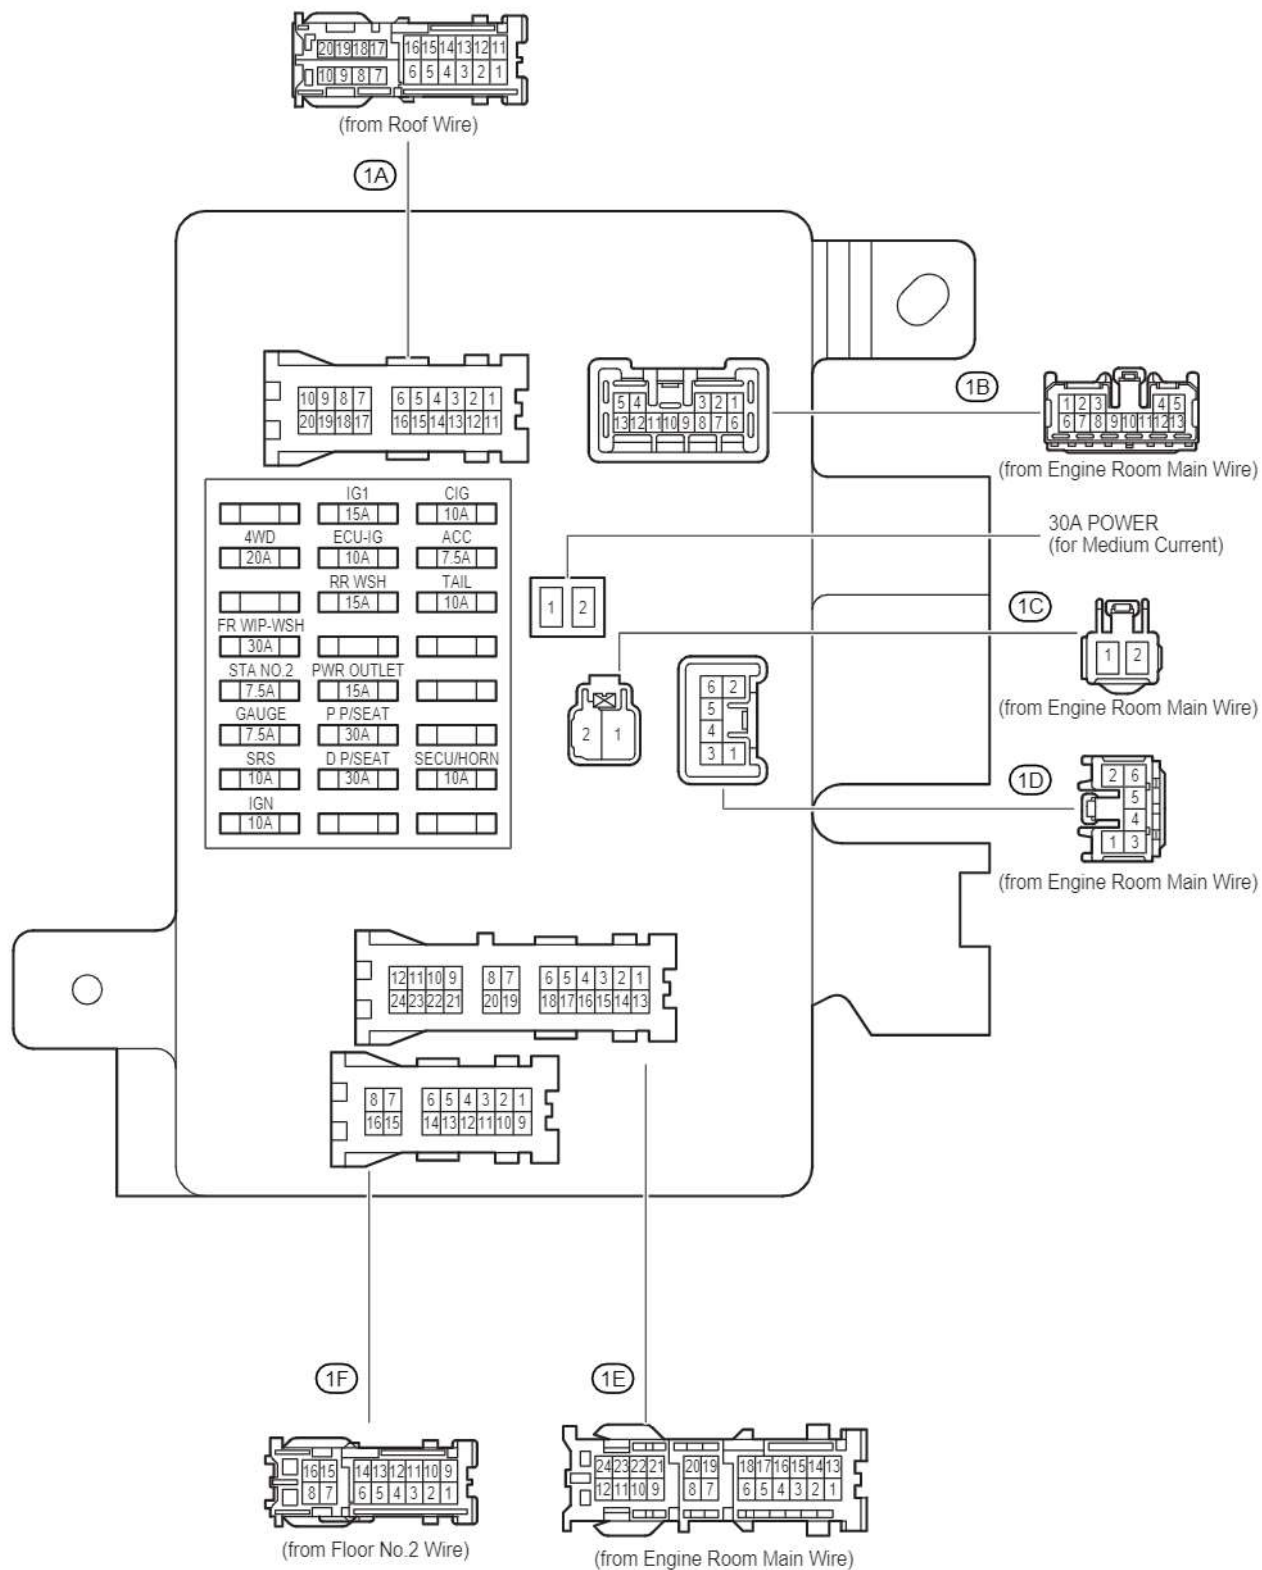

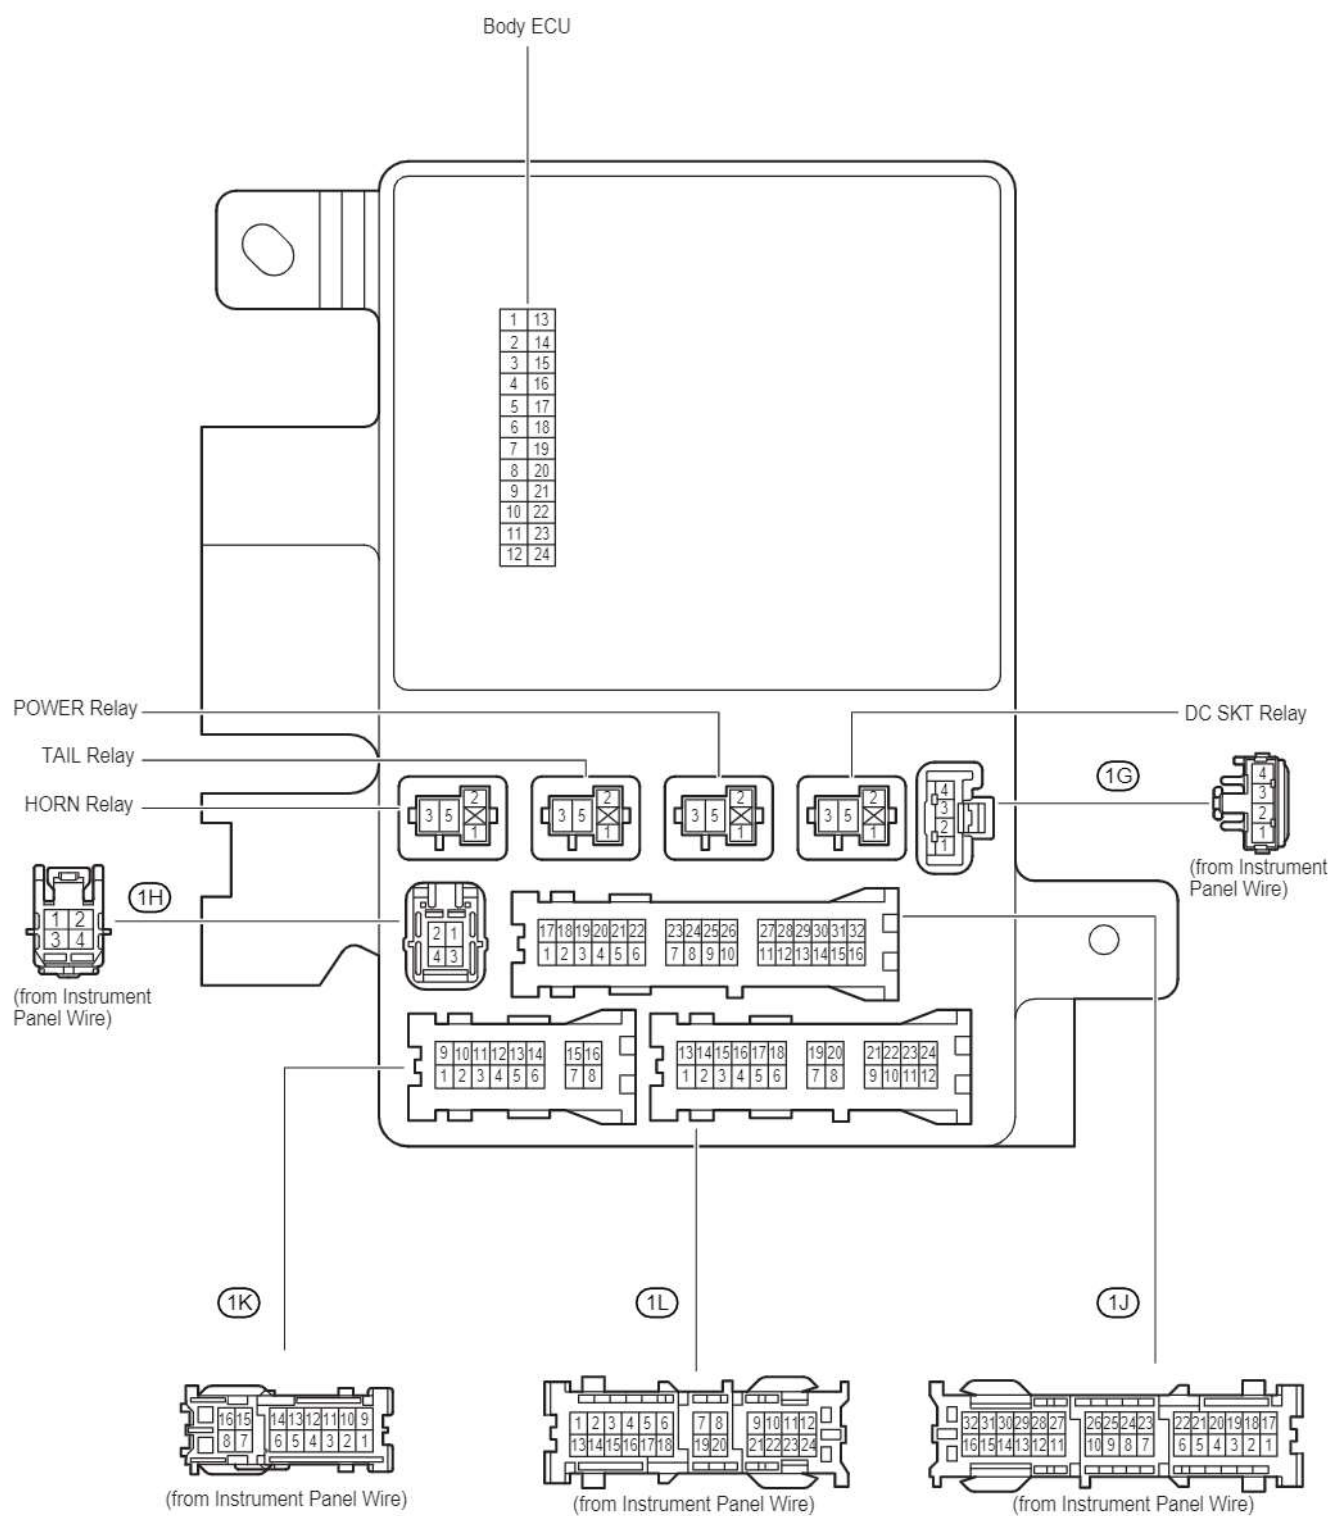


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

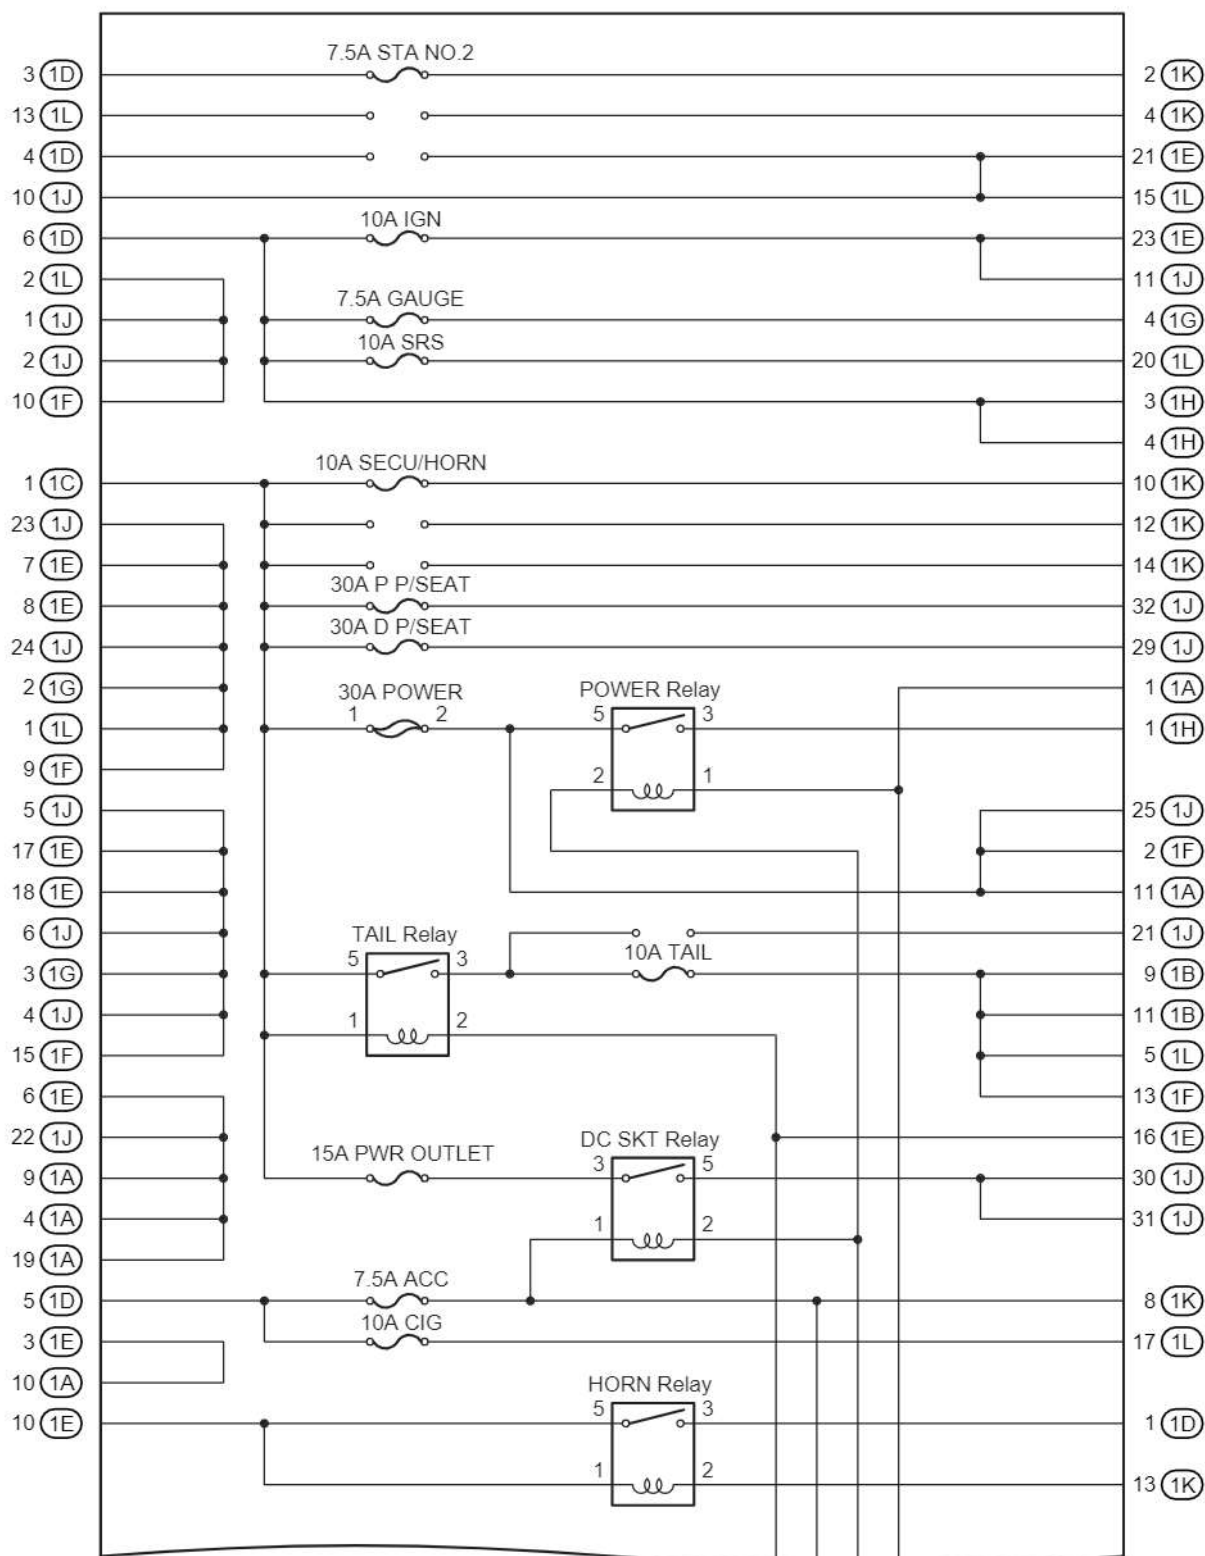


(Cont. Next Page)

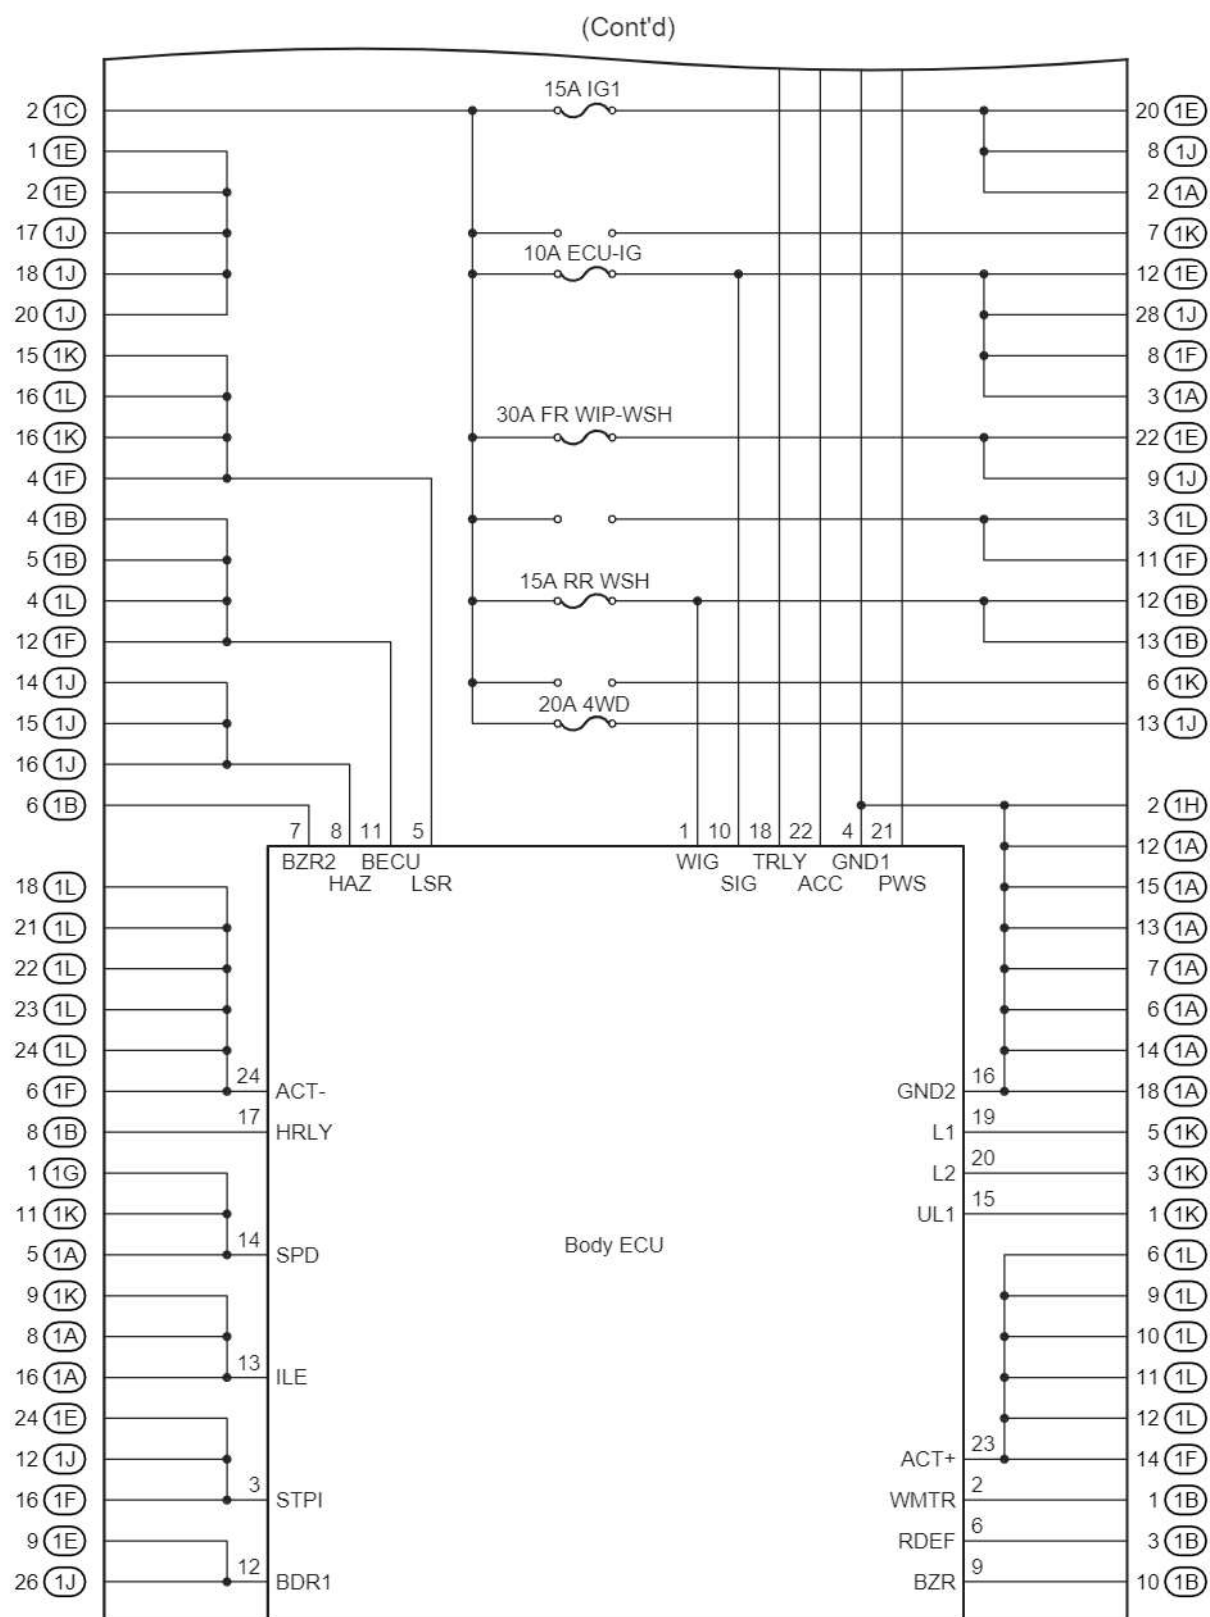

F RELAY LOCATIONS


○ : Center J/B

Instrument Panel Brace RH (See Page 21)

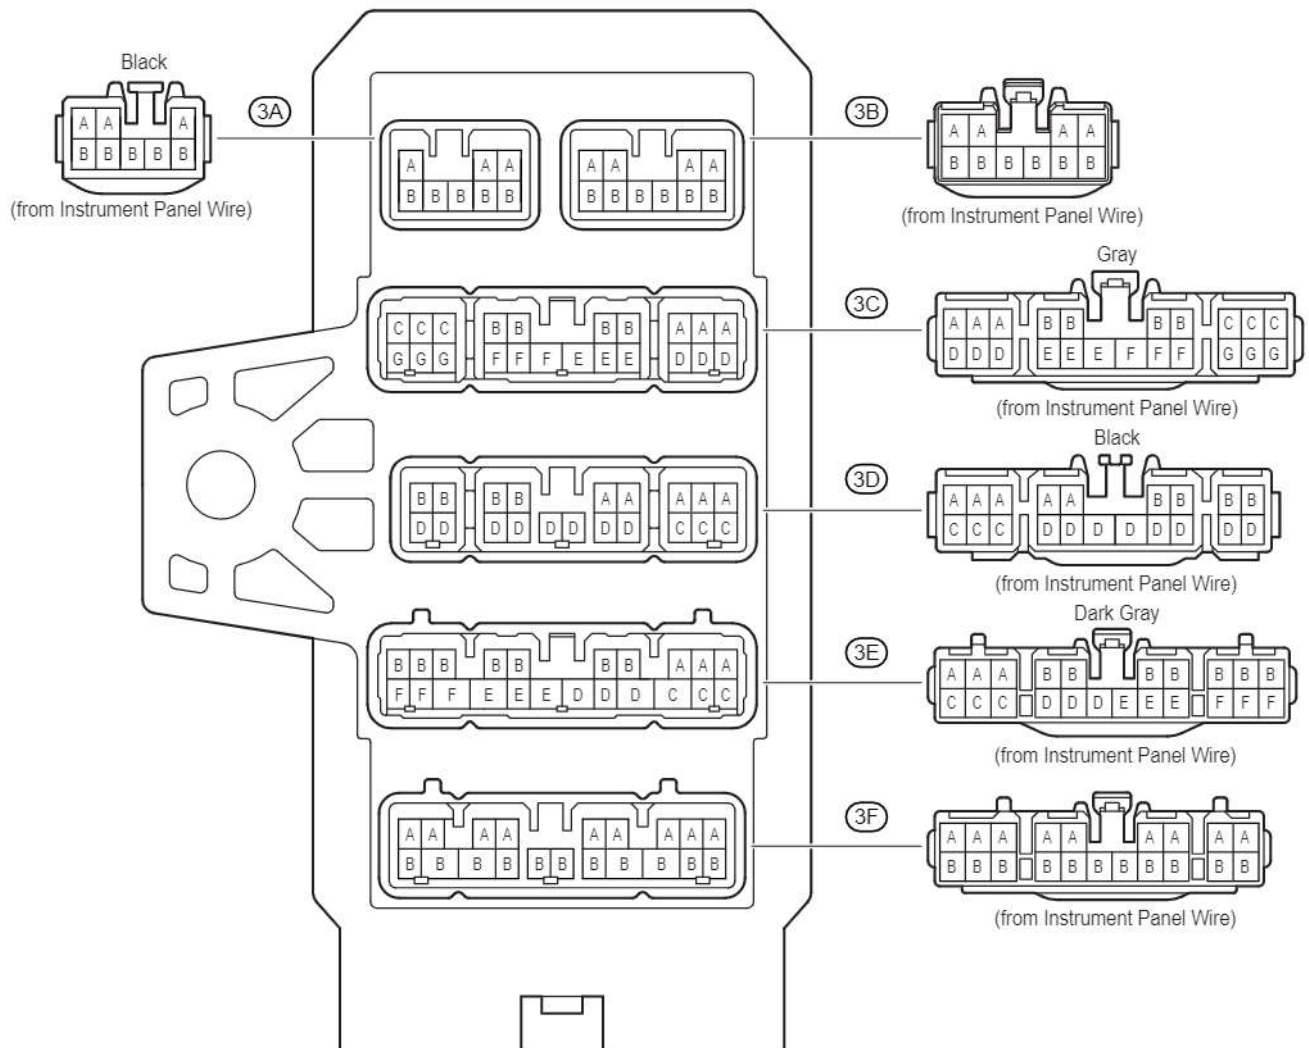

F RELAY LOCATIONS

[Center J/B Inner Circuit]

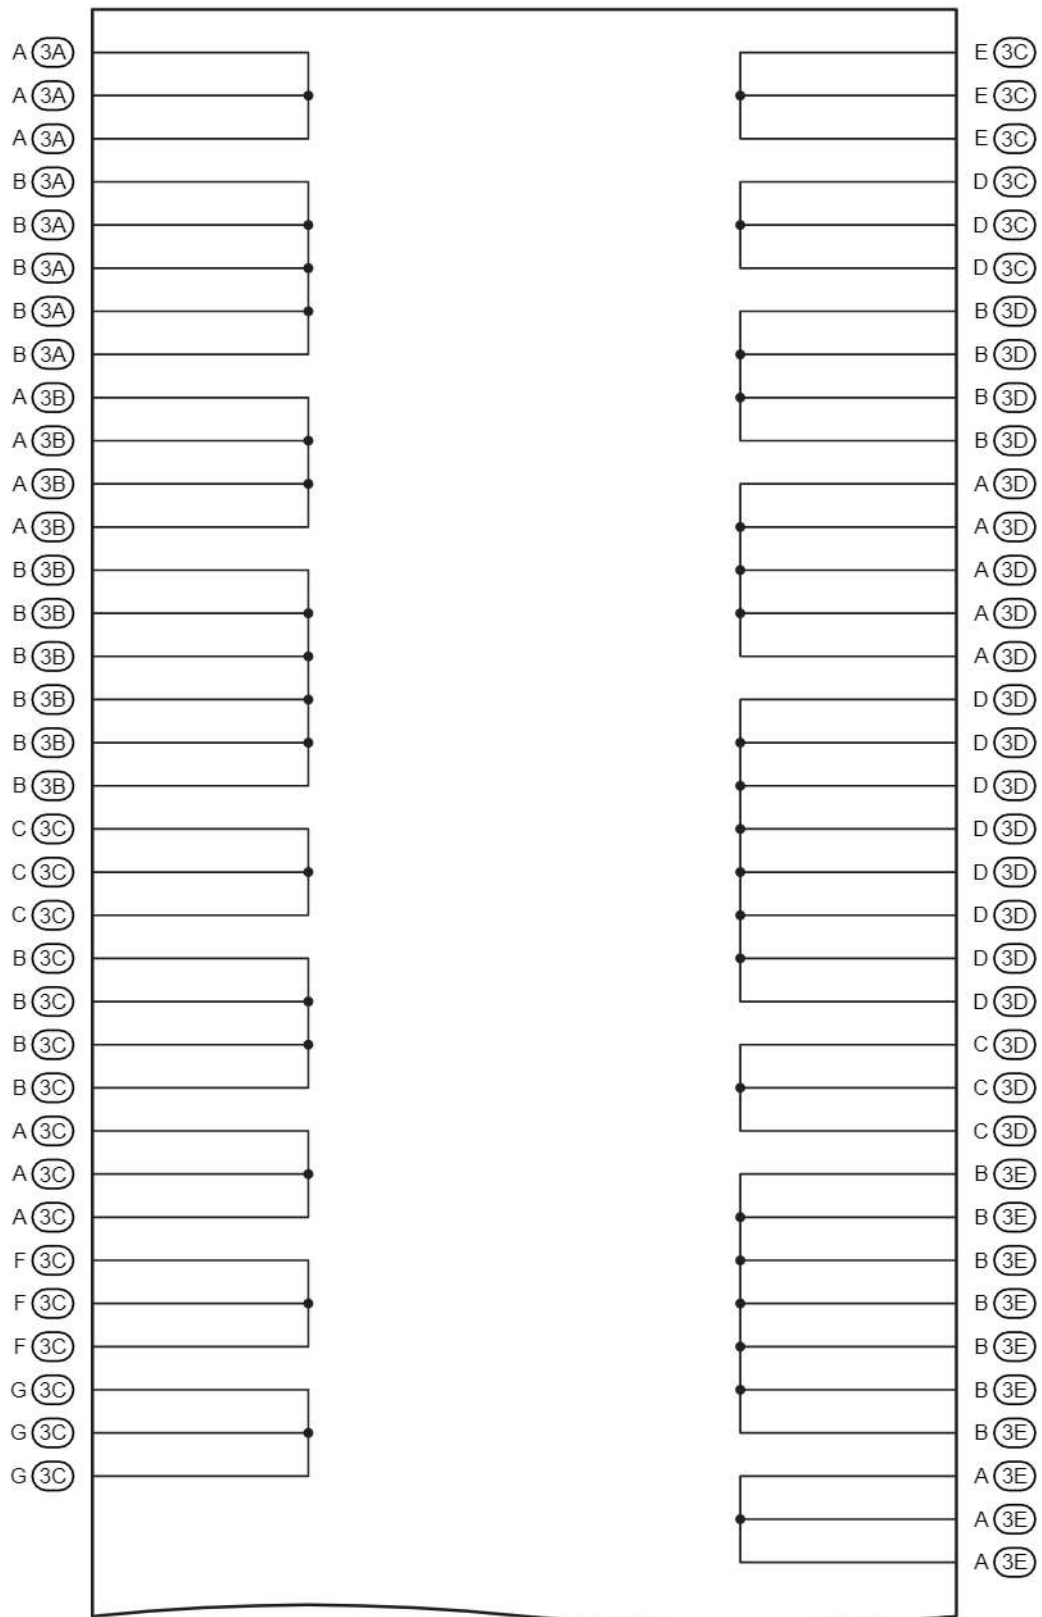

(Cont. Next Page)

(Cont'd)

F (3E)	
F (3E)	
F (3E)	
E (3E)	
E (3E)	
E (3E)	
D (3E)	
D (3E)	
D (3E)	
C (3E)	
C (3E)	
C (3E)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
A (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	
B (3F)	