

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11030	B 9	Buckle SW (Driver's Side)	90980-10942
A 2	A/C Condenser Fan Motor	90980-10928	B10	Buckle SW (Front Passenger's Side)	90980-10795
A 3	A/C Pressure Sensor	90980-10845		Occupant Detection Sensor	
A 4	ABS Speed Sensor Front LH	90980-11003	C 1	Camshaft Position Sensor	90980-10947
A 5	ABS Speed Sensor Front RH		C 2	Camshaft Timing Oil Control Valve	90980-11162
A 6	Air Flow Meter	90980-11317	C 3	Compressor Assembly	90980-11156
A 7	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	C 4	Condenser Assembly	90980-11003
A 8	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	90980-10869	C 5	Counter Gear Speed Sensor	90980-11156
A 9	Airbag Sensor Front LH	90980-11856	C 6	Crankshaft Position Sensor (Except 1CD-FTV)	90980-10947
A10	Airbag Sensor Front RH			Crankshaft Position Sensor (1CD-FTV)	90980-12028
A11	Alternator	90980-11964	C 7	Cigarette Lighter	90980-10795
A12	Alternator (Except 1CD-FTV)	90980-09212		Cigarette Lighter Illumination	
	Alternator (1CD-FTV)	90980-09213	C 8	Circuit Opening Relay	82660-05020
A13	A/C Control Assembly	90980-12169	C 9	Clutch Start SW	90980-10825
A14	A/C Control Assembly	90980-11778	C10	Combination Meter	90980-11913
A15	A/C Control Assembly	90980-12259	C11	Combination Meter	90980-11915
A16	A/C Control Assembly	90980-12200	C12	Combination SW	90980-11672
A17	A/C Room Temp. Sensor	90980-11918	C13	Combination SW	90980-11594
A18	A/C Solar Sensor	90980-11987	C14	Combination SW	90980-12183
A19	A/C Thermistor	90980-11918	C15	Curtain Shield Airbag Sensor LH	90980-12352
A20	Accel Position Sensor	90980-11144	C16	Curtain Shield Airbag Sensor RH	
A21	Air Inlet Control Servo Motor	90980-11987	C17	Curtain Shield Airbag Squib LH	90980-12219
A22	Air Mix Control Servo Motor	90980-11909	C18	Curtain Shield Airbag Squib RH	
A23	Air Mix Control Servo Motor (Driver Side)		D 1	Diesel Throttle Control Motor	90980-11144
A24	Air Mix Control Servo Motor (Front Passenger Side)		D 2	Diode	90980-11071
	Air Vent Mode Control Servo Motor		D 3	Diode	90980-10962
A26	Airbag Sensor Assembly	82824-50160	D 4	Diode (Fan) (Except 1CD-FTV)	90980-11608
A27	Airbag Sensor Assembly	90980-11872		Diode (Fan) (1CD-FTV)	90980-11071
A28	Airbag Sensor Assembly	82824-50150	D 5	DLC3	90980-11665
A29	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 6	Door Control Receiver	90980-11909
	Airbag Squib (Steering Wheel Pad)		D 7	Door Courtesy Light LH	90980-11148
A30	Antenna Amplifier	90980-10870	D 8	Door Courtesy Light RH	
A32	ABS Speed Sensor Rear LH	90980-11060	D 9	Door Courtesy SW Front LH	90980-10871
A33	ABS Speed Sensor Rear RH		D10	Door Courtesy SW Front RH	
A34	Air Fuel Ratio Sensor	90980-11930	D11	Door Courtesy SW Rear LH	
A35	Air Fuel Ratio Sensor Relay	82660-05020	D12	Door Courtesy SW Rear RH	
B 1	Back-Up Light SW	90980-11250	D13	Door Key Lock and Unlock SW (Driver's Side)	90980-12226
B 2	Brake Booster Pressure Sensor	90980-10845		Door Lock Control Motor (Driver's Side)	
B 3	Brake Fluid Level Warning SW	90080-98001		Door Unlock Detection SW (Driver's Side)	
B 4	Blower Motor	90980-10214	D14	Door Key Lock and Unlock SW (Driver's Side)	
B 5	Blower Motor Controller	90980-11676		Door Lock Control Motor (Driver's Side)	
B 6	Blower Resistor	90980-11136		Door Unlock Detection SW (Driver's Side)	
B 7	Back Door Courtesy SW	90980-10795		Double Lock Motor (Driver's Side)	
	Back Door Lock Motor			Double Lock Position SW (Driver's Side)	
B 8	Back Door Opener SW	90980-11967			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D15	Door Lock Control Motor (Front Passenger's Side)	90980-12226	E15	EPS ECU	90980-12290
D16	Door Lock Control Motor (Front Passenger's Side)		E16	Exhaust Fuel Addition Injector Assembly	90980-11875
	Door Unlock Detection SW (Front Passenger's Side)		E17	EGR Valve Assembly	90980-11162
	Double Lock Motor (Front Passenger's Side)		E18	EGR Valve Position Sensor	90980-11143
	Double Lock Position SW (Front Passenger's Side)		E19	Exhaust Gas Temperature Sensor (Front)	90980-10901
			E20	Exhaust Gas Temperature Sensor (Rear)	90980-10899
D17	Door Lock Control SW	90980-12200	F 1	Front Clearance Light LH	90980-11149
	Power Window Master SW		F 2	Front Clearance Light RH	
D18	Door Lock Motor Rear LH	90980-12226	F 3	Front Fog Light LH	90980-11660
D19	Door Lock Motor Rear LH		F 4	Front Fog Light RH	
	Door Unlock Detection SW Rear LH		F 5	Front Side Turn Signal Light LH	90980-11162
	Double Lock Motor Rear LH		F 6	Front Side Turn Signal Light RH	
	Double Lock Position SW Rear LH		F 7	Front Turn Signal Light LH	90980-10942
				Headlight Control ECU LH	
D20	Door Lock Motor Rear RH		F 8	Front Turn Signal Light LH	
D21	Door Lock Motor Rear RH			Headlight LH (Low)	
	Door Unlock Detection SW Rear RH		F 9	Front Turn Signal Light RH	
	Double Lock Motor Rear RH			Headlight Control ECU RH	
	Double Lock Position SW Rear RH		F10	Front Turn Signal Light RH	
				Headlight RH (Low)	
D22	Differential Pressure Sensor	90980-10845	F11	Front Washer Motor	90080-98117
E 1	ECT Solenoid (Except 2AZ-FSE)	90980-11658	F12	Front Window Deicer	90980-11155
	ECT Solenoid (2AZ-FSE)	90980-12326	F13	Front Wiper Motor	90980-11599
E 2	EFI Water Temp. Sensor (Except 1AZ-FE, 1CD-FTV)	90980-11062	F14	Fuel Filter Warning SW	90980-11002
	EFI Water Temp. Sensor (1AZ-FE)	90980-10735	F15	Fuel Heater	90980-10928
	EFI Water Temp. Sensor (1CD-FTV)	90980-10737	F16	Fuel Pressure Sensor (1CD-FTV)	90980-11194
E 3	EGR Valve Control Motor	90980-11144		Fuel Pressure Sensor (2AZ-FSE, 1AZ-FSE)	90980-11451
E 4	Electronic Driver Unit	90980-11592	F17	Fuel Pump	90080-98001
E 5	Electronic Driver Unit (1CD-FTV)	90980-11593	F18	Fuel Temp. Sensor	90980-11062
	Electronic Driver Unit (2AZ-FSE, 1AZ-FSE)	90980-11024	F19	Front Passenger's Seat Belt Warning Light	90980-11989
E 6	Engine Hood Courtesy SW	90980-10554		Rear Window Defogger SW	
E 7	Engine Oil Level Sensor (1CD-FTV)	90980-11235		Security Indicator Light	
	Engine Oil Level Sensor (2AZ-FSE)	90980-10532	F20	Front Wiper Deicer SW	90980-10797
E 8	ECT Pattern Select SW	90980-11013	F21	Front Door Speaker LH	90080-98157
E 9	Engine and ECT ECU (A/T)	90980-12142	F22	Front Door Speaker RH	
	Engine ECU (M/T)		F23	Fuel Lid Opener Motor	90080-98313
E10	Engine and ECT ECU (A/T)	90980-12146	F24	Fuel Lid Opener SW	90980-11013
	Engine ECU (M/T)		F25	Fuel Pump	90980-11077
E11	Engine and ECT ECU (A/T)	90980-12143		Fuel Sender	
	Engine ECU (M/T)		F26	Fuel Pump Resistor	90980-10901
E12	Engine and ECT ECU (A/T)	90980-12145	F27	Fuel Control SW	90980-10996
	Engine ECU (M/T)		G 1	Glow Plug	99141-13006
E13	Engine and ECT ECU (A/T)	90980-12144	G 2	Glow Plug Relay	90980-11569
	Engine ECU (M/T)		G 3	Glove Box Light	90980-11098
E14	EPS ECU	90980-12300			

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
H 1	Headlight Beam Level Control Actuator LH	90980-11016	I16	Interior Light	90980-11950
H 2	Headlight Beam Level Control Actuator RH		I17	Intake Shutter Assembly	90980-11145
H 3	Headlight Cleaner Control Relay	90980-10939	I18	Intake Shutter Assembly	90980-11261
H 4	Headlight Cleaner Motor	90080-98116	J 1	Junction Connector	90980-10803
H 5	Headlight LH (High)	90980-11314	J 2	Junction Connector	
H 6	Headlight RH (High)		J 3	Junction Connector	90980-11661
H 7	Heated Oxygen Sensor (Bank 1 Sensor 1) (1ZZ-FE, 3ZZ-FE)	90980-10869	J 4	Junction Connector	
	Heated Oxygen Sensor (Bank 1 Sensor 1) (2AZ-FSE, 1AZ-FSE)	90980-11028	J 5	Junction Connector	90980-11542
H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J 6	Junction Connector	90980-11915
H 9	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869	J 7	Junction Connector	
H10	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028	J 8	Junction Connector	
H11	Horn LH	90980-10619	J 9	Junction Connector	
H12	Horn RH		J10	Junction Connector	
H13	Hazard SW	90980-10801	J11	Junction Connector	90980-11661
H14	Headlight Beam Level Control ECU	90980-12200	J12	Junction Connector	
H15	Headlight Beam Level Control SW	90980-10789	J13	Junction Connector	90980-11542
H16	Headlight Cleaner SW	90980-10601	J14	Junction Connector	90980-10976
H17	Heated Oxygen Sensor (Bank 1 Sensor 2) (w/ HID)	90980-11930	J15	Junction Connector	90980-11542
	Heated Oxygen Sensor (Bank 1 Sensor 2) (w/o HID)	90980-10794	J16	Junction Connector	
H18	Height Control Sensor (Front)	90980-11860	J17	Junction Connector	90980-11915
H19	Height Control Sensor (Rear)		J18	Junction Connector	
H20	High Mounted Stop Light (L/B)	90980-10320	J19	Junction Connector	
	High Mounted Stop Light (S/D)	90980-WB002	J20	Junction Connector	90980-11661
	High Mounted Stop Light (W/G)	90980-11148	J21	Junction Connector	
I 1	Ignition Coil and Igniter No.1	90980-11885	J22	Junction Connector	
I 2	Ignition Coil and Igniter No.2		J23	Junction Connector	
I 3	Ignition Coil and Igniter No.3		J24	Junction Connector	90980-11915
I 4	Ignition Coil and Igniter No.4		J25	Junction Connector	
I 5	Injector No.1 (Except 2AZ-FSE, 1AZ-FSE)	90980-11875	J26	Junction Connector	90980-11542
	Injector No.1 (2AZ-FSE, 1AZ-FSE)	90980-12117	J27	Junction Connector	
I 6	Injector No.2 (Except 2AZ-FSE, 1AZ-FSE)	90980-11875	J28	Junction Connector	90980-11915
	Injector No.2 (2AZ-FSE, 1AZ-FSE)	90980-12117	J29	Junction Connector	90980-11542
I 7	Injector No.3 (Except 2AZ-FSE, 1AZ-FSE)	90980-11875	J30	Junction Connector	90980-11661
	Injector No.3 (2AZ-FSE, 1AZ-FSE)	90980-12117	J31	Junction Connector	
I 8	Injector No.4 (Except 2AZ-FSE, 1AZ-FSE)	90980-11875	J32	Junction Connector	90980-11542
	Injector No.4 (2AZ-FSE, 1AZ-FSE)	90980-12117	J33	Junction Connector	90980-11661
I 9	Intake Air Temp. Sensor	90980-11025	J34	Junction Connector	
I10	ISC Valve	90980-11145	J35	Junction Connector	
I11	Ignition Key Cylinder Light	90980-12092	J36	Junction Connector	
I12	Ignition Key Cylinder Light		J37	Junction Connector	
	Transponder Key Amplifier		J38	Junction Connector	
I13	Ignition SW	90980-11778	K 1	Knock Sensor	90980-11875
I14	Integration Relay	90980-11915	K 2	Kick Down SW	90980-11156
I15	Inner Mirror	90980-11794	K 3	Knee Airbag Squib	90980-12253
			L 1	License Plate Light LH	90080-98001
			L 2	License Plate Light RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
L 3	Luggage Compartment Door Lock Motor	90980-10908	P16	Pretensioner LH	90980-12253
	Luggage Compartment Light SW		P17	Pretensioner RH	
L 4	Luggage Compartment Door Opener SW	90980-11967	P18	Power Seat Control SW (Driver's Seat)	90980-10997
L 5	Luggage Compartment Light	90980-11148	P19	Power Seat Control SW (Front Passenger's Seat)	
L 6	Lumbar Support Control Motor	90980-10825	P20	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
L 7	Lumbar Support Control SW	90980-10789	P21	Power Seat Motor (Driver's Seat Lifter Control)	
M 1	Multi-Display (w/ Navigation System (Map Type))	90980-11877	P22	Power Seat Motor (Driver's Seat Reclining Control)	
	Multi-Display (w/o Navigation System (Map Type))	90980-11973	P23	Power Seat Motor (Driver's Seat Slide Control)	
M 2	Multi-Display (w/ Navigation System (Map Type))	90980-11923	P24	Power Seat Motor (Front Passenger's Seat Reclining Control)	
	Multi-Display (w/o Navigation System (Map Type))	90980-12209	P25	Power Seat Motor (Front Passenger's Seat Slide Control)	
M 3	Multi-Display	90980-10871	R 1	Radiator Fan Motor	90980-10928
M 4	Mirror Heater LH	90980-12059	R 2	Radiator Fan Resistor	
	Remote Control Mirror LH		R 3	Rear Washer Motor	90080-98117
M 5	Mirror Heater RH		R 4	Radio and Player	90980-10997
	Remote Control Mirror RH		R 5	Radio and Player	90980-10996
M 6	Moon Roof Control Relay and Motor	82824-05030	R 6	Radio and Player	90980-12183
M 7	Moon Roof Control SW	90980-10795	R 7	Radio and Player	90980-12259
N 1	Neutral Start SW	90980-11784	R 8	Rear Fog Light Relay	82660-05010
N 2	Noise Filter (Ignition)	90980-10843	R 9	Rear Window Defogger Relay	82660-05020
N 3	Navigation ECU	90980-11973	R10	Remote Control Mirror SW	90980-11657
N 4	Navigation ECU	90980-11923	R11	Remote Controller (Navigation)	90980-11909
N 5	Navigation ECU	90980-12221	R12	Rain Sensor	90080-98309
N 6	Noise Filter (Rear Window Defogger No.1)	90980-10825	R13	Rear Combination Light LH (Except W/G)	90080-98175
N 7	Noise Filter (Rear Window Defogger No.2)			Rear Combination Light LH (W/G)	90980-10964
N 8	Noise Filter (Stop Light)		R14	Rear Combination Light RH (Except W/G)	90080-98175
O 1	Oil Pressure Sensor	90080-98200		Rear Combination Light RH (W/G)	90980-10964
O 2	Oil Pressure SW	90980-11363	R15	Rear Door Speaker LH	90080-98157
P 1	Power Heater Assembly	90980-10897	R16	Rear Door Speaker RH	
P 2	Power Steering Oil Pressure SW	90980-11428	R17	Rear Interior Light	90980-11148
P 3	Pressure Discharge Valve	90980-11285	R18	Rear Window Defogger (L/B)	90980-11258
P 4	Parking Brake SW	90980-10871		Rear Window Defogger (S/D, W/G)	90980-11259
P 5	Power Heater SW	90980-10996	R19	Rear Window Defogger (L/B)	90980-11258
P 6	Power Outlet	90080-98182		Rear Window Defogger (S/D)	90980-10786
P 7	PTC Heater	90980-11685		Rear Window Defogger (W/G)	90980-11259
P 8	Personal Light	90980-11950	R20	Rear Wiper Motor and Relay	90980-10908
P 9	Power Window Control SW (Front Passenger Side)	90980-12113	R21	Radiator Fan Relay	90980-11304
P10	Power Window Control SW Rear LH		S 1	Skid Control ECU with Actuator	90080-98278
P11	Power Window Control SW Rear RH		S 2	Skid Control ECU with Actuator	90980-WB001
P12	Power Window Motor Front LH	90080-98276	S 3	Spill Valve	90980-12117
P13	Power Window Motor Front RH		S 4	Starter	90980-11400
P14	Power Window Motor Rear LH				
P15	Power Window Motor Rear RH				

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
S 5	Starter (1CD-FTV)	90980-09507	V 4	VRV (EGR)	90980-11162
	Starter (1ZZ-FE, 3ZZ-FE)	90980-09463	V 5	VSV (EVAP)	90980-11156
	Starter (2AZ-FSE, 1AZ-FSE, 1AZ-FE)	90980-09506	V 6	VSV (Intake Air Control Valve)	90980-11149
S 6	Suction Control Valve	90980-11285	V 7	VSC Warning Buzzer	90980-10906
S 7	Seat Heater SW	90980-11909	V 8	Vanity Light LH	90980-11918
S 8	Seat Heater SW	90980-11918	V 9	Vanity Light RH	
S 9	Shift Lock Control ECU	90980-12183	W 1	Water Temp. SW (Radiator Fan)	90980-11235
S10	Short Connector	90980-10797	W 2	Wiper Relay	90080-98318
S11	Short Connector	90980-10796	Y 1	Yaw Rate Sensor	90080-98249
S12	Steering Sensor	90080-98241	Z 1	Option Connector (Navigation ECU)	82824-30240
S13	Stop Light SW	90980-11118	Z 2	Option Connector (Navigation ECU)	90980-11973
S14	Side Airbag Sensor LH (w/ Curtain Shield Airbag)	90980-12225			
	Side Airbag Sensor LH (w/o Curtain Shield Airbag)	90980-12352			
S15	Side Airbag Sensor RH (w/ Curtain Shield Airbag)	90980-12225			
	Side Airbag Sensor RH (w/o Curtain Shield Airbag)	90980-12352			
S16	Seat Heater LH (w/ Power Seat)	90980-10797			
	Seat Heater LH (w/o Power Seat)	90980-11090			
S17	Seat Heater RH (w/ Power Seat)	90980-10797			
	Seat Heater RH (w/o Power Seat)	90980-11090			
S18	Side Airbag Squib LH	90980-11864			
S19	Side Airbag Squib RH				
T 1	Throttle Control Motor and Position Sensor	90980-11858			
T 2	Throttle Position Sensor	90980-11261			
T 3	Throttle Position SW	90980-11038			
T 4	Turbine Speed Sensor	90980-11156			
T 5	Turbo Pressure Sensor	90980-10845			
T 6	Theft Deterrent ECU	90980-12169			
T 7	Transmission Control SW	90980-12221			
T 8	Transponder Key Computer	90980-11911			
T 9	TRC Off SW	90980-10801			
T10	Turn Signal Flasher Relay	90980-10799			
T11	Telephone Microphone Amplifier	90980-11909			
T12	Theft Warning Ultrasonic Sensor	90980-12221			
T13	Theft Warning Ultrasonic Sensor Rear LH	90980-11918			
T14	Theft Warning Ultrasonic Sensor Rear RH				
T15	Theft Warning Siren	90980-11349			
T16	Tweeter Front LH	90980-12304			
T17	Tweeter Front RH				
T18	Tweeter Rear LH				
T19	Tweeter Rear RH				
U 1	Unlock Warning SW	90980-10860			
V 1	Vacuum Sensor	90980-10845			
V 2	Vacuum SW	90980-11252			
V 3	Variable Resistor	90980-10902			

Note: Not all of the above part numbers of the connector are established for the supply.

