

Toyota Corolla 100 fuse and relay

Toyota Corolla EA 100 represents the seventh generation of the **Corolla** model range, produced in 1991, 1992, 1993, 1994, 1995, 1996, 1997, 1998, 1999, 2000 with various body options: sedan, hatchback, station wagon. During this time, the car has been restyled. Shipped worldwide. In some countries it is also known under the names **Corolla Levin (Ceres)**. In this publication you will find a description of fuses and relays Toyota Corolla 100 with box diagrams, their locations and photo examples of execution. Note the cigarette lighter fuse.




The purpose of the elements in the boxes may differ from the one presented. Check the designation with your diagrams on the protective cover of the unit.

Passenger compartment

Layout

Location

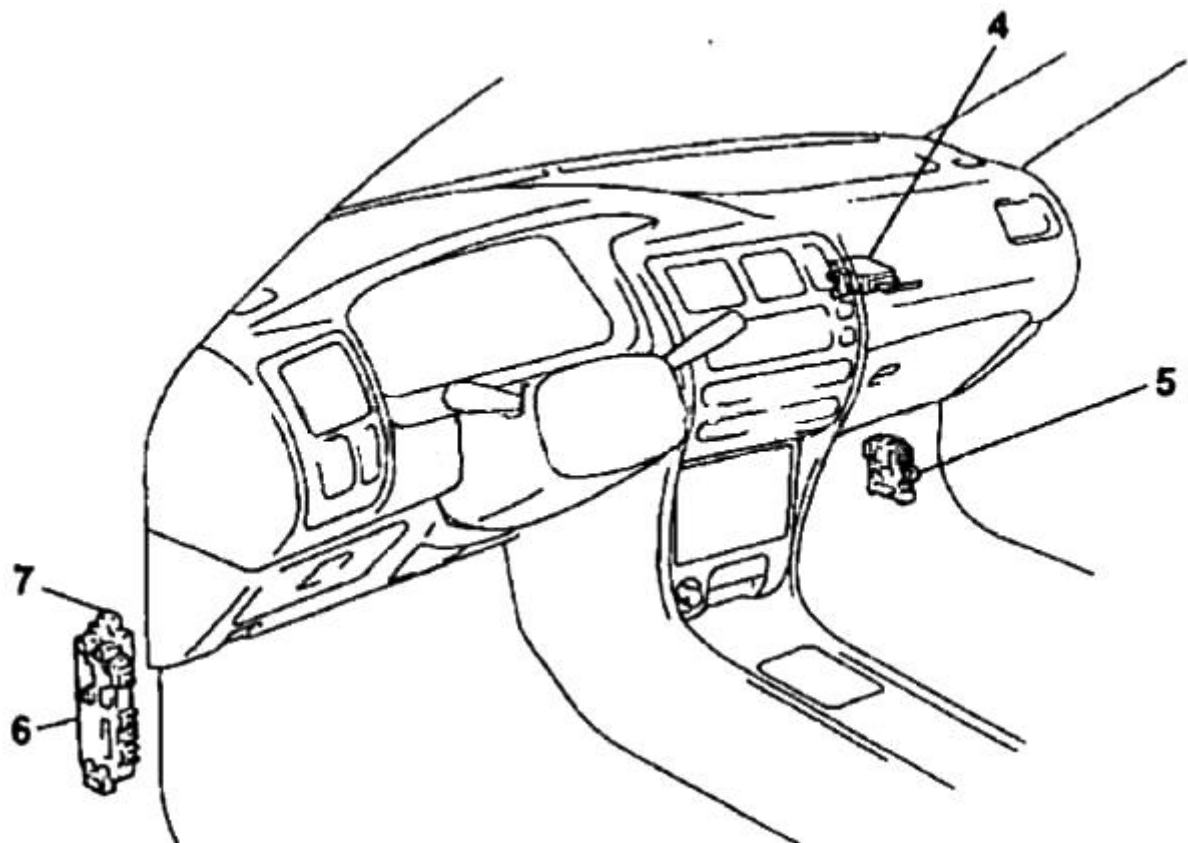

Description

- 4 – door locks control relay

- 5 – relay and fuse box No. 4
- 6 – fuse box No. 1
- 7 – relay block

Fuse and relay box No. 1

In the diagram, it is designated as 6 and 7 and is located under the dashboard on the left pillar in its lower far part.



Closed with a protective cover, on the back of which your current diagram will be.

ASSY 62117-12141

NOTICE

USE THE DESIGNATED FUSES ONLY



注意


指定のヒューズ以外は、使用しないで下さい。

HEATER-A.C F.L IS LOCATED
BEHIND ASSIST KICK PANEL


ヒータ、エアコン中電流ヒューズは助手席
側にあります。

FOG フォグ 15 A	IGN イグニッション 10 A	STOP ストップ 15 A	DEFOG デフォガ 30 A
CIG & RADIO ライタ & ラジオ 20 A	ECU-B エレクトロニクス B 10 A	TURN ターン 10 A	GAUGE メータ 10 A
TAIL テールランプ 15 A	DEFOG -I/UP 7.5 A	ECU-IG エレクトロニクス IG 15 A	WIPER ワイパー 20 A

Block example

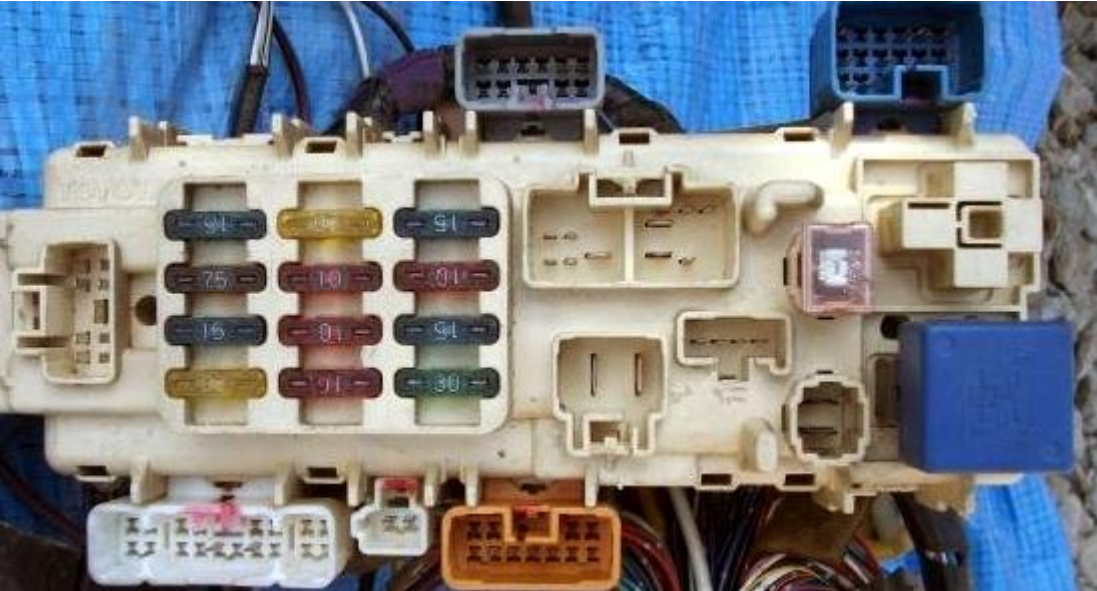

Diagram

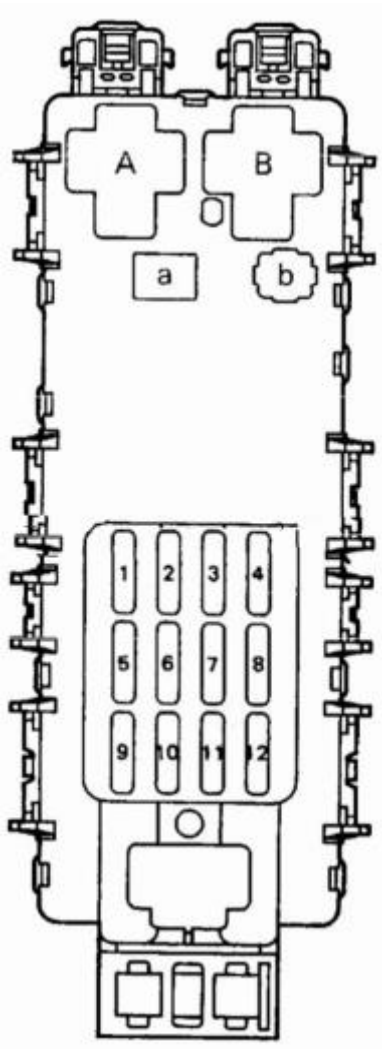

Protected components

Right hand drive

1	15A FOG – fog lights
---	----------------------

2	10A IGN – ignition
3	15A STOP – brake lights
4	30A DEFOG – glass heater
5	20A CIG & RADIO – cigarette lighter , radio tape recorder, mirrors
6	10A ECU-B – ABS, power supply of the central lock
7	10A TURN – direction indicators
8	10A GAUGE – devices
9	15A TAIL – dimensions
10	7.5A DEF-I / UP – increase in idle speed when the glass heater is turned on
11	15A ECU-IG – transmission electronics, ABS, control system lock (automatic transmission)
12	20A WIPER – wipers

Left hand drive

1	15A FOG – fog lights
2	10A IGN – ignition
3	15A STOP – brake lights
4	20A SEAT HTR – seat heater
5	20A CIG & RADIO – cigarette lighter , radio tape recorder, mirrors
6	10A ECU-B – ABS, power supply of the central lock
7	10A TURN – direction indicators
8	10A GAUGE – devices
9	10 / 15A TAIL – dimensions
10	7.5A DEF-I / UP – increase in idle speed when the glass heater is turned on

11	15A ECU-IG – transmission electronics, ABS, control system lock (automatic transmission)
12	20A WIPER – wipers


The fuse number 5, 20A, is responsible for the cigarette lighter.

Relay designation

- a – POWER – glass lifters, sunroof and central locking
- b – FOG – fog lights
- c – FLASHER – relay – breaker
- A – DEFOG – glass heater
- B – TAIL – dimensions

Relay and fuse box No. 4

Diagram

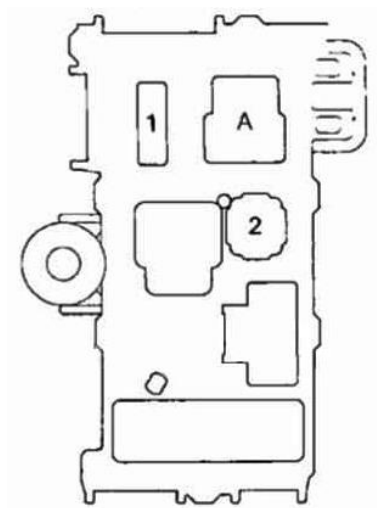


Assignment

1. 40A HEATER – Heater
2. 15A A / C – Air conditioner
3. A – Heater relay

Engine compartment

Location

Diagram

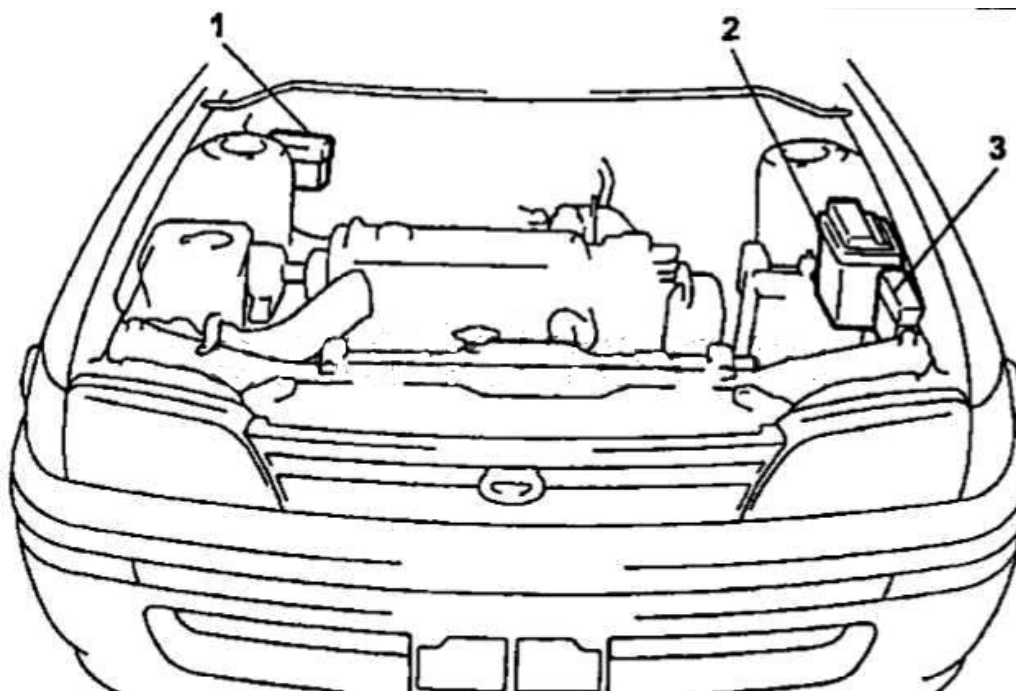

Functions

1. relay and fuse box No. 5-1 (Europe)
2. relay and fuse box No. 2
3. relay and fuse box No. 5-1, relay and fuse box No. 5-2 (Europe)

Relay and fuse box No. 2


Located on the left side next to the battery.



Legend from the cover



Diagram

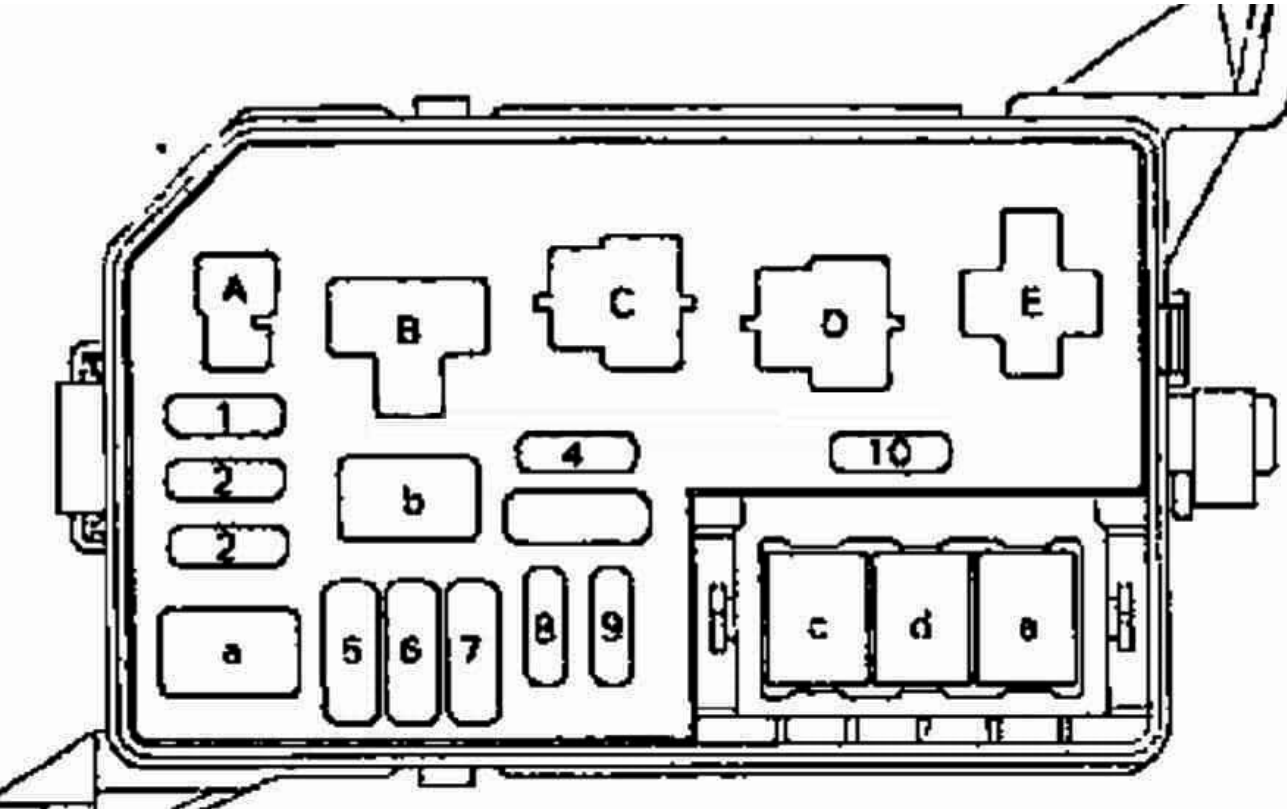

Designation

a	30A AM2 – AM2 circuit of the ignition switch (terminals IG2, ST2)
b	30A FAN – radiator fan
c	40A AM1 – output circuit AM1 of the ignition switch (terminals ACC, IG1, ST1), 80A GLOW (diesel) – candles
d	80 / 100A ALT (gasoline) – battery charging, AM1 (diesel), AM1 (2E)
e	50A ABS – ABS
1	20A DOME – electric drive and interior lighting
2	20A HA7-HORN – alarm, sound signal
3	7,5A FAN-I / UP – increase in idle speed
4	7.5A ALT-S – charging
5	7,5A Spare – spare
6	15A Spare – spare
7	20A Spare – spare
8	15A HEAD (RH) – right headlights
9	15A HEAD (LH) – left headlights
10	15A EFI F-HTR – fuel supply
A	HORN – Signal relay
B	FAN – Cooling fan relay
C	E / G-MAIN – Main relay
D	HEAD – Headlight relay
E	EFI – Motor relay

Relay and fuse box No. 5

Right hand drive

Legend




Appointment

- 30A CDS – Condenser fan
- AC MG – A / C clutch relay
- AC FUN # 3 – Cooling Fan Relay 3
- AC FUN # 2 – Cooling Fan 2 Relay

Left hand drive

Diagram

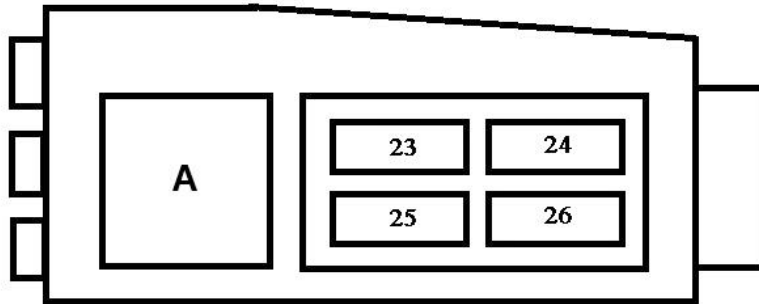

Designation

23	10A HEAD (LH-UPR) – Left headlight (high beam)
24	10A HEAD (LH-LWR) – Left headlight (low beam)
25	10A HEAD (RH-UPR) – Right headlight (high beam)
26	10A HEAD (RH-LWR) – Right headlight (low beam)
BUT	DIMMER – Light switch relay