





I GROUND POINT


- * 1 : w/ Daytime Running Light
- * 2 : w/ Rear Wiper
- * 3 : w/ Cruise Control

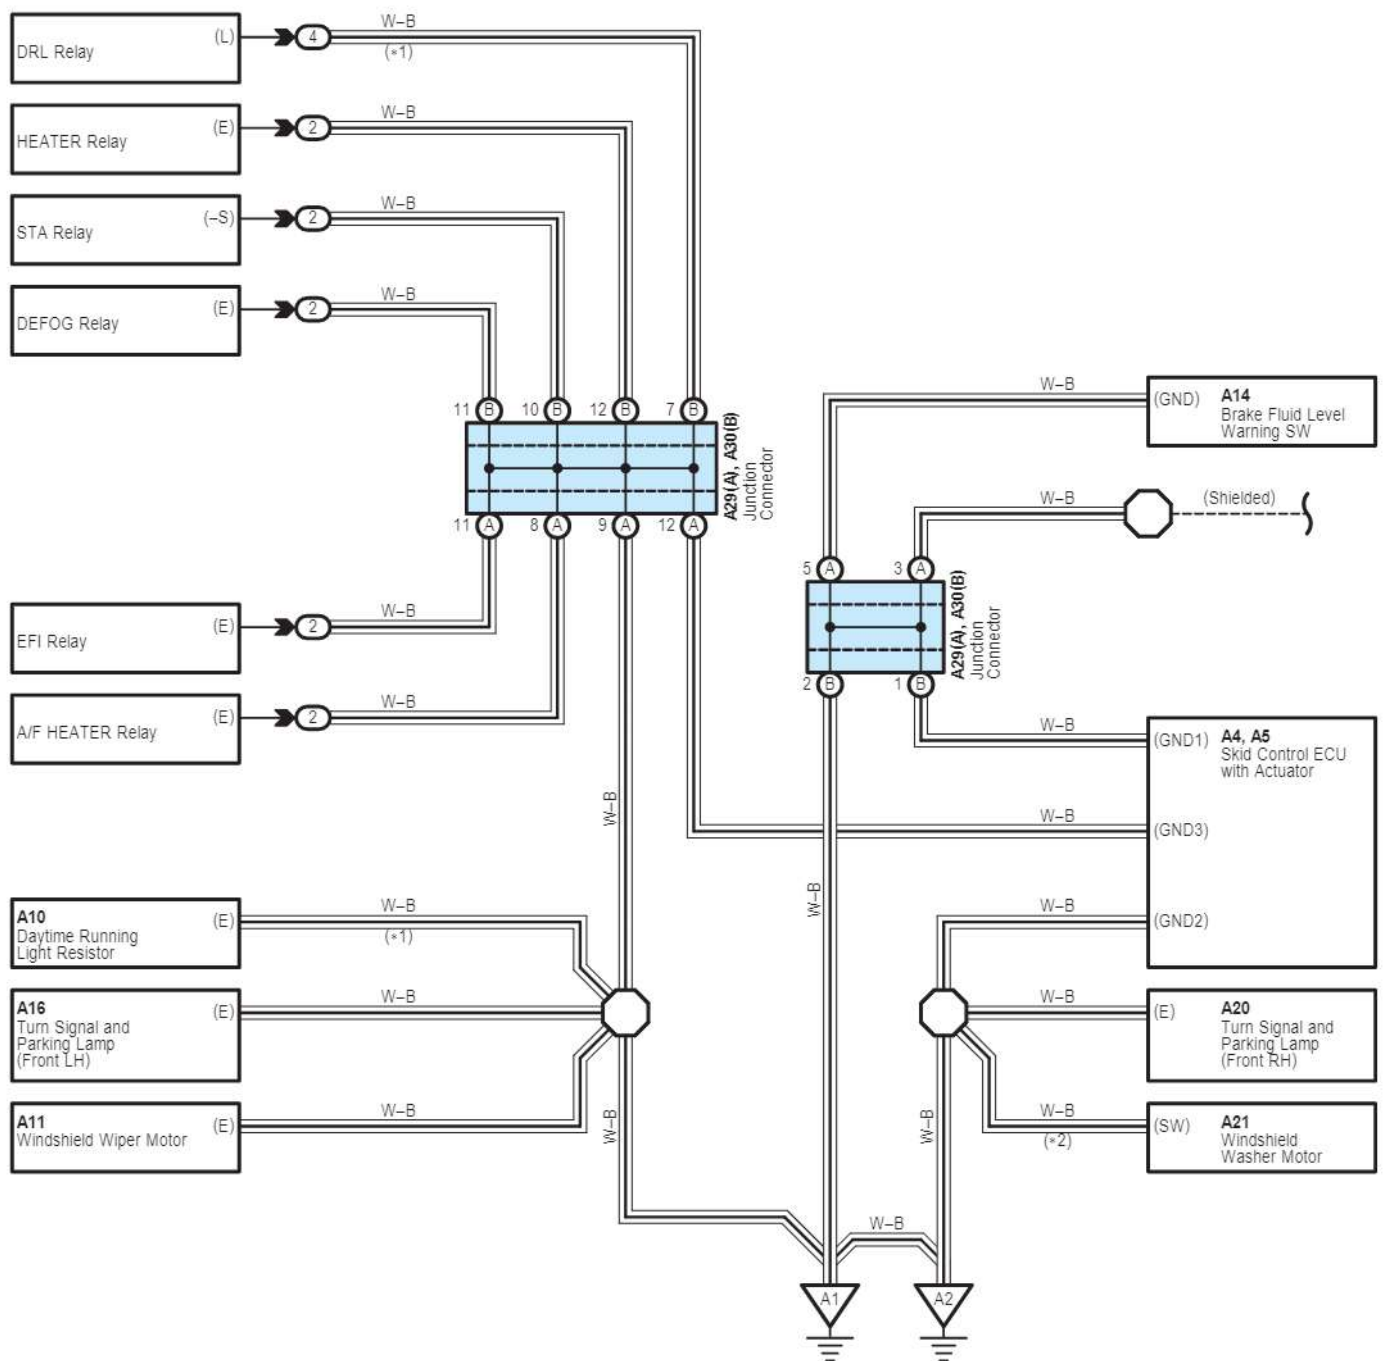

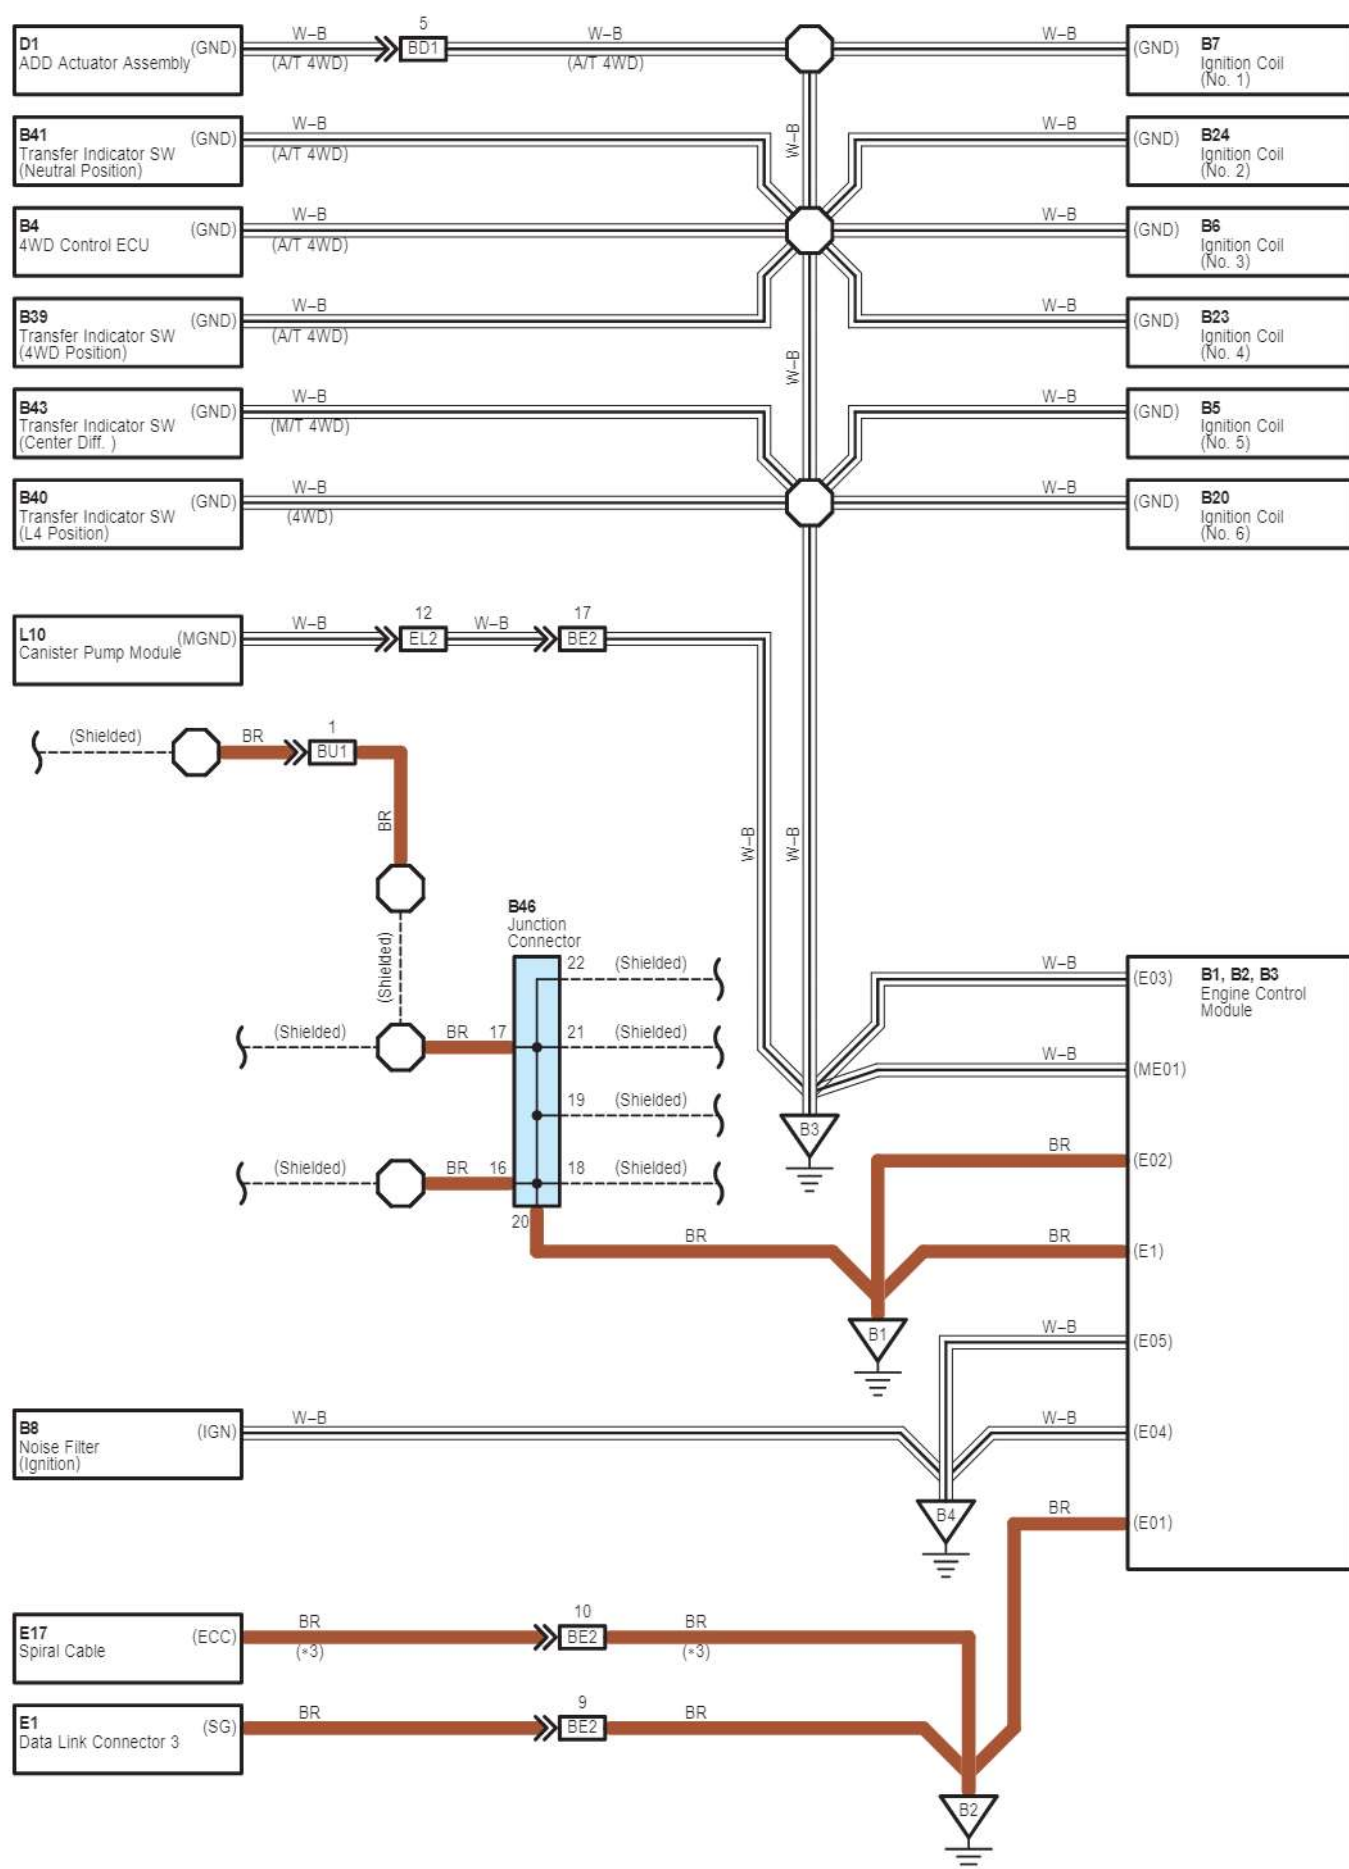


I GROUND POINT

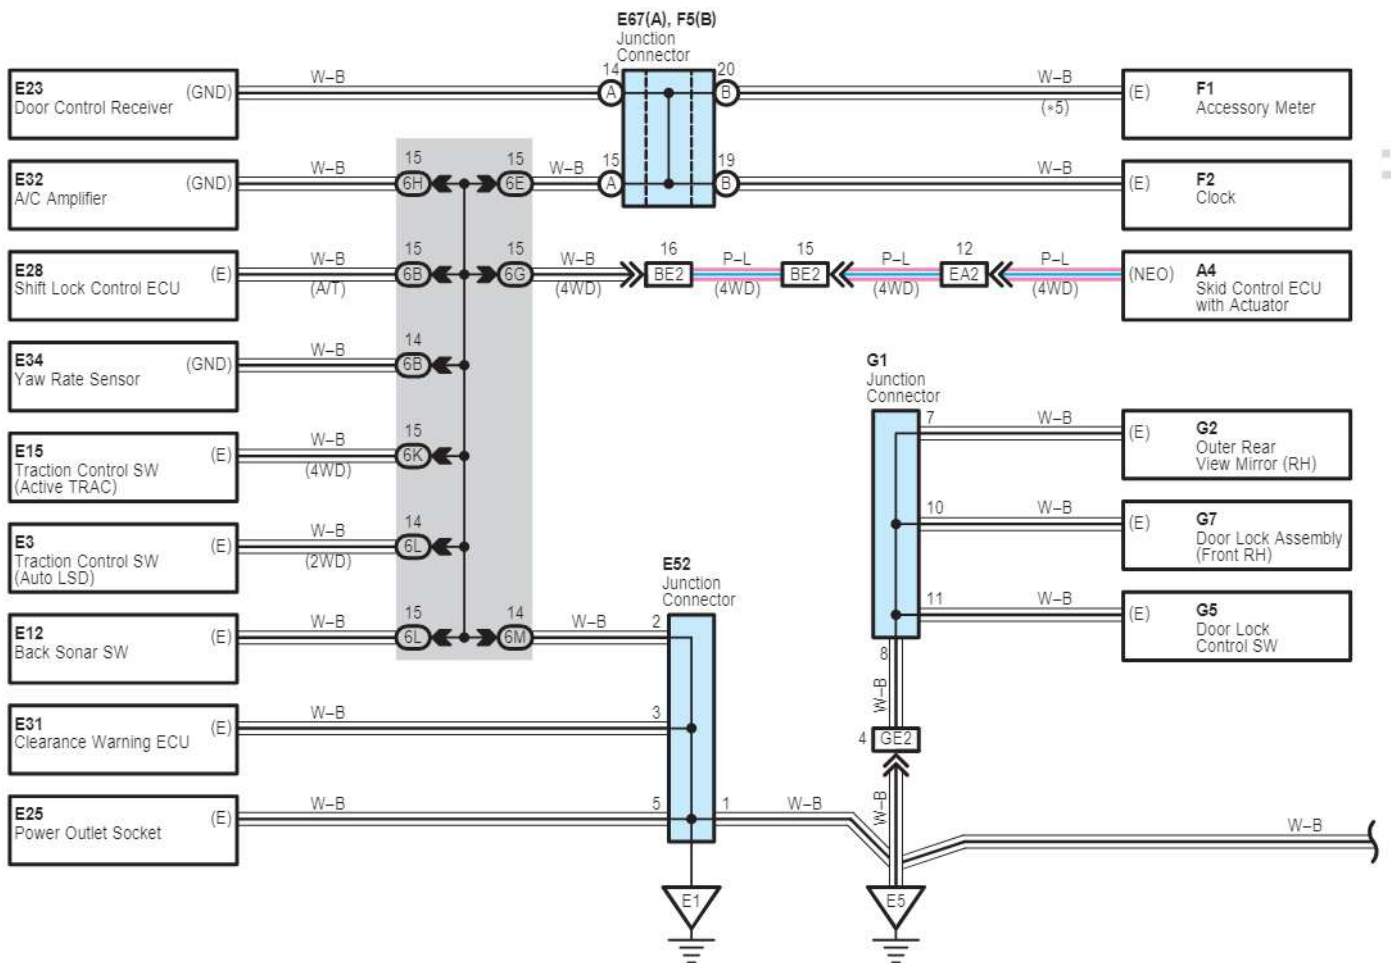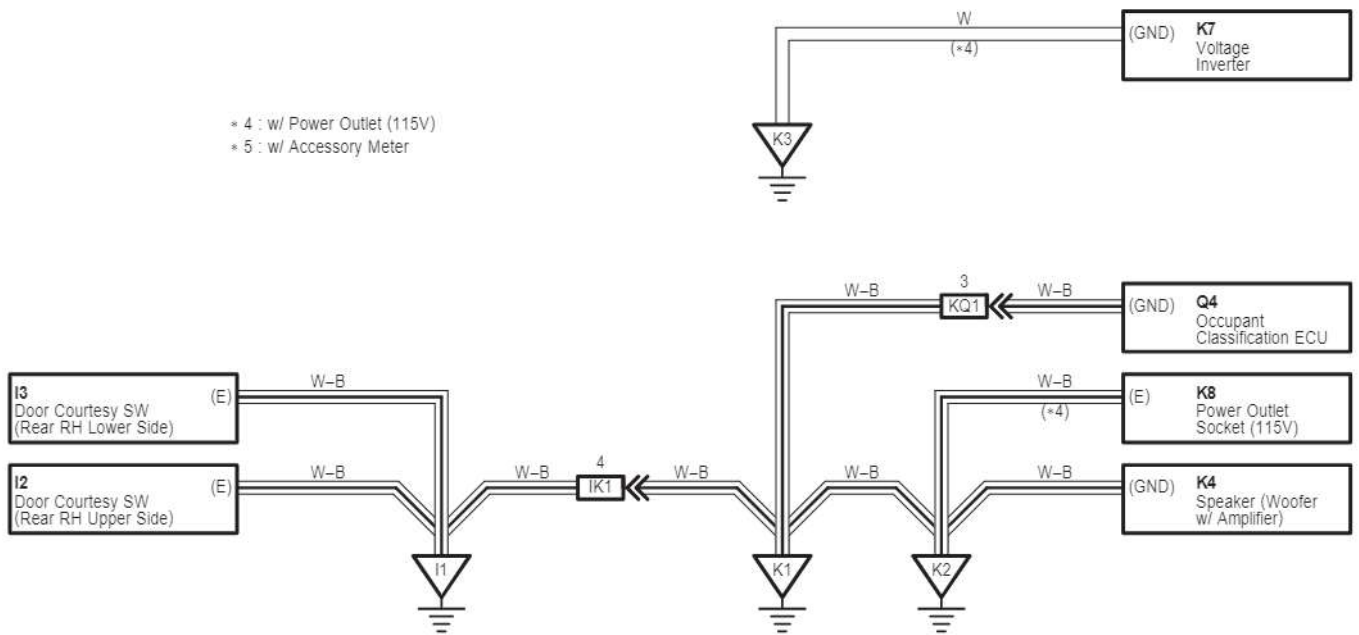

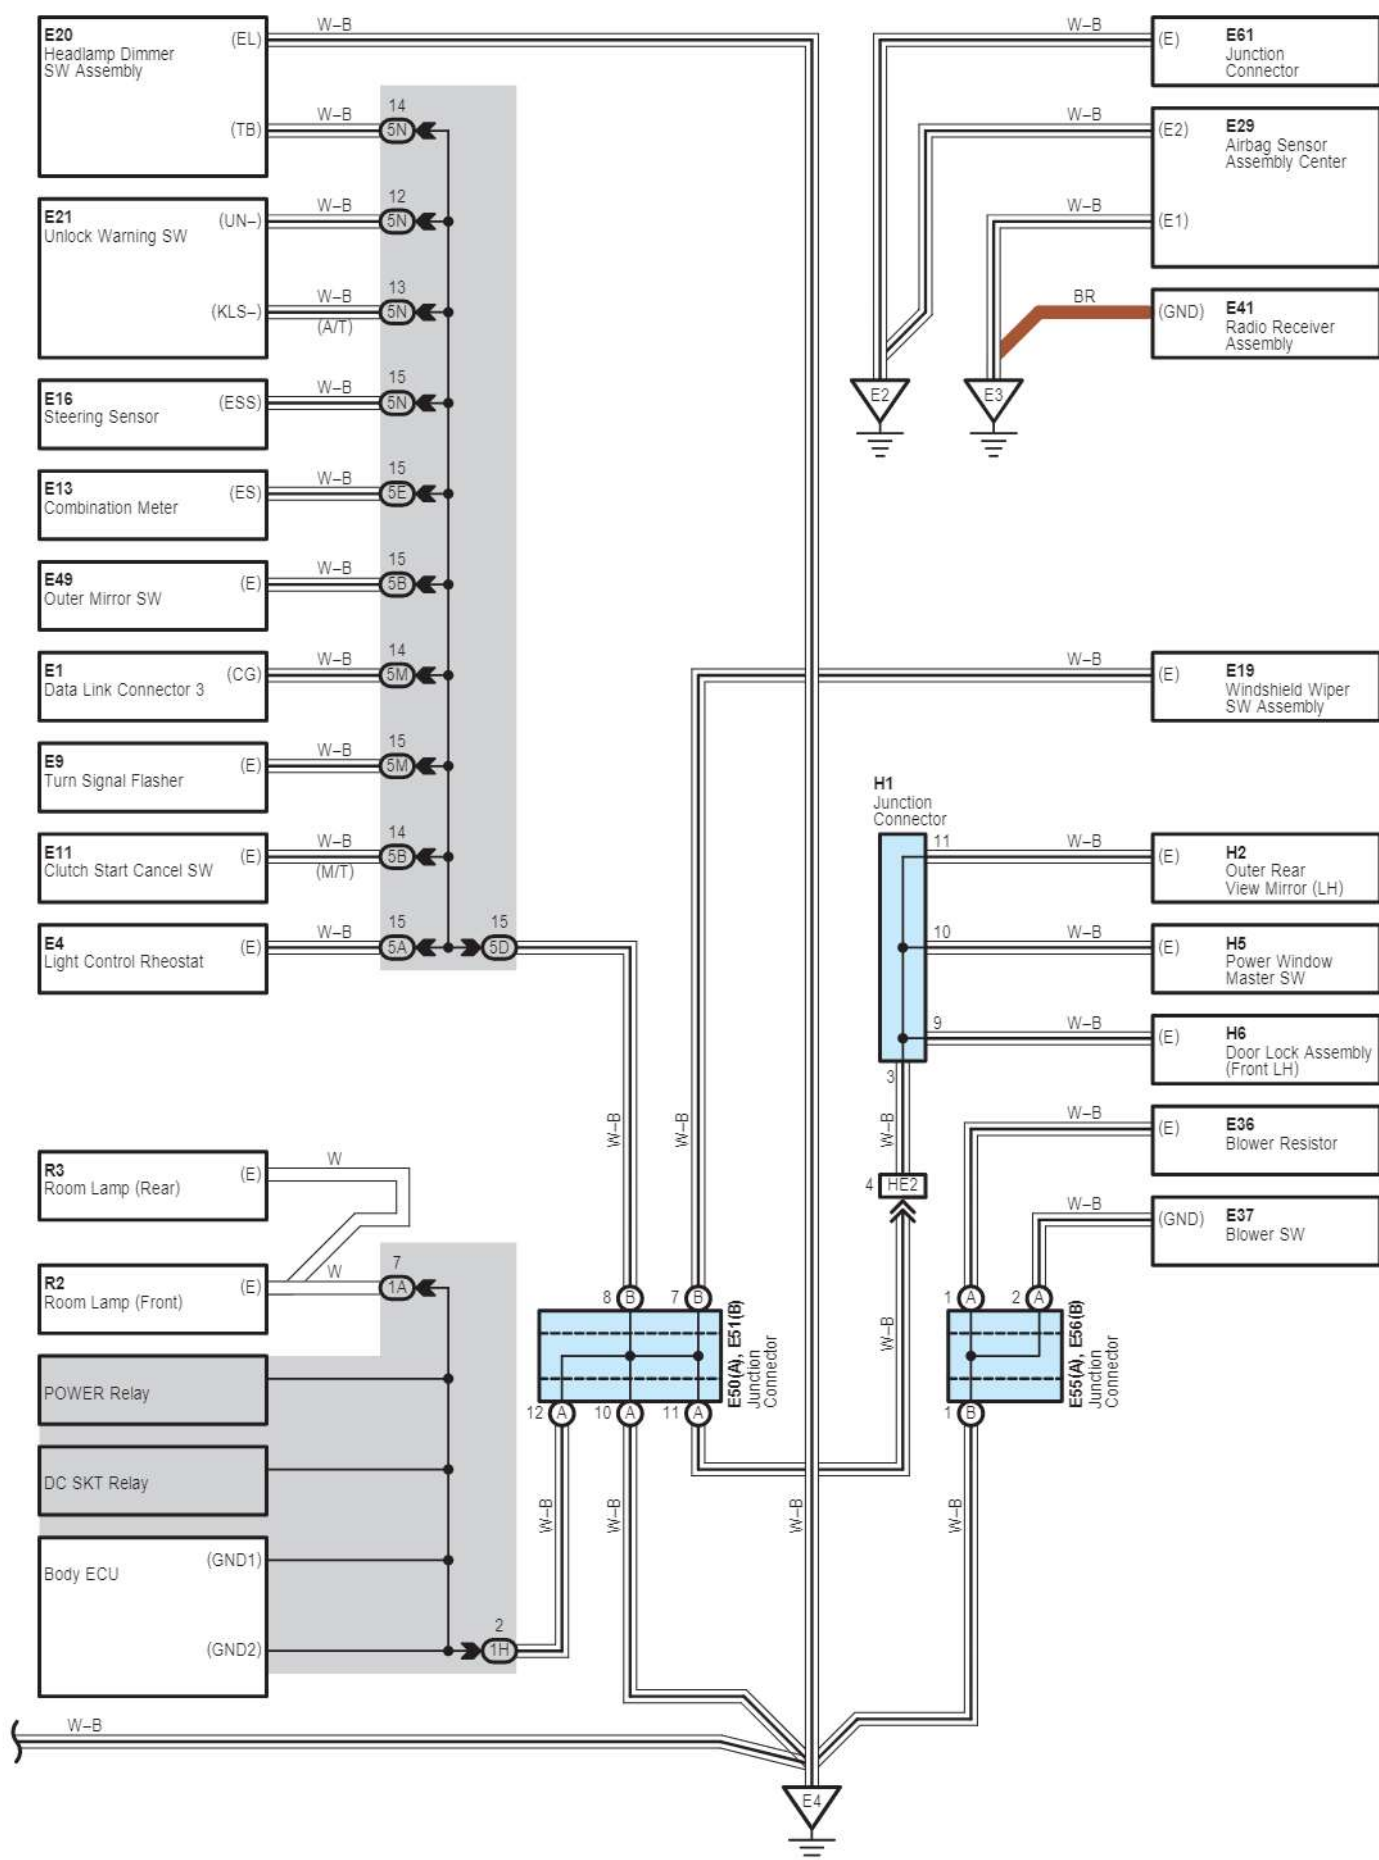

I GROUND POINT

* 6 : w/ Rear Diff. Lock

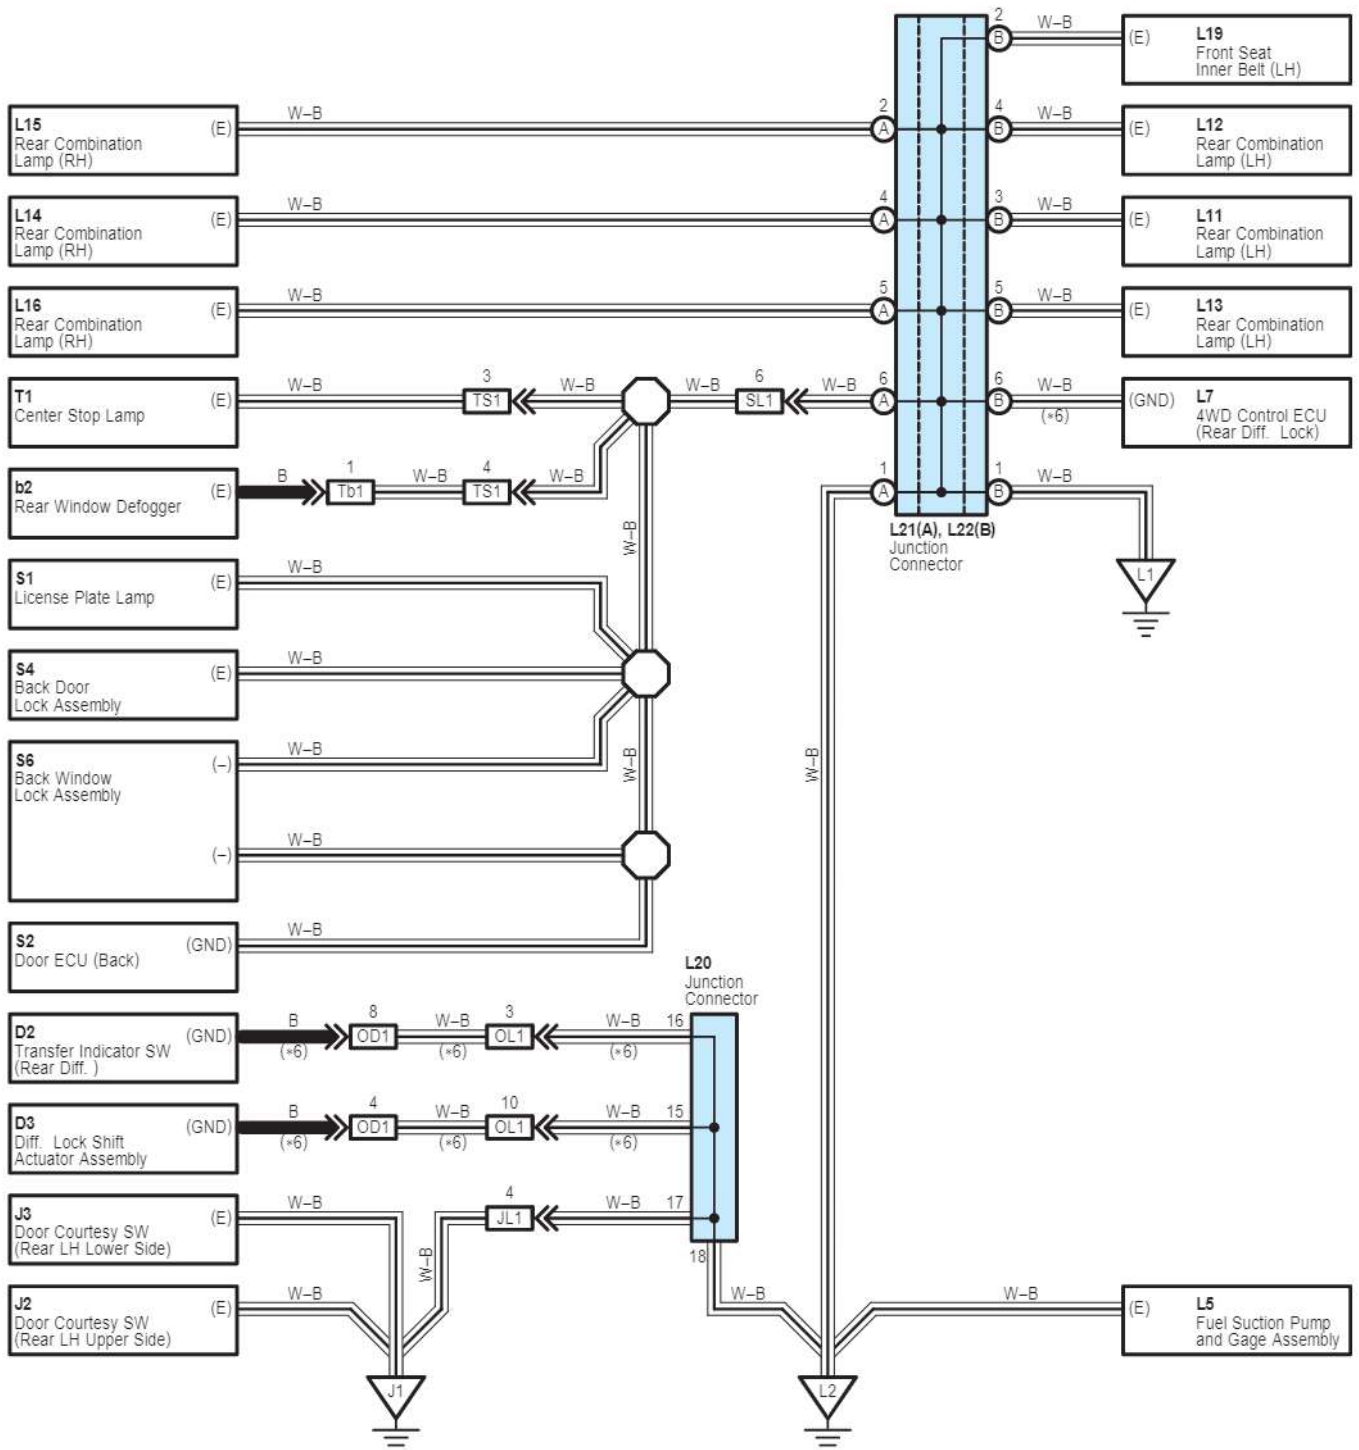

☐ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A29	A	38	E52		44	G1		47
A30	B	38	E55	A	44	H1		47
B46		45	E56	B	44	L20		46
E50	A	44	E67	A	44	L21	A	46
E51	B	44	F5	B	45	L22	B	46

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B No.2 (Engine Compartment Left)
4	23	Engine Room R/B No.4 (Engine Compartment Left)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5A	28	Instrument Panel Wire and Center J/B LH (Instrument Panel LH)
5B		
5D		
5E		
5M		
5N	32	Instrument Panel Wire and Center J/B RH (Instrument Panel RH)
6B		
6E		
6G		
6H		
6K		
6L		
6M		

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BD1	50	Engine Wire and Differential Wire (Near the Front Differential)
BE2	51	Engine Wire and Instrument Panel Wire (Upper the Glove Box)
BU1	50	Engine Wire and Sensor Wire (Rear Side of Right Bank Cylinder Block)
EA2	51	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EL2	51	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
GE2	51	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
HE2	51	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IK1	52	Rear Door No.1 Wire and Floor Wire (Right Quarter Panel)
JL1	52	Rear Door No.2 Wire and Floor No.2 Wire (Left Quarter Panel)
KQ1	53	Floor Wire and Seat No.1 Wire (Under the Front Seat RH)
OD1	52	Frame Wire and Differential Wire (No.6 Crossmember)
OL1	52	Frame Wire and Floor No.2 Wire (Under the Rear Seat)
SL1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Quarter Panel)
TS1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)
Tb1	52	Back Door No.2 Wire and Rear Window No.1 Wire (Upper Side of Back Door)

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
A1	50	Left Fender Apron
A2	50	Right Fender Apron
B1	50	Rear Side of Right Bank Cylinder Block
B2		
B3	50	Rear Side of Left Bank Cylinder Block
B4		
E1	51	Instrument Panel Brace RH
E2	51	Instrument Panel Brace LH
E3	51	Instrument Panel Brace RH
E4	51	Left Kick Panel
E5	51	Right Kick Panel
I1	52	Access Door RH
J1	52	Access Door LH
K1	52	Floor Seat Crossmember RH
K2	52	Rear Wheel House RH
K3		
L1	52	Floor Seat Crossmember LH
L2	52	Left Quarter Panel

