

# Fiat Punto (199) 2012 (from 2012) fuse box diagrams

Year of production: 2012, 2013, 2014, 2015, 2016

## Fuse location

The fuses are grouped in three control units: on the dashboard, in the engine compartment and in the left-hand side of the boot.

## Dashboard fuse box




Fiat Punto 2012 – fuse box – dashboard

| Device                                                                                                                                                                                                                                    | Fuse | Ampere rating [A] |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-------------------|
| Right dipped beam headlight                                                                                                                                                                                                               | 1*   | 7,5               |
| Lift dipped beam headlight                                                                                                                                                                                                                | 8*   | 7,5               |
| Headlamp alignment corrector                                                                                                                                                                                                              | 8    | 5                 |
| INT/A supply for switch coils on engine fuse box and switch coils on body computer control unit                                                                                                                                           | 13   | 5                 |
| Front ceiling light, rear ceiling light, visor lights, door marker lights, boot light, glove box light                                                                                                                                    | 2*   | 5                 |
| Supply and battery for EOBD diagnostic plug, automatic climate control system control unit, alarm, sound system, Blue&Me control unit                                                                                                     | 5    | 10                |
| Supply for instrument panel, switch on brake pedal (N.O. contact), third brake light                                                                                                                                                      | 11   | 5                 |
| Door locking/unlocking motors, dead lock activation motors, boot unlocking motor                                                                                                                                                          | 4    | 20                |
| Windscreen/rear window washer pump                                                                                                                                                                                                        | 6    | 20                |
| Electric window motor on driver-side front door                                                                                                                                                                                           | 14   | 20                |
| Electric window motor on passenger-side front door                                                                                                                                                                                        | 7    | 20                |
| Supply for dashboard control lights, parking control unit, tyre pressure measurement control unit, electric wing mirror movement, rain sensor, sunroof control unit, My Port infotelematic system socket, electrochromic rear view mirror | 12   | 5                 |
| Instrument panel                                                                                                                                                                                                                          | 3    | 5                 |
| Supply for brake pedal switch (NC contact), clutch pedal switch, interior heating unit, Blue&Me control unit, sound system capabilities, voltage                                                                                          | 10   | 7,5               |

stabiliser control unit, reverse light on rear bumper, water sensor on diesel filter, glow plug heating control unit, airflow meter, brake booster sensor, switch coils on engine compartment fuse box

\* Fuse on some versions only


## Engine compartment fuse box

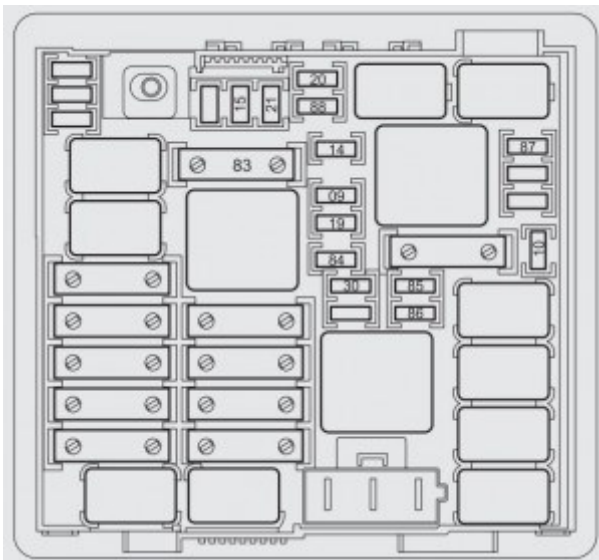

Fiat Punto 2012 – fuse box – engine compartment

| Device                                                                        | Fuse | Ampere rating [A] |
|-------------------------------------------------------------------------------|------|-------------------|
| Hi-Fi sound system with control unit and subwoofe                             | 09   | 20                |
| Single tone horn                                                              | 10   | 10                |
| Left main beam headlight, right main beam headlight                           | 14   | 15                |
| Additional heater                                                             | 15   | 30                |
| Air conditioning compressor                                                   | 19   | 7,5               |
| Heated rear window                                                            | 20   | 30                |
| Fuel pump on tank                                                             | 21   | 15                |
| Left fog light, right fog light                                               | 30   | 15                |
| Methane system supply management solenoid valves                              | 84   | 7,5               |
| Socket (ready for use)                                                        | 85   | —                 |
| Passenger compartment socket, cigarette lighter                               | 86   | 15                |
| Battery charge status sensor                                                  | 87   | 5                 |
| De-mister on driver-side wing mirror, de-mister on passenger-side wing mirror | 88   | 7,5               |

## Boot fuse box

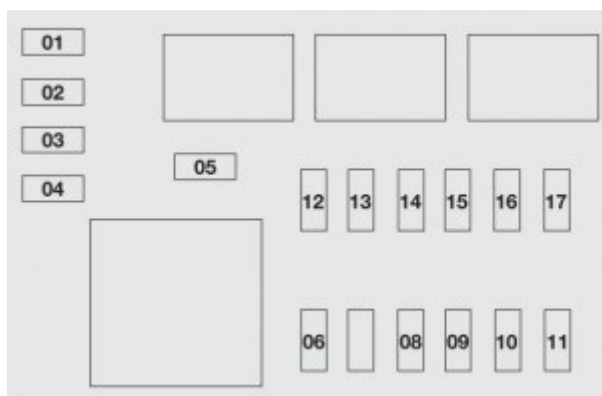

Fiat Punto 2012 – fuse box – boot

| Device                                                           | Fuse | Ampere rating [A] |
|------------------------------------------------------------------|------|-------------------|
| Sunroof opening system                                           | 17   | 20                |
| Alarm system management control unit                             | 14   | 7,5               |
| Spare                                                            | 01   | —                 |
| Spare                                                            | 03   | —                 |
| Electric lumbar movement on driver's seat                        | 04   | 10                |
| Spare                                                            | 15   | —                 |
| Electric windows system (motor, control unit) on right-hand door | 10   | 20                |
| Spare                                                            | 16   | —                 |
| Driver's seat heater control unit                                | 08   | 10                |
| Tow hook system (capability for after-sale fuse assembly)        | 07   | —                 |
| Boot socket                                                      | 05   | 15                |
| Electric windows system (motor, control unit) on left-hand door  | 11   | 20                |
| TPMS (tyre pressure monitoring system) control unit              | 13   | 5                 |
| Front passenger seat heater control unit                         | 09   | 10                |
| Spare                                                            | 06   | —                 |
| Spare                                                            | 02   | —                 |