

Land Rover Range Rover Sport 2016 fuse box diagram

Engine compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	—	—
2	—	—
3	—	—
4	—	—
5	—	—
6	—	—
7	—	—
8	5	Anti-lock Braking System (ABS) module
9	25	Windshield washer. Rear screen washer
10	15	Front fog lamps
11	15	Horn
12	30	Headlamp washer pump

13	30	Headlamp washer pump
14	25	Windshield washer. Rear screen washer
15	15	Supercharger cooling
16	10	Diesel Exhaust Fluid (DEF) (diesel only). Engine cooling fan (gasoline only)
17	5	Engine management system
18	20	Engine management system (gasoline only)
19	15	Engine management system
20	25	Engine management system
21	20	Engine management system (gasoline only). DEF (diesel only)
22	10	Engine management system. Engine cooling fan (gasoline only)
23	10	Engine management system (diesel only). Fuel tank leak detection (gasoline only)
24	15	Engine management system
25	10	Engine management system (diesel only)
26	—	—
27	—	—

28	—	—
29	5	Engine management system (gasoline only). Starter motor electrical power management
30	—	—
31	—	—
32	5	Left-side Adaptive Front lighting System (AFS)
33	—	—
34	5	Right-side AFS
35	5	Headlamp leveling
36	5	Engine management system (gasoline only)
37	—	—
38	—	—
39	—	—
40	15	Gearbox. Terrain response switch. Gear selector
41	—	—
42	—	—

43	—	—
44	—	—
45	—	—
46	—	—
47	—	—
48	—	—
49	—	—
50	10	Engine management system
51	10	Engine cooling
52	—	—
53	—	—
54	—	—
55	—	—
56	—	—
57	—	—

58	—	—
59	—	—
60	—	—

Passenger compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	20	Front cigar lighter
2	20	Rear accessory socket
3	20	Rear accessory socket
4	—	—
5	10	Exhaust tuning valve
6	—	—
7	—	—
8	—	—
9	—	—
10	20	Panoramic roof

11	25	Left-side rear door switches
12	20	Panoramic roof
13	5	Terrain response
14	—	—
15	—	—
16	—	—
17	—	—
18	30	Passenger seat switches
19	—	—
20	—	—
21	10	Cool box
22	—	—
23	20	Passenger seat
24	25	Driver's door switches. Driver's door soft close
25	15	Active cornering

26	10	Front passenger seat switches
27	5	Tire Pressure Monitoring System (TPMS). Front overhead console
28	20	Driver's seat
29	25	Right-side rear door switches
30	20	Panoramic roof
31	—	—
32	—	—
33	30	Driver's seat
34	25	Passenger door switches. Passenger door soft close
35	5	Brake pedal switch
36	—	—
37	—	—
38	—	—
39	—	—
40	—	—

41	5	Telematics
42	—	—
43	10	Heated steering wheel
44	10	Steering wheel module
45	5	Touch screen buttons. Rear climate control
46	15	Heating and ventilation
47	—	—
48	—	—
49	5	Vehicle immobilizer
50	—	—
51	—	—
52	5	Deployable tow bar
53	—	—
54	5	Diagnostic socket
55	10	Instrument panel

56	10	Heating and ventilation
----	----	-------------------------

Luggage compartment fuse box

Fuse number	Ampere rating [A]	Circuit protected
1	—	—
2	—	—
3	—	—
4	—	—
5	15	Rear console
6	—	—
7	—	—
8	—	—
9	15	Driver's and front passenger seat switches
10	25	Driver's and front passenger heated seats
11	—	—
12	25	Rear Heated seats

13	15	Rear seats. Rear seat switches. Flashlight
14	—	—
15	15	Trailer socket
16	—	—
17	20	Middle accessory power socket
18	20	Loadspace accessory power socket
19	20	Cigar lighter
20	30	Heated rear screen
21	—	—
22	15	Integrated control panel
23	10	Instrument panel
24	20	Loadspace accessory power socket
25	20	Accessory power socket
26	2	Rear camera
27	10	Blind Spot Monitor (BSM). Parking aid. Rear-view mirror. Cameras

28	10	Head-Up Display (HUD)
29	5	Adaptive Cruise Control (ACC)
30	10	Diesel Exhaust Fluid (DEF)
31	—	—
32	5	Battery monitoring
33	5	Battery monitoring
34	—	—
35	15	Rear console
36	5	Rear differential
37	20	Driver's seat
38	—	—
39	30	Deployable side steps
40	—	—
41	5	Rear console
42	—	—

43	—	—
44	15	Rear wiper
45	15	Engine management system. Fuel system
46	30	Fuel system
47	15	Fuel system
48	20	Passive locking
49	10	Gesture tailgate
50	15	Entertainment system
51	15	Entertainment system
52	10	Portable media
53	10	Portable media
54	15	Trailer socket
55	15	Suspension system
56	10	Air suspension system
57	5	Passive locking

58	20	Front passenger seat
59	5	Air suspension system
60	30	DEF