
ALPHABETICAL INDEX



A

	Page Vol.
A/F SENSOR HEATER RELAY	FI-56 (2)
ABBREVIATIONS USED IN THIS MANUAL (TERMS)	IN-37 (1)
ABS & BA & TRC & VSC SYSTEM (DIAGNOSTICS)	DI-203 (1)
ACOUSTIC CONTROL INDUCTION SYSTEM (ACIS)	FI-50 (2)
AIR CONDITIONER UNIT	AC-23 (2)
AIR CONDITIONING (PREPARATION)	PP-74 (1)
AIR CONDITIONING (SERVICE SPECIFICATIONS)	SS-41 (1)
AIR CONDITIONING SYSTEM	AC-1 (2)
AIR CONDITIONING SYSTEM (DIAGNOSTICS)	DI-803 (1)
AIR COOLED OIL COOLER	AX-13 (2)
AIR FLOW METER	FI-28 (2)
AIR MIX SERVOMOTOR	AC-62 (2)
AIR OUTLET SERVOMOTOR	AC-63 (2)
AIR REFINER FILTER	AC-75 (2)
AIR-FUEL RATIO (A/F) SENSOR	FI-67 (2)
AIRBAG SENSOR ASSEMBLY	RS-51 (2)
ALTERNATOR	CH-5 (2)
AMBIENT TEMPERATURE SENSOR	AC-66 (2)
ANTENNA	BE-181 (2)
ATF TEMPERATURE SENSOR	AX-6 (2)
AUDIO SYSTEM (Europe)	BE-142 (2)
AUDIO SYSTEM (Except Europe)	BE-149 (2)
AUTOMATIC TRANSAXLE (DIAGNOSTICS)	DI-142 (1)
AUTOMATIC TRANSAXLE (PREPARATION)	PP-32 (1)
AUTOMATIC TRANSAXLE (SERVICE SPECIFICATIONS)	SS-22 (1)
AUTOMATIC TRANSAXLE SYSTEM	AX-1 (2)
AUTOMATIC TRANSAXLE UNIT	AX-30 (2)

B

BACK DOOR	BO-32 (2)
BACK DOOR GLASS	BO-107 (2)
BACK DOOR STAY	BO-42 (2)
BLOWER MOTOR	AC-61 (2)
BLOWER UNIT	AC-36 (2)
BODY	MA-6 (1)
BODY (PREPARATION)	PP-69 (1)
BODY (SERVICE SPECIFICATIONS)	SS-38 (1)
BODY CONTROL SYSTEM (DIAGNOSTICS)	DI-564 (1)
BODY ELECTRICAL (PREPARATION)	PP-65 (1)
BODY ELECTRICAL (SERVICE SPECIFICATIONS)	SS-37 (1)
BODY ELECTRICAL SYSTEM	BE-1 (2)
BODY OUTSIDE MOULDING	BO-67 (2)
BRAKE	MA-3 (1)
BRAKE (PREPARATION)	PP-50 (1)
BRAKE (SERVICE SPECIFICATIONS)	SS-32 (1)
BRAKE ACTUATOR	BR-54 (2)
BRAKE BOOSTER ASSEMBLY	BR-23 (2)
BRAKE FLUID	BR-4 (2)
BRAKE MASTER CYLINDER	BR-14 (2)
BRAKE PEDAL	BR-6 (2)
BRAKE SYSTEM	BR-1 (2)

C

CAMSHAFT POSITION SENSOR	IG-8 (2)
CAMSHAFT TIMING OIL CONTROL VALVE	FI-39 (2)
CHARGING (PREPARATION)	PP-28 (1)
CHARGING (SERVICE SPECIFICATIONS)	SS-20 (1)
CHARGING SYSTEM	CH-1 (2)

CHASSIS	Page Vol. MA-4 (1)
CIRCUIT INSPECTION (ABS & BA & TRC & VSC SYSTEM) (DIAGNOSTICS)	DI-222 (1)
CIRCUIT INSPECTION (AIR CONDITIONING SYSTEM) (DIAGNOSTICS)	DI-814 (1)
CIRCUIT INSPECTION (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-163 (1)
CIRCUIT INSPECTION (BODY CONTROL SYSTEM) (DIAGNOSTICS)	DI-572 (1)
CIRCUIT INSPECTION (COMBINATION METER SYSTEM) (DIAGNOSTICS)	DI-541 (1)
CIRCUIT INSPECTION (CRUISE CONTROL SYSTEM) (DIAGNOSTICS)	DI-484 (1)
CIRCUIT INSPECTION (DRIVER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-603 (1)
CIRCUIT INSPECTION (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-529 (1)
CIRCUIT INSPECTION (ENGINE) (DIAGNOSTICS)	DI-22 (1)
CIRCUIT INSPECTION (LEXUS NAVIGATION SYSTEM) (DIAGNOSTICS)	DI-757 (1)
CIRCUIT INSPECTION (MULTIPLEX COMMUNICATION SYSTEM) (DIAGNOSTICS)	DI-688 (1)
CIRCUIT INSPECTION (PASSENGER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-625 (1)
CIRCUIT INSPECTION (REAR LEFT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-648 (1)
CIRCUIT INSPECTION (REAR RIGHT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-665 (1)
CIRCUIT INSPECTION (SLIDING ROOF SYSTEM) (DIAGNOSTICS)	DI-558 (1)
CIRCUIT INSPECTION (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-318 (1)
CIRCUIT INSPECTION (THEFT DETERRENT SYSTEM) (DIAGNOSTICS)	DI-453 (1)
CIRCUIT OPENING RELAY	FI-57 (2)
CLIP	BO-1 (2)
CO/HC	EM-1 (2)
COMBINATION METER	BE-61 (2)
COMBINATION METER SYSTEM (DIAGNOSTICS)	DI-537 (1)
COMPRESSION	EM-3 (2)
COMPRESSOR AND MAGNETIC CLUTCH	AC-43 (2)
CONDENSER	AC-52 (2)
CONDENSER FAN	AC-74 (2)
COOLANT	CO-1 (2)
COOLING (PREPARATION)	PP-14 (1)
COOLING (SERVICE SPECIFICATIONS)	SS-12 (1)
COOLING FAN RELAY	AC-73 (2)
COOLING FAN RELAY	CO-34 (2)
CRANKSHAFT POSITION SENSOR	IG-12 (2)
CRUISE CONTROL SYSTEM (DIAGNOSTICS)	DI-472 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (ABS & BA & TRC & VSC SYSTEM) (DIAGNOSTICS)	DI-204 (1)

ALPHABETICAL INDEX (C – F)

	Page Vol.		Page Vol.
CUSTOMER PROBLEM ANALYSIS CHECK (AIR CONDITIONING SYSTEM) (DIAGNOSTICS)	DI-804 (1)	DIAGNOSTIC TROUBLE CODE CHART (ENGINE) (DIAGNOSTICS)	DI-14 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-143 (1)	DIAGNOSTIC TROUBLE CODE CHART (LEXUS NAVIGATION SYSTEM) (DIAGNOSTICS)	DI-745 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (BODY CONTROL SYSTEM) (DIAGNOSTICS)	DI-565 (1)	DIAGNOSTIC TROUBLE CODE CHART (MULTIPLEX COMMUNICATION SYSTEM) (DIAGNOSTICS)	DI-683 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (COMBINATION METER SYSTEM) (DIAGNOSTICS)	DI-538 (1)	DIAGNOSTIC TROUBLE CODE CHART (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-311 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (CRUISE CONTROL SYSTEM) (DIAGNOSTICS)	DI-473 (1)	DIFFERENTIAL OIL SEAL	AX-16 (2)
CUSTOMER PROBLEM ANALYSIS CHECK (DRIVER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-599 (1)	DOUBLE LOCKING SYSTEM	BE-104 (2)
CUSTOMER PROBLEM ANALYSIS CHECK (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-521 (1)	DRIVE BELT	AC-15 (2)
CUSTOMER PROBLEM ANALYSIS CHECK (ENGINE) (DIAGNOSTICS)	DI-2 (1)	DRIVE BELT	SR-3 (2)
CUSTOMER PROBLEM ANALYSIS CHECK (LEXUS NAVIGATION SYSTEM) (DIAGNOSTICS)	DI-727 (1)	DRIVER DOOR CONTROL SYSTEM (DIAGNOSTICS)	DI-598 (1)
CUSTOMER PROBLEM ANALYSIS CHECK (MULTIPLEX COMMUNICATION SYSTEM) (DIAGNOSTICS)	DI-677 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (PASSENGER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-621 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (REAR LEFT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-643 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (REAR RIGHT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-660 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (SLIDING ROOF SYSTEM) (DIAGNOSTICS)	DI-554 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-304 (1)		
CUSTOMER PROBLEM ANALYSIS CHECK (THEFT DETERRENT SYSTEM) (DIAGNOSTICS)	DI-444 (1)		
CYLINDER BLOCK	EM-88 (2)		
CYLINDER HEAD	EM-27 (2)		

D

DEFOGGER SYSTEM	BE-78 (2)
DIAGNOSTIC TROUBLE CODE CHART (ABS & BA & TRC & VSC SYSTEM) (DIAGNOSTICS)	DI-213 (1)
DIAGNOSTIC TROUBLE CODE CHART (AIR CONDITIONING SYSTEM) (DIAGNOSTICS)	DI-809 (1)
DIAGNOSTIC TROUBLE CODE CHART (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-155 (1)
DIAGNOSTIC TROUBLE CODE CHART (CRUISE CONTROL SYSTEM) (DIAGNOSTICS)	DI-479 (1)
DIAGNOSTIC TROUBLE CODE CHART (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-525 (1)

E

EFI MAIN RELAY	FI-55 (2)
EFI SYSTEM	FI-1 (2)
ELECTRIC COOLING FAN	CO-25 (2)
ELECTRO CHROMIC MIRROR SYSTEM	BE-136 (2)
ELECTRONIC FUEL INJECTION (PREPARATION)	PP-10 (1)
ELECTRONIC FUEL INJECTION (SERVICE SPECIFICATIONS)	SS-10 (1)
EMISSION CONTROL (PREPARATION)	PP-9 (1)
EMISSION CONTROL (SERVICE SPECIFICATIONS)	SS-9 (1)
EMISSION CONTROL SYSTEM	EC-1 (2)
ENGINE	MA-1 (1)
ENGINE (DIAGNOSTICS)	DI-1 (1)
ENGINE ECU	FI-70 (2)
ENGINE IMMOBILISER SYSTEM	BE-189 (2)
ENGINE IMMOBILISER SYSTEM (DIAGNOSTICS)	DI-520 (1)
ENGINE MECHANICAL (PREPARATION)	PP-3 (1)
ENGINE MECHANICAL (SERVICE SPECIFICATIONS)	SS-4 (1)
ENGINE UNIT	EM-71 (2)
EVAPORATIVE EMISSION (EVAP) CONTROL SYSTEM	EC-5 (2)
EVAPORATOR TEMPERATURE SENSOR	AC-67 (2)
EXHAUST SYSTEM	EM-117 (2)
EXPANSION VALVE	AC-58 (2)
EXTENSION HOUSING OIL SEAL	AX-4 (2)

F

FLOOR CARPET	BO-136 (2)
FLOOR SHIFT ASSEMBLY	AX-19 (2)
FOG LIGHT SYSTEM	BE-40 (2)
FOR ALL OF VEHICLES	IN-10 (1)
FRONT AIRBAG SENSOR	RS-56 (2)
FRONT AXLE HUB	SA-9 (2)
FRONT BRAKE CALIPER	BR-32 (2)
FRONT BRAKE PAD	BR-29 (2)
FRONT BUMPER	BO-4 (2)
FRONT DOOR	BO-15 (2)
FRONT DRIVE SHAFT	SA-16 (2)
FRONT LOWER BALL JOINT	SA-35 (2)
FRONT LOWER SUSPENSION ARM	SA-32 (2)
FRONT PASSENGER AIRBAG ASSEMBLY	RS-26 (2)
FRONT SEAT	BO-154 (2)
FRONT SHOCK ABSORBER	SA-25 (2)
FRONT SIDE FIX WINDOW GLASS	BO-88 (2)
FRONT SPEED SENSOR	BR-58 (2)

	Page Vol.
FRONT STABILIZER BAR	SA-39 (2)
FRONT WHEEL ALIGNMENT	SA-4 (2)
FRONT WHEEL HUB BOLT	SA-15 (2)
FRONT WIPER AND WASHER	BO-57 (2)
FUEL CUT RPM	FI-72 (2)
FUEL LID	BO-49 (2)
FUEL PRESSURE REGULATOR	FI-15 (2)
FUEL PUMP	FI-5 (2)
FUEL TANK AND LINE	FI-26 (2)

G

GENERAL INFORMATION (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-21 (1)
GENERAL INFORMATION (HOW TO USE THIS MANUAL)	IN-1 (1)
GENERAL INFORMATION (REPAIR INSTRUCTIONS)	IN-4 (1)

H

HEADLIGHT AND TAILLIGHT SYSTEM	BE-28 (2)
HEADLIGHT BEAM LEVEL CONTROL SYSTEM	BE-38 (2)
HEATER MAIN RELAY	AC-71 (2)
HOOD	BO-6 (2)
HOOD LOCK CONTROL	BO-12 (2)
HOOD SUPPORT	BO-11 (2)
HORN SYSTEM	BE-191 (2)
HOW TO PROCEED WITH TROUBLESHOOTING (ABS & BA & TRC & VSC SYSTEM) (DIAGNOSTICS)	DI-203 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (AIR CONDITIONING SYSTEM) (DIAGNOSTICS)	DI-803 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-142 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (BODY CONTROL SYSTEM) (DIAGNOSTICS)	DI-564 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (COMBINATION METER SYSTEM) (DIAGNOSTICS)	DI-537 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (CRUISE CONTROL SYSTEM) (DIAGNOSTICS)	DI-472 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (DRIVER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-598 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-520 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (ENGINE) (DIAGNOSTICS)	DI-1 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-22 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (LEXUS NAVIGATION SYSTEM) (DIAGNOSTICS)	DI-726 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (MULTIPLEX COMMUNICATION SYSTEM) (DIAGNOSTICS)	DI-676 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (PASSENGER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-620 (1)

HOW TO PROCEED WITH TROUBLESHOOTING (REAR LEFT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-642 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (REAR RIGHT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-659 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (SLIDING ROOF SYSTEM) (DIAGNOSTICS)	DI-553 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-303 (1)
HOW TO PROCEED WITH TROUBLESHOOTING (THEFT DETERRENT SYSTEM) (DIAGNOSTICS)	DI-443 (1)
HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS	IN-21 (1)
HOW TO USE THE DIAGNOSTIC CHART AND INSPECTION PROCEDURE (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)	IN-32 (1)
HOW TO USE THIS MANUAL	IN-1 (1)

I

IDENTIFICATION INFORMATION	IN-3 (1)
IDLE SPEED	EM-12 (2)
IDLE SPEED CONTROL (ISC) VALVE	FI-44 (2)
IGNITION (PREPARATION)	PP-23 (1)
IGNITION (SERVICE SPECIFICATIONS)	SS-16 (1)
IGNITION COIL	IG-5 (2)
IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH	BE-25 (2)
IGNITION SYSTEM	IG-1 (2)
IGNITION TIMING	EM-10 (2)
INJECTOR	FI-18 (2)
INSTRUMENT PANEL	BO-123 (2)
INTERIOR LIGHT SYSTEM	BE-47 (2)

K

KNOCK SENSOR	FI-64 (2)
--------------------	-----------

L

LEXUS NAVIGATION SYSTEM (DIAGNOSTICS)	DI-726 (1)
LUBRICATION (PREPARATION)	PP-18 (1)
LUBRICATION (SERVICE SPECIFICATIONS)	SS-14 (1)

M

MAGNETIC CLUTCH RELAY	AC-72 (2)
MAINTENANCE (PREPARATION)	PP-1 (1)
MANIFOLD GAUGE SET	AC-18 (2)
MULTI DISPLAY	BE-188 (2)
MULTIPLEX COMMUNICATION SYSTEM (DIAGNOSTICS)	DI-676 (1)

N

NEUTRAL START SWITCH	AX-7 (2)
----------------------------	----------

O

OIL AND FILTER	LU-1 (2)
OIL PUMP	LU-5 (2)
OUTSIDE REAR VIEW MIRROR	BO-43 (2)
OXYGEN SENSOR (Bank 1 Sensor 2)	FI-68 (2)

ALPHABETICAL INDEX (P – Q)

P		Page Vol.
PARKING BRAKE	BR-49 (2)	
PARKING BRAKE PEDAL	BR-8 (2)	
PARTS LAYOUT AND SCHEMATIC DRAWING	EC-2 (2)	
PARTS LOCATION		
(ABS & BA & TRC & VSC SYSTEM)		
(DIAGNOSTICS)	DI-216 (1)	
PARTS LOCATION (AUTOMATIC TRANSAXLE)		
(DIAGNOSTICS)	DI-157 (1)	
PARTS LOCATION (BODY CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-566 (1)	
PARTS LOCATION (CRUISE CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-480 (1)	
PARTS LOCATION		
(DRIVER DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-600 (1)	
PARTS LOCATION		
(ENGINE IMMOBILISER SYSTEM)		
(DIAGNOSTICS)	DI-526 (1)	
PARTS LOCATION (ENGINE)		
(DIAGNOSTICS)	DI-18 (1)	
PARTS LOCATION (LEXUS NAVIGATION SYSTEM)		
(DIAGNOSTICS)	DI-751 (1)	
PARTS LOCATION		
(MULTIPLEX COMMUNICATION SYSTEM)		
(DIAGNOSTICS)	DI-685 (1)	
PARTS LOCATION		
(PASSENGER DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-622 (1)	
PARTS LOCATION		
(REAR LEFT DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-644 (1)	
PARTS LOCATION		
(REAR RIGHT DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-661 (1)	
PARTS LOCATION (SLIDING ROOF SYSTEM)		
(DIAGNOSTICS)	DI-555 (1)	
PARTS LOCATION		
(SUPPLEMENTAL RESTRAINT SYSTEM)		
(DIAGNOSTICS)	DI-314 (1)	
PARTS LOCATION (THEFT DETERRENT SYSTEM)		
(DIAGNOSTICS)	DI-450 (1)	
PASSENGER DOOR CONTROL SYSTEM		
(DIAGNOSTICS)	DI-620 (1)	
POSITIVE CRANKCASE VENTILATION (PCV)		
SYSTEM	EC-4 (2)	
POWER DOOR LOCK CONTROL SYSTEM	BE-96 (2)	
POWER MIRROR CONTROL SYSTEM	BE-133 (2)	
POWER SEAT CONTROL SYSTEM	BE-125 (2)	
POWER SOURCE	BE-13 (2)	
POWER STEERING FLUID	SR-5 (2)	
POWER STEERING GEAR	SR-31 (2)	
POWER STEERING VANE PUMP	SR-20 (2)	
POWER WINDOW CONTROL SYSTEM	BE-81 (2)	
PRE-CHECK (ABS & BA & TRC & VSC SYSTEM)		
(DIAGNOSTICS)	DI-205 (1)	
PRE-CHECK (AIR CONDITIONING SYSTEM)		
(DIAGNOSTICS)	DI-805 (1)	
PRE-CHECK (AUTOMATIC TRANSAXLE)		
(DIAGNOSTICS)	DI-144 (1)	
PRE-CHECK (CRUISE CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-474 (1)	
PRE-CHECK (ENGINE IMMOBILISER SYSTEM)		
(DIAGNOSTICS)	DI-522 (1)	
PRE-CHECK (ENGINE)		
(DIAGNOSTICS)	DI-3 (1)	
PRE-CHECK (LEXUS NAVIGATION SYSTEM)		
(DIAGNOSTICS)	DI-728 (1)	

PRE-CHECK		
(MULTIPLEX COMMUNICATION SYSTEM)		
(DIAGNOSTICS)	DI-678 (1)	
PRE-CHECK		
(SUPPLEMENTAL RESTRAINT SYSTEM)		
(DIAGNOSTICS)	DI-305 (1)	
PRE-CHECK (THEFT DETERRENT SYSTEM)		
(DIAGNOSTICS)	DI-445 (1)	
PRECAUTION (FOR ALL OF VEHICLES)	IN-10 (1)	
PRESSURE SWITCH	AC-68 (2)	
PROBLEM SYMPTOMS TABLE		
(ABS & BA & TRC & VSC SYSTEM)		
(DIAGNOSTICS)	DI-220 (1)	
PROBLEM SYMPTOMS TABLE		
(AIR CONDITIONING SYSTEM)		
(DIAGNOSTICS)	DI-812 (1)	
PROBLEM SYMPTOMS TABLE		
(AUTOMATIC TRANSAXLE)		
(DIAGNOSTICS)	DI-160 (1)	
PROBLEM SYMPTOMS TABLE		
(BODY CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-570 (1)	
PROBLEM SYMPTOMS TABLE		
(COMBINATION METER SYSTEM)		
(DIAGNOSTICS)	DI-539 (1)	
PROBLEM SYMPTOMS TABLE		
(CRUISE CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-483 (1)	
PROBLEM SYMPTOMS TABLE		
(DRIVER DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-602 (1)	
PROBLEM SYMPTOMS TABLE		
(ENGINE IMMOBILISER SYSTEM)		
(DIAGNOSTICS)	DI-528 (1)	
PROBLEM SYMPTOMS TABLE (ENGINE)		
(DIAGNOSTICS)	DI-21 (1)	
PROBLEM SYMPTOMS TABLE		
(LEXUS NAVIGATION SYSTEM)		
(DIAGNOSTICS)	DI-756 (1)	
PROBLEM SYMPTOMS TABLE		
(PASSENGER DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-624 (1)	
PROBLEM SYMPTOMS TABLE		
(REAR LEFT DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-647 (1)	
PROBLEM SYMPTOMS TABLE		
(REAR RIGHT DOOR CONTROL SYSTEM)		
(DIAGNOSTICS)	DI-664 (1)	
PROBLEM SYMPTOMS TABLE		
(SLIDING ROOF SYSTEM)		
(DIAGNOSTICS)	DI-557 (1)	
PROBLEM SYMPTOMS TABLE		
(SUPPLEMENTAL RESTRAINT SYSTEM)		
(DIAGNOSTICS)	DI-317 (1)	
PROBLEM SYMPTOMS TABLE		
(THEFT DETERRENT SYSTEM)		
(DIAGNOSTICS)	DI-452 (1)	
PROPELLER SHAFT (PREPARATION)	PP-37 (1)	
PROPELLER SHAFT		
(SERVICE SPECIFICATIONS)	SS-25 (1)	
PROPELLER SHAFT ASSEMBLY	PR-2 (2)	
PROPORTIONING VALVE (P VALVE)	BR-53 (2)	

Q

QUARTER WINDOW GLASS	BO-95 (2)
----------------------	-----------

R

	Page Vol.
RADIATOR	CO-14 (2)
REAR AXLE HUB	SA-43 (2)
REAR BRAKE CALIPER	BR-43 (2)
REAR BRAKE PAD	BR-40 (2)
REAR BUMPER	BO-5 (2)
REAR DIFFERENTIAL CARRIER	SA-60 (2)
REAR DIFFERENTIAL FRONT OIL SEAL	SA-57 (2)
REAR DOOR	BO-24 (2)
REAR DRIVE SHAFT	SA-51 (2)
REAR LEFT DOOR CONTROL SYSTEM (DIAGNOSTICS)	DI-642 (1)
REAR LOWER SUSPENSION ARM AND STRUT ROD	SA-88 (2)
REAR RIGHT DOOR CONTROL SYSTEM (DIAGNOSTICS)	DI-659 (1)
REAR SEAT (LH)	BO-170 (2)
REAR SEAT (RH)	BO-177 (2)
REAR SHOCK ABSORBER	SA-80 (2)
REAR SPEED SENSOR	BR-61 (2)
REAR STABILIZER BAR	SA-92 (2)
REAR WHEEL ALIGNMENT	SA-8 (2)
REAR WHEEL HUB BOLT	SA-50 (2)
REAR WIPER AND WASHER	BO-62 (2)
REFRIGERANT LINE	AC-20 (2)
REPAIR INSTRUCTIONS	IN-4 (1)
ROOF DRIP SIDE FINISH MOULDING	BO-75 (2)
ROOF HEADLINING	BO-143 (2)
ROOM TEMPERATURE SENSOR	AC-65 (2)

S

SEAT BELT	BO-185 (2)
SEAT BELT PRETENSIONER	BO-189 (2)
SEAT HEATER SYSTEM	BE-139 (2)
SHIFT LOCK SYSTEM	AX-17 (2)
SIDE AIRBAG ASSEMBLY	RS-38 (2)
SIDE AIRBAG SENSOR ASSEMBLY	RS-61 (2)
SLIDING ROOF	BO-114 (2)
SLIDING ROOF SYSTEM (DIAGNOSTICS)	DI-553 (1)
SOLAR SENSOR	AC-64 (2)
SPEED SENSOR	AX-5 (2)
SPOILER	BO-198 (2)
SRS AIRBAG	BO-3 (2)
SRS AIRBAG	RS-1 (2)
STANDARD BOLT (SERVICE SPECIFICATIONS)	SS-1 (1)
STARTER	ST-2 (2)
STARTER RELAY	ST-20 (2)
STARTING (PREPARATION)	PP-25 (1)
STARTING (SERVICE SPECIFICATIONS)	SS-18 (1)
STARTING SYSTEM	ST-1 (2)
STEERING (PREPARATION)	PP-54 (1)
STEERING (SERVICE SPECIFICATIONS)	SS-34 (1)
STEERING SYSTEM	SR-1 (2)
STEERING WHEEL	SR-9 (2)
STEERING WHEEL PAD AND SPIRAL CABLE	RS-12 (2)
STOP LIGHT SYSTEM	BE-52 (2)
SUPPLEMENTAL RESTRAINT SYSTEM (DIAGNOSTICS)	DI-303 (1)
SUPPLEMENTAL RESTRAINT SYSTEM (PREPARATION)	PP-62 (1)
SUPPLEMENTAL RESTRAINT SYSTEM (SERVICE SPECIFICATIONS)	SS-36 (1)
SUSPENSION AND AXLE (PREPARATION)	PP-41 (1)
SUSPENSION AND AXLE (SERVICE SPECIFICATIONS)	SS-27 (1)

T

	Page Vol.
TERMINALS OF ECU (ABS & BA & TRC & VSC SYSTEM)	DI-217 (1)
TERMINALS OF ECU (AIR CONDITIONING SYSTEM) (DIAGNOSTICS)	DI-811 (1)
TERMINALS OF ECU (AUTOMATIC TRANSAXLE) (DIAGNOSTICS)	DI-158 (1)
TERMINALS OF ECU (BODY CONTROL SYSTEM) (DIAGNOSTICS)	DI-567 (1)
TERMINALS OF ECU (CRUISE CONTROL SYSTEM) (DIAGNOSTICS)	DI-481 (1)
TERMINALS OF ECU (DRIVER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-601 (1)
TERMINALS OF ECU (ENGINE IMMOBILISER SYSTEM) (DIAGNOSTICS)	DI-527 (1)
TERMINALS OF ECU (ENGINE) (DIAGNOSTICS)	DI-19 (1)
TERMINALS OF ECU (LEXUS NAVIGATION SYSTEM) (DIAGNOSTICS)	DI-752 (1)
TERMINALS OF ECU (MULTIPLEX COMMUNICATION SYSTEM) (DIAGNOSTICS)	DI-686 (1)
TERMINALS OF ECU (PASSENGER DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-623 (1)
TERMINALS OF ECU (REAR LEFT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-645 (1)
TERMINALS OF ECU (REAR RIGHT DOOR CONTROL SYSTEM) (DIAGNOSTICS)	DI-662 (1)
TERMINALS OF ECU (SLIDING ROOF SYSTEM) (DIAGNOSTICS)	DI-556 (1)
TERMINALS OF ECU (SUPPLEMENTAL RESTRAINT SYSTEM) (DIAGNOSTICS)	DI-315 (1)
TERMINALS OF ECU (THEFT DETERRENT SYSTEM) (DIAGNOSTICS)	DI-451 (1)
TERMS	IN-37 (1)
THEFT DETERRENT SYSTEM	BE-108 (2)
THEFT DETERRENT SYSTEM (DIAGNOSTICS)	DI-443 (1)
THERMOSTAT	CO-10 (2)
THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM	EC-10 (2)
THROTTLE BODY	FI-32 (2)
TILT STEERING COLUMN	SR-10 (2)
TIMING BELT	EM-13 (2)
TIRE AND WHEEL	SA-2 (2)
TORQUE CONVERTER AND DRIVE PLATE	AX-34 (2)
TROUBLESHOOTING	BE-2 (2)
TROUBLESHOOTING	BR-2 (2)
TROUBLESHOOTING	PR-1 (2)
TROUBLESHOOTING	SA-1 (2)
TROUBLESHOOTING	SR-2 (2)
TURN SIGNAL AND HAZARD WARNING SYSTEM	BE-43 (2)

V

VALVE BODY ASSEMBLY	AX-9 (2)
VALVE CLEARANCE	EM-4 (2)

ALPHABETICAL INDEX (V – W)

	Page Vol.
VEHICLE IDENTIFICATION AND ENGINE SERIAL NUMBER (IDENTIFICATION INFORMATION)	IN-3 (1)
VEHICLE LIFT AND SUPPORT LOCATIONS (REPAIR INSTRUCTIONS)	IN-8 (1)
VSV FOR ACOUSTIC CONTROL INDUCTION SYSTEM (ACIS)	FI-60 (2)
VSV FOR EVAPORATIVE EMISSION (EVAP)	FI-58 (2)

W

WARM UP THREE-WAY CATALYTIC CONVERTER (WU-TWC) SYSTEM	EC-7 (2)
WATER PUMP	CO-3 (2)
WATER TEMPERATURE SENSOR	FI-63 (2)
WATER TEMPERATURE SWITCH	CO-33 (2)
WINDSHIELD	BO-79 (2)
WIPER AND WASHER SYSTEM	BE-55 (2)
WIRE HARNESS AND CONNECTOR	RS-66 (2)
WIRELESS DOOR LOCK CONTROL SYSTEM	BE-110 (2)