


Vauxhall Antara 2006 – 2010 fuse box diagram

Instrument panel fuse box

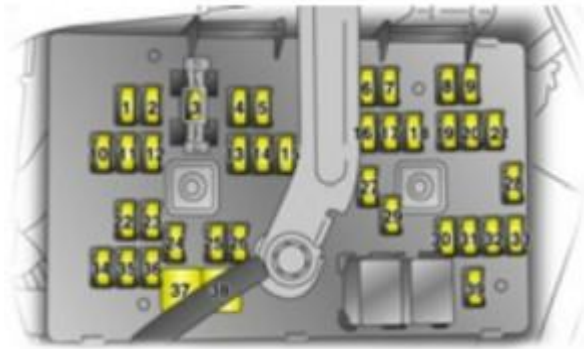

Vauxhall Antara – fuse box – instrument


panel

Fuse	Ampere rating [A]	Circuit
1	20	Accessory socket
2	20	Seat heating
3	15	Audio
4	10	Trailer
5	10	Parking lamp (right side)
6	10	Air conditioning
7	10	Power steering
8	10	Body Control Module
9	10	Anti-theft alarm

10	20	Central door locking
11	15	Turn signal (right side)
12	15	Turn signal (left side)
13	15	Stop
14	15	Headlamp washer
15	10	Rear cluster
16	15	Air conditioning
17	20	Body Control Module
18	15	Body Control Module
19	2	Ignition switch
20	10	Fog tail lamp
21	10	Airbag
22	15	Front door lock
23	20	Accessory socket
24	15	Transmission Control Module

25	15	Engine
26	10	Body Control Module
27	—	—
28	10	Windscreen washer
29	15	Exterior mirror heating
30	10	Instrument cluster
31	10	Ignition
32	10	Airbag
33	2	Steering wheel remote
34	10	Folding mirrors
35	—	—
36	20	Cigarette lighter
37	20	Passenger's electric window
38	20	Driver's electric window
39	10	Automatic transmission

Engine compartment fuse box

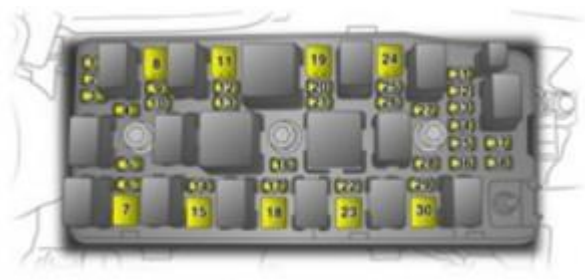

Vauxhall Antara – fuse box – engine

compartment

Fuse	Ampere rating [A]	Circuit
1	15	Engine 1
2	15	Engine 2
3	20	Engine Control Module
4	15	Engine 3
5	10	Air conditioning
6	10	Main
7	20	Starter
8	30	Cooling fan
9	15	Fuel pump
10	15	All Wheel Drive (AWD)
11	30	Cooling fan auxiliary

12	15	Stop
13	20	Seat heating
14	20	ABS module
15	40	ABS module
16	15	Horn
17	25	Wipers
18	40	Run
19	40	Accessory/Ignition
20	20	Sun roof
21	15	Anti-theft system
22	30	Electric seat
23	60	Battery
24	30	Defogger
25	15	Dipped beam (left side)
26	15	Dipped beam (right side)

27	10	Parking lamp (left side)
28	15	Front fog lamps
29	15	Main beam
30	20	Rear wipers
31	—	—
32	20	Headlamp washer
33	15	Transmission Control Module
34	10	Trailer/parking lamp (left side)
35	25	Spare
36	20	Spare
37	15	Spare
38	10	Spare