

Navigation Antenna Assembly

 
Roof Antenna Assembly

 
No. 2 Antenna
Cord Sub-Assembly

Amplifier Antenna
Assembly


Antenna Cord
Sub-Assembly

No. 3 Antenna
Cord Sub-Assembly
(Floor No. 2 Wire)

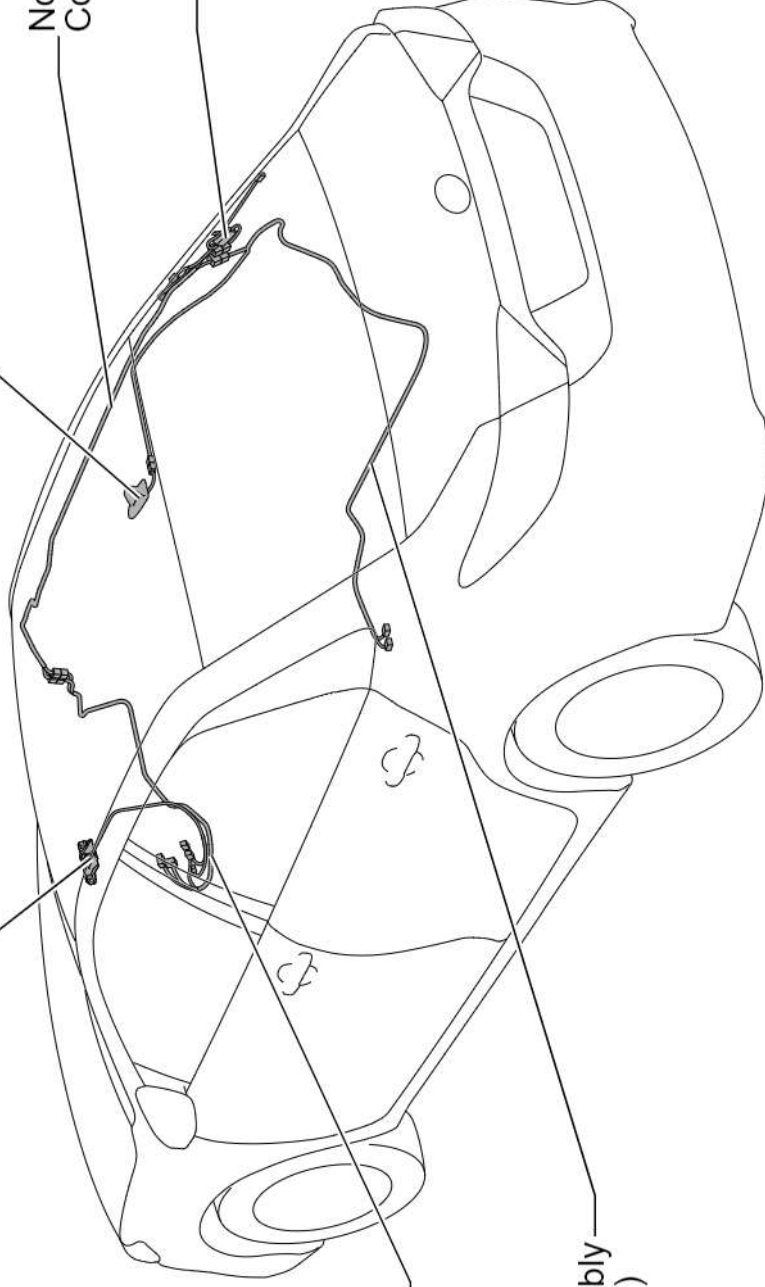

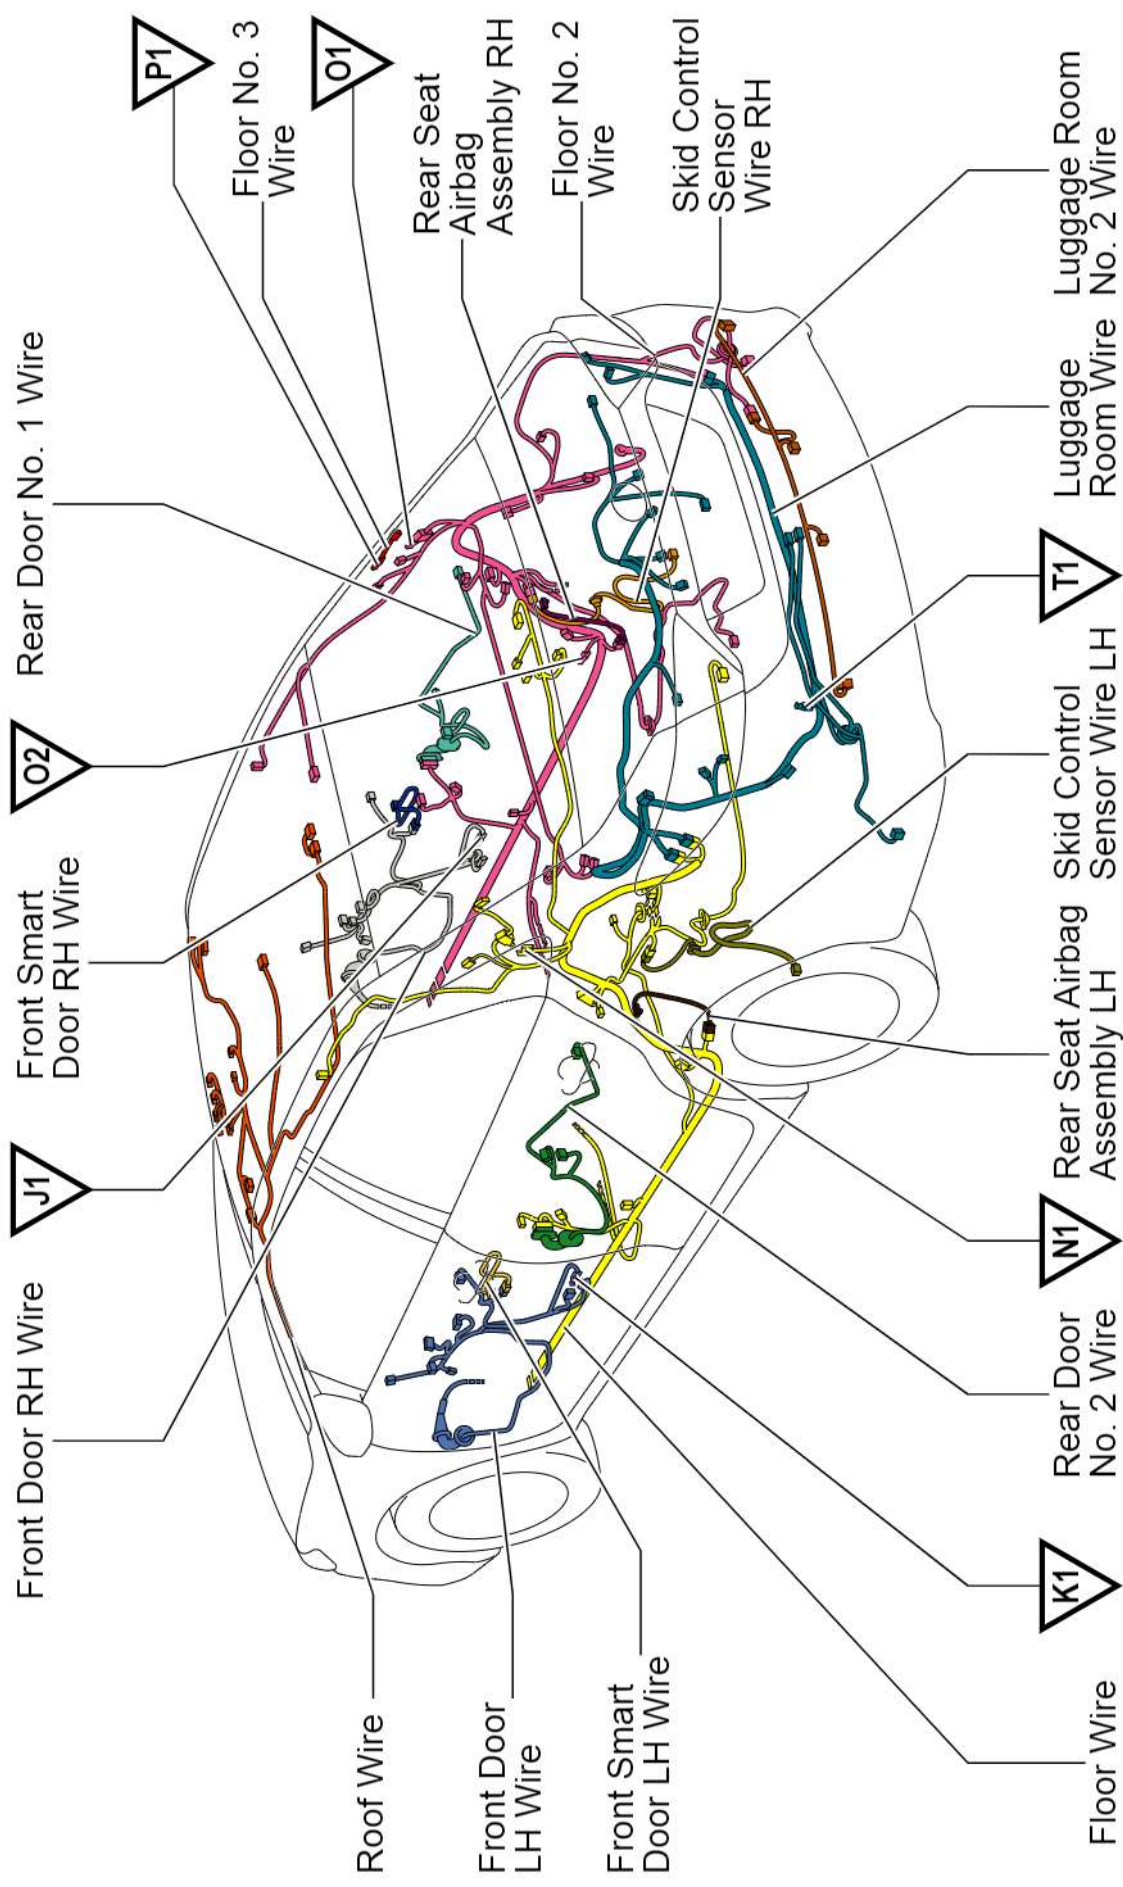






















Position of Parts in Body

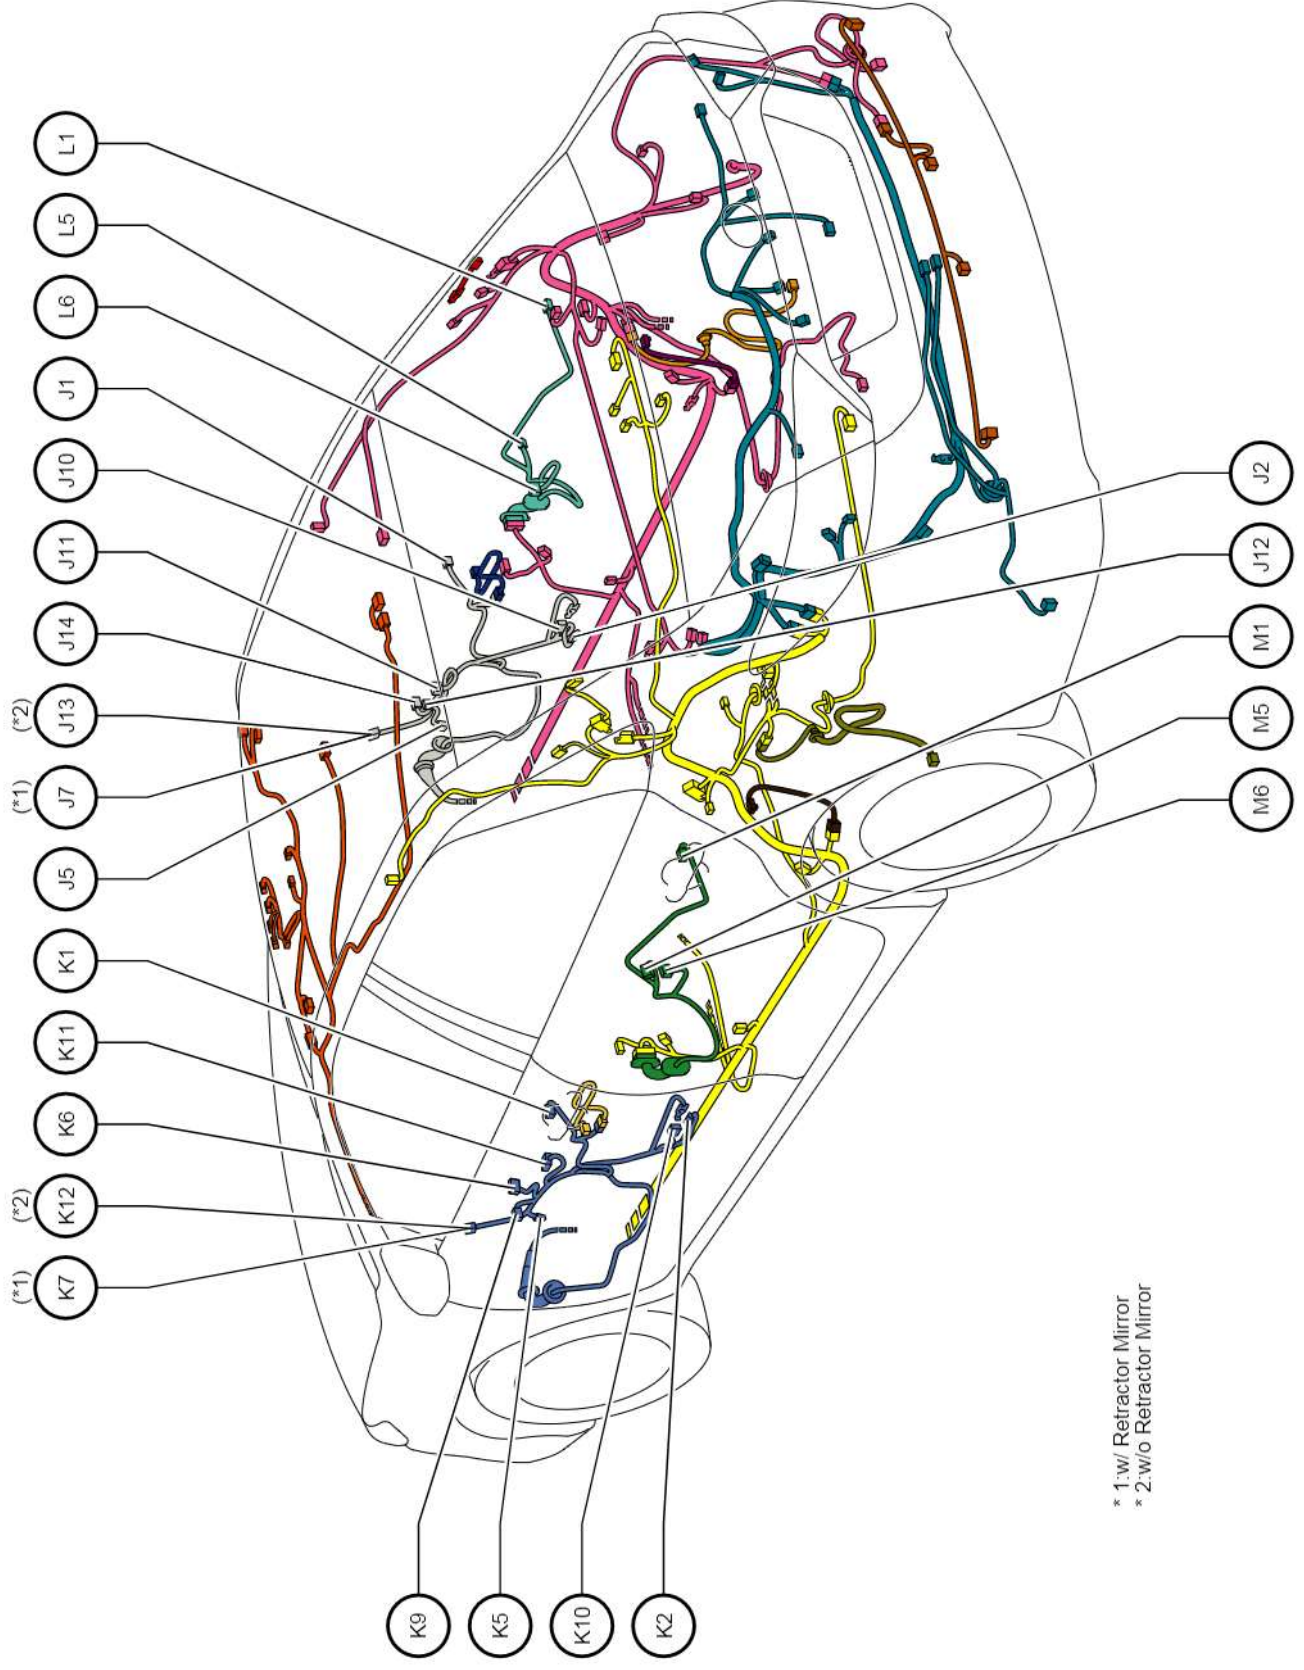 

Position of Parts in Body

J	1	Front Door Lock Assembly with Motor RH
J	2	Front Courtesy Light Assembly RH
J	5	Front No. 1 Speaker Assembly RH
J	7	Outer Rear View Mirror Assembly RH
J	10	Door Side Airbag Sensor RH
J	11	Front Power Window Regulator Switch Assembly RH
J	12	Door Control Switch Assembly
J	13	Outer Rear View Mirror Assembly RH
J	14	Front Power Window Regulator Motor Assembly RH
K	1	Front Door Lock Assembly with Motor LH
K	2	Front Courtesy Light Assembly LH
K	5	Front No. 1 Speaker Assembly LH
K	6	Outer Mirror Switch Assembly
K	7	Outer Rear View Mirror Assembly LH
K	9	Front Power Window Regulator Motor Assembly LH
K	10	Door Side Airbag Sensor LH
K	11	Power Window Regulator Master Switch Assembly
K	12	Outer Rear View Mirror Assembly LH
L	1	Rear Door Lock Assembly with Motor RH
L	5	Rear Power Window Regulator Motor Assembly RH
L	6	Rear Power Window Regulator Switch Assembly RH
M	1	Rear Door Lock Assembly with Motor LH
M	5	Rear Power Window Regulator Motor Assembly LH
M	6	Rear Power Window Regulator Switch Assembly LH

                     Position of Parts in Body

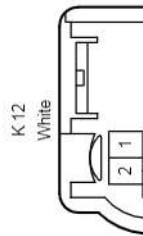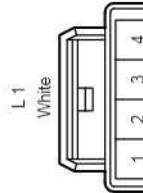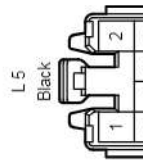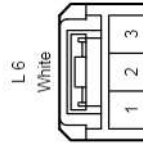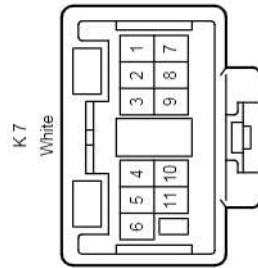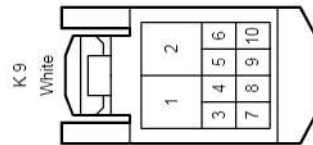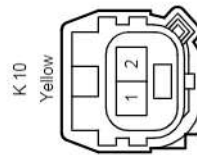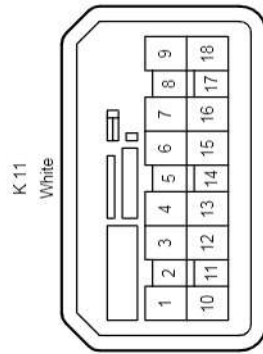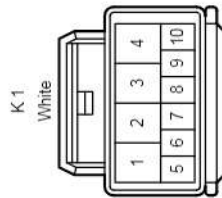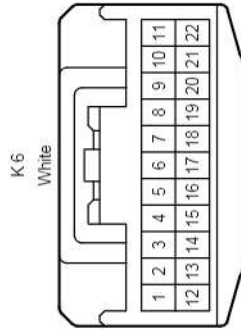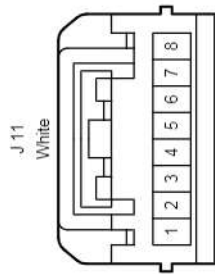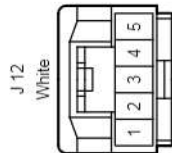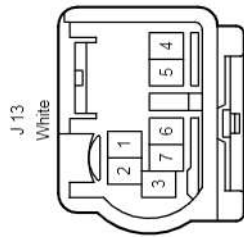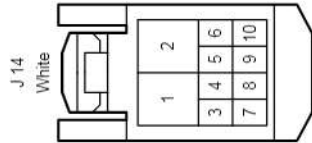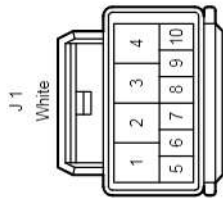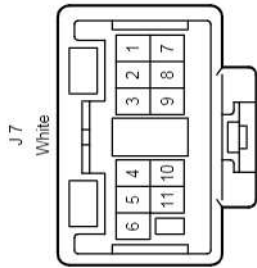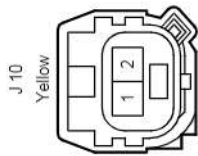



Position of Parts in Body


N 7	Front Door Courtesy Light Switch Assembly LH
N 8	Side Airbag Sensor Assembly LH
N 9	Front Seat Outer Belt Assembly LH
N 10	No. 2 Indoor Electrical Key Antenna Assembly
N 11	Fuel Suction Tube Assembly with Pump & Gage
N 15	Rear Door Courtesy Light Switch Assembly LH
N 23	No. 1 Luggage Compartment Light Assembly
N 26	Radio Setting Condenser (Center Stop Light)
N 27	Curtain Shield Airbag Assembly LH
N 28	Radio Setting Condenser (Rear Window Defogger)
N 29	Rear Window Defogger (Back Window Glass)
N 33	No. 2 Side Airbag Sensor Assembly LH
N 34	Canister Pump Module
N 36	No. 3 Indoor Electrical Key Antenna Assembly
N 37	Center Stop Light Set
N 39	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
N 41	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)

Position of Parts in Body


N 7
Black



 
N 8
Yellow

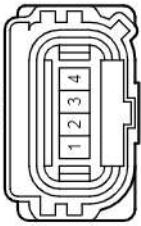


N 9
Black

 

N 10
White

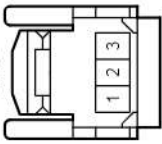 

N 11
White

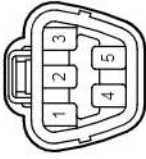 


N 15
Black




N 23
Gray



 
N 26
Black



N 27
Black

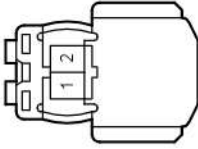 


N 28
Black

 


N 29
Black



 
N 33
Yellow

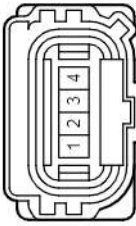


N 34
Black

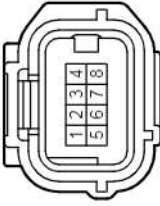 


N 36
Black

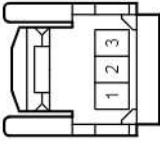 


N 37
White

 


N 39
Black

 

N 41
Black

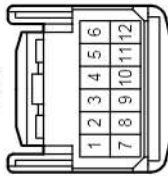 

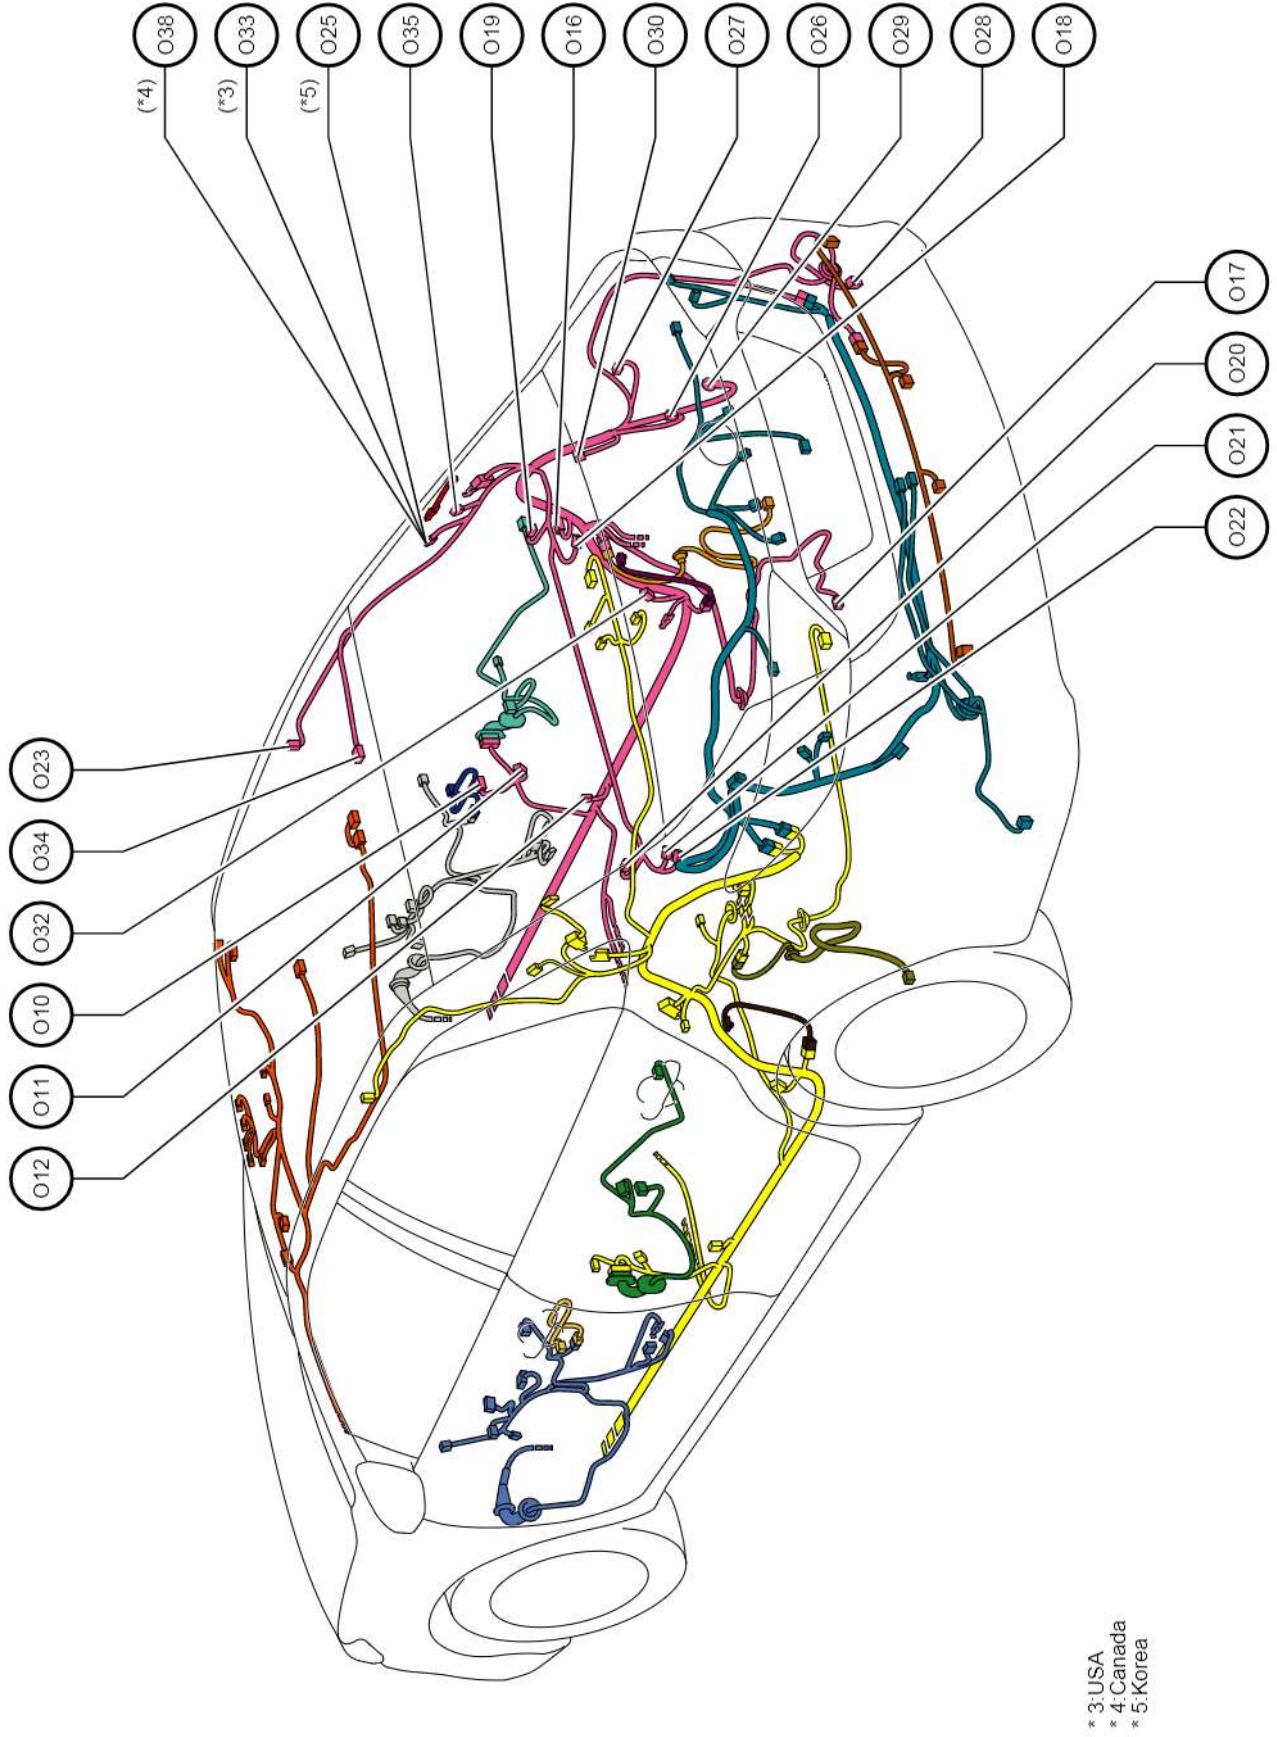 

Position of Parts in Body


O 10	Front Door Courtesy Light Switch Assembly RH
O 11	Side Airbag Sensor Assembly RH
O 12	Front Seat Outer Belt Assembly RH
O 16	Rear Door Courtesy Light Switch Assembly RH
O 17	Rear Height Control Sensor Sub-Assembly
O 18	Rear Speaker Assembly RH
O 19	Rear No. 2 Speaker Assembly RH
O 20	Rear No. 2 Speaker Assembly LH
O 21	Rear Speaker Assembly LH
O 22	Woofer Speaker (Rear Speaker Assembly)
O 23	Curtain Shield Airbag Assembly RH
O 25	Door Control Receiver
O 26	Battery Thermometer Sensor (Thermistor Assembly)
O 27	Security Horn Assembly
O 28	Blind Spot Monitor Sensor RH
O 29	Fusible Link Block Assembly
O 30	Junction Connector
O 32	No. 2 Side Airbag Sensor Assembly RH
O 33	Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
O 34	Roof Antenna Assembly
O 35	No. 3 Antenna Cord Sub-Assembly
O 38	Door Control Receiver

Position of Parts in Body


O 10
Black



 O 11
Yellow

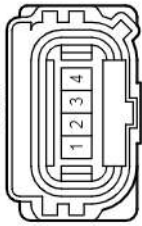


O 12
Black

 


O 16
Black



 
O 17
Black

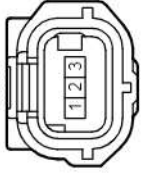


O 18
Black

 


O 19
White

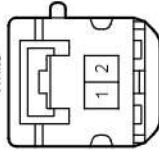 


O 20
White

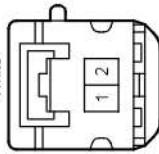 


O 21
Black

 


O 22
Black

 

O 23
Black

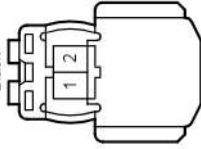 

O 25
White

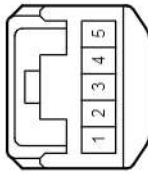 


O 26
Black



O 27
Black



 
O 28
Black

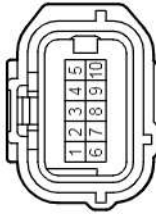


O 29



 
O 30
Black

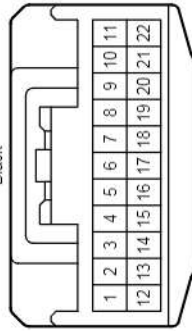


O 32
Yellow

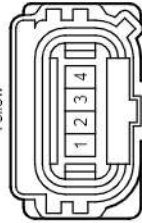 


O 33
White

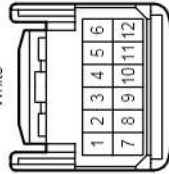 


O 34
Blue

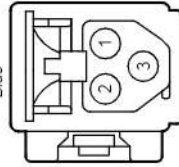 

O 35
Gray

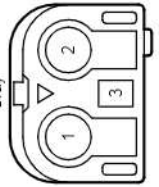 

O 38
White

















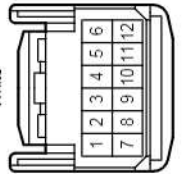 





Position of Parts in Body


P	1	Rear Window Defogger (Back Window Glass)
S	3	Humidity Sensor (A/C Thermistor Assembly)
S	4	Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
S	5	Vanity Light Assembly LH
S	6	Visor Assembly LH
S	8	Vanity Light Assembly RH
S	9	Visor Assembly RH
S	11	Inner Rear View Mirror Assembly
S	12	Roof Console Box Assembly
S	13	No. 1 Room Light Assembly
S	14	Spot Light Assembly LH
S	15	Spot Light Assembly RH
S	19	Inner Rear View Mirror Assembly
S	20	Lane Departure Warning Camera
S	21	Junction Connector
T	2	License Plate Light Assembly RH
T	3	Luggage Compartment Door Lock Assembly
T	4	Luggage Door Opening Switch Assembly
T	5	License Plate Light Assembly LH
T	6	Rear Television Camera Assembly
T	8	Rear Combination Light Assembly LH
T	9	Rear Combination Light Assembly LH
T	10	Blind Spot Monitor Sensor LH
T	11	Rear Electrical Key Antenna
T	12	Rear Combination Light Assembly RH
T	13	Rear Combination Light Assembly RH
T	14	Rear Electrical Key Antenna
T	16	Junction Terminal
T	17	Rear Light Assembly RH
T	18	Rear Light Assembly LH
T	23	Rear Television Camera Assembly
T	24	Junction Connector
U	1	Rear No. 1 Ultrasonic Sensor LH
U	2	Rear No. 1 Ultrasonic Sensor Center LH
U	3	Rear No. 1 Ultrasonic Sensor Center RH
U	4	Rear No. 1 Ultrasonic Sensor RH
V	1	Front Door Outside Handle Assembly RH
W	1	Front Door Outside Handle Assembly LH

                 Position of Parts in Body

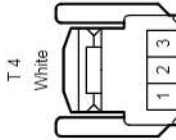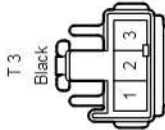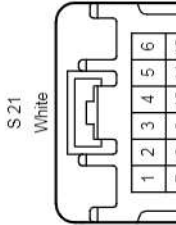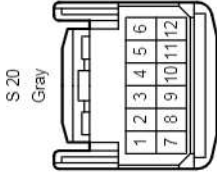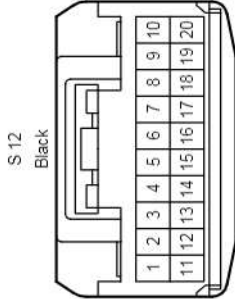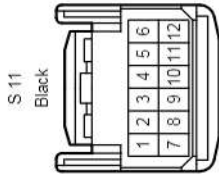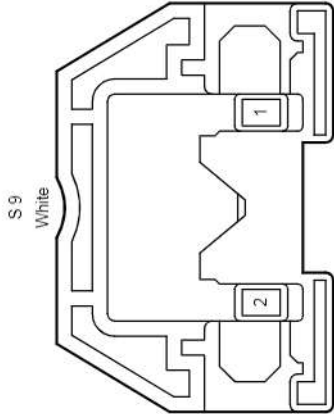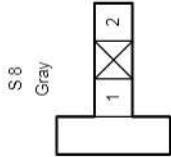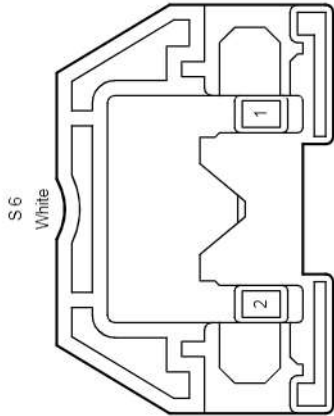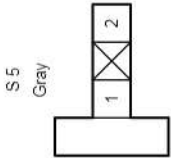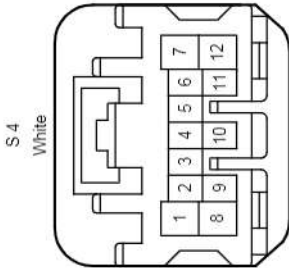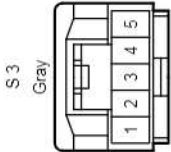

Position of Parts in Body

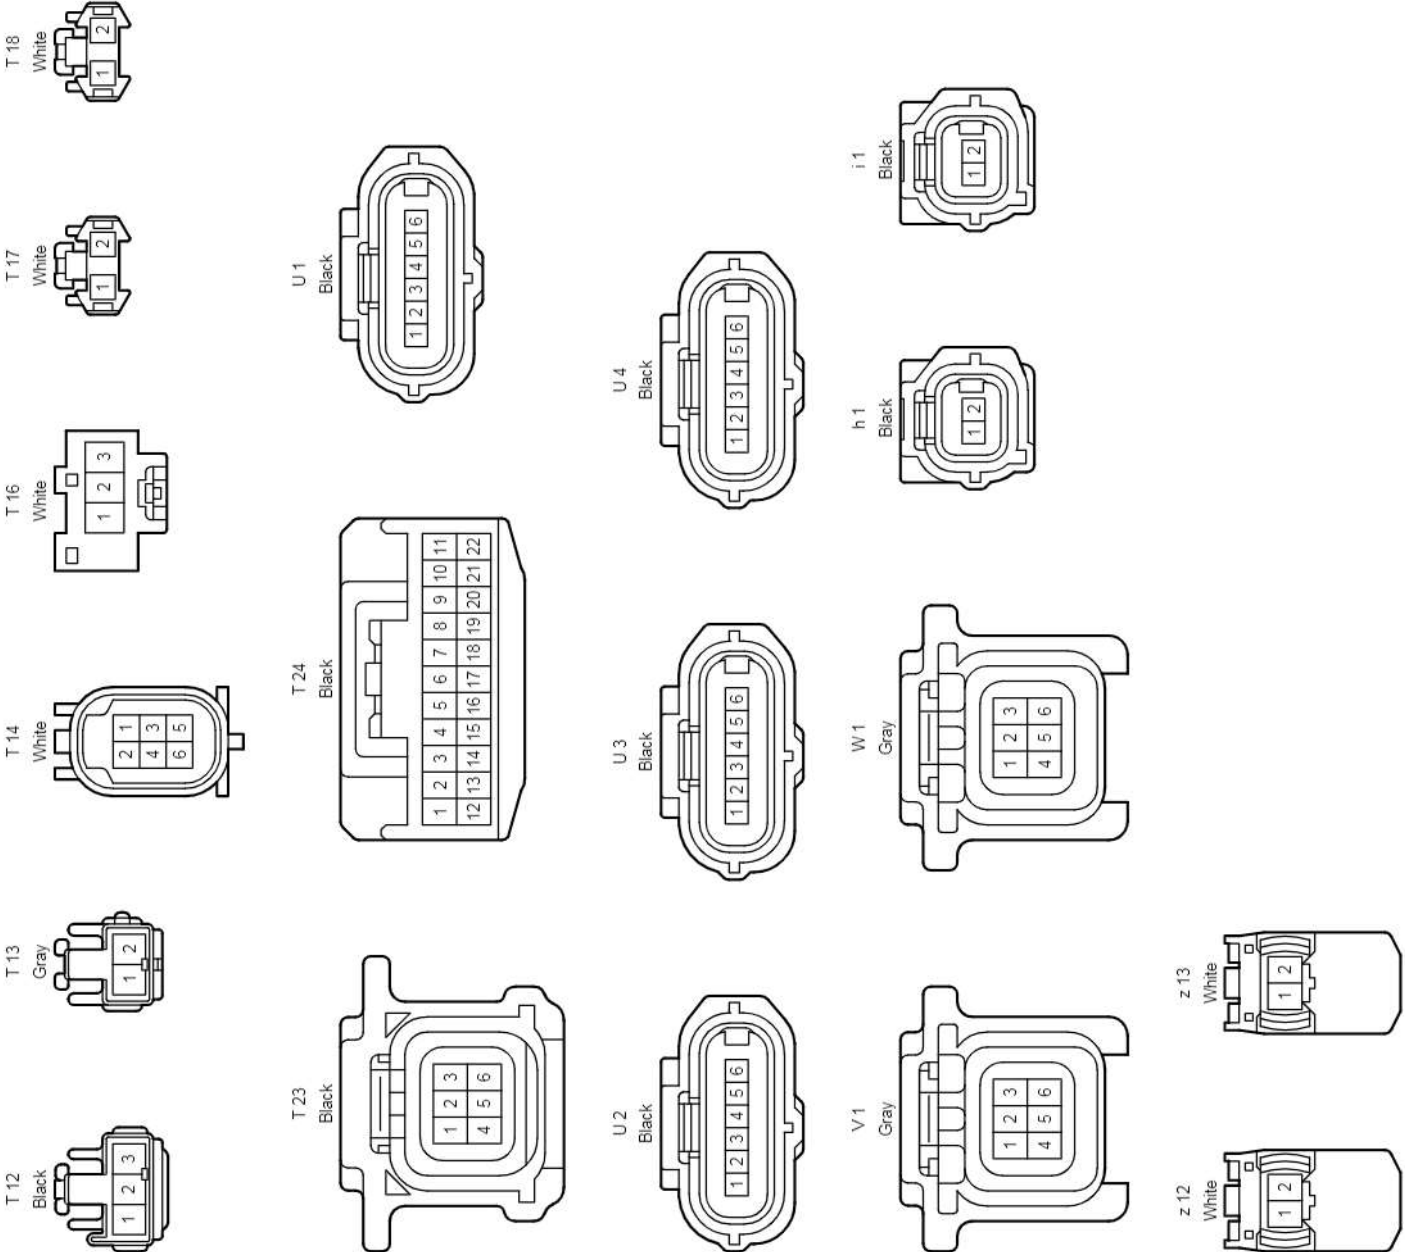 

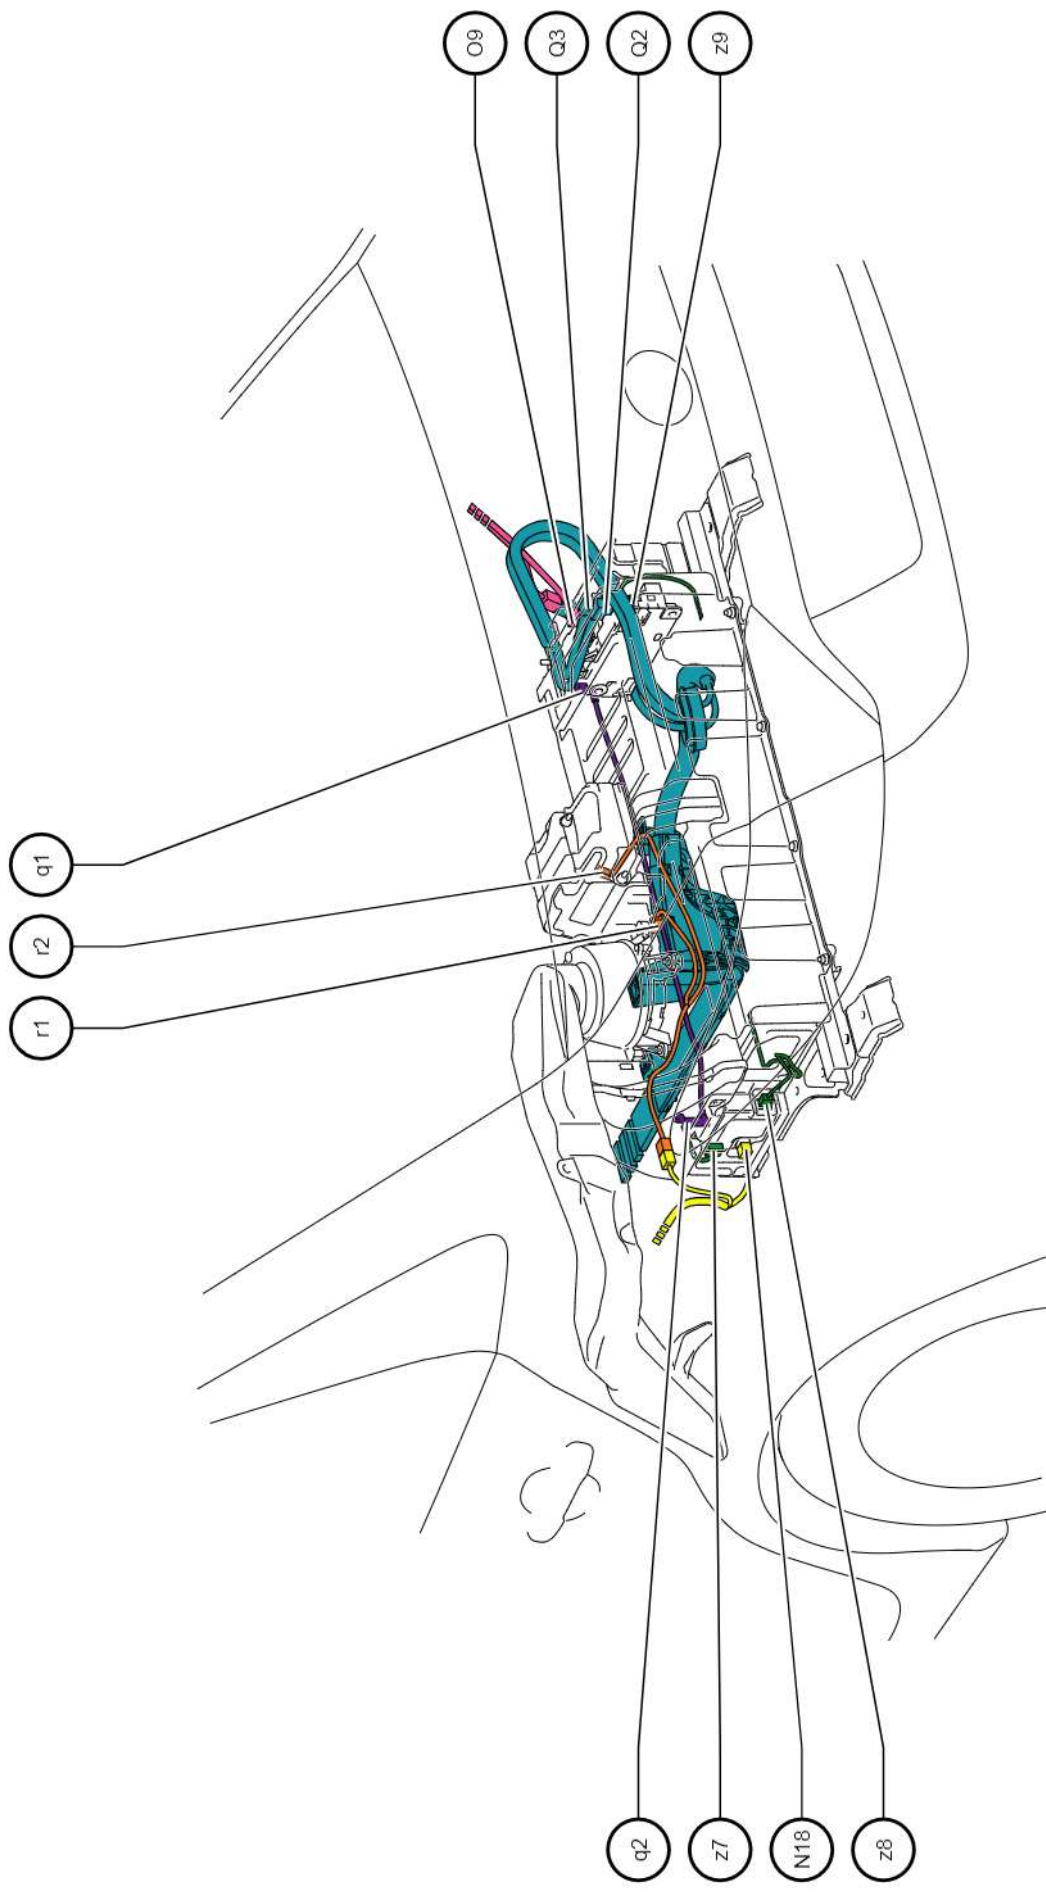 


Position of Parts in Body


N	18	Battery Voltage Sensor
O	9	Hybrid Battery Junction Block Assembly
Q	2	Hybrid Battery Junction Block Assembly
Q	3	Hybrid Battery Junction Block Assembly
q	1	Hybrid Battery Junction Block Assembly
q	2	Battery Voltage Sensor , HV Supply Battery Assembly
r	1	Battery Cooling Blower Assembly
r	2	Interlock Switch (Service Plug Grip)
z	7	Battery Voltage Sensor , HV Supply Battery Assembly
z	8	Battery Voltage Sensor , HV Supply Battery Assembly
z	9	Hybrid Battery Junction Block Assembly

Position of Parts in Body

 
N 18
White




O 9
White

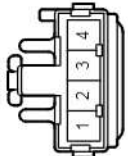 

Q 2
White

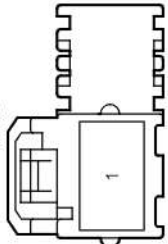 

Q 3
Orange

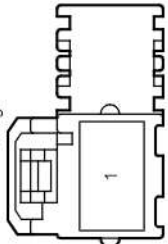 

q 1



 
q 2



r 1
Black




r 2
White




z 7

 Orange

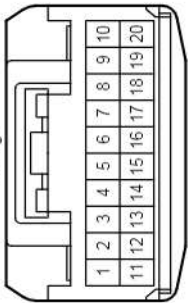



z 8
Black

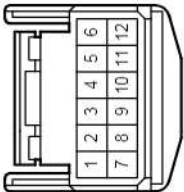 

z 9

  
White

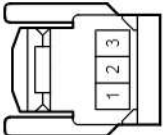

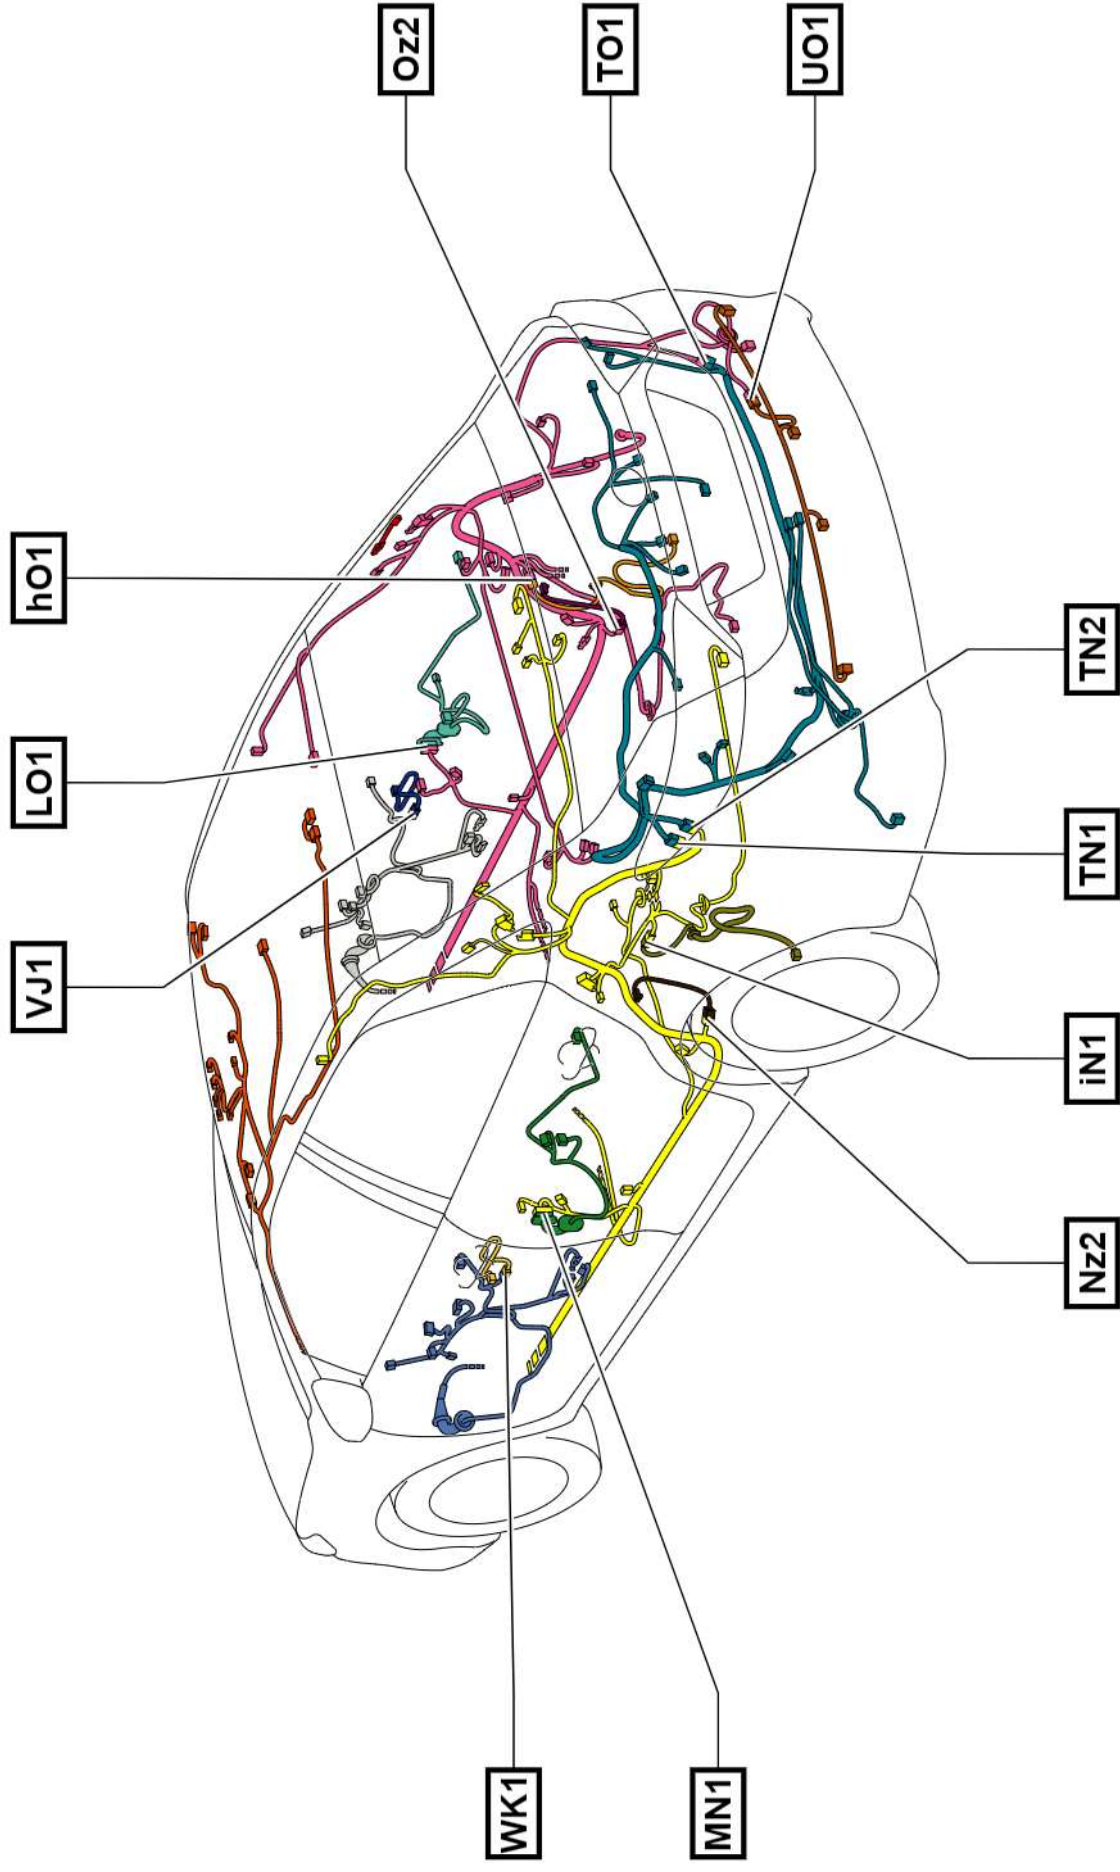


Wire and Wire in Body

 LO1
White

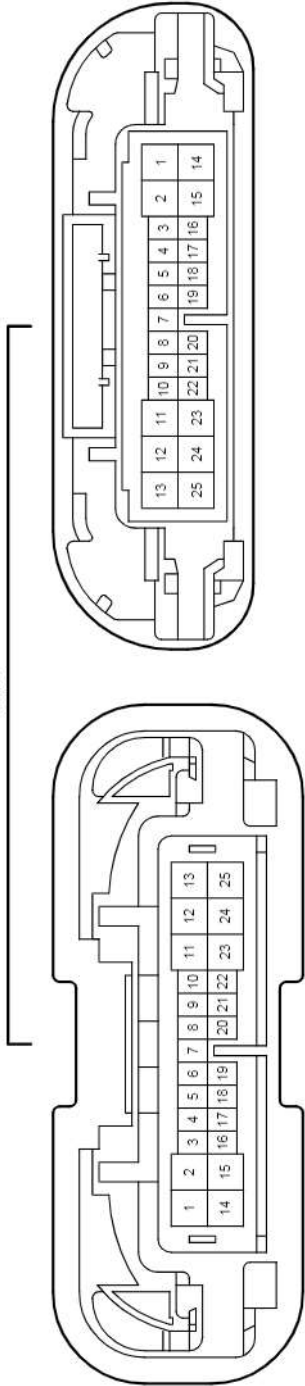


MN1
White

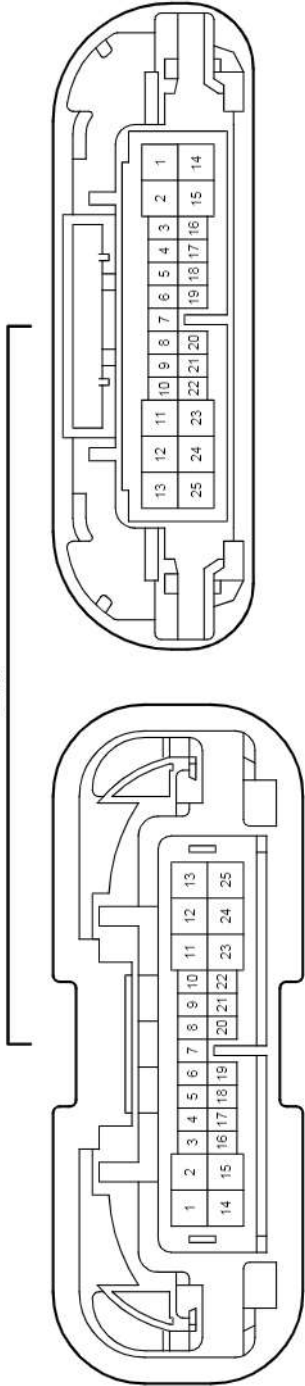 



Nz2

 Yellow White

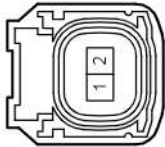


Oz2

 
 
Yellow White

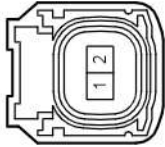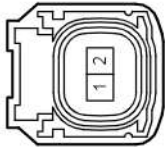





TN1
White

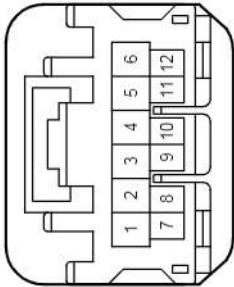 

TN2
White

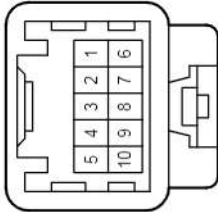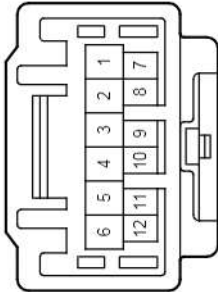  



Wire and Wire in Body

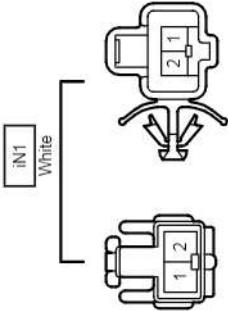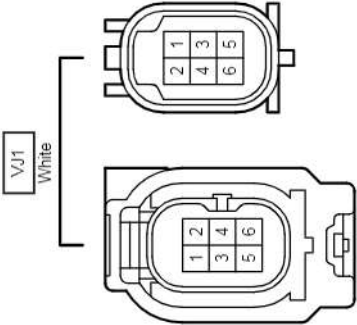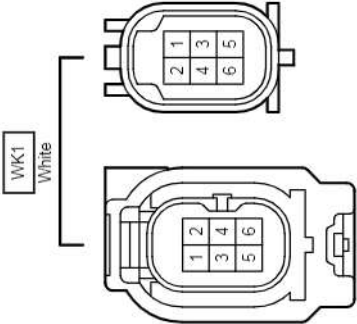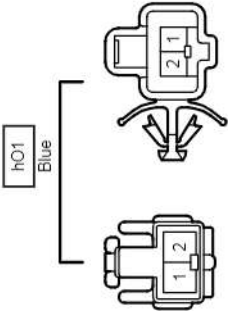    




Wire and Wire in Body

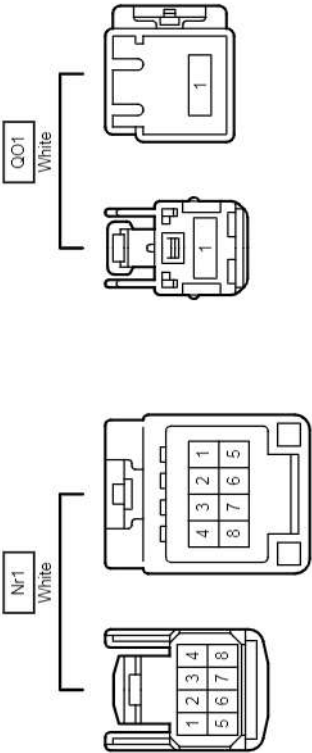 

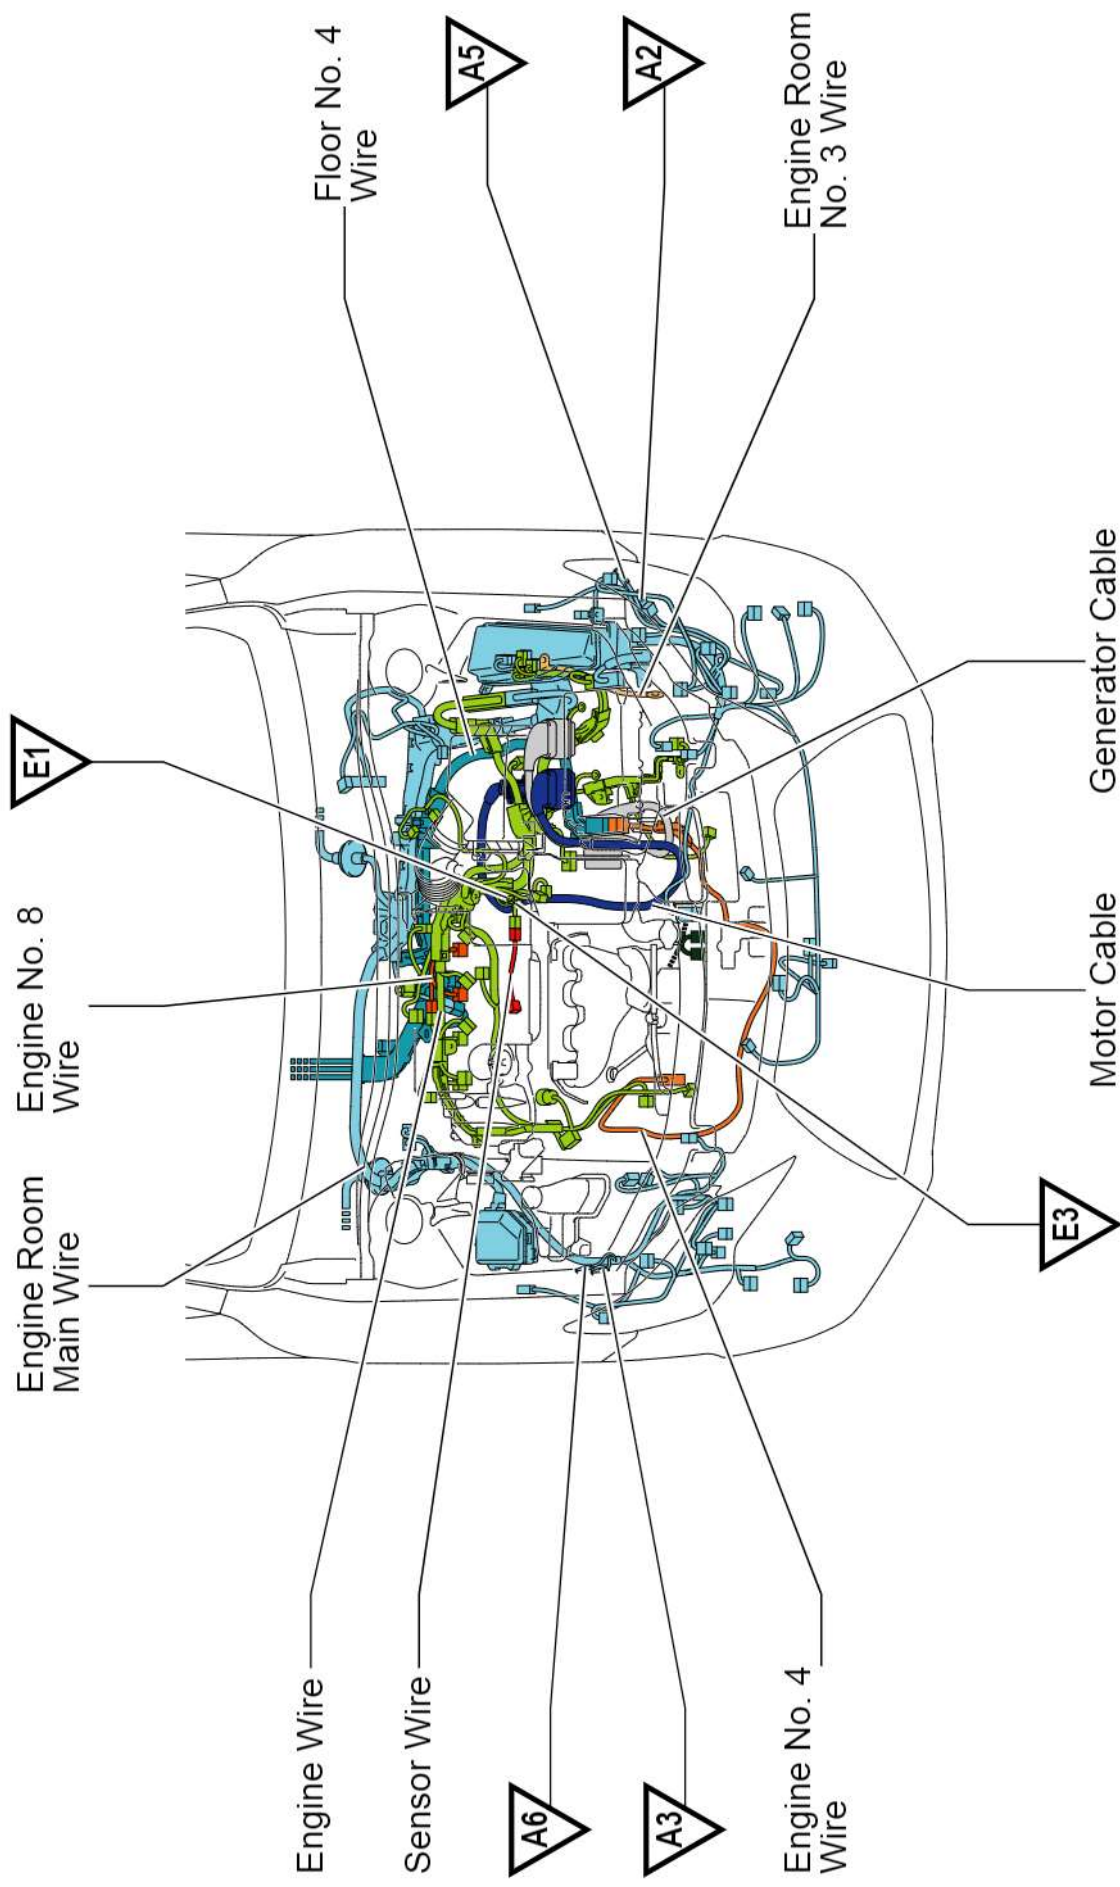 






Position of Parts in Engine Compartment

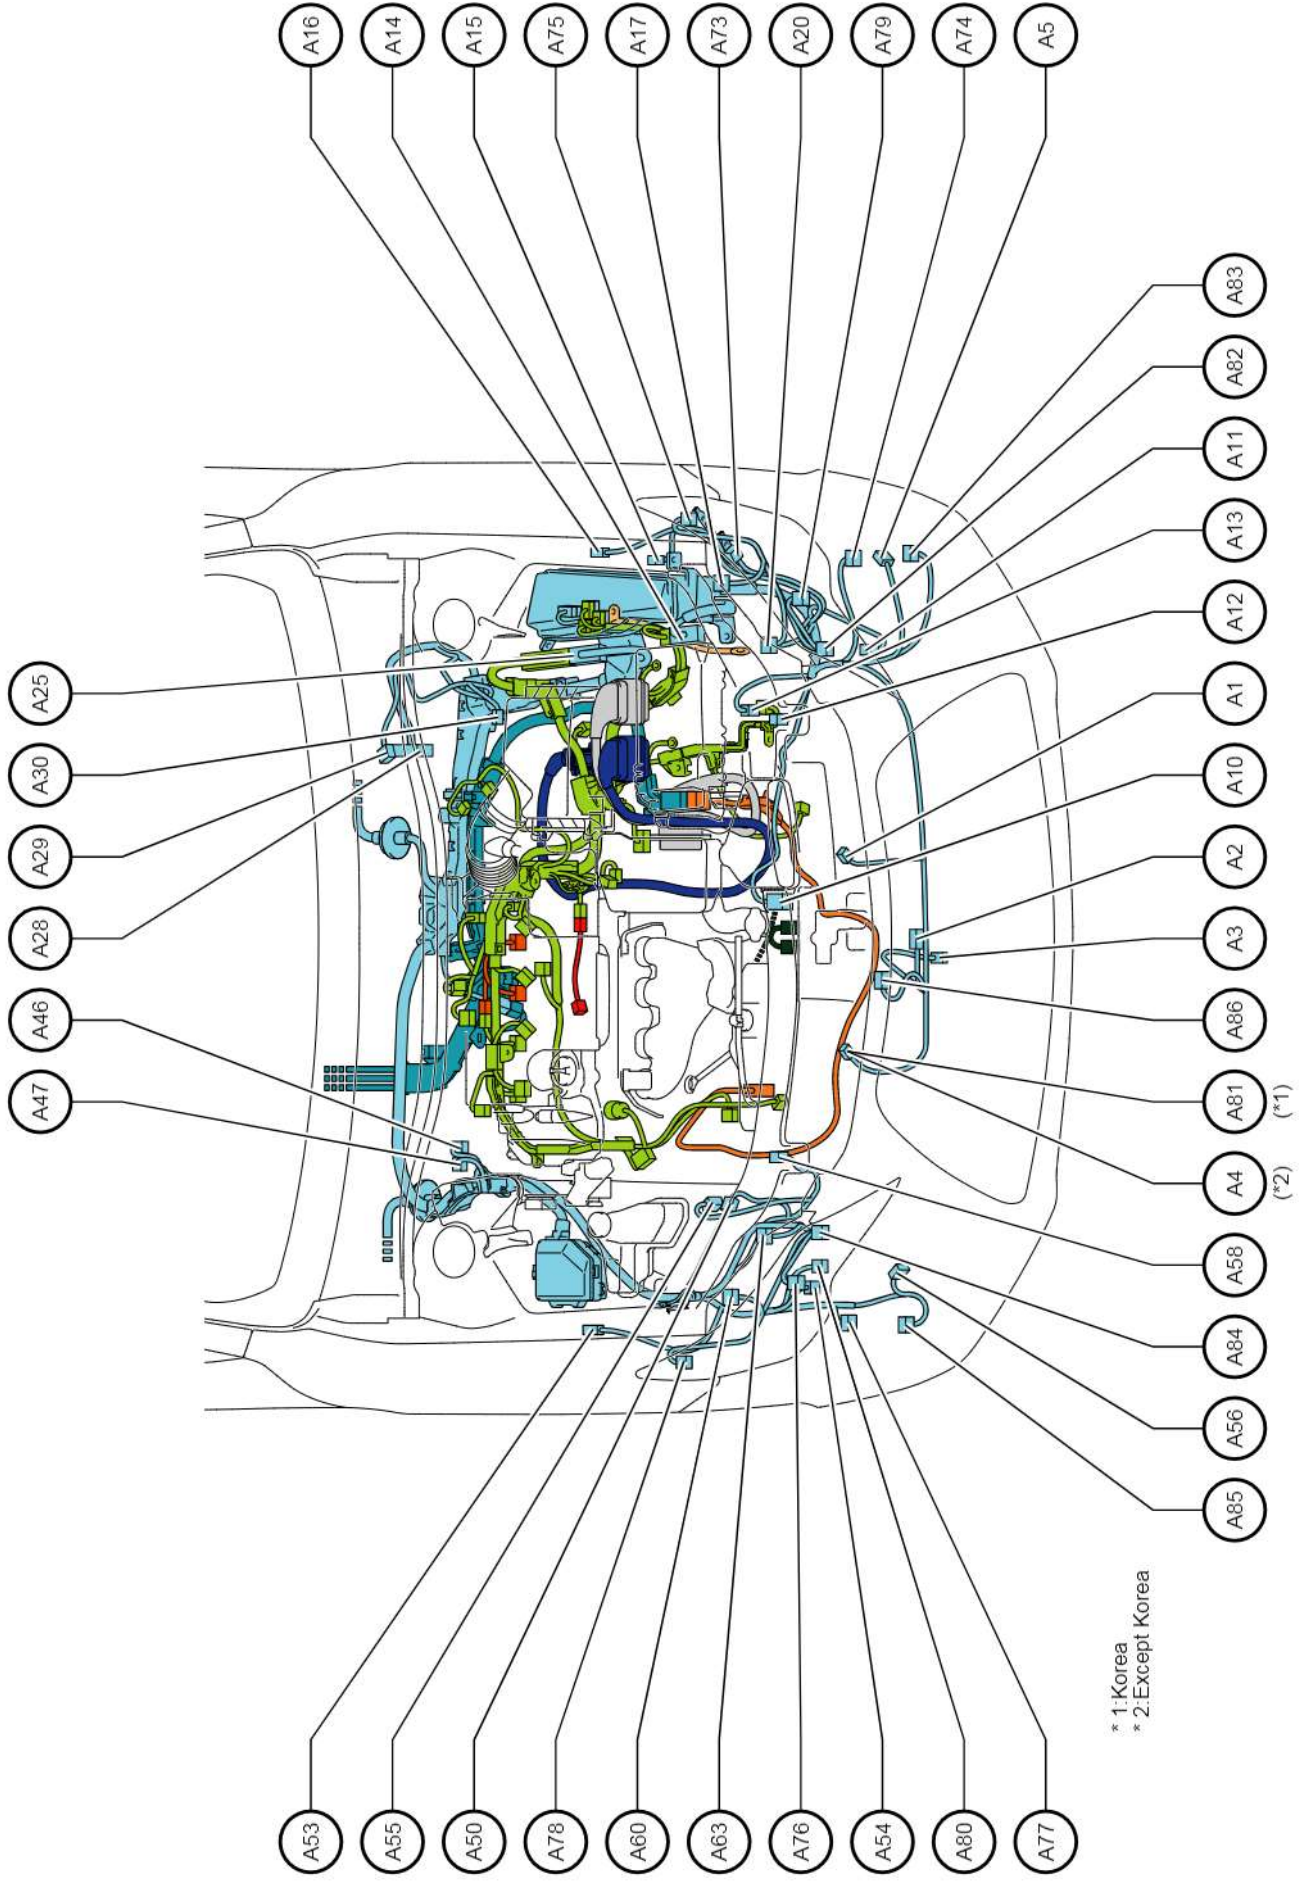 





Position of Parts in Engine Compartment

A 1	Low Pitched Horn Assembly
A 2	Engine Hood Courtesy Switch (Hood Lock Assembly)
A 3	Ambient Temperature Sensor (Thermistor Assembly)
A 4	High Pitched Horn Assembly
A 5	Front No. 1 Ultrasonic Sensor LH
A 10	Cooling Fan ECU
A 11	Vehicle Approaching Speaker Assembly
A 12	Front Airbag Sensor LH
A 13	Inverter with Converter Assembly
A 14	Inverter with Converter Assembly
A 15	Wireless Door Lock Buzzer
A 16	Front Speed Sensor LH
A 17	Headlight Assembly LH
A 20	Headlight Assembly LH
A 25	ECM
A 28	Skid Control ECU with Actuator (Brake Booster with Master Cylinder Assembly)
A 29	Windshield Wiper Motor Assembly
A 30	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 46	Brake Booster Pump Assembly
A 47	Brake Booster Pump Assembly
A 50	Inverter Water Pump Assembly
A 53	Front Speed Sensor RH
A 54	Windshield Washer Motor and Pump Assembly
A 55	A/C Pressure Sensor (A/C Tube & Accessory Assembly)
A 56	Front No. 1 Ultrasonic Sensor RH
A 58	Front Airbag Sensor RH
A 60	Headlight Assembly RH
A 63	Headlight Assembly RH
A 73	Junction Connector
A 74	Front Turn Signal Light Assembly LH
A 75	Headlight Assembly LH
A 76	Headlight Assembly RH
A 77	Front Turn Signal Light Assembly RH
A 78	Headlight Assembly RH
A 79	Headlight Assembly LH
A 80	Level Warning Switch Assembly
A 81	Super Low Pitched Horn Assembly
A 82	Headlight Assembly LH
A 83	Front Turn Signal Light Assembly LH
A 84	Headlight Assembly RH
A 85	Front Turn Signal Light Assembly RH
A 86	Millimeter Wave Radar Sensor Assembly

     Position of Parts in Engine Compartment

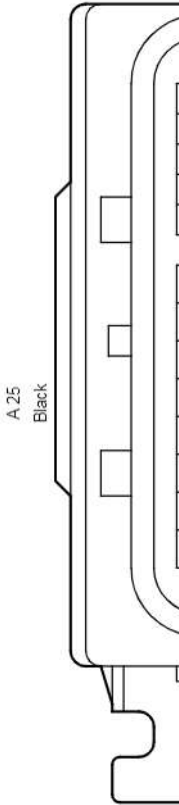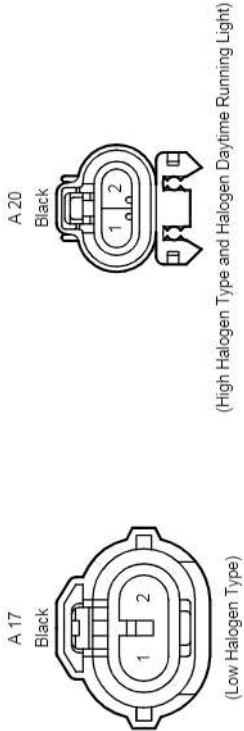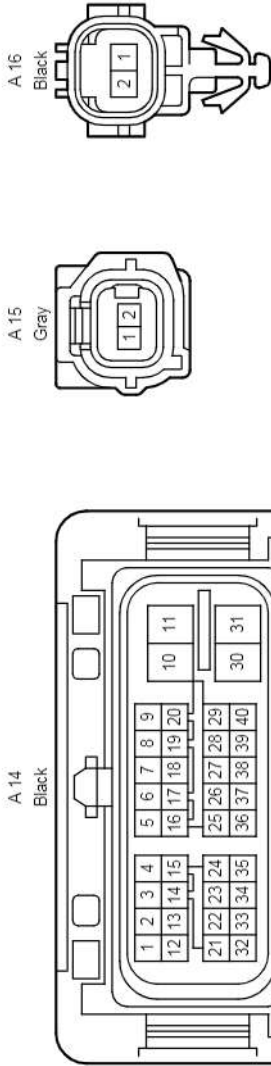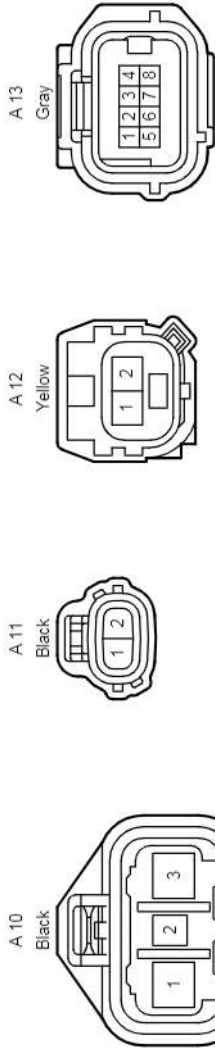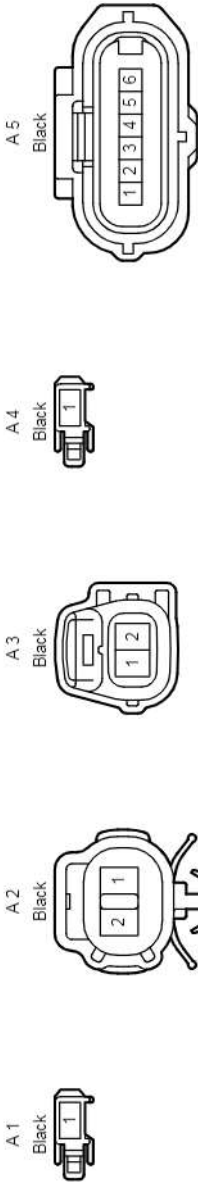

Position of Parts in Engine Compartment




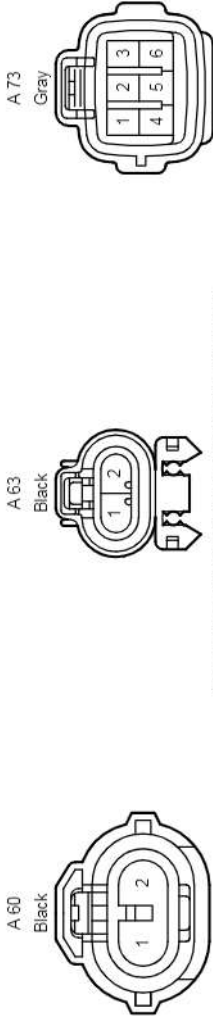 
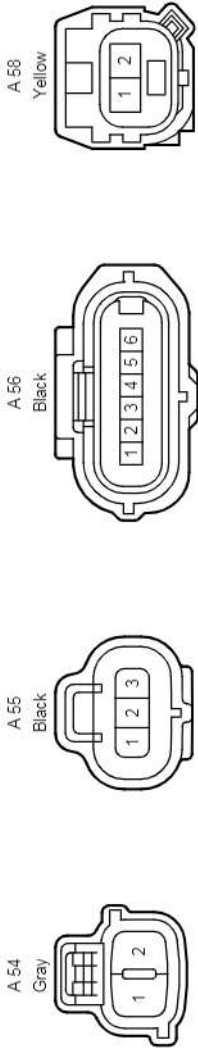 
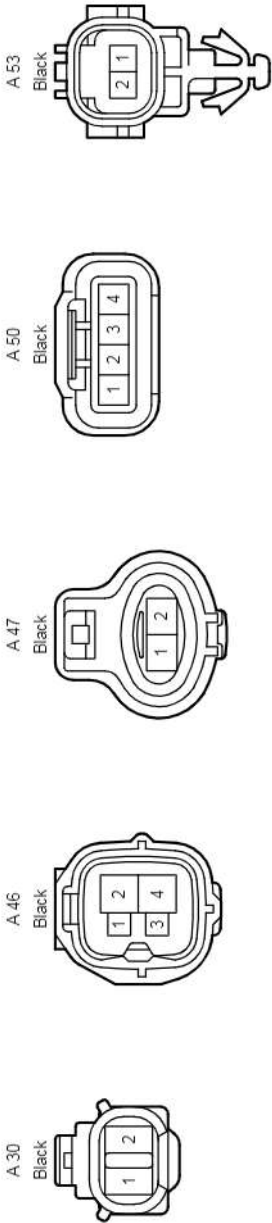 
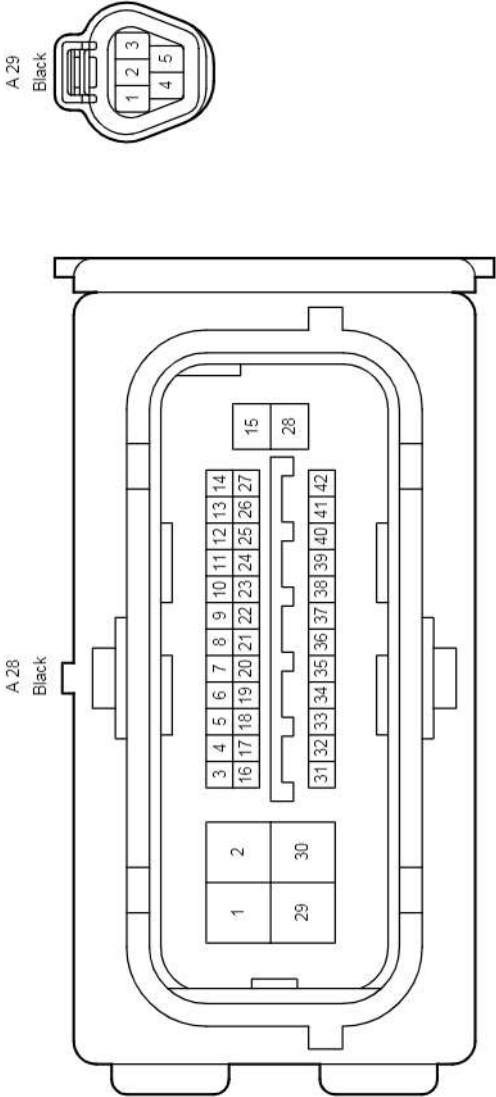 


(High Halogen Type and Halogen Daytime Running Light)




(Low Halogen Type)

       Position of Parts in Engine Compartment

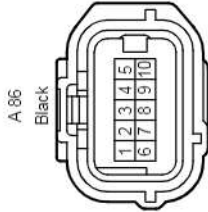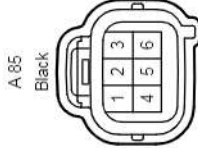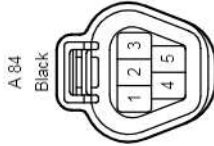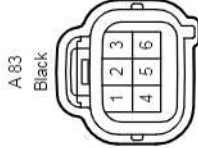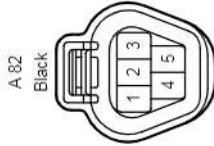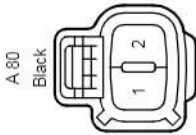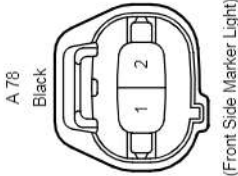

Position of Parts in Engine Compartment

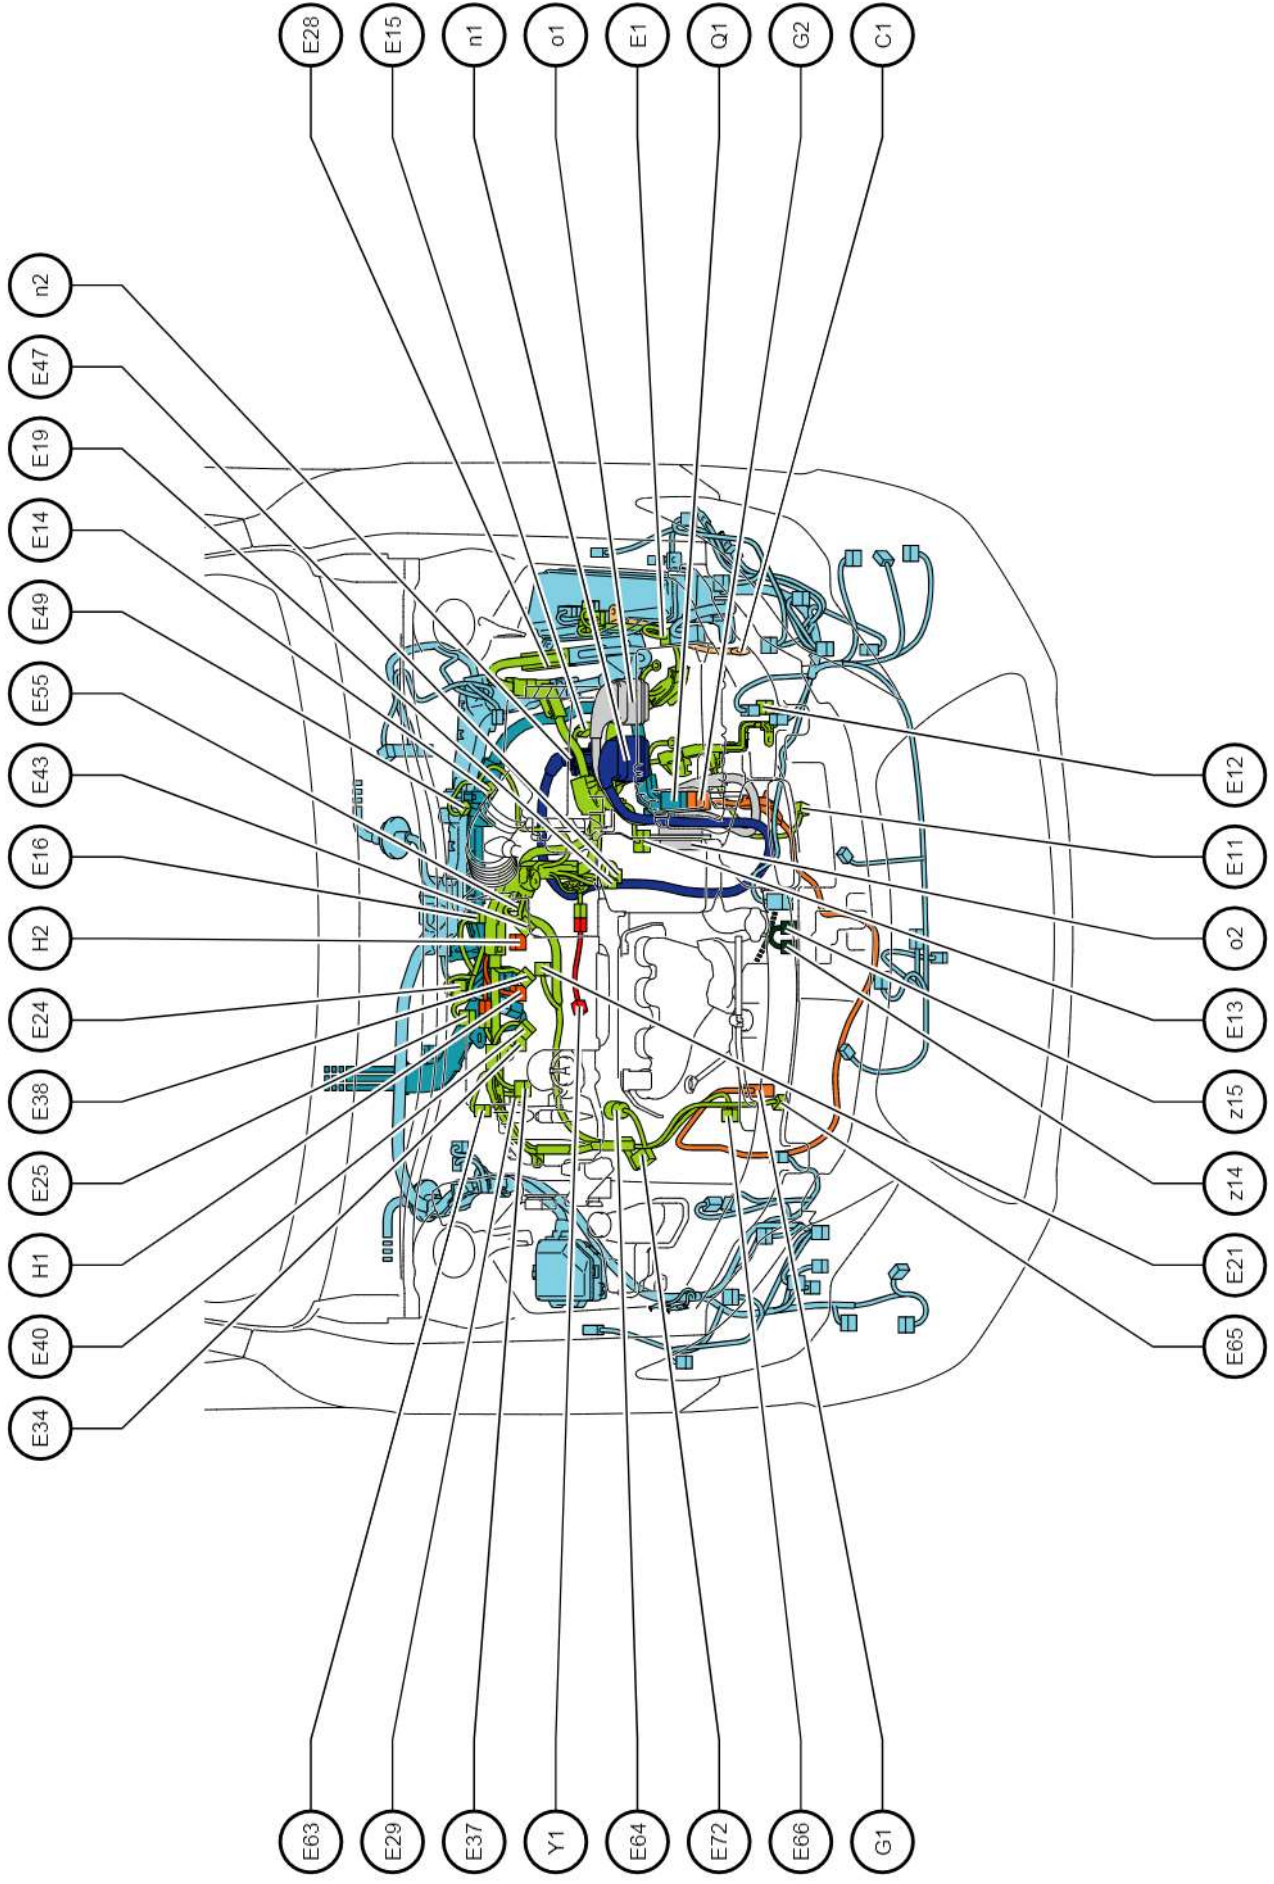 


Position of Parts in Engine Compartment


C	1	Inverter with Converter Assembly
E	1	Inverter with Converter Assembly
E	11	Shift Lever Position Sensor
E	12	Hybrid Vehicle Transaxle Assembly
E	13	Hybrid Vehicle Transaxle Assembly
E	14	Intake Mass Air Flow Meter Sub-Assembly
E	15	Hybrid Vehicle Transaxle Assembly
E	16	Throttle Body Assembly with Motor
E	19	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E	21	Oxygen Sensor (Bank 1 Sensor 2)
E	24	EGR Valve Assembly
E	25	E.F.I. Vacuum Sensor Assembly
E	28	ECM
E	29	Fuel Injector Assembly No. 1
E	34	Fuel Injector Assembly No. 2
E	37	Ignition Coil Assembly No. 1
E	38	Ignition Coil Assembly No. 3
E	40	Ignition Coil Assembly No. 2
E	43	Ignition Coil Assembly No. 4
E	47	E.F.I. Engine Coolant Temperature Sensor
E	49	Purge VSV
E	55	WT Sensor (Camshaft Position Sensor)
E	63	Camshaft Timing Oil Control Valve Assembly (Intake Side)
E	64	Engine Oil Pressure Switch Assembly
E	65	Compressor with Motor Assembly
E	66	Engine Water Pump Assembly
E	72	Crank Position Sensor
G	1	Compressor with Motor Assembly
G	2	Inverter with Converter Assembly
H	1	Fuel Injector Assembly No. 3
H	2	Fuel Injector Assembly No. 4
Q	1	Inverter with Converter Assembly
Y	1	Knock Control Sensor (Bank 1)
n	1	Inverter with Converter Assembly
n	2	Hybrid Vehicle Transaxle Assembly
o	1	Inverter with Converter Assembly
o	2	Hybrid Vehicle Transaxle Assembly

Position of Parts in Engine Compartment

 
E 12
Gray

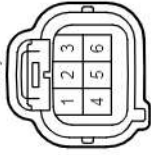

E 16
Black
















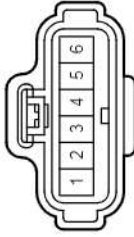 



E 25
Black

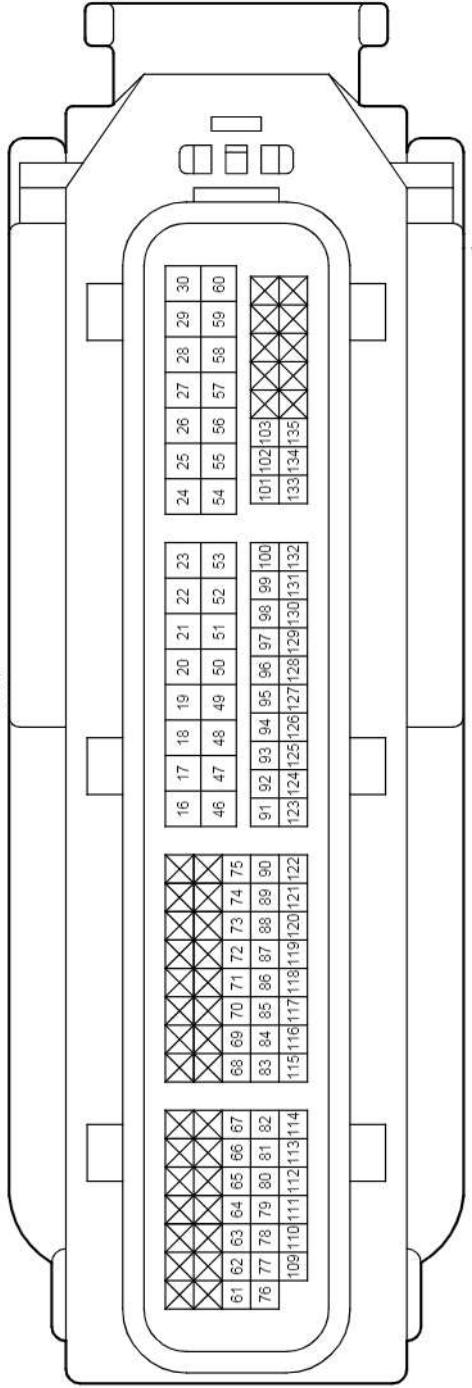 


E 38
Black

                 
Position of Parts in Engine Compartment

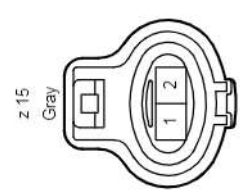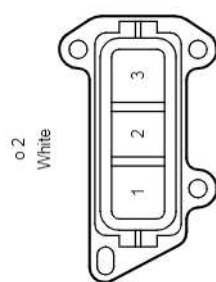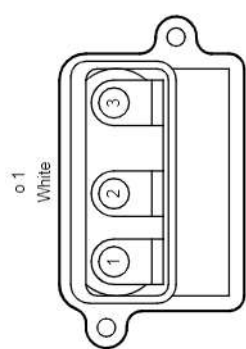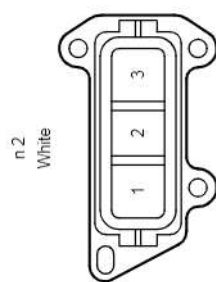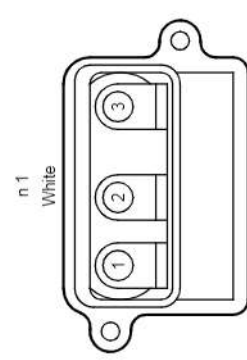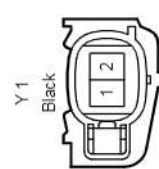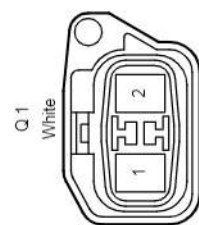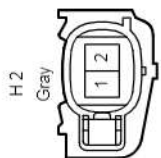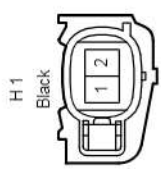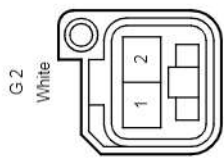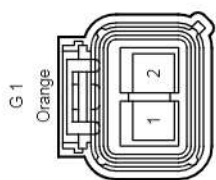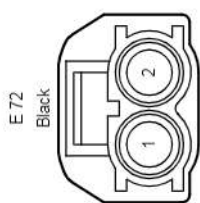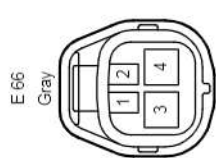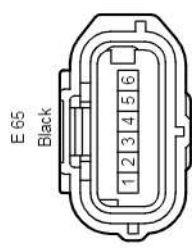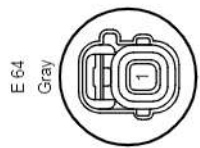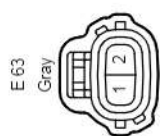

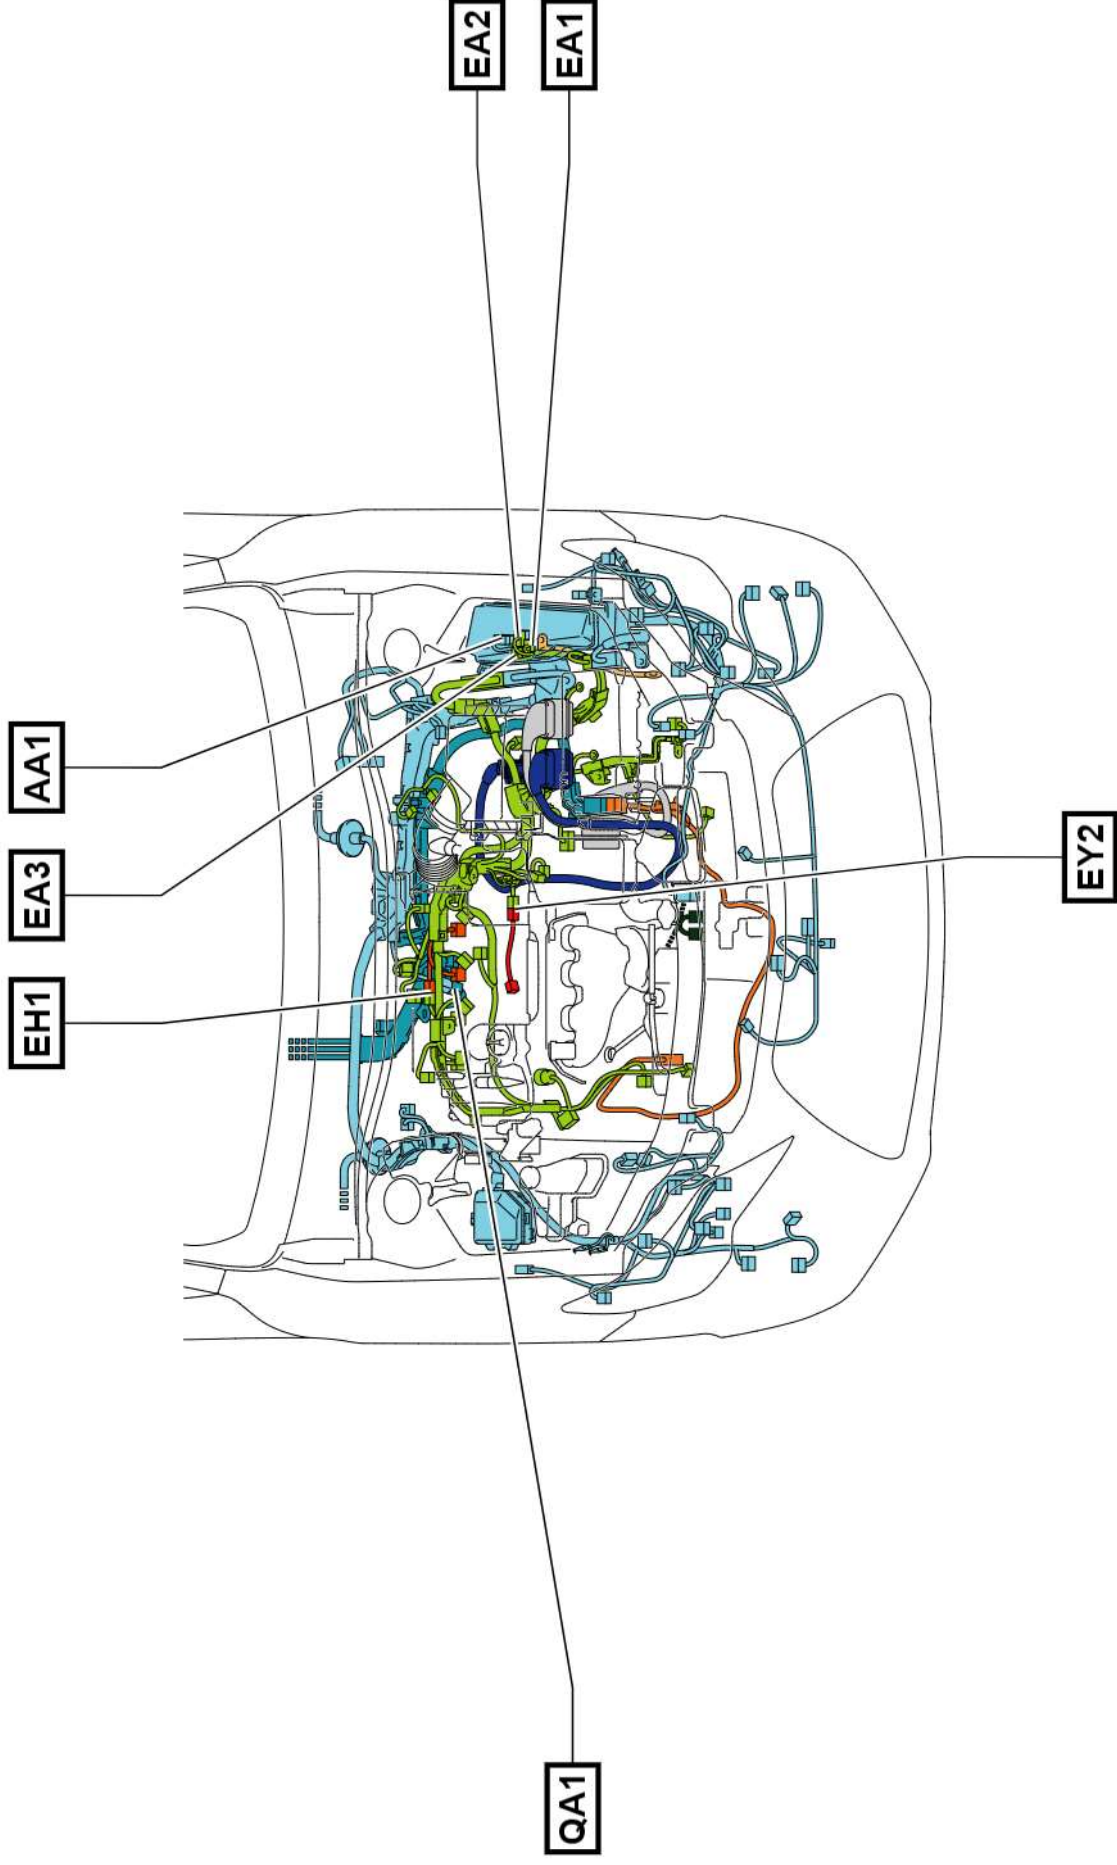


Wire and Wire in Engine Compartment

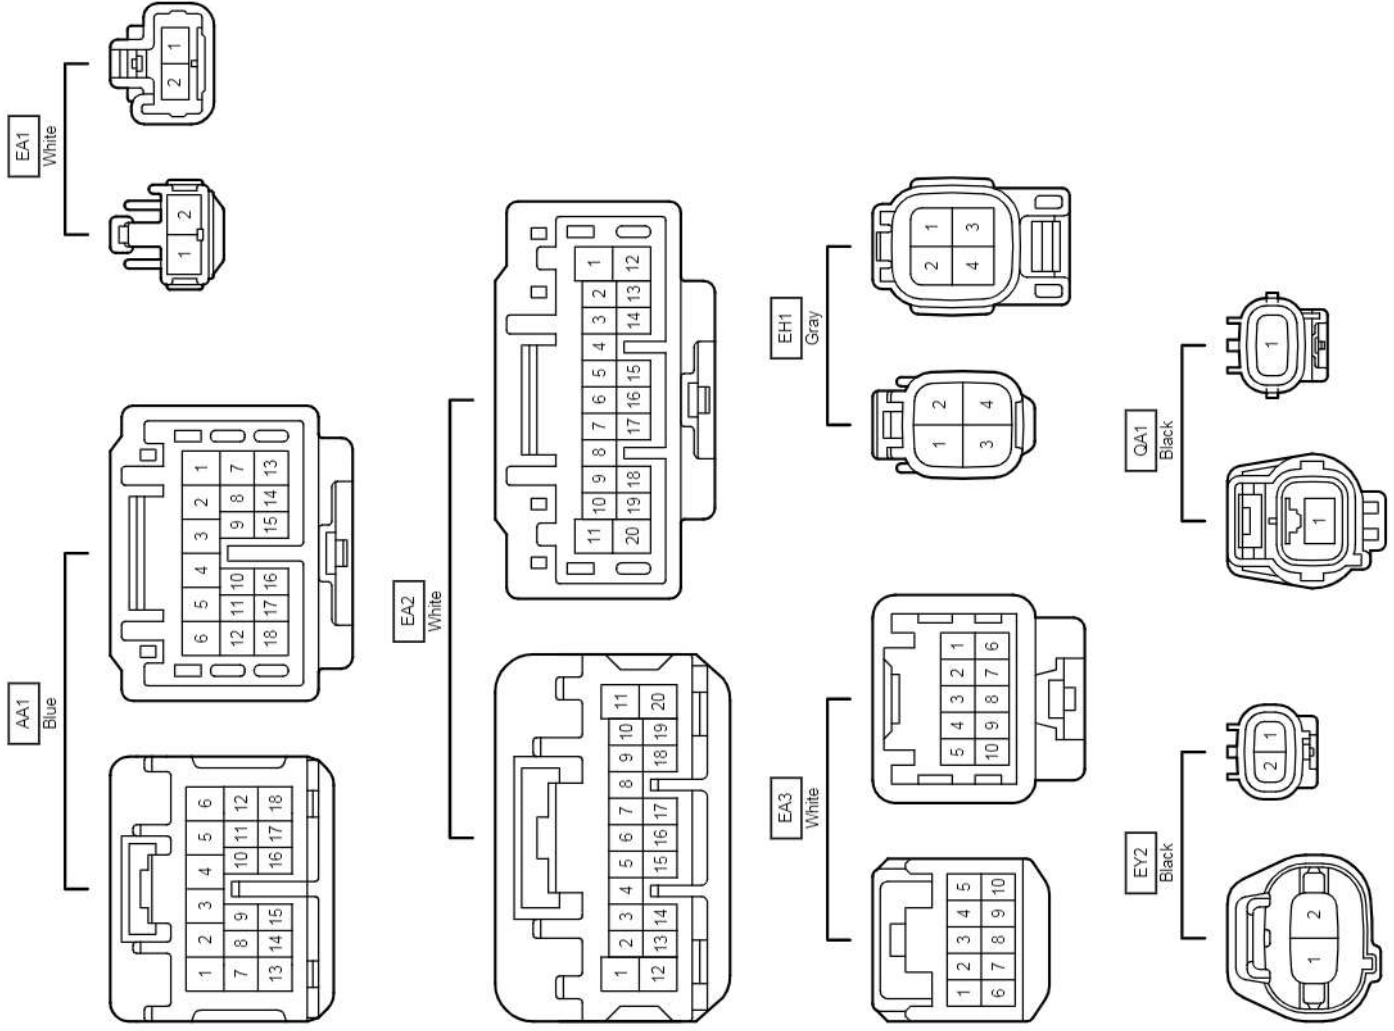 

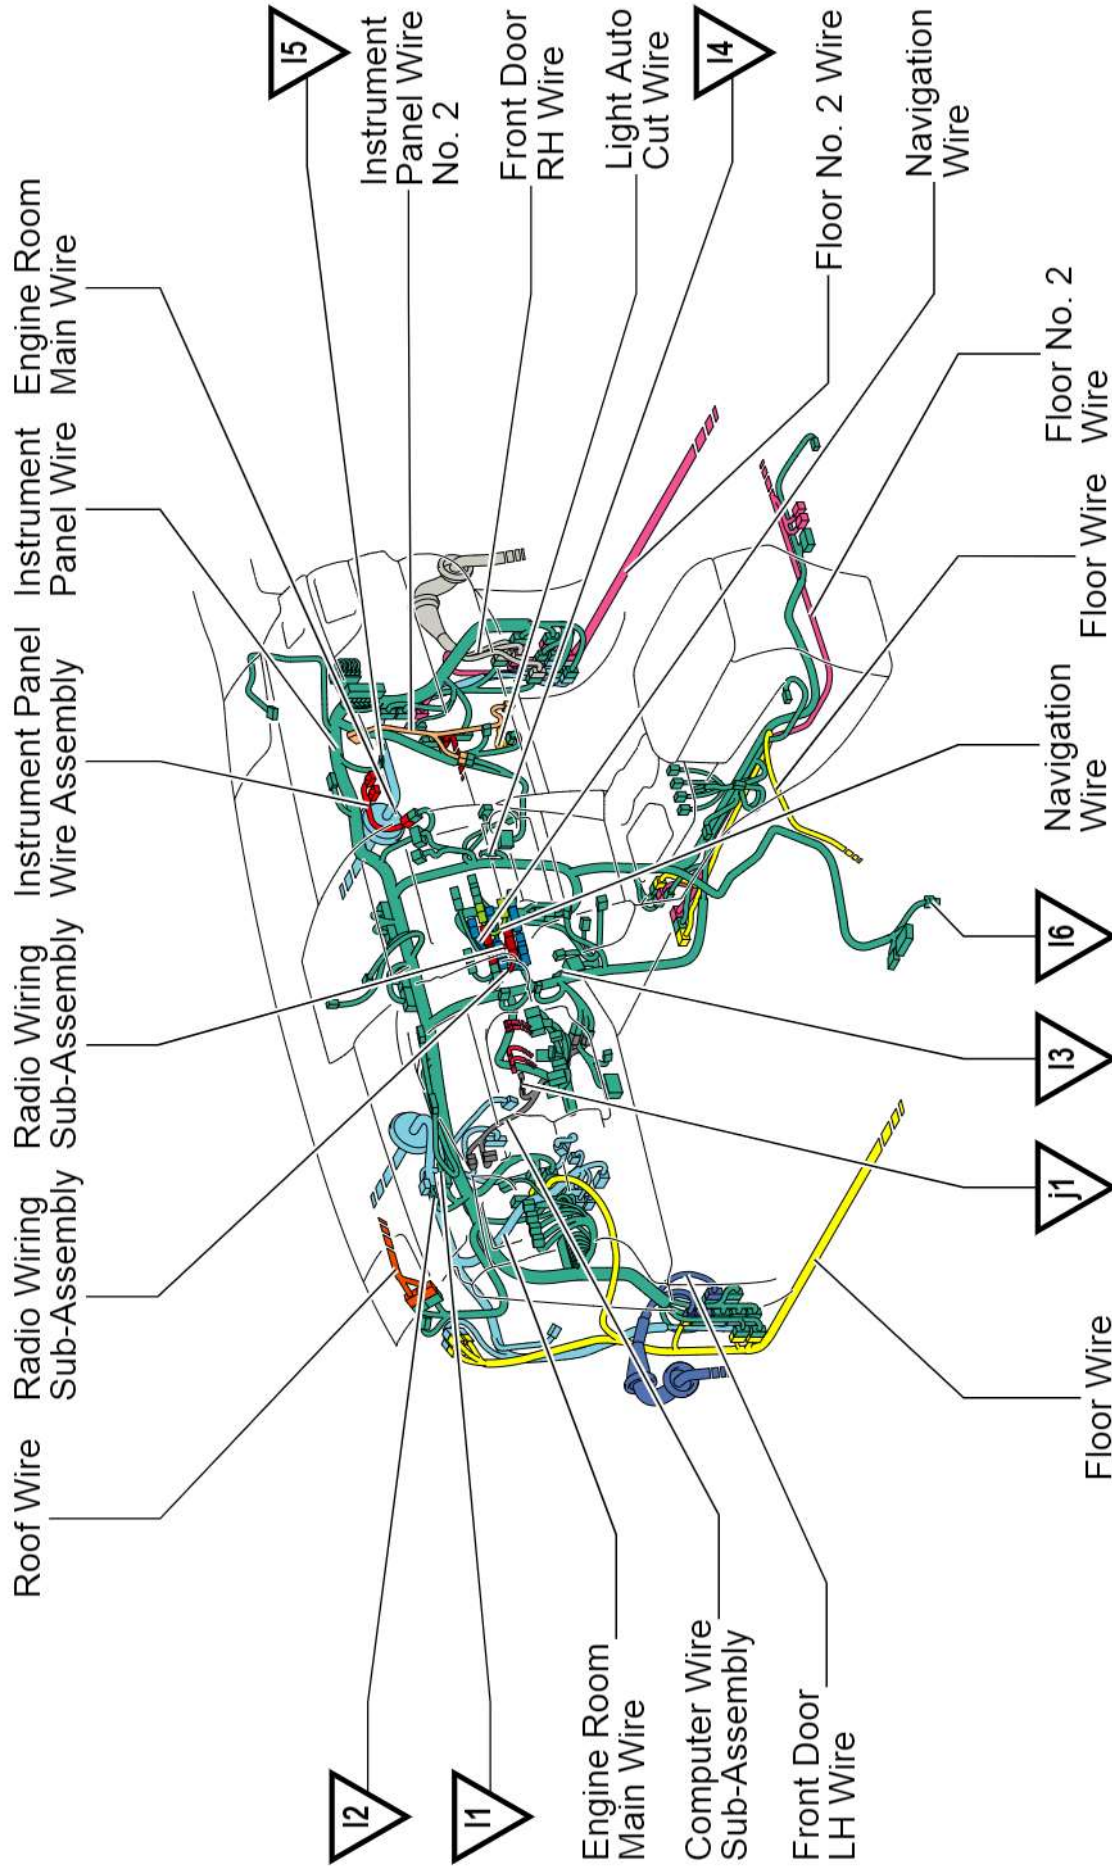 










Position of Parts in Instrument Panel

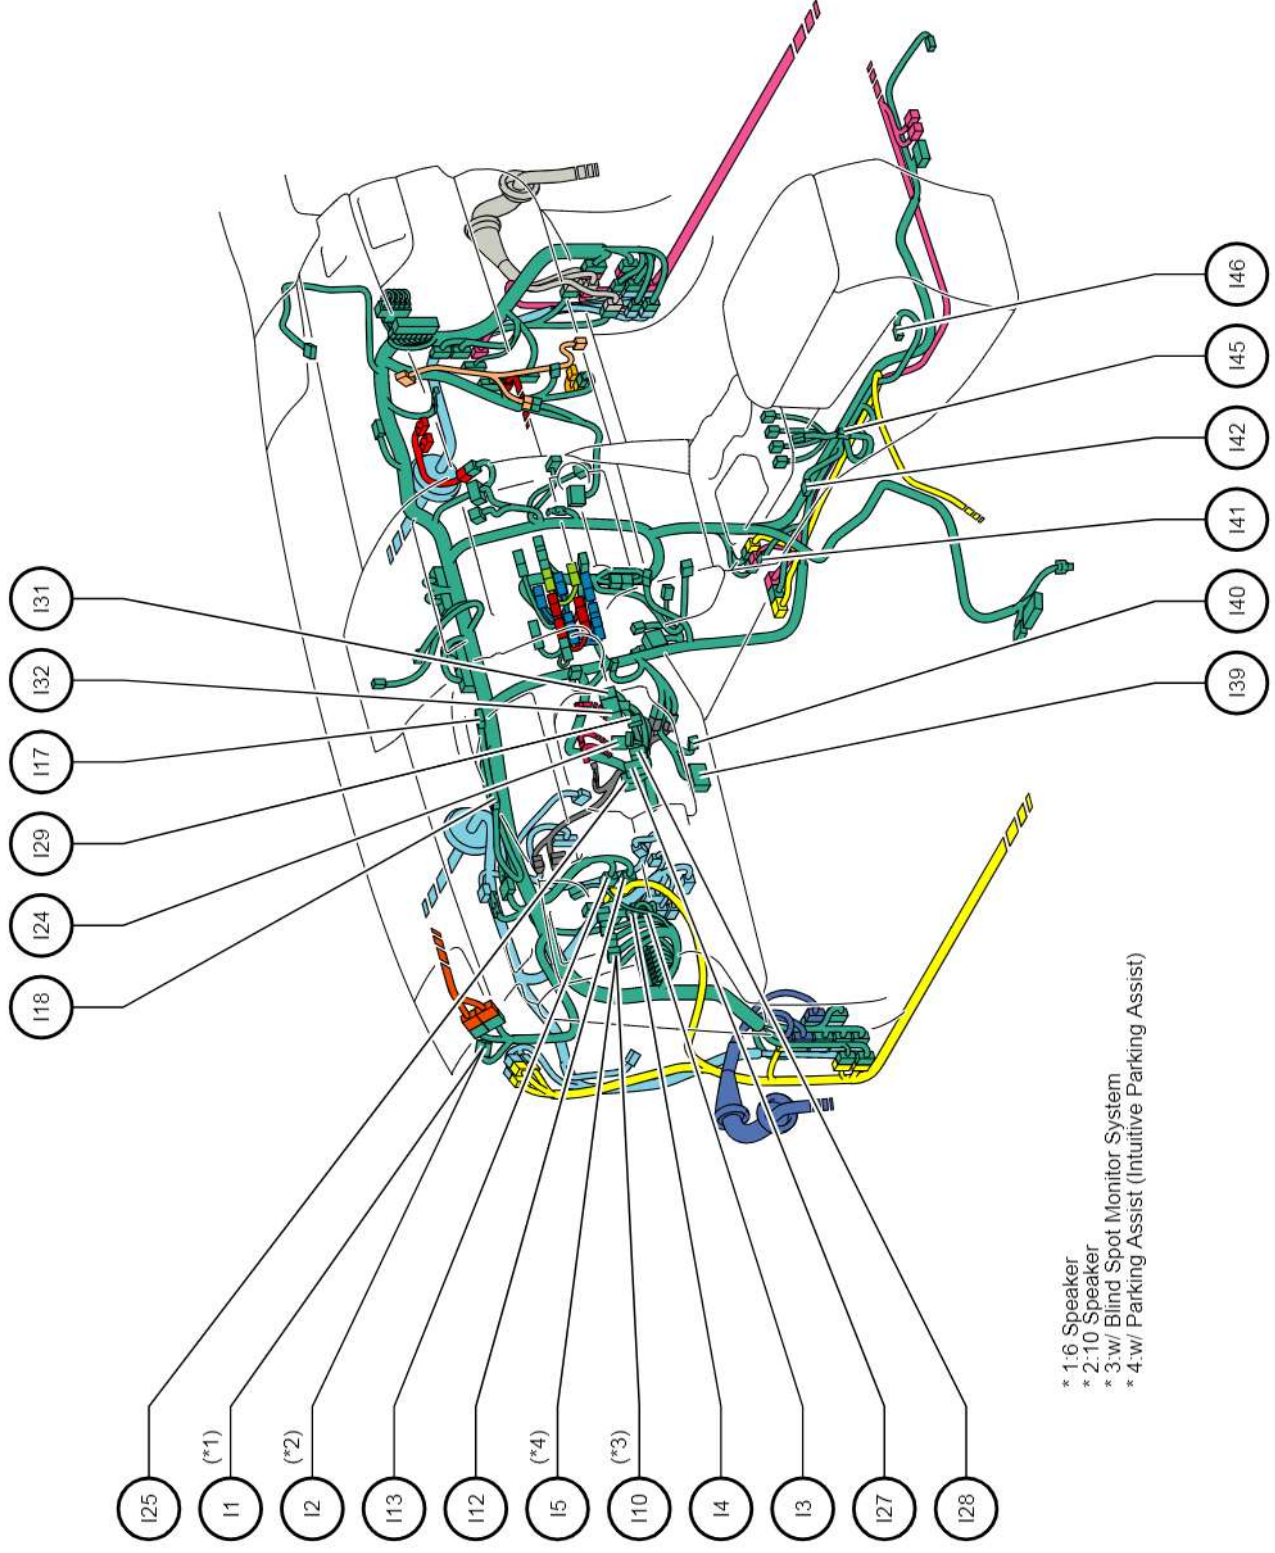 












Position of Parts in Instrument Panel

- | 1 Front No. 2 Speaker Assembly LH
- | 2 Front No. 2 Speaker Assembly LH
- | 3 Power Management Control ECU
- | 4 Power Management Control ECU
- | 5 Back Sonar or Clearance Sonar Switch Assembly
- | 10 Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
- | 12 Main Body ECU
- | 13 Main Body ECU
- | 17 Combination Meter Assembly
- | 18 Combination Meter Assembly
- | 24 Steering Lock Actuator Assembly
- | 25 Headlight Dimmer Switch Assembly
- | 27 Spiral Cable Sub-Assembly
- | 28 Spiral Cable Sub-Assembly
- | 29 Steering Sensor
- | 31 Windshield Wiper Switch Assembly
- | 32 Windshield Wiper Switch Assembly
- | 39 Data Link Connector 3
- | 40 Lower No. 1 Instrument Panel Airbag Assembly
- | 41 Quick Heater Assembly
- | 42 Shift Lock Control ECU (Lower Shift Lever Assembly)
- | 45 Rear Power Outlet Socket Assembly
- | 46 No. 1 Indoor Electrical Key Antenna Assembly

         
Position of Parts in Instrument Panel

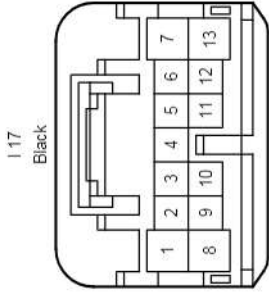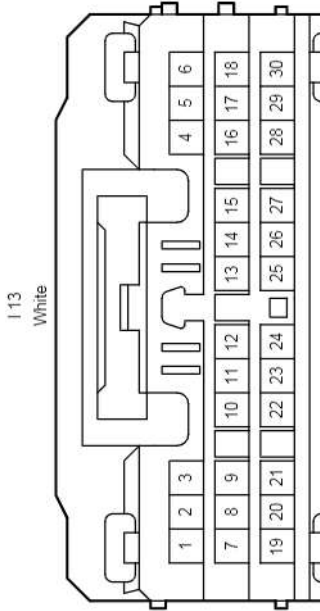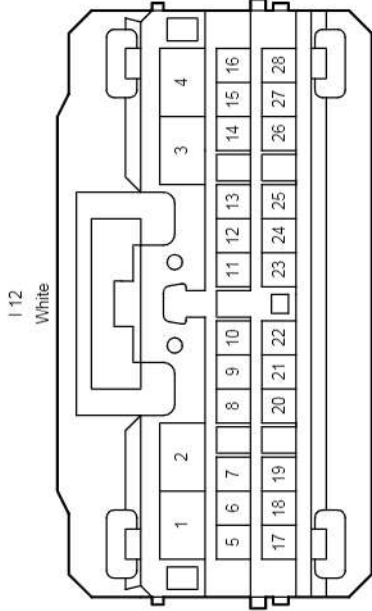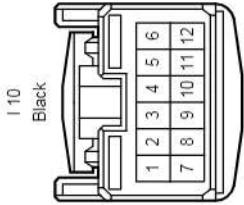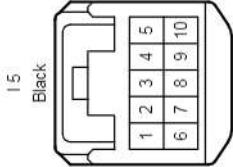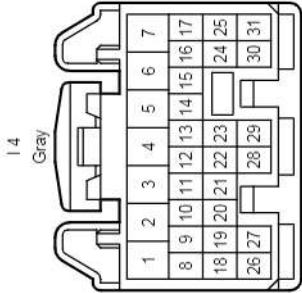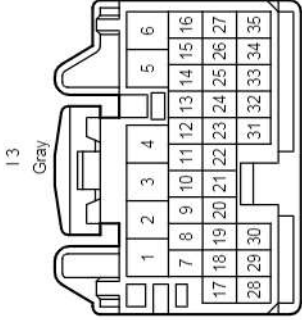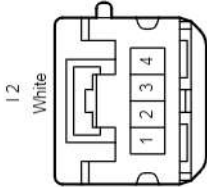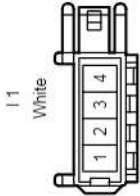

Position of Parts in Instrument Panel

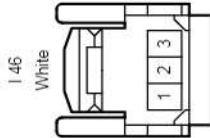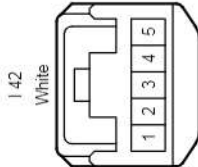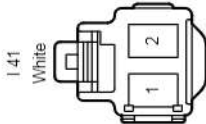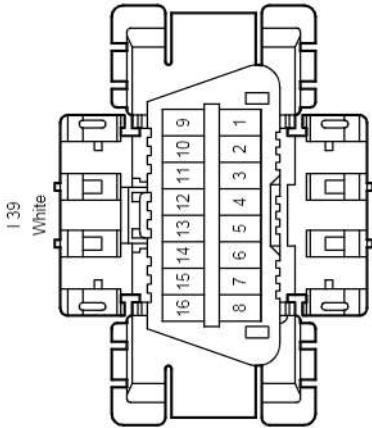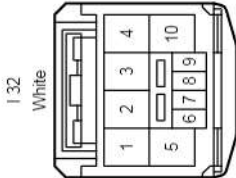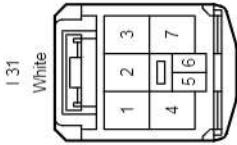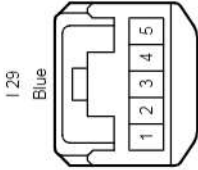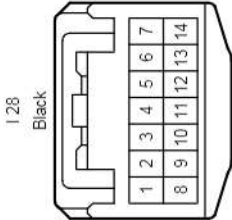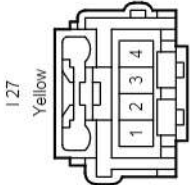           

Position of Parts in Instrument Panel





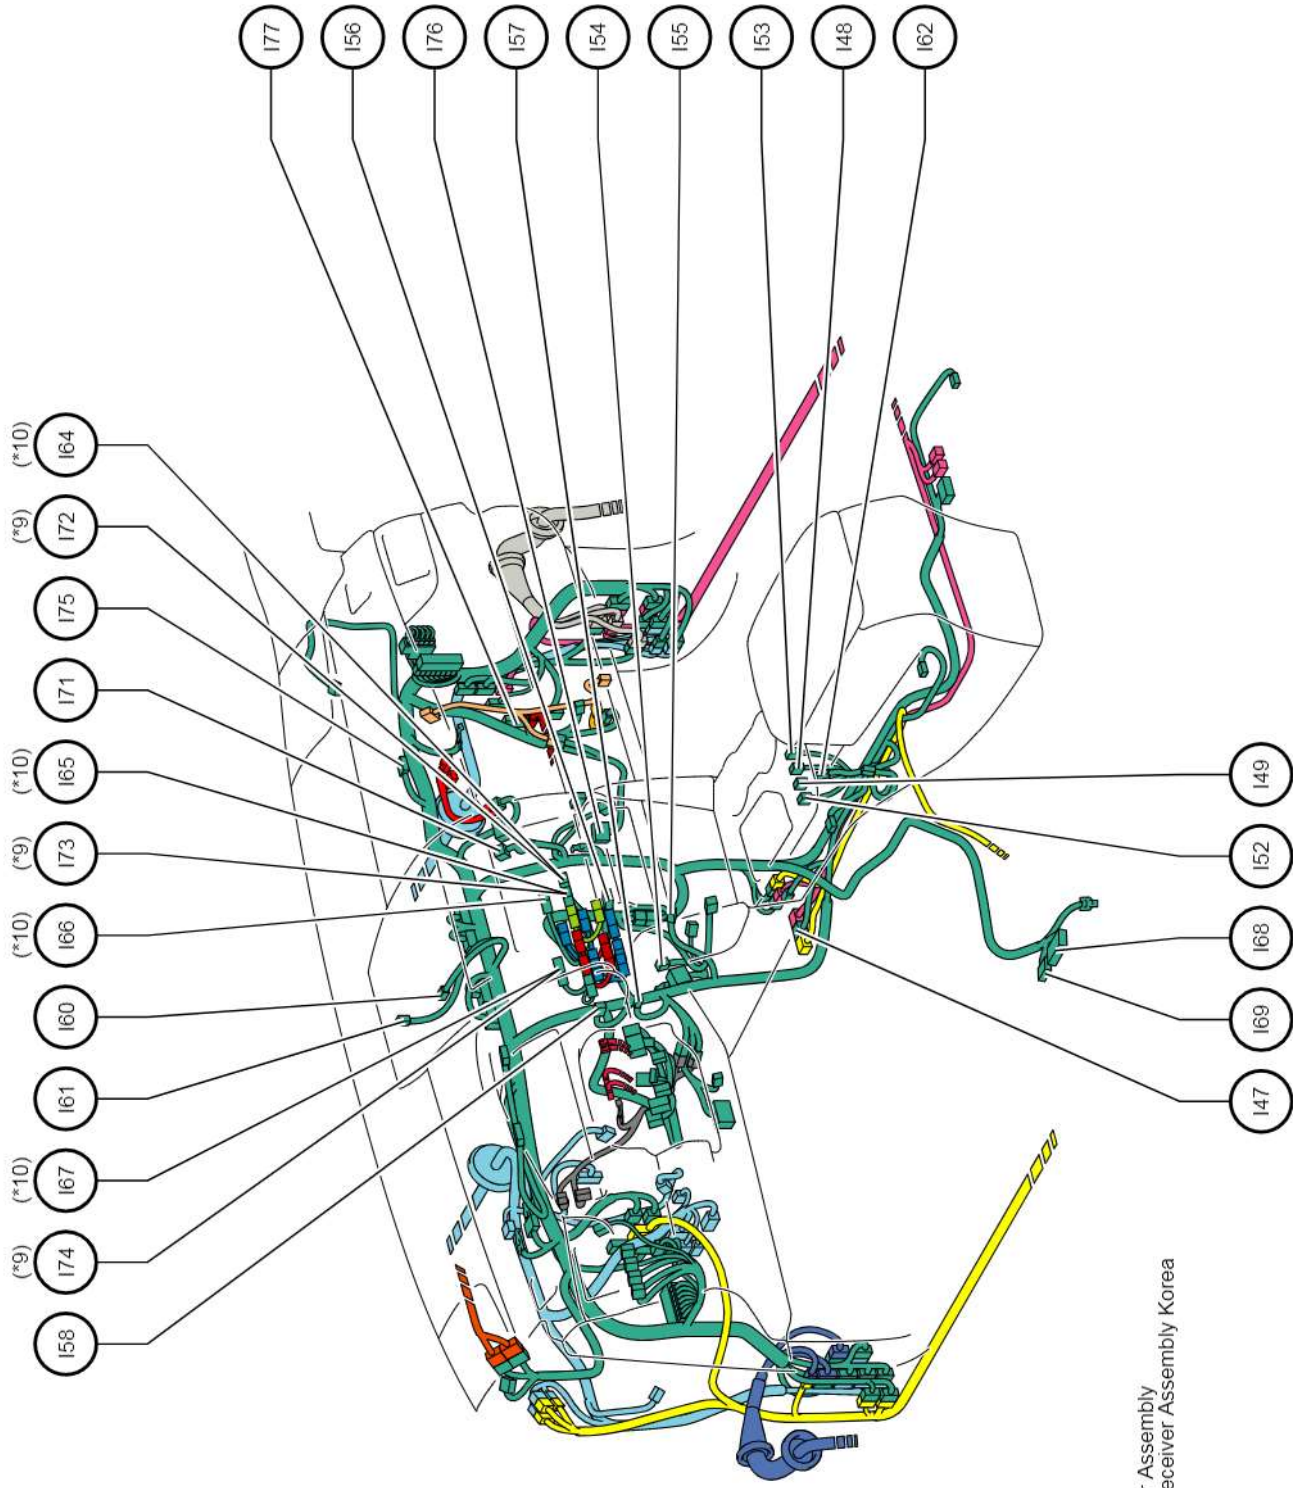 


* 9.w/ Navigation Receiver Assembly
 * 10.w/ Radio & Display Receiver Assembly Korea


Position of Parts in Instrument Panel

47	Airbag Sensor Assembly
48	Pattern Select Switch Assembly
49	ECO Switch Assembly
52	Seat Heater Switch LH
53	Seat Heater Switch RH
54	No. 1 Clearance Warning Buzzer
55	Front Power Outlet Socket Assembly
56	A/C Control Assembly
57	Cooler (Room Temperature Sensor) Thermistor
58	Power Switch
60	Front No. 3 Speaker Assembly
61	Automatic Light Control Sensor
62	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
64	Radio & Display Receiver Assembly
65	Radio & Display Receiver Assembly
66	Radio & Display Receiver Assembly
67	Radio & Display Receiver Assembly
68	Stereo Component Amplifier Assembly
69	Stereo Component Amplifier Assembly
71	Vehicle Approaching Speaker Controller
72	Navigation Receiver Assembly
73	Navigation Receiver Assembly
74	Navigation Receiver Assembly
75	Diode (Front Courtesy Light)
76	Blower Motor Sub-Assembly with Fan
77	A/C Amplifier Assembly

     
Position of Parts in Instrument Panel

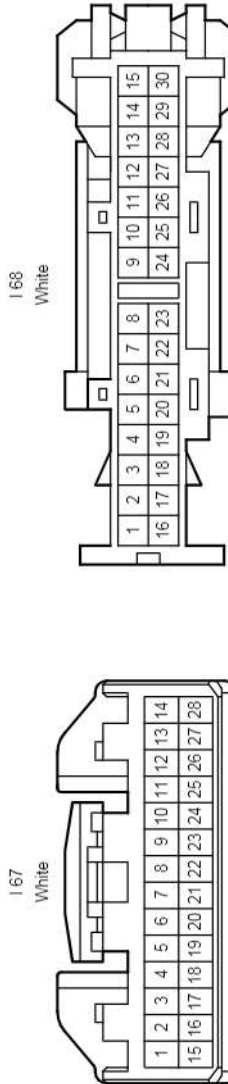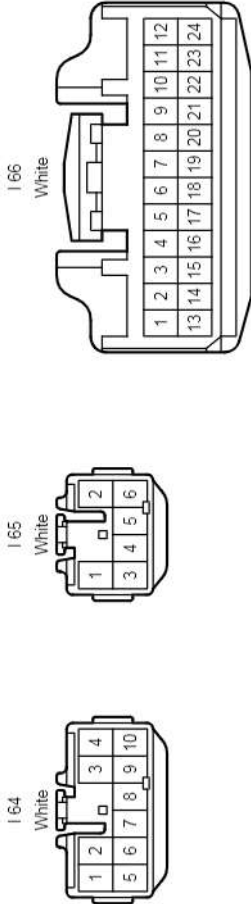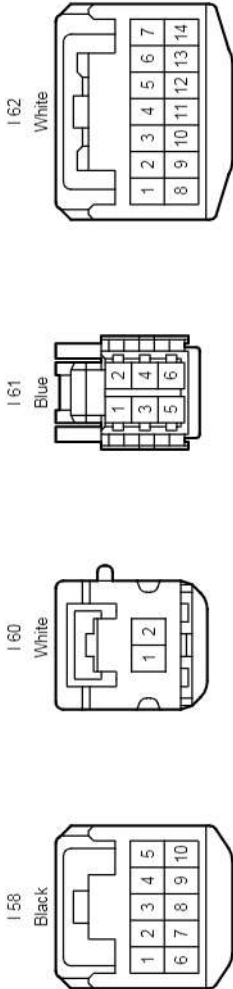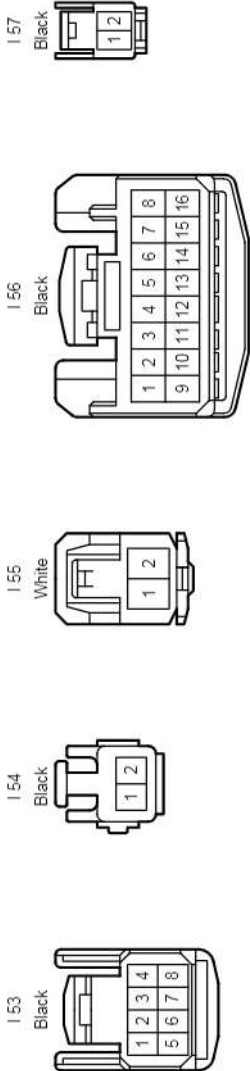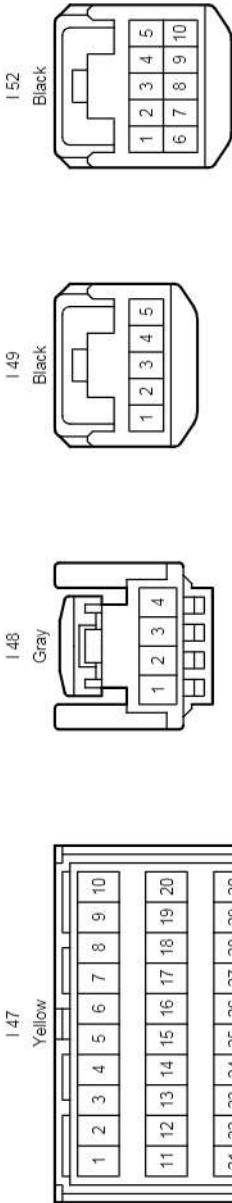

Position of Parts in Instrument Panel

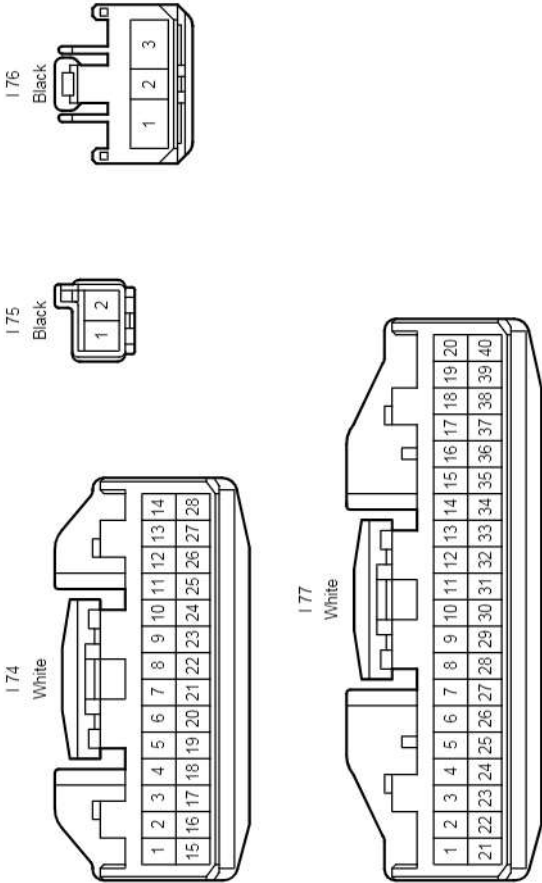 

















Position of Parts in Instrument Panel

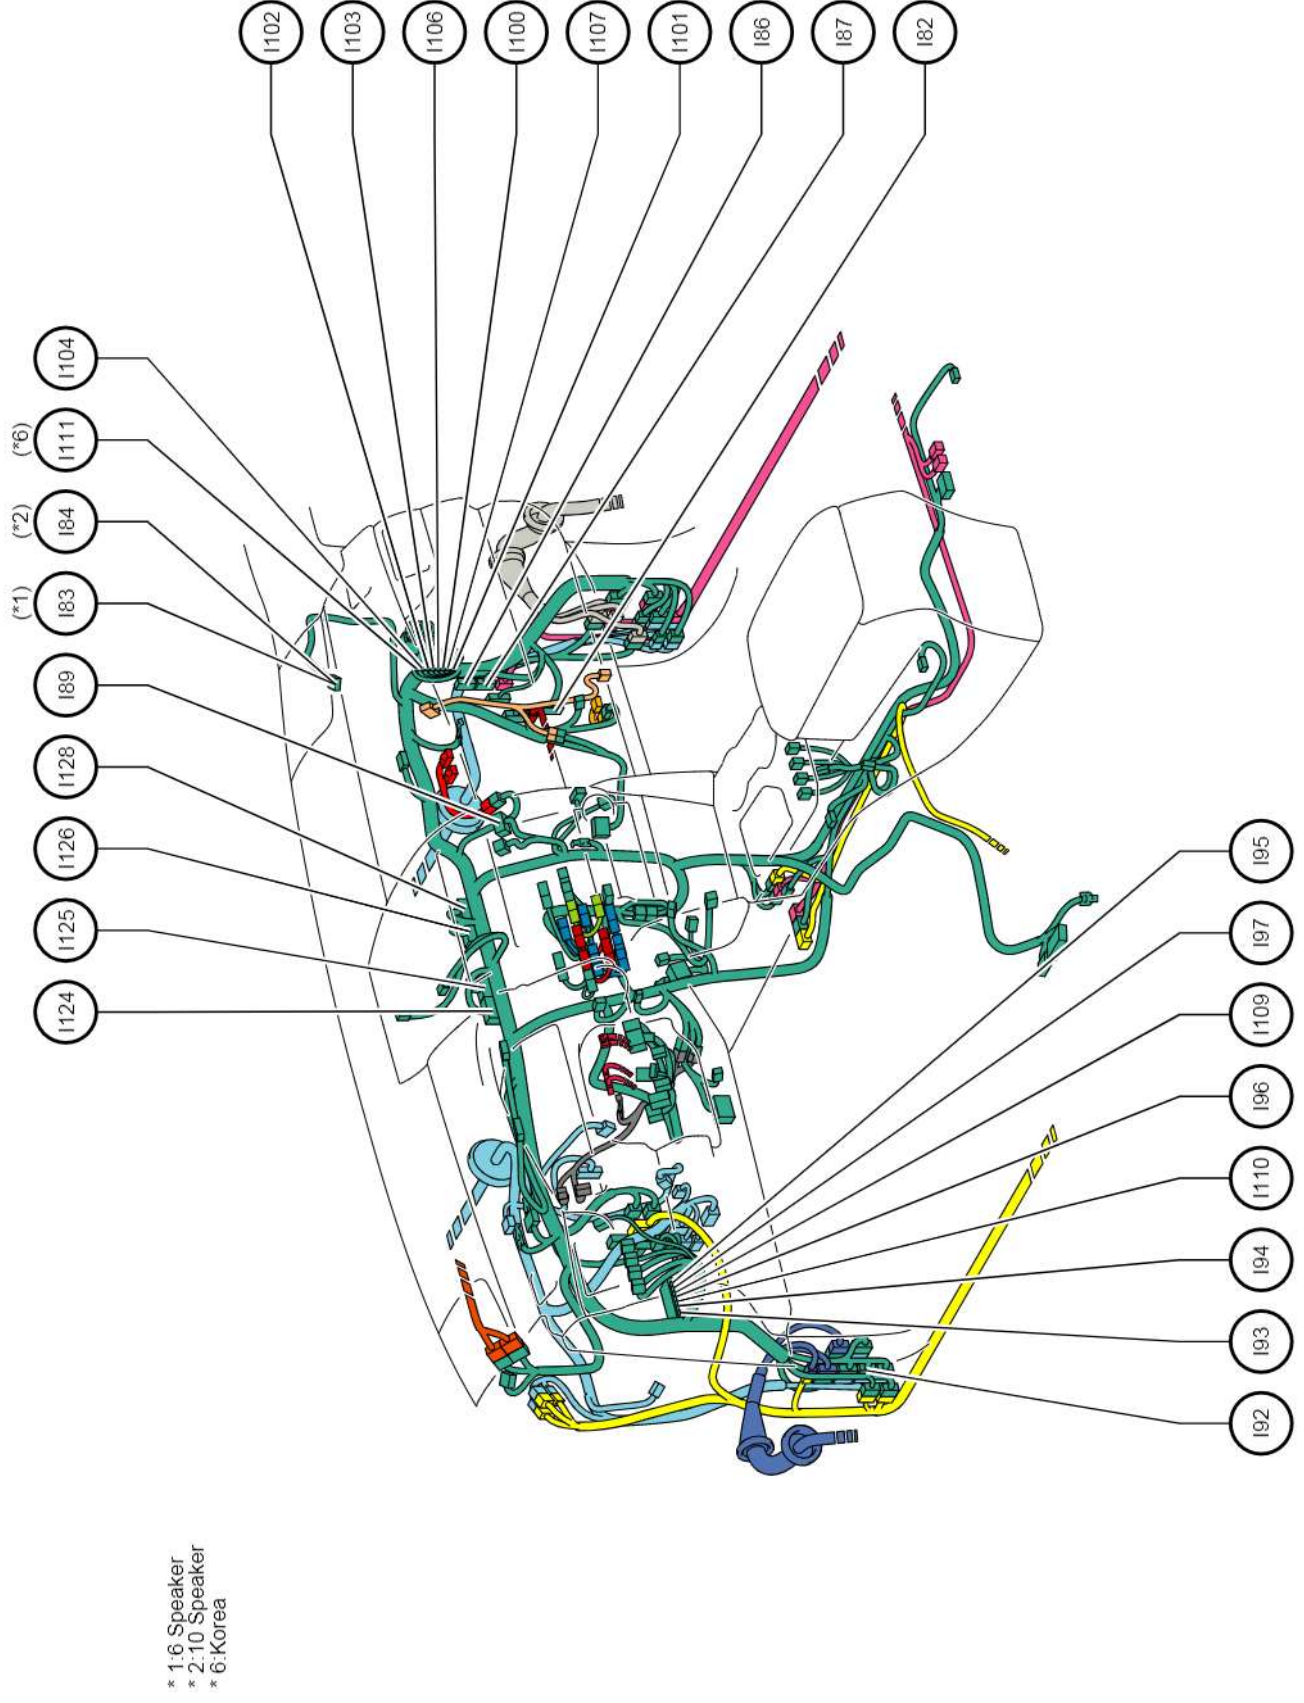 


Position of Parts in Instrument Panel

I 82	Clearance Warning ECU Assembly
I 83	Front No. 2 Speaker Assembly RH
I 84	Front No. 2 Speaker Assembly RH
I 86	Certification ECU
I 87	Certification ECU
I 89	Option Connector (Remote Engine Starter)
I 92	Junction Connector
I 93	Junction Connector
I 94	Junction Connector
I 95	Junction Connector
I 96	Junction Connector
I 97	Junction Connector
I 100	Junction Connector
I 101	Junction Connector
I 102	Junction Connector
I 103	Junction Connector
I 104	Junction Connector
I 106	Junction Connector
I 107	Junction Connector
I 109	Junction Connector
I 110	Junction Connector
I 111	Junction Connector
I 124	Junction Connector
I 125	Junction Connector
I 126	Junction Connector
I 128	Junction Connector

                Position of Parts in Instrument Panel

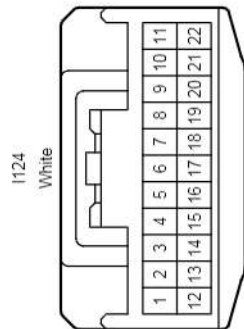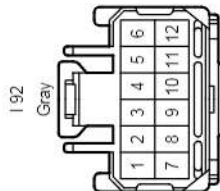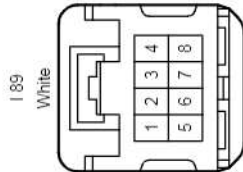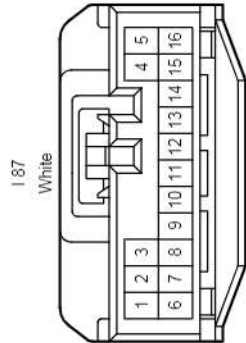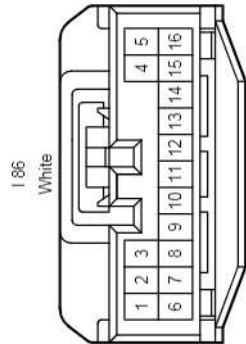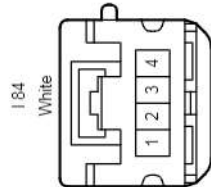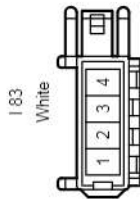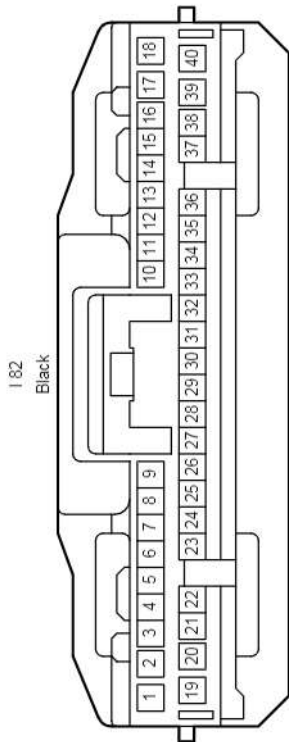

Position of Parts in Instrument Panel

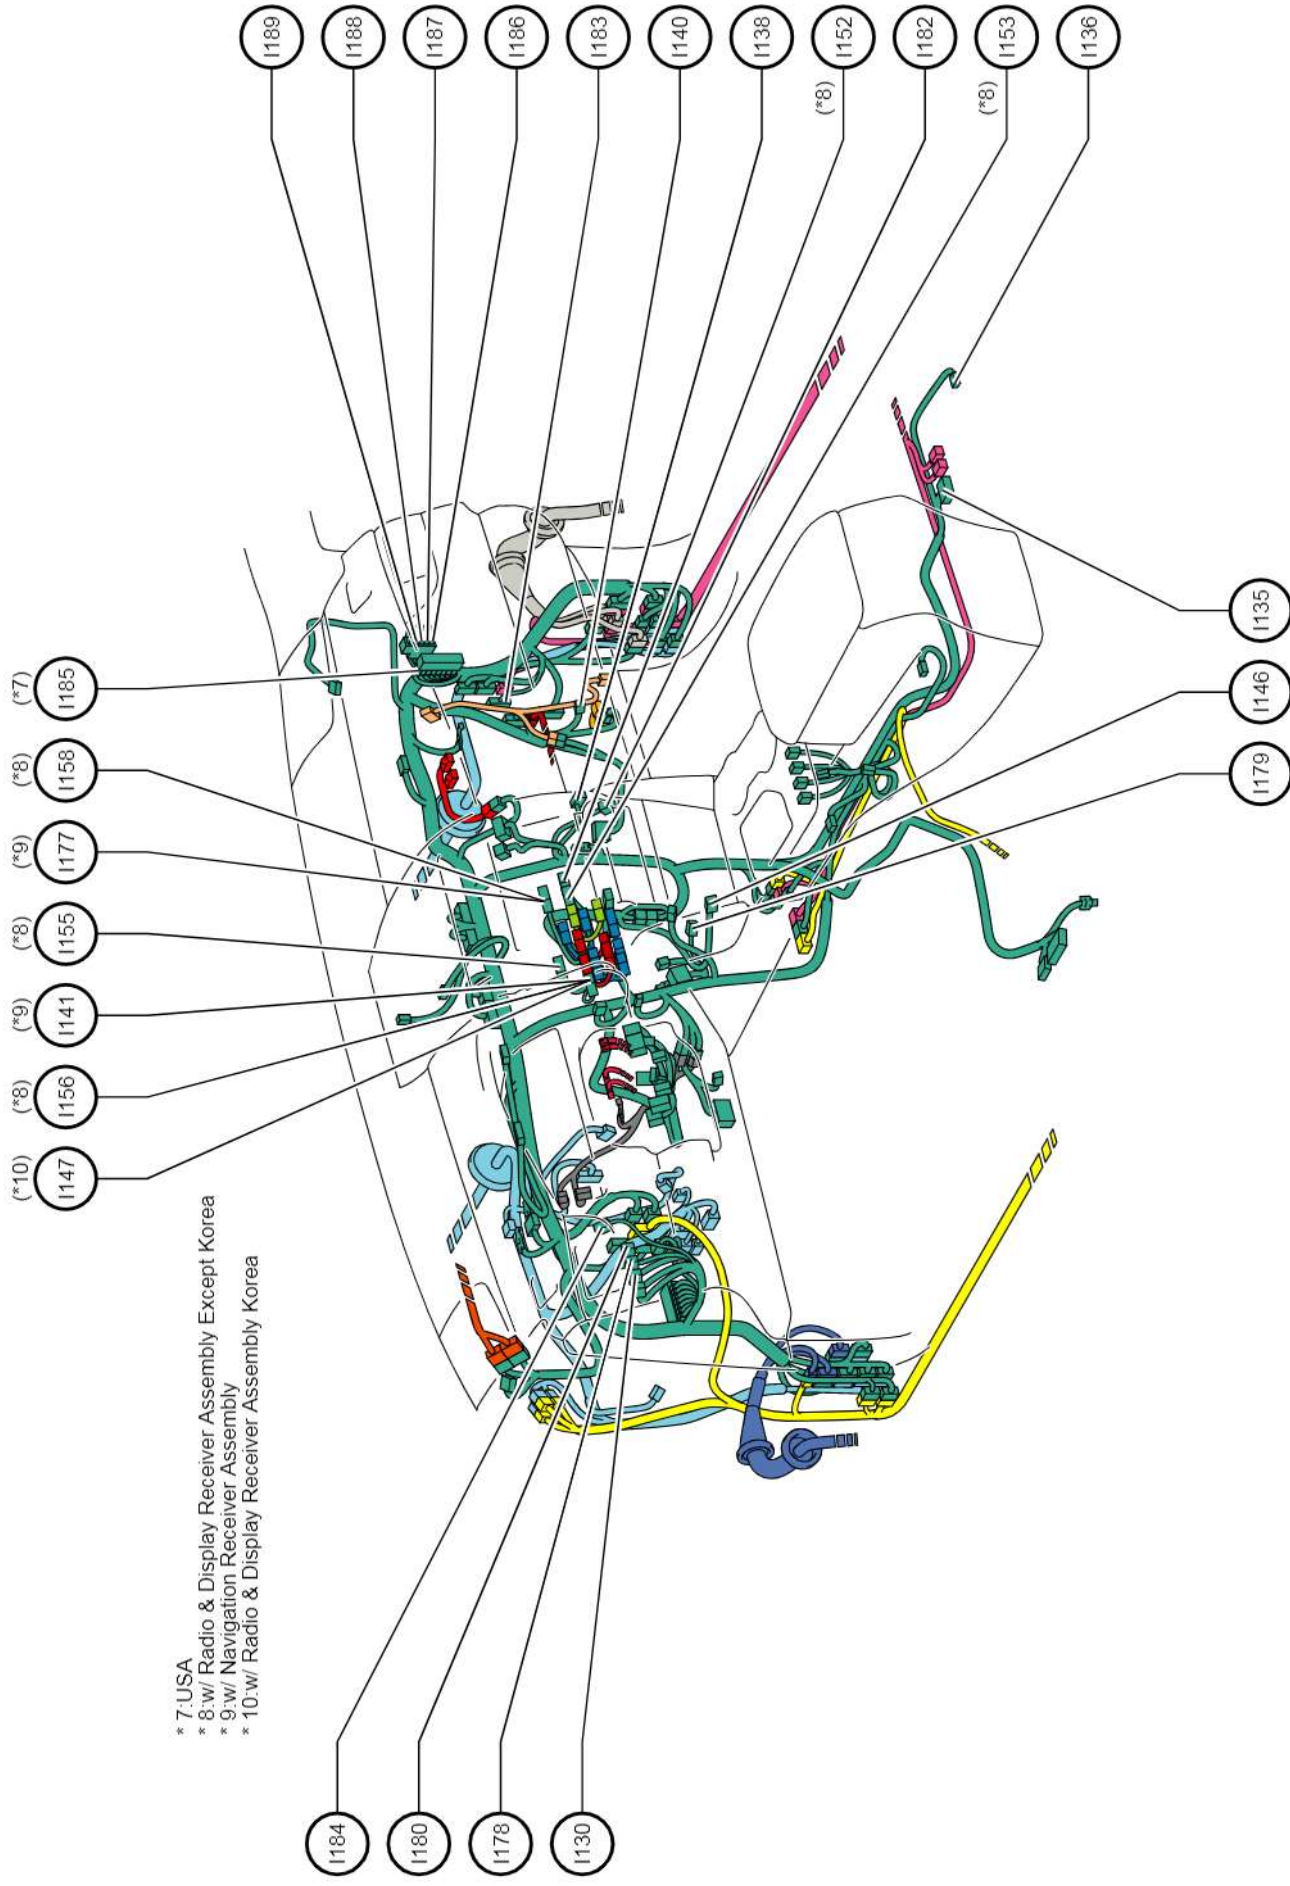 


Position of Parts in Instrument Panel


I 130	VSC Off Switch
I 135	DCM (Telematics Transceiver)
I 136	Back-Up Battery (Mayday Battery)
I 138	Glove Box Light Assembly
I 140	Lower No. 2 Instrument Panel Airbag Assembly
I 141	Navigation Receiver Assembly
I 146	No. 1 Stereo Jack Adapter Assembly
I 147	Radio & Display Receiver Assembly
I 152	Radio & Display Receiver Assembly
I 153	Radio & Display Receiver Assembly
I 155	Radio & Display Receiver Assembly
I 156	Radio & Display Receiver Assembly
I 158	Radio & Display Receiver Assembly
I 177	Navigation Receiver Assembly
I 178	Lane Departure Alert Switch (Lane-Keeping Assist Main Switch)
I 179	Mobile Wireless Charger Cradle Assembly
I 180	Pre-Collision System Cancel Switch Assembly
I 182	Tire Pressure Warning Reset Switch (No. 1 Tire Pressure Warning Switch)
I 183	Driving Support ECU Assembly
I 184	Skid Control Buzzer Assembly
I 185	Junction Connector
I 186	Junction Connector
I 187	Junction Connector
I 188	Junction Connector
I 189	Junction Connector

Position of Parts in Instrument Panel

 
I130
Black

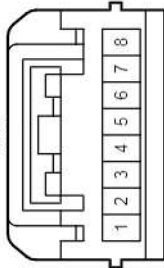


I135
White

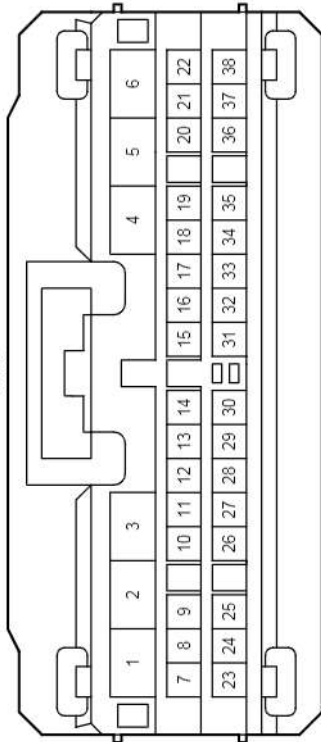 


I136
White

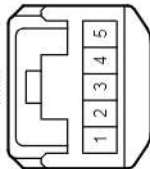 


I138
Black

 


I140
Black

 


I141
Gray

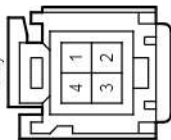 


I146
Black

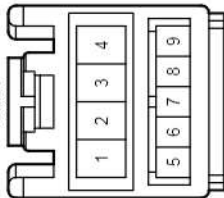 


I147
Gray

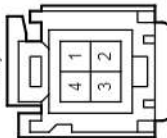 


I152
White

 


I153
White

 


I155
White

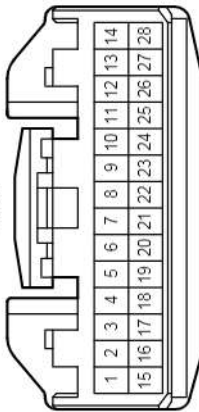 


I156
Gray

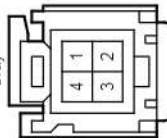 

I158
White

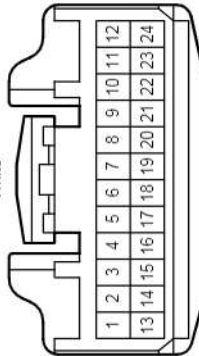 


I177
White

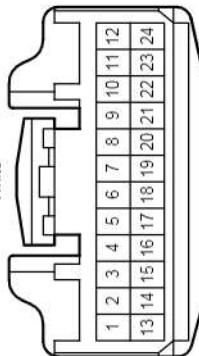 

I178
Black



 I179
White










I180
White




I182
Black



       Position of Parts in Instrument Panel

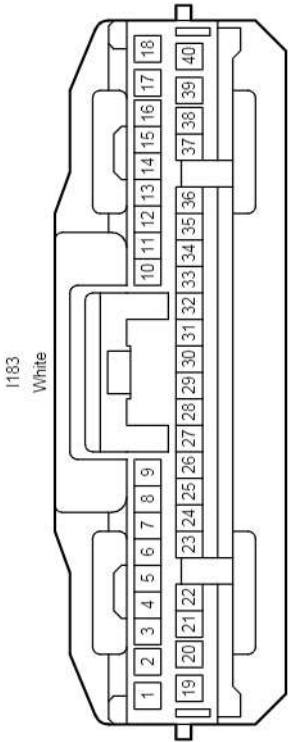

Position of Parts in Instrument Panel

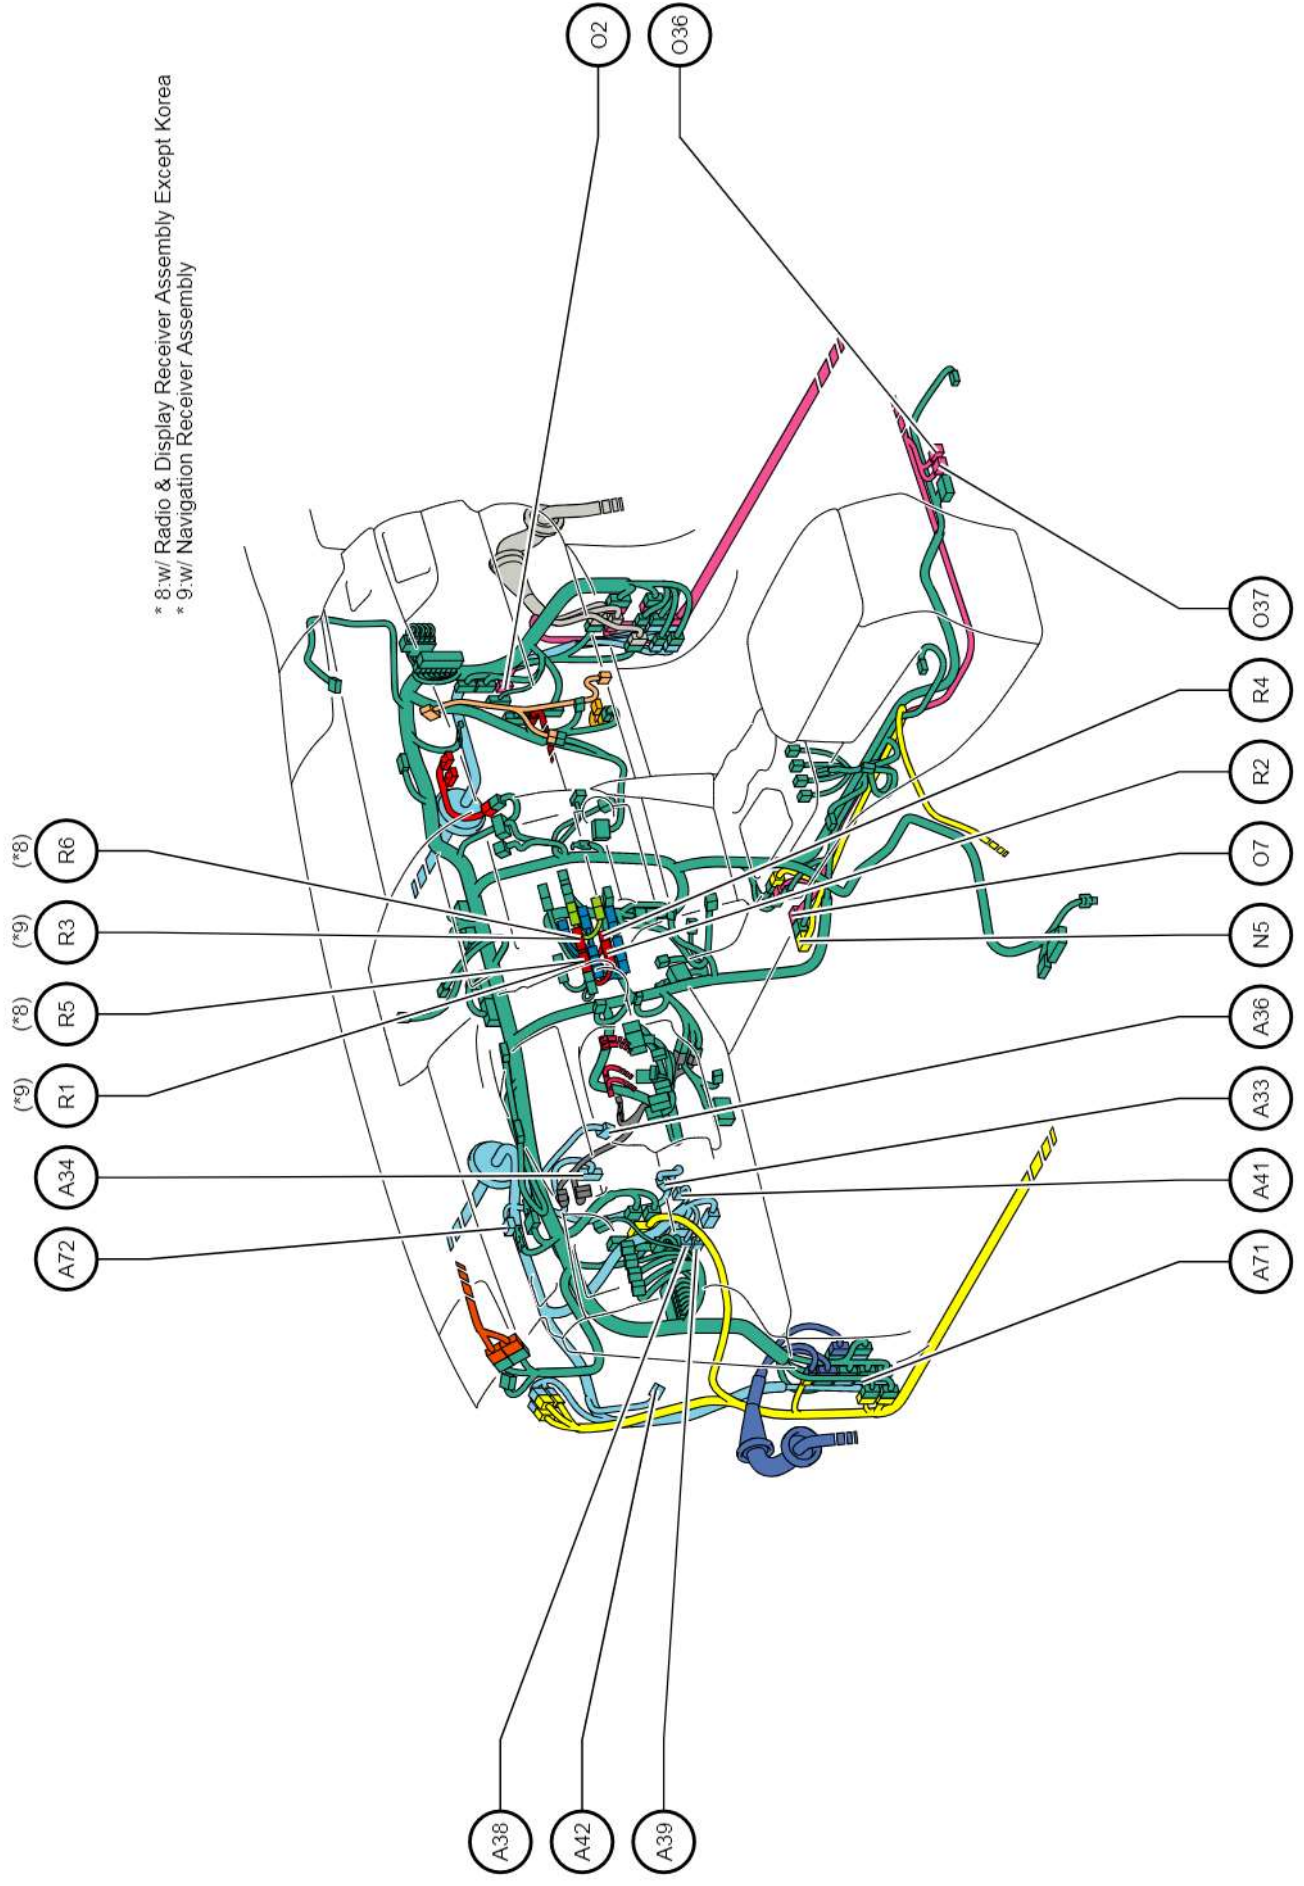 


Position of Parts in Instrument Panel


A	33	Stop Light Switch Assembly
A	34	Headlight Leveling ECU Assembly
A	36	Accelerator Pedal Sensor Assembly
A	38	Power Management Control ECU
A	39	Power Management Control ECU
A	41	Brake Pedal Stroke Sensor Assembly
A	42	Parking Brake Switch Assembly
A	71	Junction Connector
A	72	Junction Connector
N	5	Airbag Sensor Assembly
O	2	Certification ECU
O	7	Airbag Sensor Assembly
O	36	DCM (Telematics Transceiver)
O	37	DCM (Telematics Transceiver)
R	1	Navigation Receiver Assembly
R	2	Stereo Component Tuner Assembly
R	3	Navigation Receiver Assembly
R	4	Stereo Component Tuner Assembly
R	5	Radio & Display Receiver Assembly
R	6	Radio & Display Receiver Assembly

Position of Parts in Instrument Panel

 
A 33
White

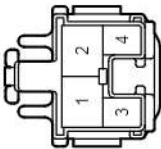


A 34
White

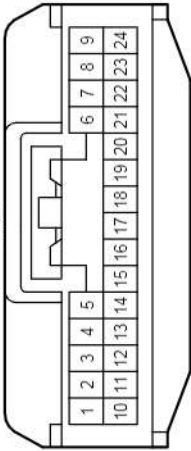 


A 36
Black

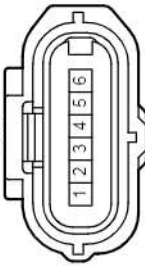 


A 38
Gray

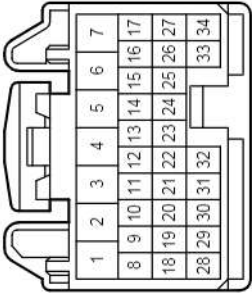 

A 39
Gray

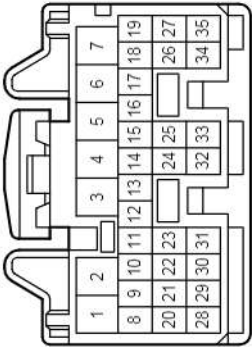 


A 41
Black

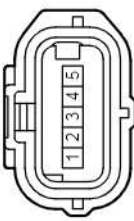 


A 42
Black



 
A 71
Gray

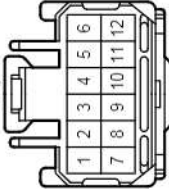


A 72
White

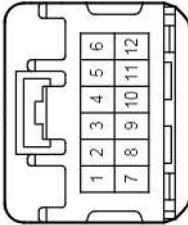 


N 5
Yellow

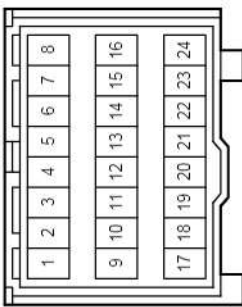 


O 2
White

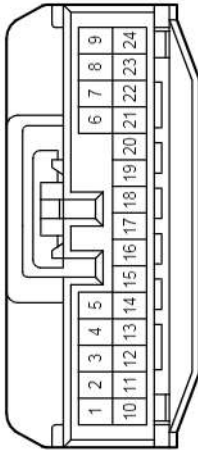 


O 7
Yellow

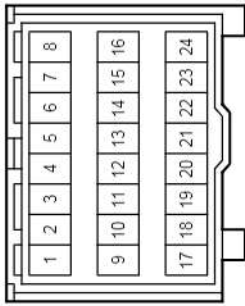 

O 36
Blue

 

O 37
Gray

 

R 1
Brown



R 2
Brown



R 3
White



 
R 4
White



R 5
Brown




Position of Parts in Instrument Panel

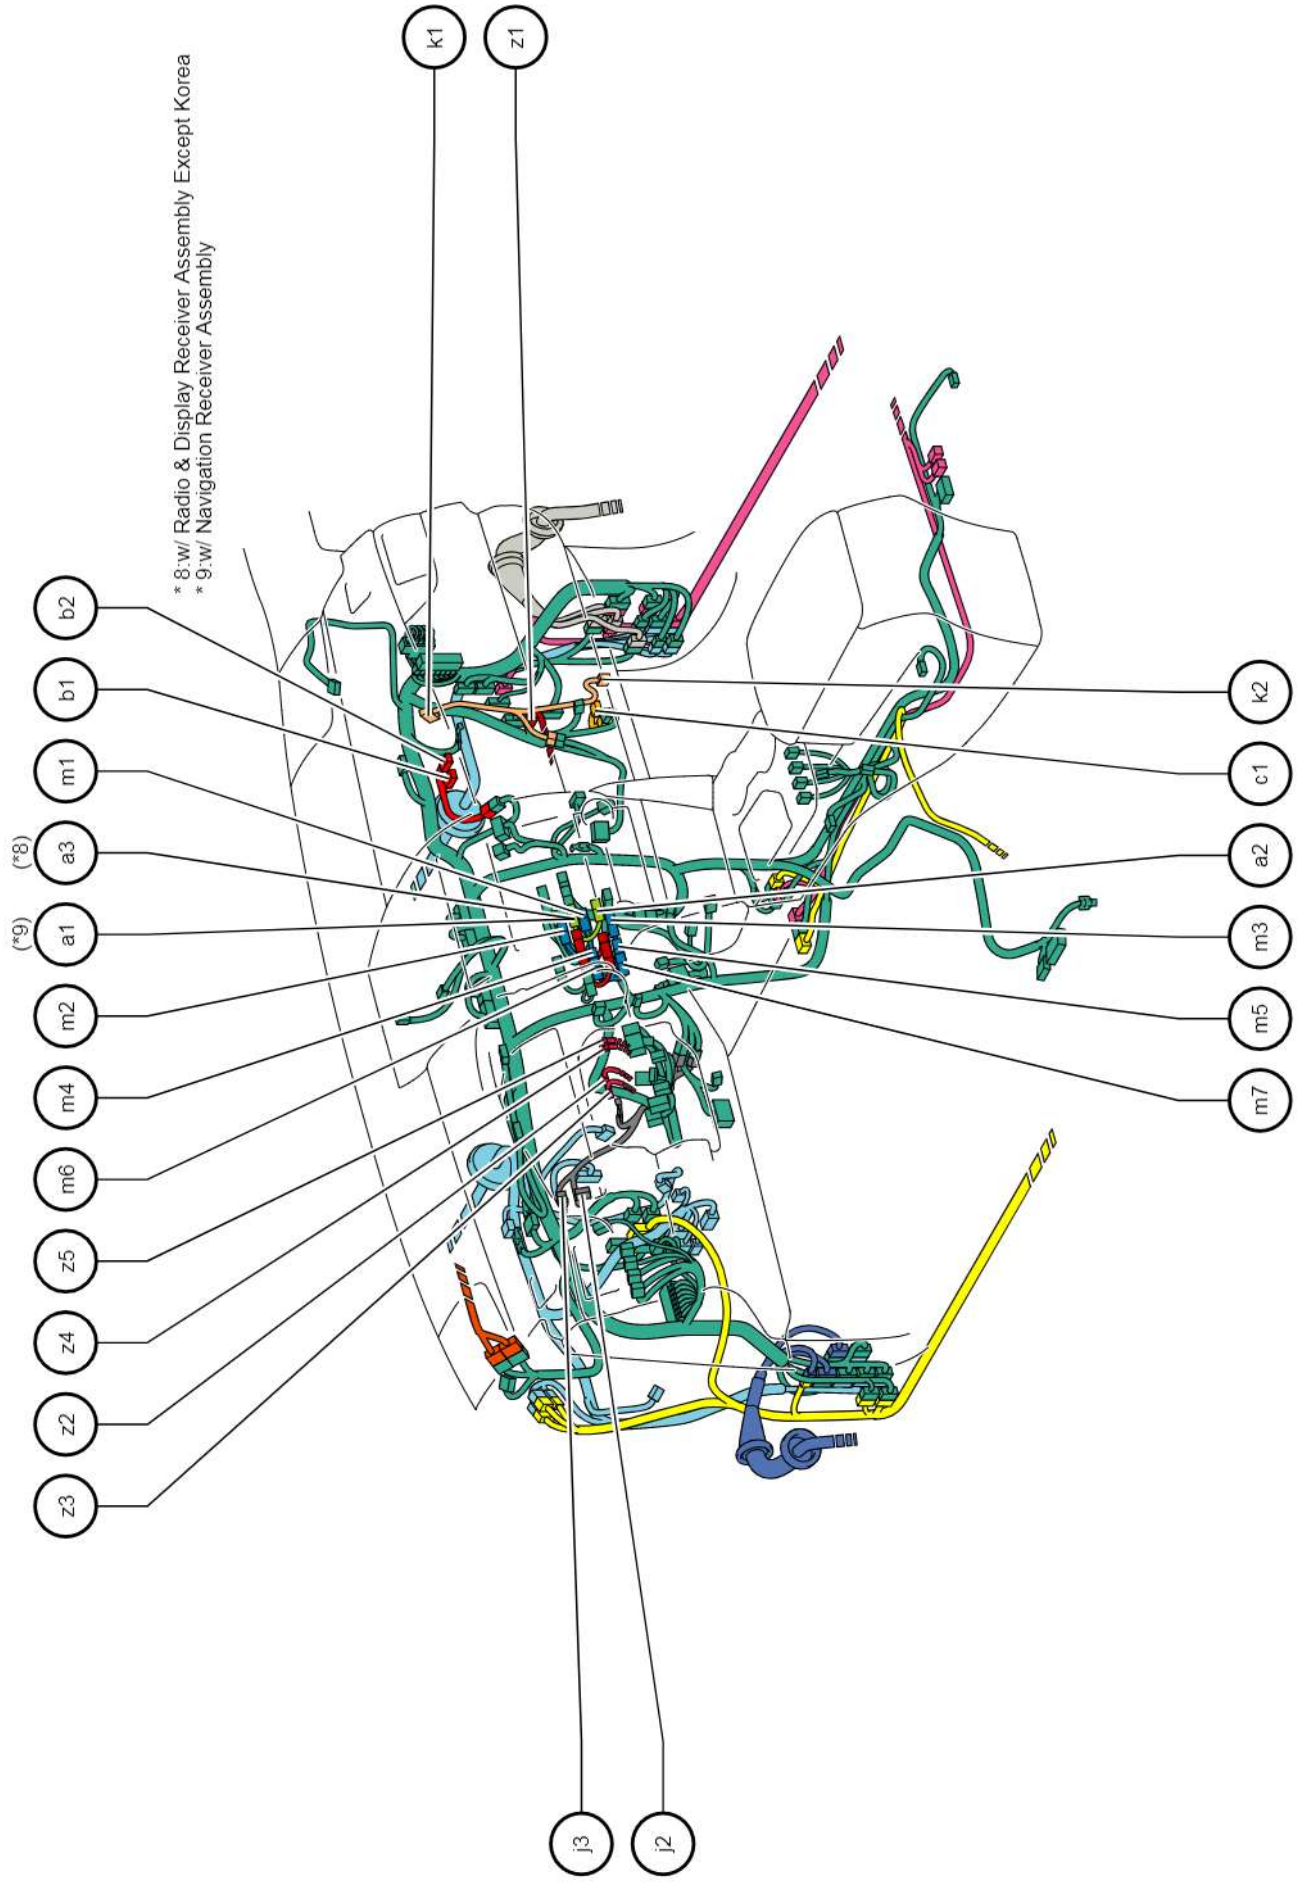


Position of Parts in Instrument Panel





- a 1 Navigation Receiver Assembly
- a 2 Stereo Component Tuner Assembly
- a 3 Radio & Display Receiver Assembly
- b 1 Instrument Panel Passenger Airbag Assembly without Door
- b 2 Instrument Panel Passenger Airbag Assembly without Door
- c 1 Light Cut Relay
- j 2 Power Steering ECU Assembly
- j 3 Power Steering ECU Assembly
- k 1 Glass Breakage Sensor ECU Assembly
- k 2 Glass Breakage Sensor Microphone
- z 1 A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
- z 2 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 3 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 4 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
- z 5 Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)

  Position of Parts in Instrument Panel

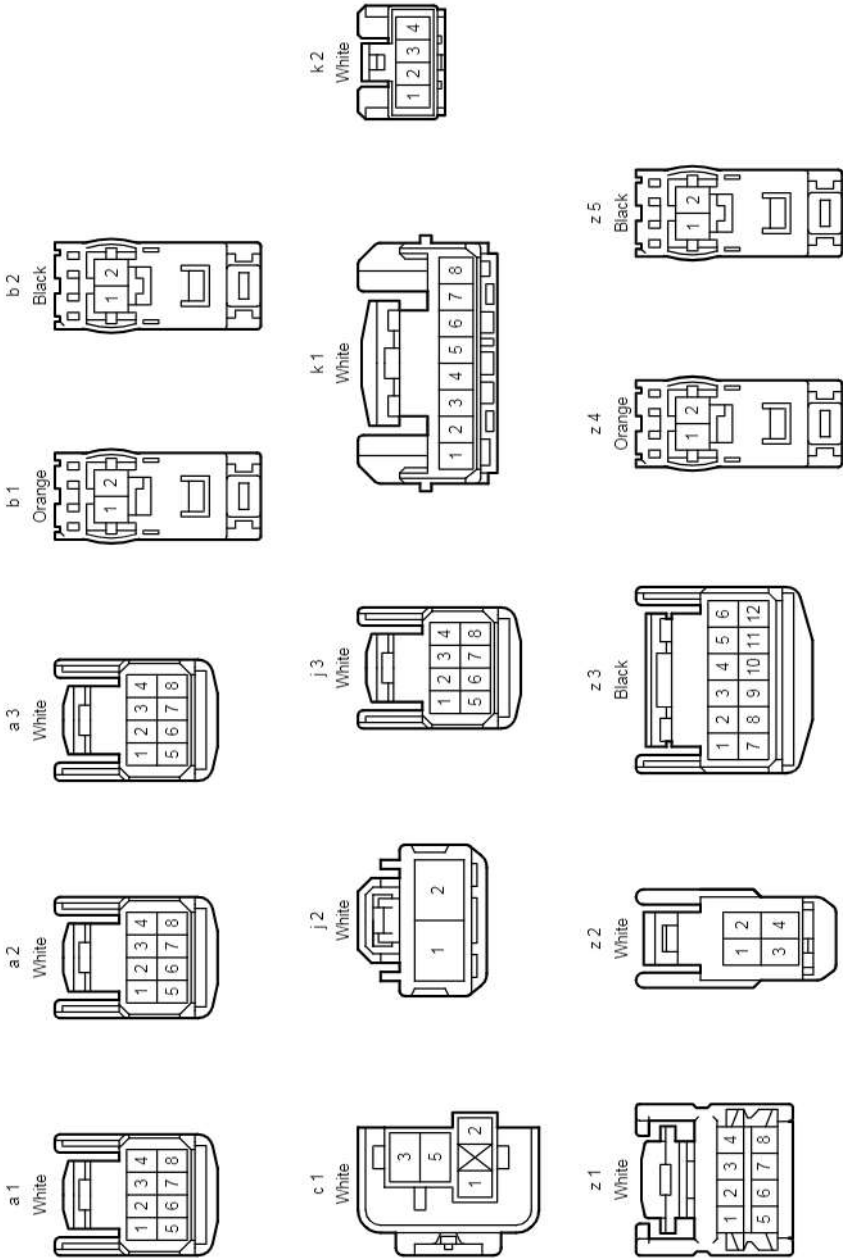


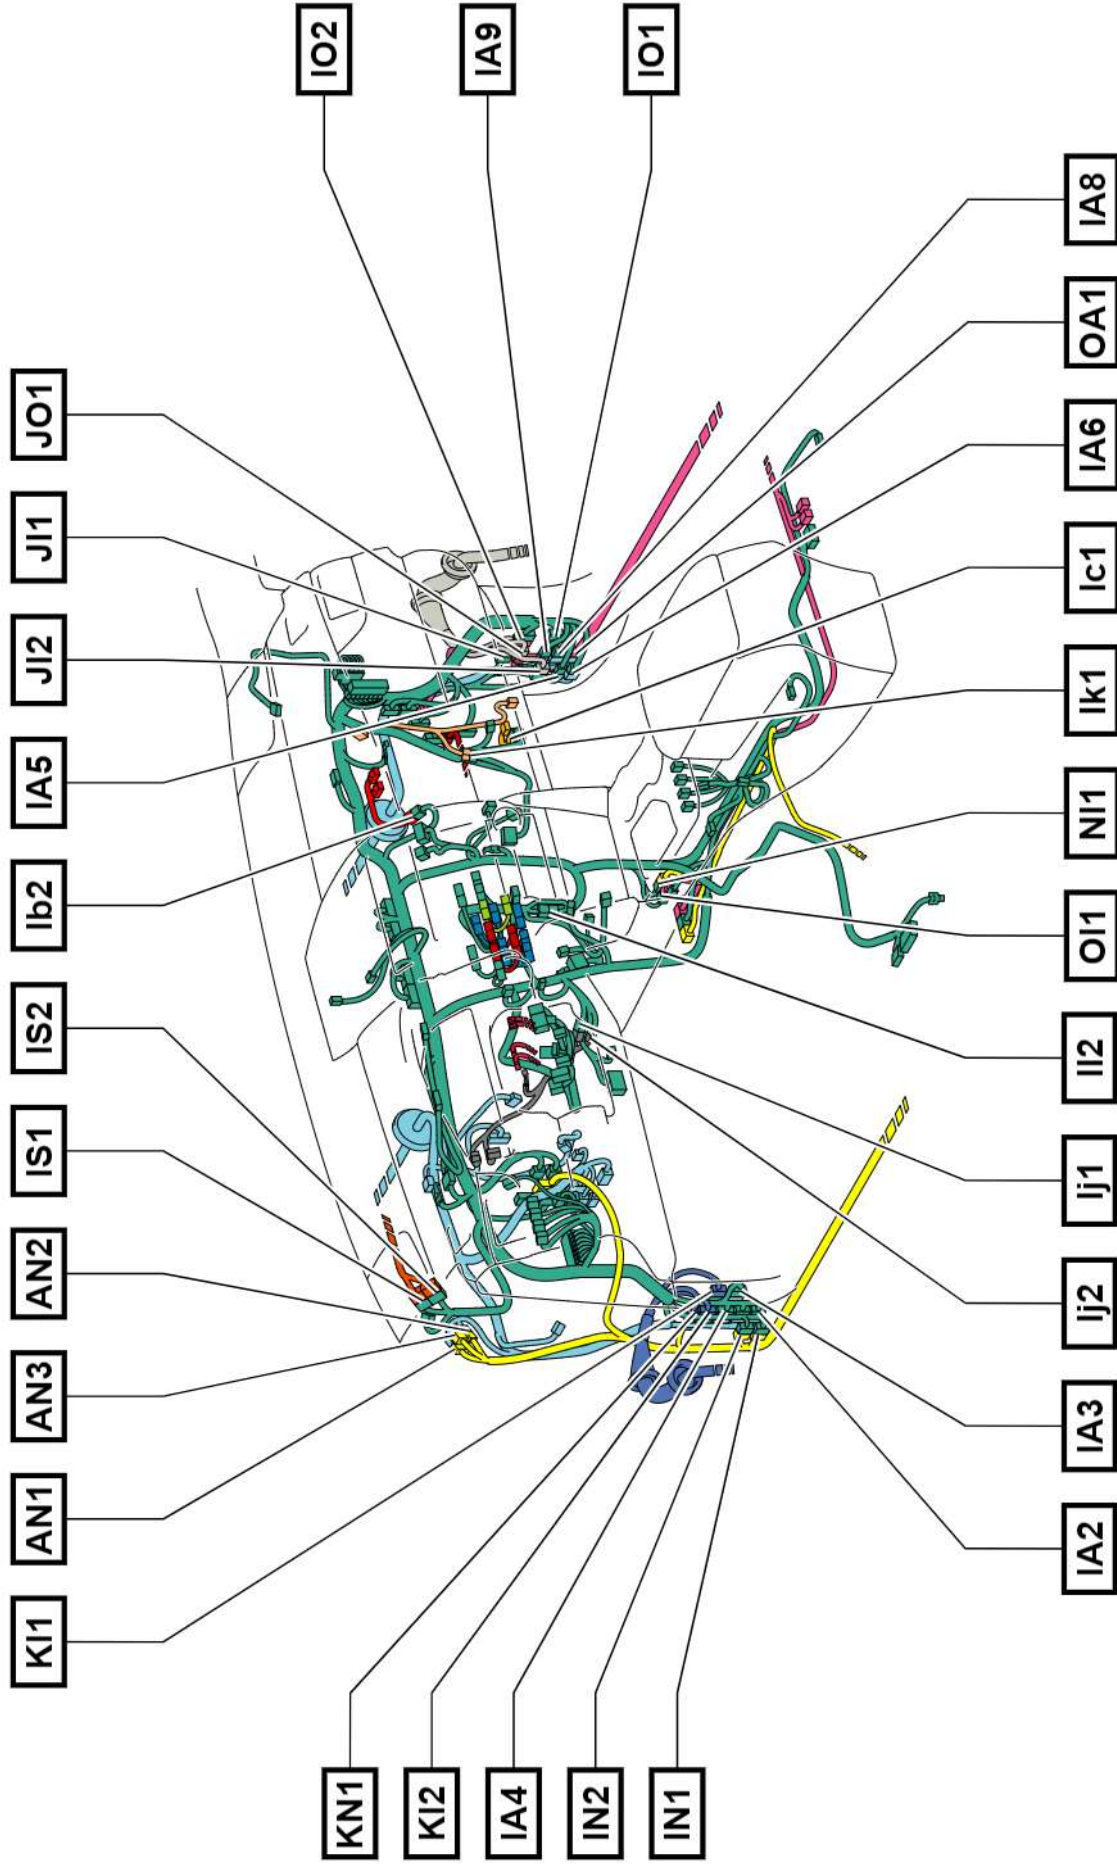


Wire and Wire in Instrument Panel

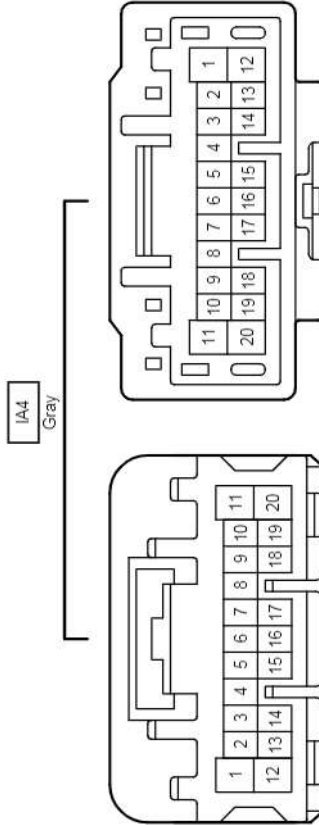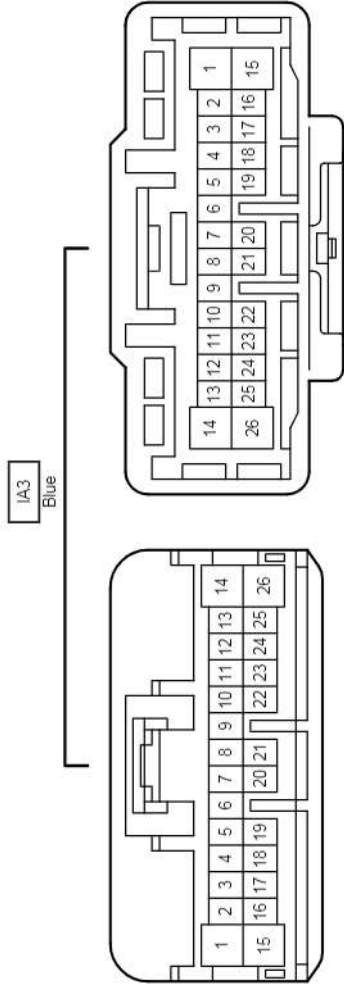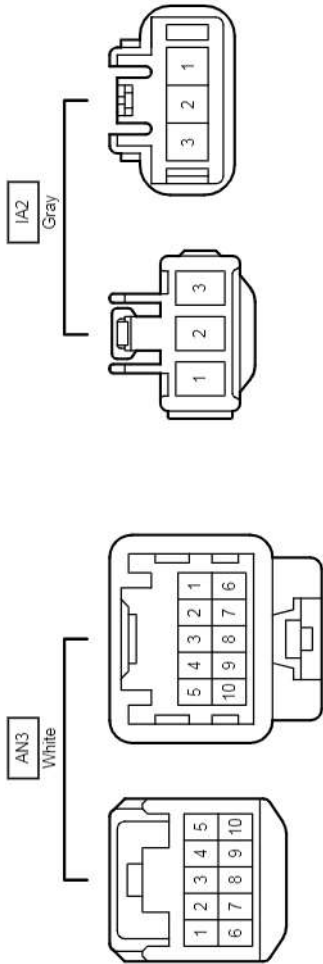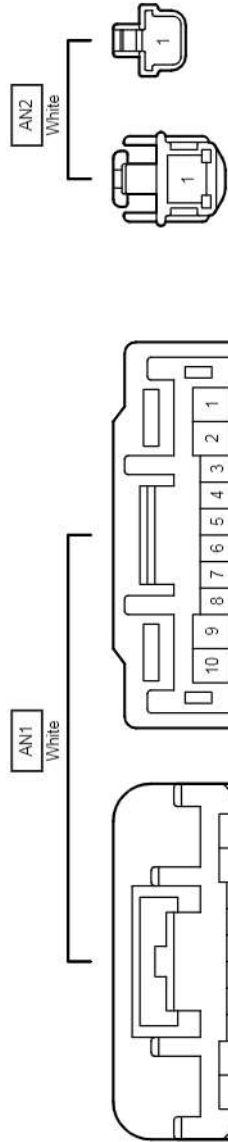    





Wire and Wire in Instrument Panel

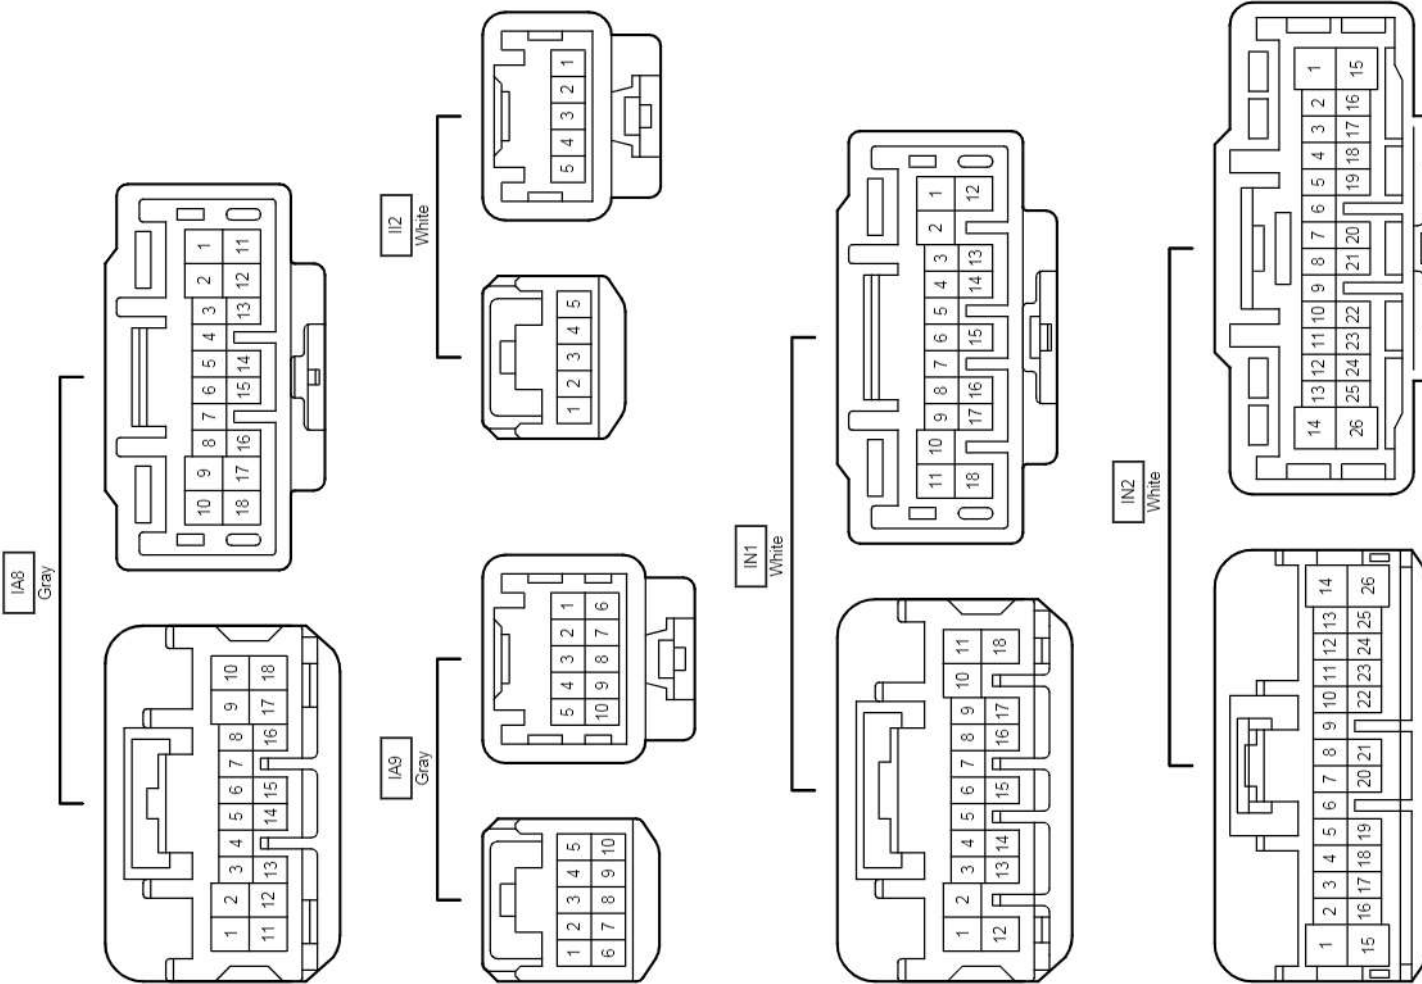 



Wire and Wire in Instrument Panel

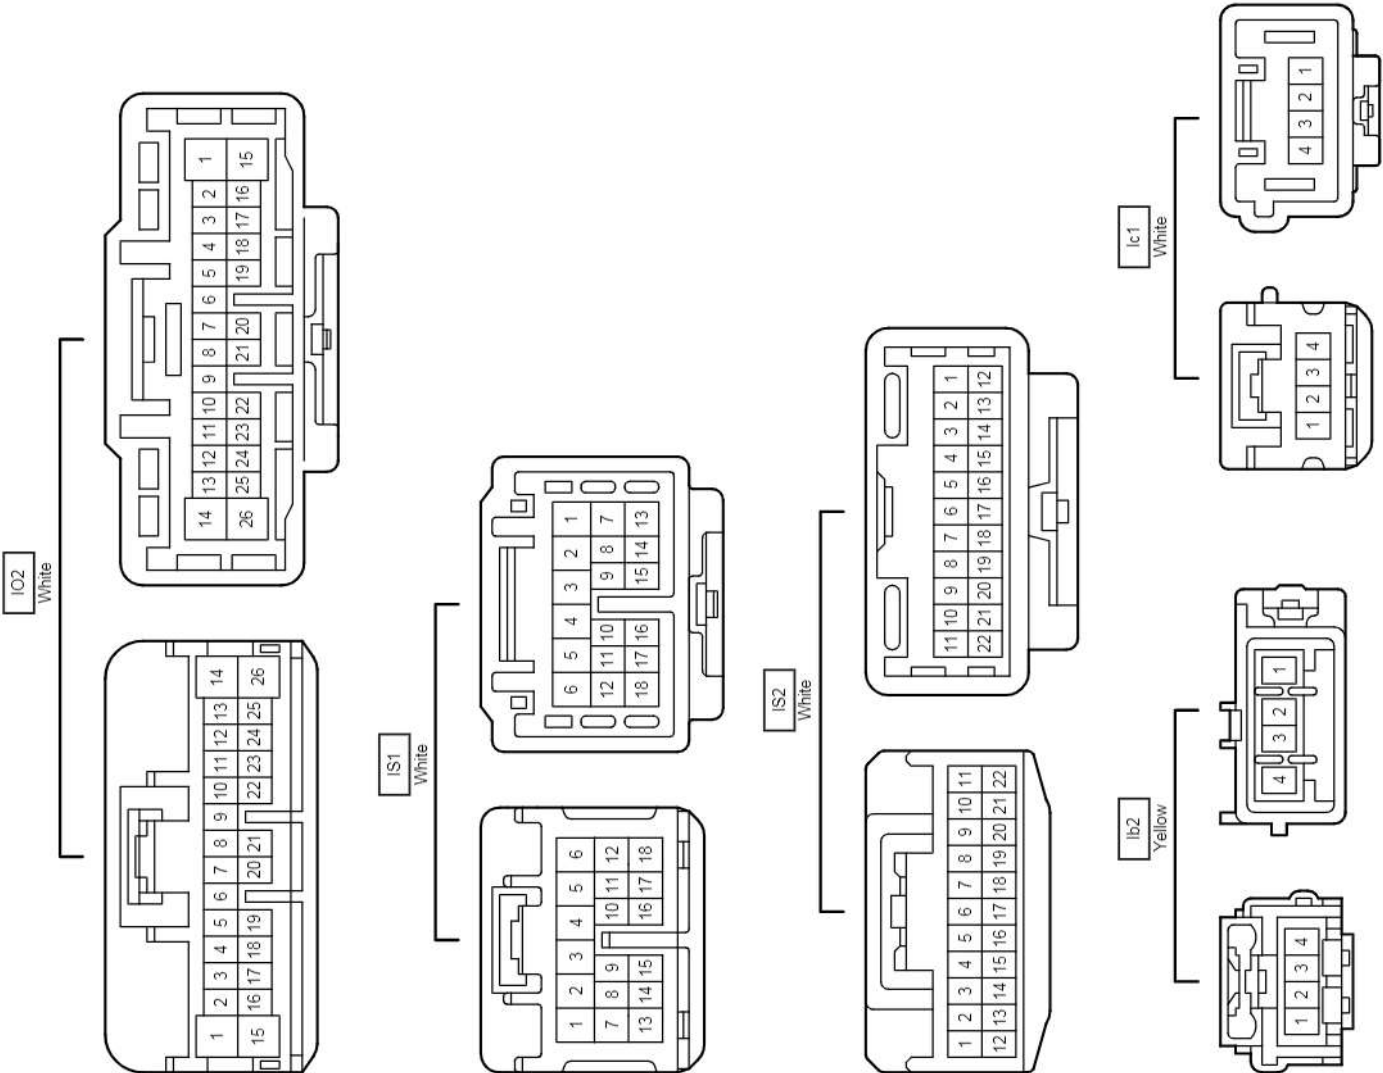 

Wire and Wire in Instrument Panel

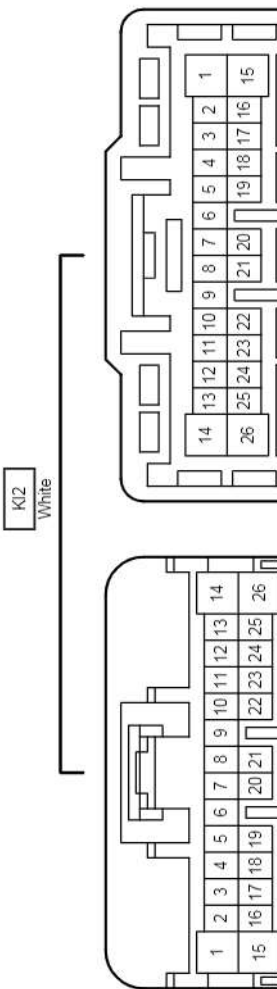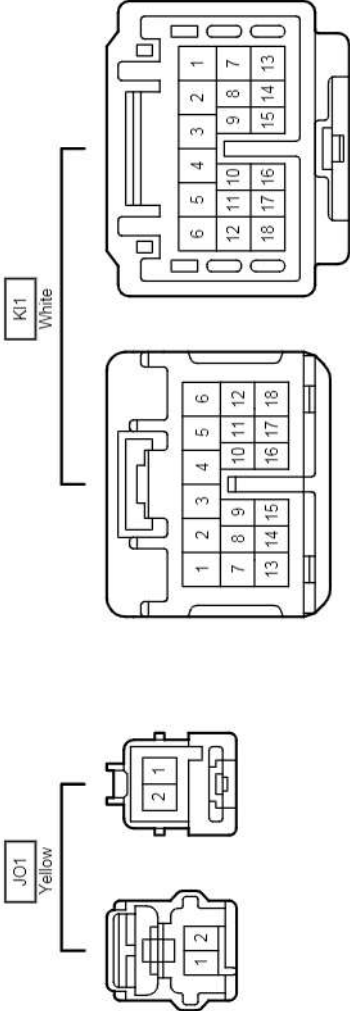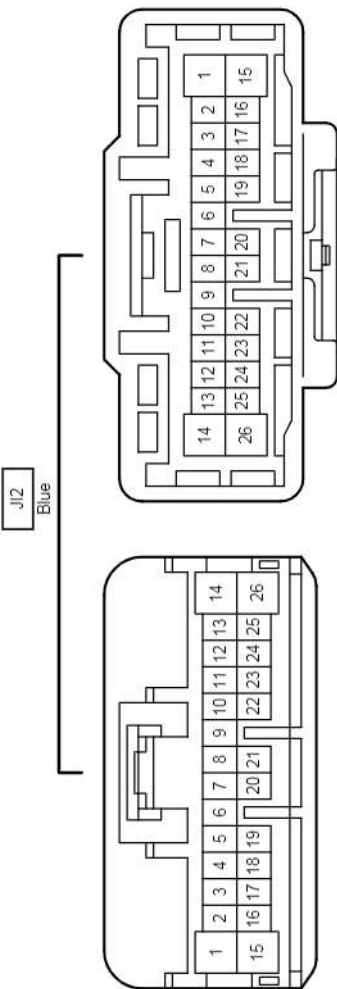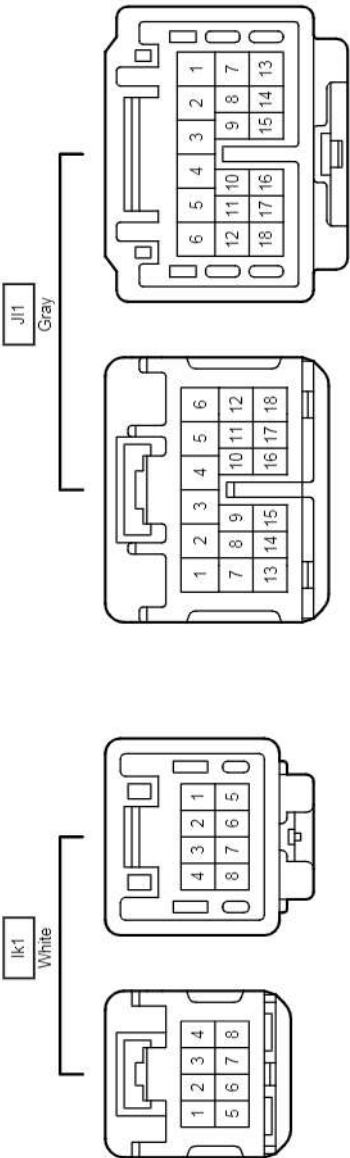    




















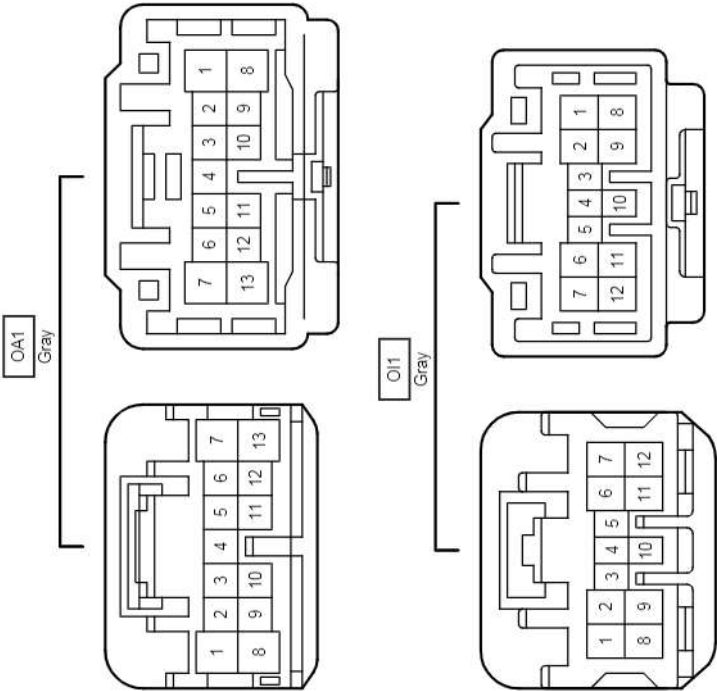 


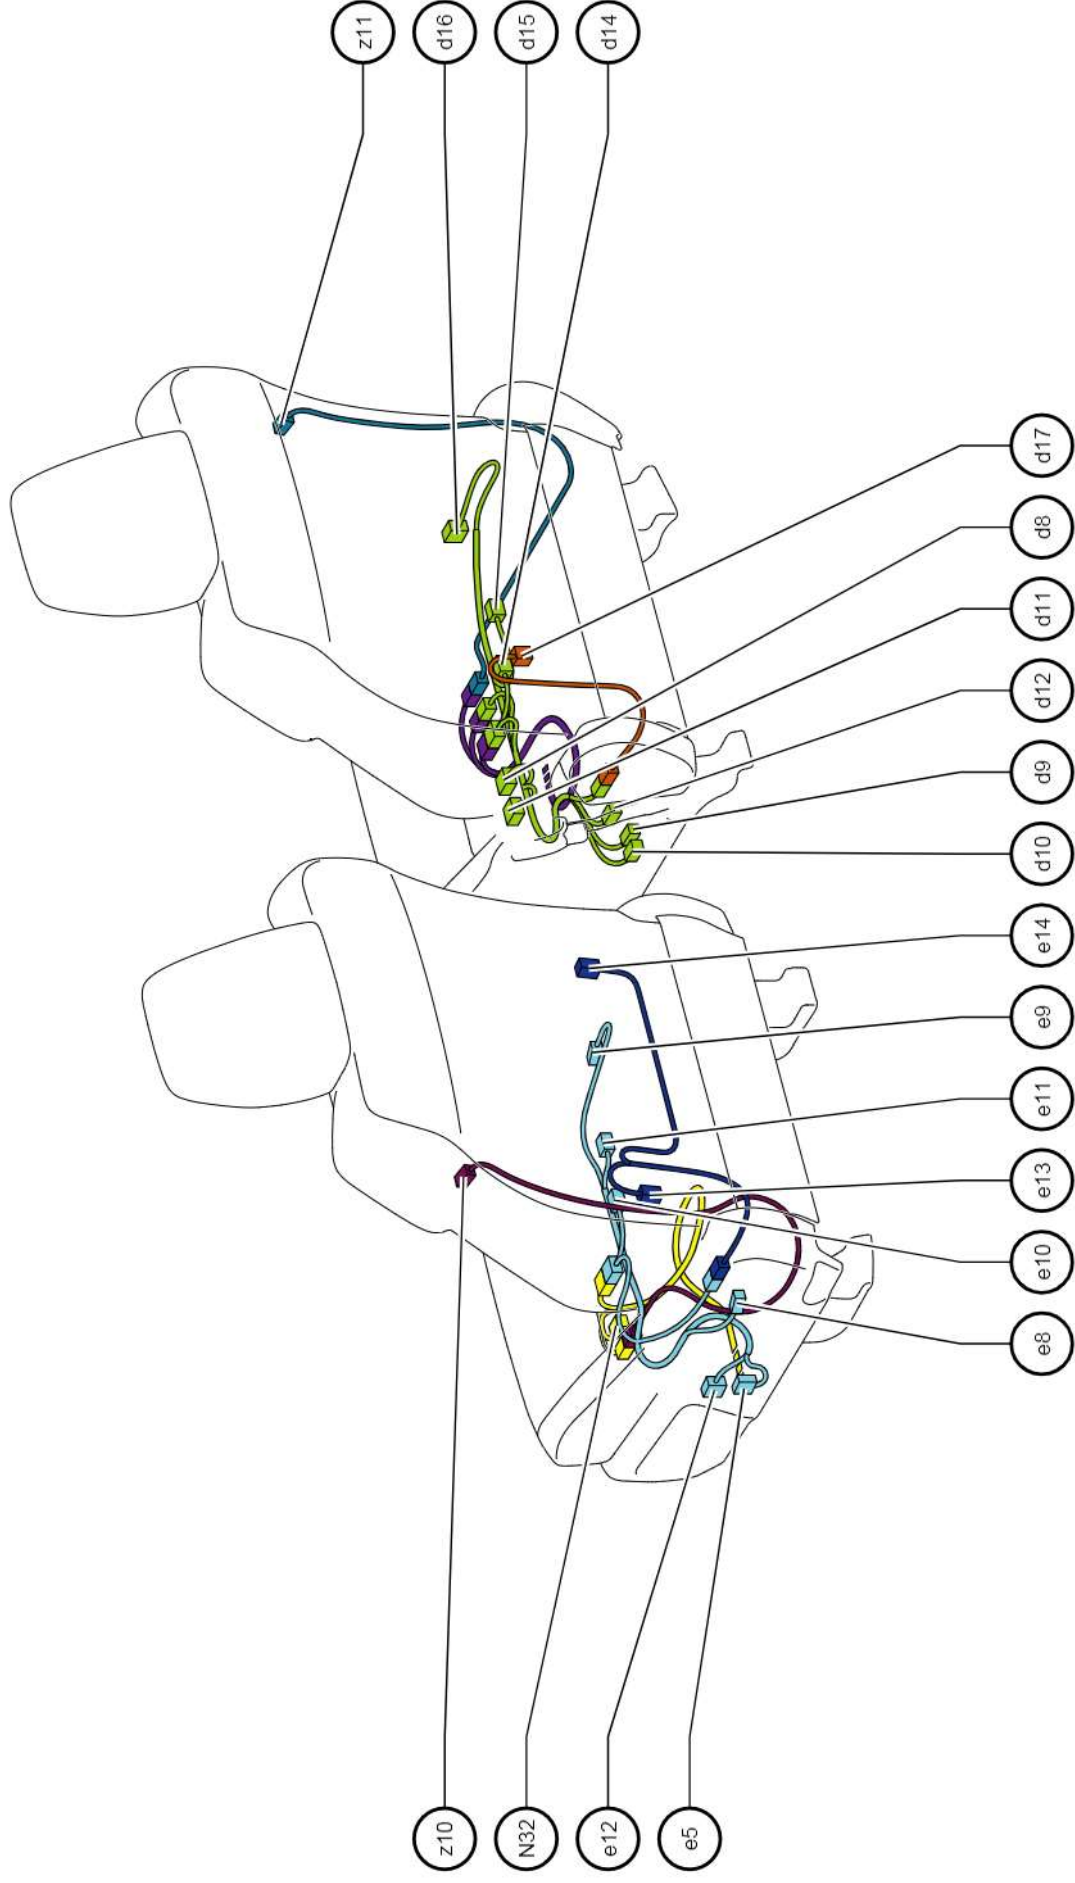 


Position of Parts in Seat

N 32	Front Seat Inner Belt Assembly LH
d 8	Occupant Detection ECU
d 9	Front Seat Inner Belt Assembly RH
d 10	Front Occupant Classification Sensor LH
d 11	Occupant Detection ECU
d 12	Rear Occupant Classification Sensor LH
d 14	Front Seat Cushion Heater Assembly RH
d 15	Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
d 16	Front Power Seat Switch RH
d 17	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
e 5	Front Power Seat Lumbar Switch LH
e 8	Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 9	Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 10	Front Seat Cushion Heater Assembly LH
e 11	Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e 12	Front Power Seat Switch LH
e 13	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
e 14	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
z 10	Front Seat Airbag Assembly LH
z 11	Front Seat Airbag Assembly RH

                     Position of Parts in Seat

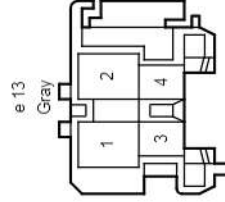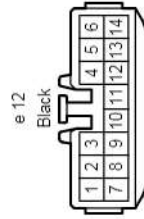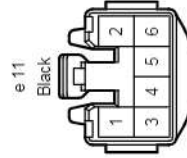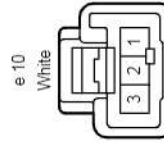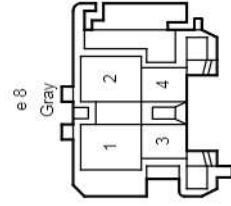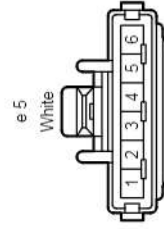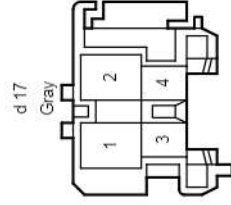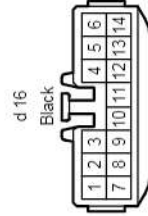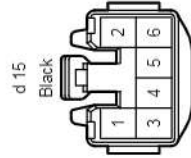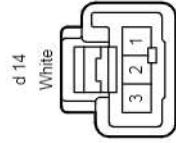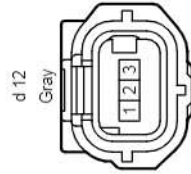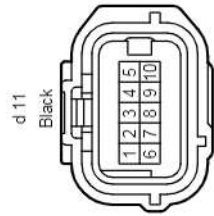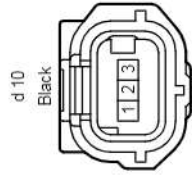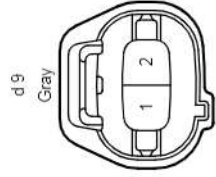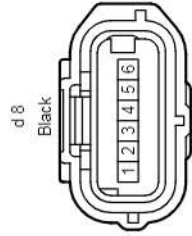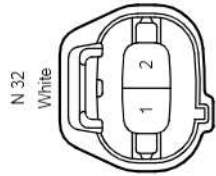

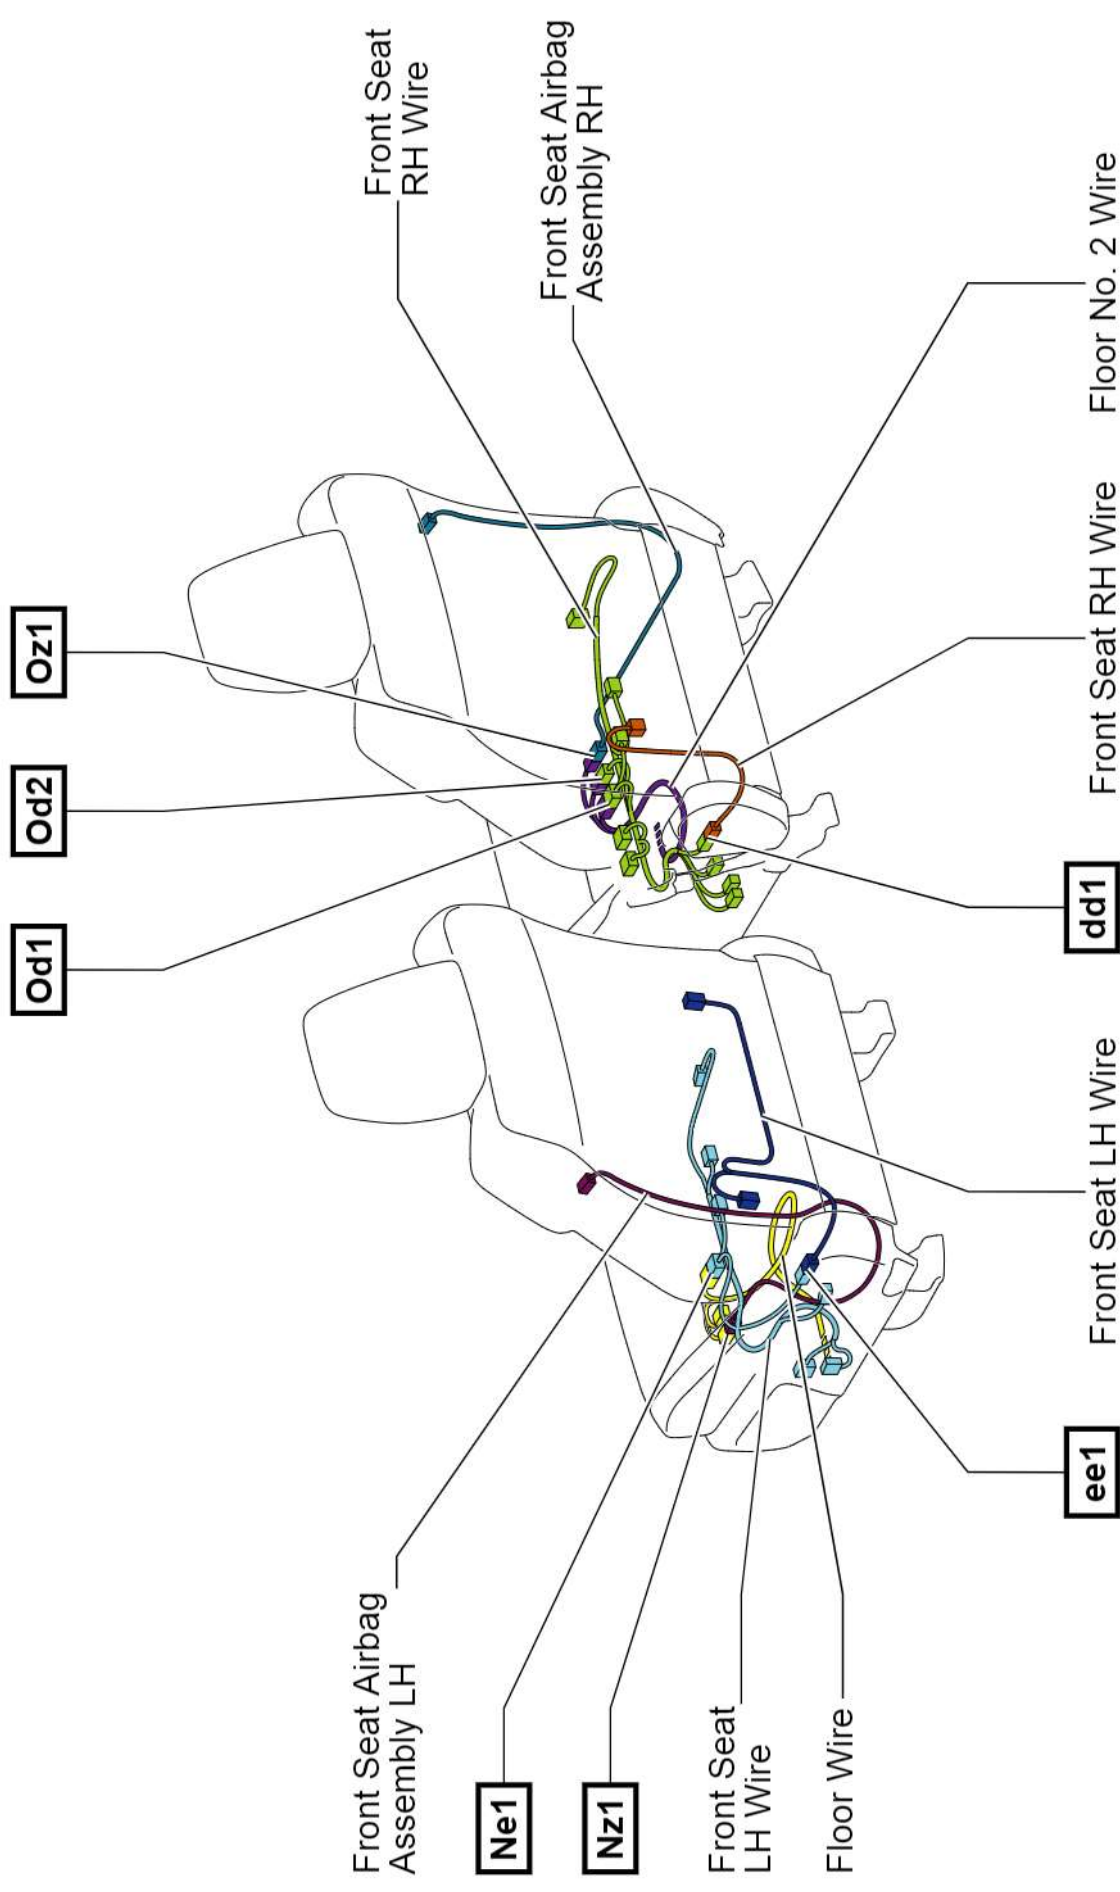

Wire and Wire in Seat

