


Glow plug system (V.A.G 1466), coolant circulation pump (turbocharged diesel)

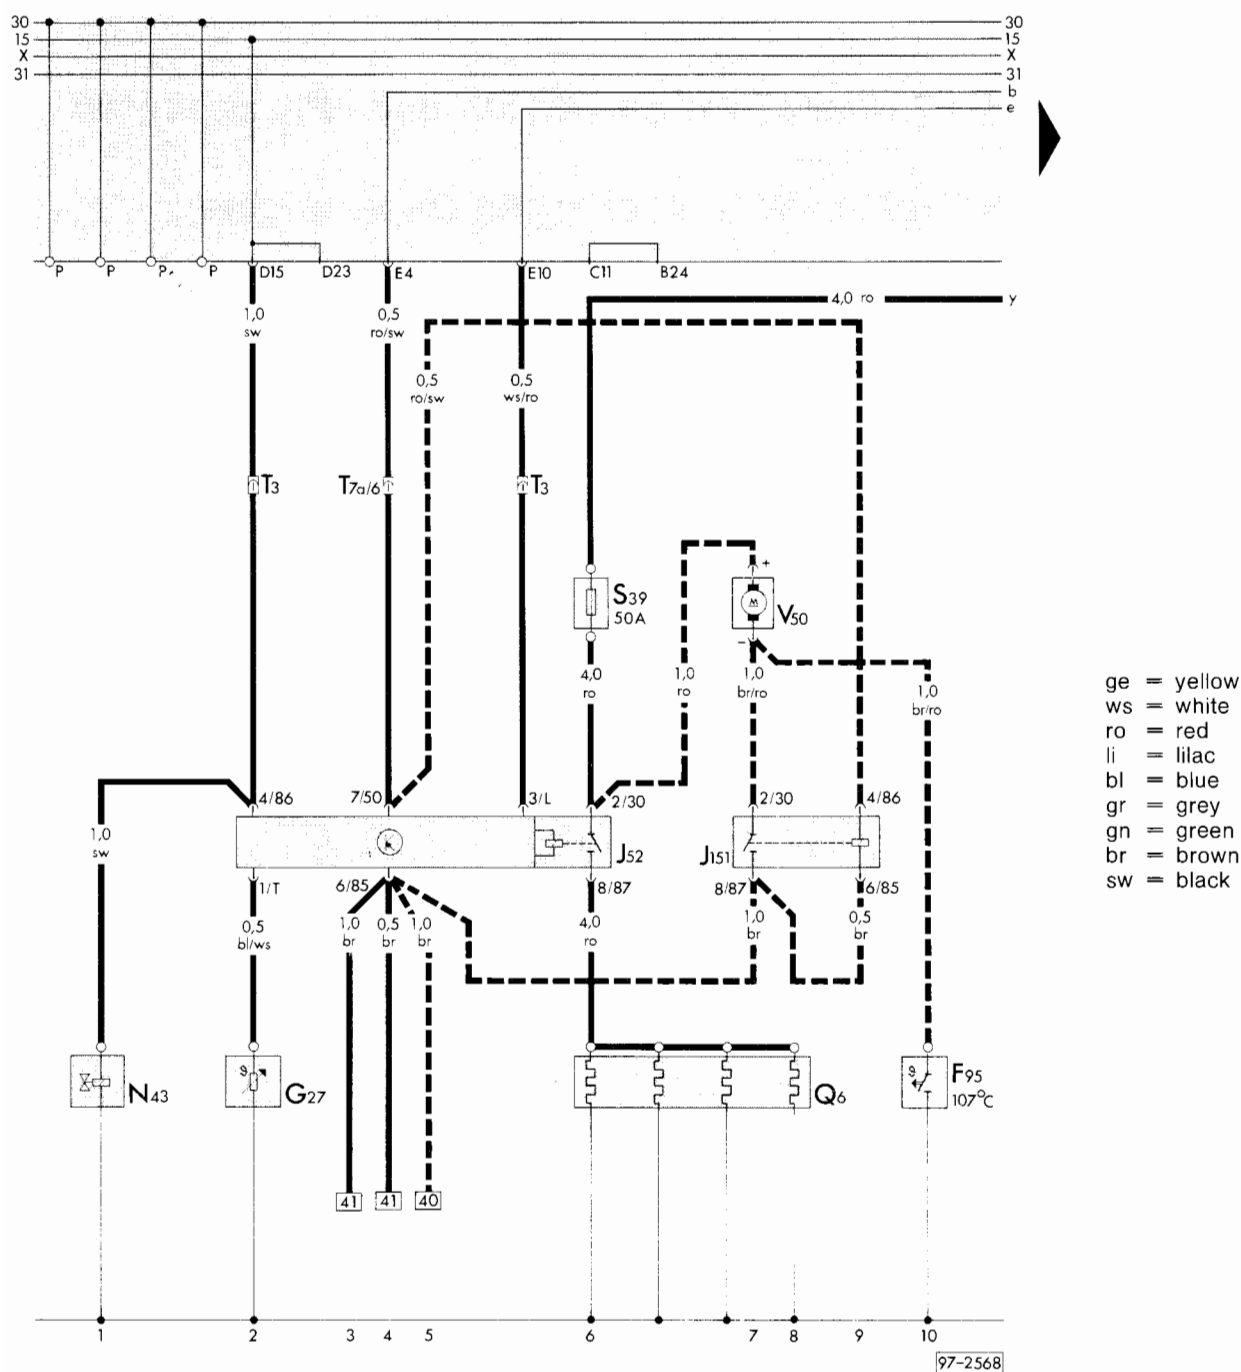

- F 95 — Thermoswitch for coolant circulation run on (Turbodiesel only)
- G 27 — Sensor for engine temperature (glow plug system)
- J 52 — Glow plug relay in junction box — engine compartment
- J 151 — Relay for coolant circulation in junction box — engine compartment (Turbodiesel only)
- N 43 — Electro-magnetic cut-off
- Q 6 — Glow plug
- S 39 — Strip fuse for glow plugs in junction box — engine compartment
- T 3 — Connector 3 pin in junction box — engine compartment
- T 7a/ — Connector 7 pin, in junction box — engine compartment
- V 50 — Pump for coolant circulation (Turbodiesel only)

— — — Turbodiesel only

Battery, starter, alternator, ignition/starter switch

