 
 
 
 
 
 


A246E AUTOMATIC TRANSAXLE

SST

 
 
 
 
 
 
 
PP

 
 
 
 
	09023-12701	Union Nut Wrench 17mm	
	09240-00020	Wire Gauge Set	
	09249-63010	Torque Wrench Adaptor	
	09308-00010	Oil Seal Puller	
	09330-00021	Companion Flange Holding Tool	
	(09351-32032)	Counter Driven Gear Holding Tool	
	09350-32014	TOYOTA Automatic Transmission Tool Set	
	(09351-32010)	One-way Clutch Test Tool	
	(09351-32020)	Stator Stopper	
	(09351-32032)	Counter Driven Gear Holding Tool	
	(09351-32040)	No.1 Piston Spring Compressor	

	(09351-32050)	Snap Ring Expander	
	(09351-32061)	Oil Pump Puller	
	(09351-32070)	No.2 Piston Spring Compressor	
	(09351-32090)	Oil Seal Remover & Replacer	
	(09351-32100)	Drive Pinion Bearing Replacer	
	(09351-32111)	Side Bearing Race Replacer	
	(09351-32120)	Overdrive Bearing Replacer	
	(09351-32130)	Handle	
	(09351-32140)	Oil Seal Replacer	
	(09351-32150)	Oil Seal Replacer	
	(09351-32170)	Lock Nut Wrench	
	(09351-32180)	Bearing Replacer	

PP

PP

	(09351-32190)	Measure Terminal	
	09520-01010	Drive Shaft Remover Attachment	
	09520-24010	Differential Side Gear Shaft Puller	
	(09520-32040)	Shocker Set	
	09564-32011	Differential Preload Adaptor	
	09710-30031	Rear Suspension Bushing Tool Set	
	(09710-03161)	Remover	
	09950-00020	Bearing Remover	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	
	(09952-04010)	Slide Arm	
	(09953-04030)	Center Bolt 200	

	(09954-04010)	Arm 25	
	(09955-04061)	Claw No.6	
	(09957-04010)	Attachment	
	(09958-04011)	Holder	
	09950-60010	Replacer Set	
	(09951-00340)	Replacer 34	
	(09951-00380)	Replacer 38	
	(09951-00410)	Replacer 41	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	09960-10010	Variable Pin Wrench Set	
	(09962-01000)	Variable Pin Wrench Arm Assembly	

PP

	(09963-01000)	Pin 10	
---	---------------	--------	--