

EM


HEATER INLET WATER HOSE

EFI FUEL PIPE CLAMP


FUEL TUBE SUB-ASSEMBLY

UNION TO CHECK VALVE HOSE


HEATER OUTLET WATER HOSE

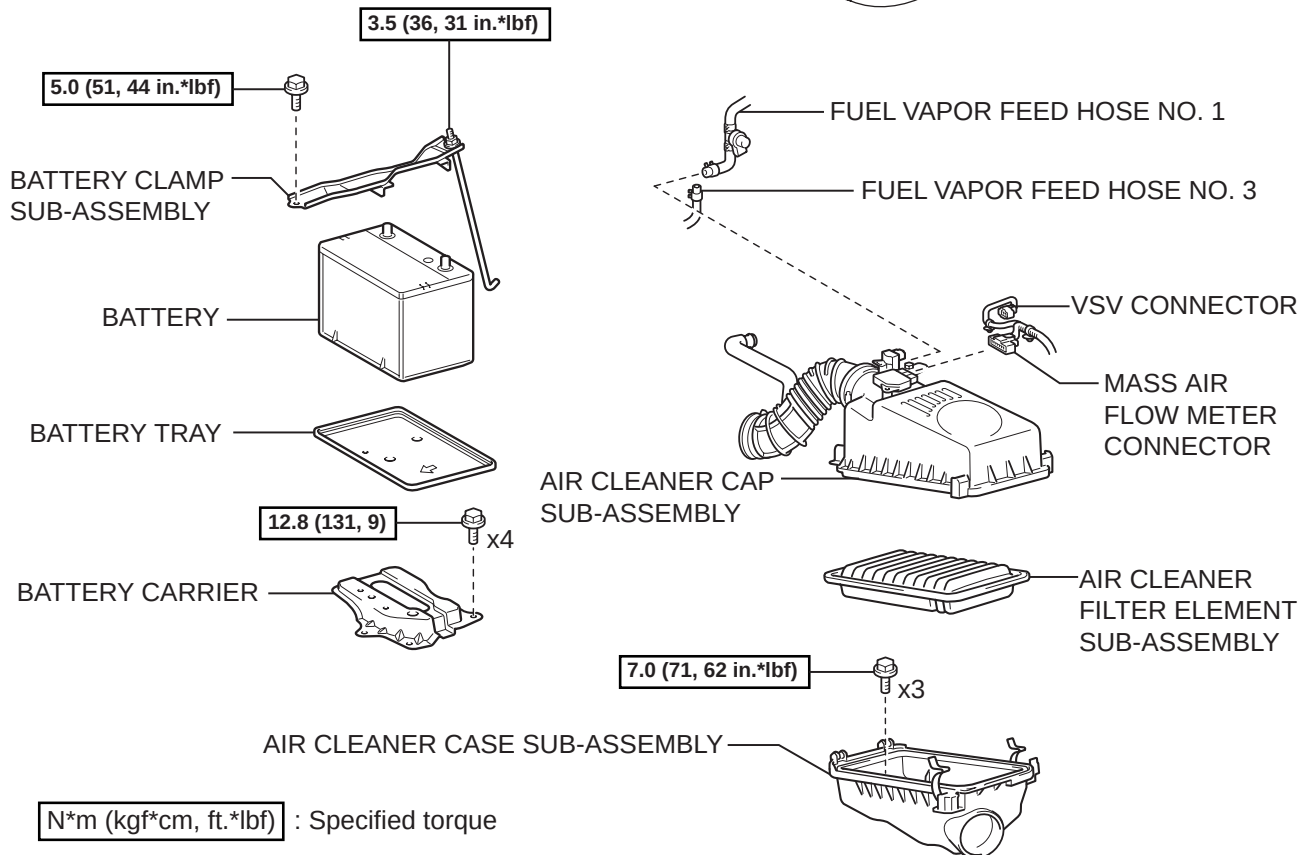

FAN AND GENERATOR V BELT

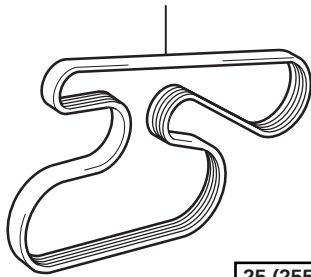

AUTOMATIC TRANSAXLE:

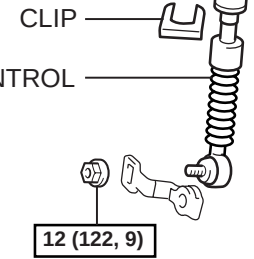

TERMINAL CAP NO. 2

25 (255, 18)

9.8 (100, 7)

54 (550, 40)

GENERATOR ASSEMBLY

29 (296, 21)

W/ AIR CONDITIONING:

COMPRESSOR AND MAGNETIC CLUTCH

RETURN TUBE
SUB-ASSEMBLY

25 (255, 18)

5.0 (51, 44 in.*lbf)

5.0 (51, 44 in.*lbf)

7.8 (80, 69 in.*lbf)

25 (255, 18)

CLIP

CLIP

PLATE WASHER

MANUAL TRANSAXLE:

CLUTCH RELEASE
CYLINDER ASSEMBLY

MANUAL TRANSAXLE:


TRANSMISSION CONTROL
CABLE ASSEMBLY

MANUAL TRANSAXLE:


TRANSMISSION CONTROL
CABLE ASSEMBLY

N*m (kgf*cm, ft.*lbf) : Specified torque

EM

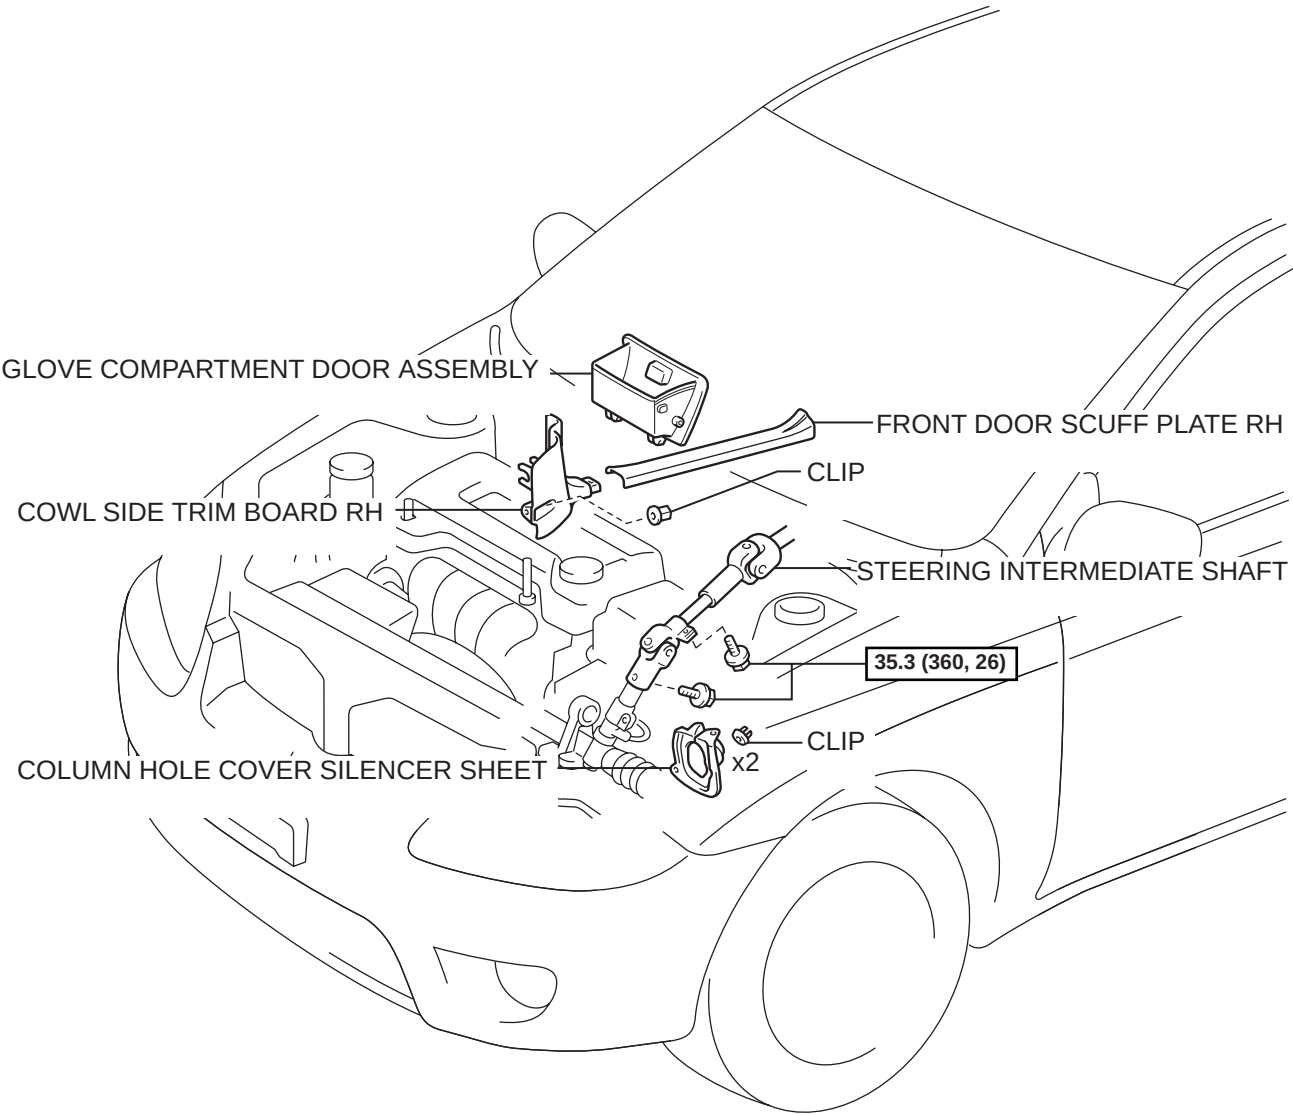



N*m (kgf*cm, ft.*lbf) : Specified torque

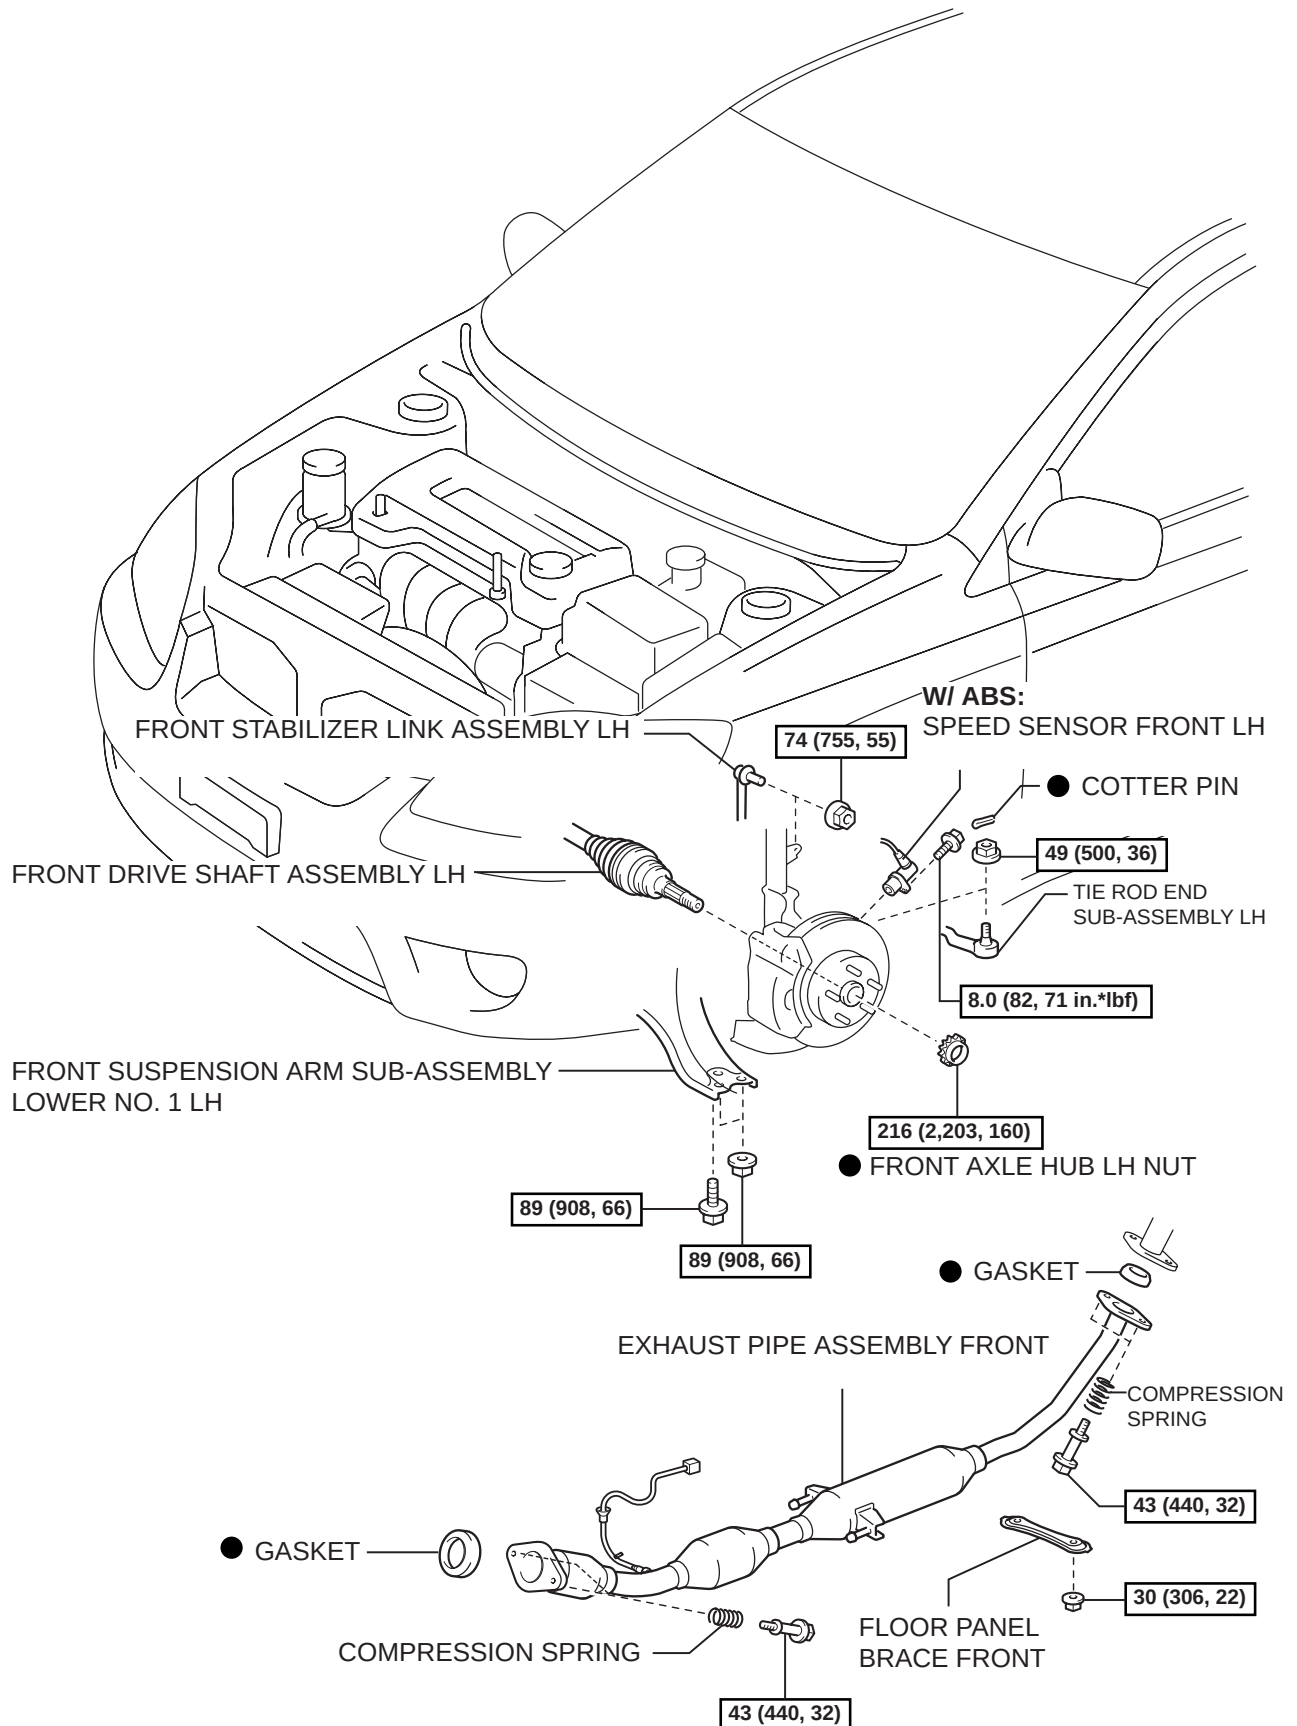

N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part

EM

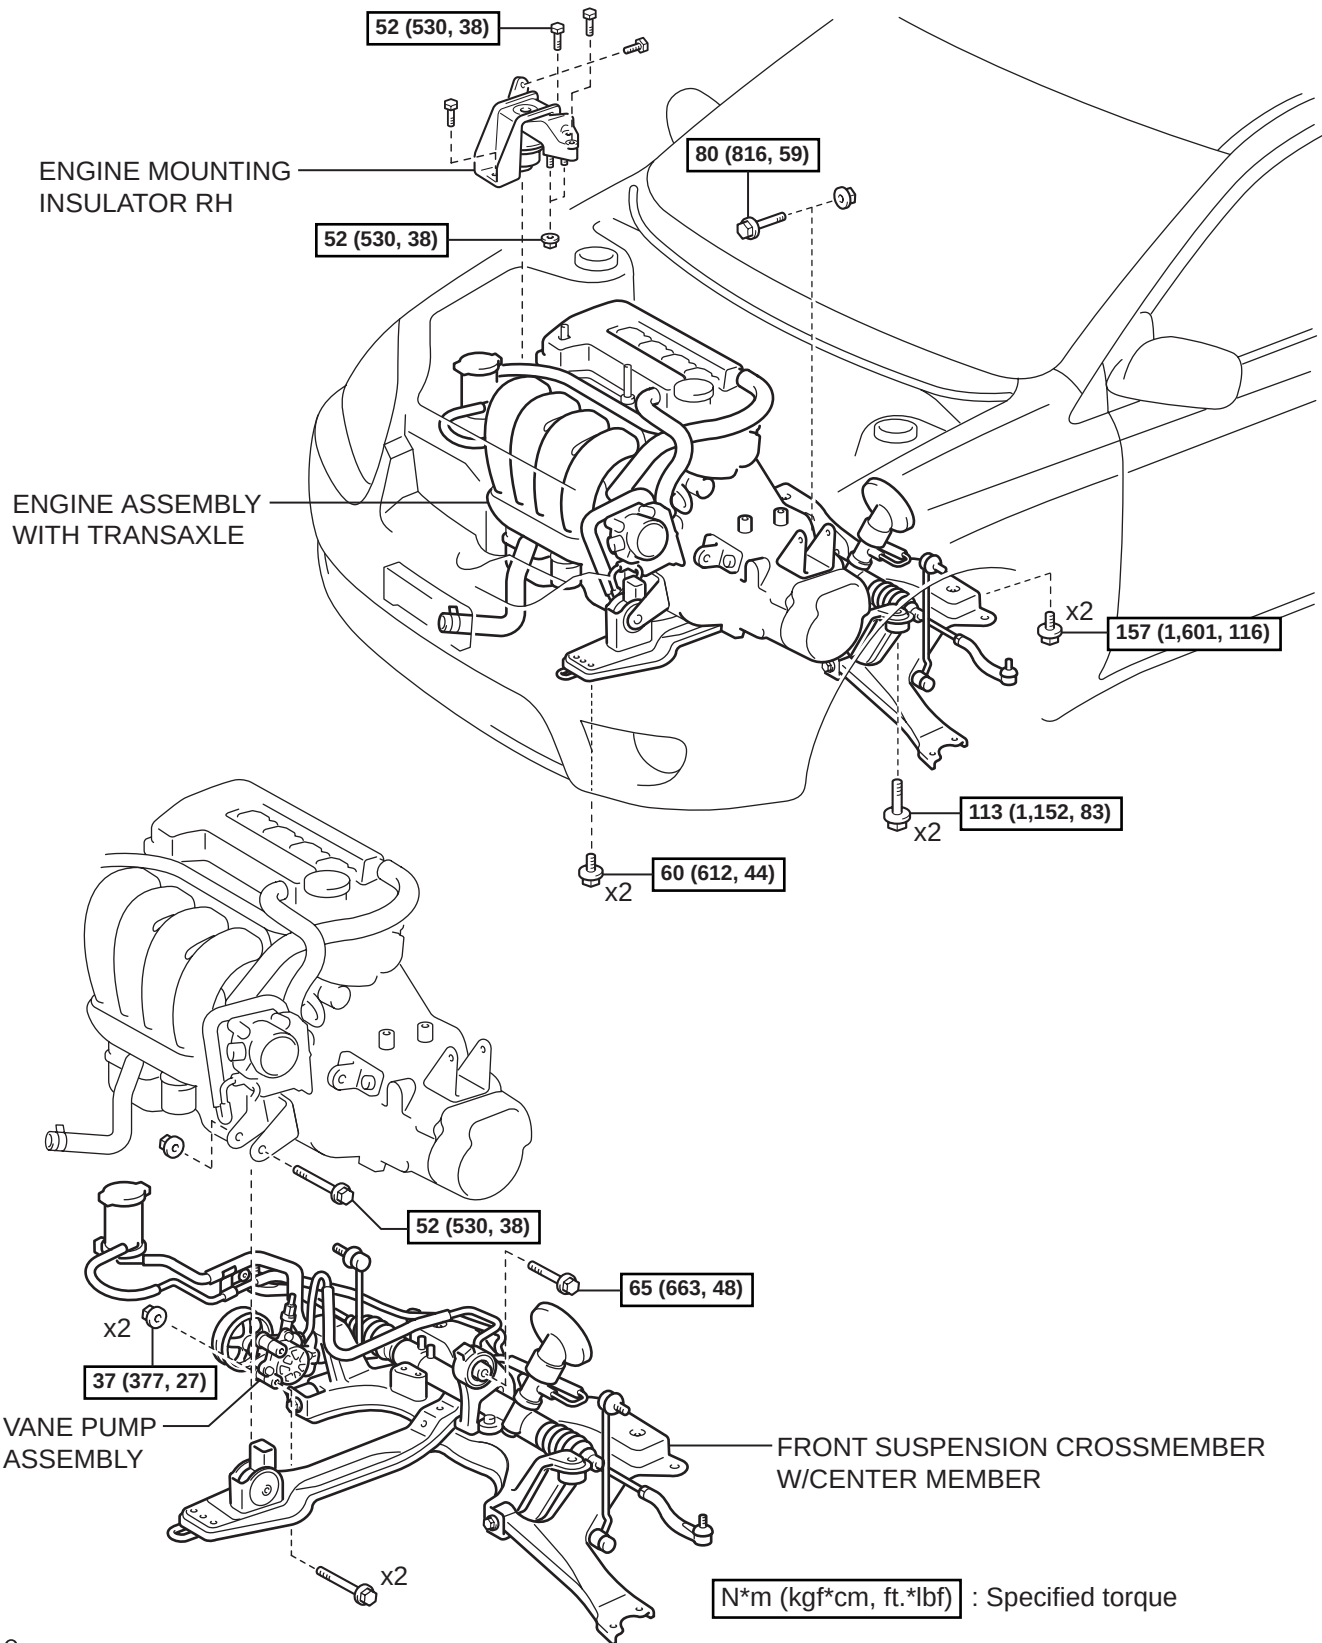


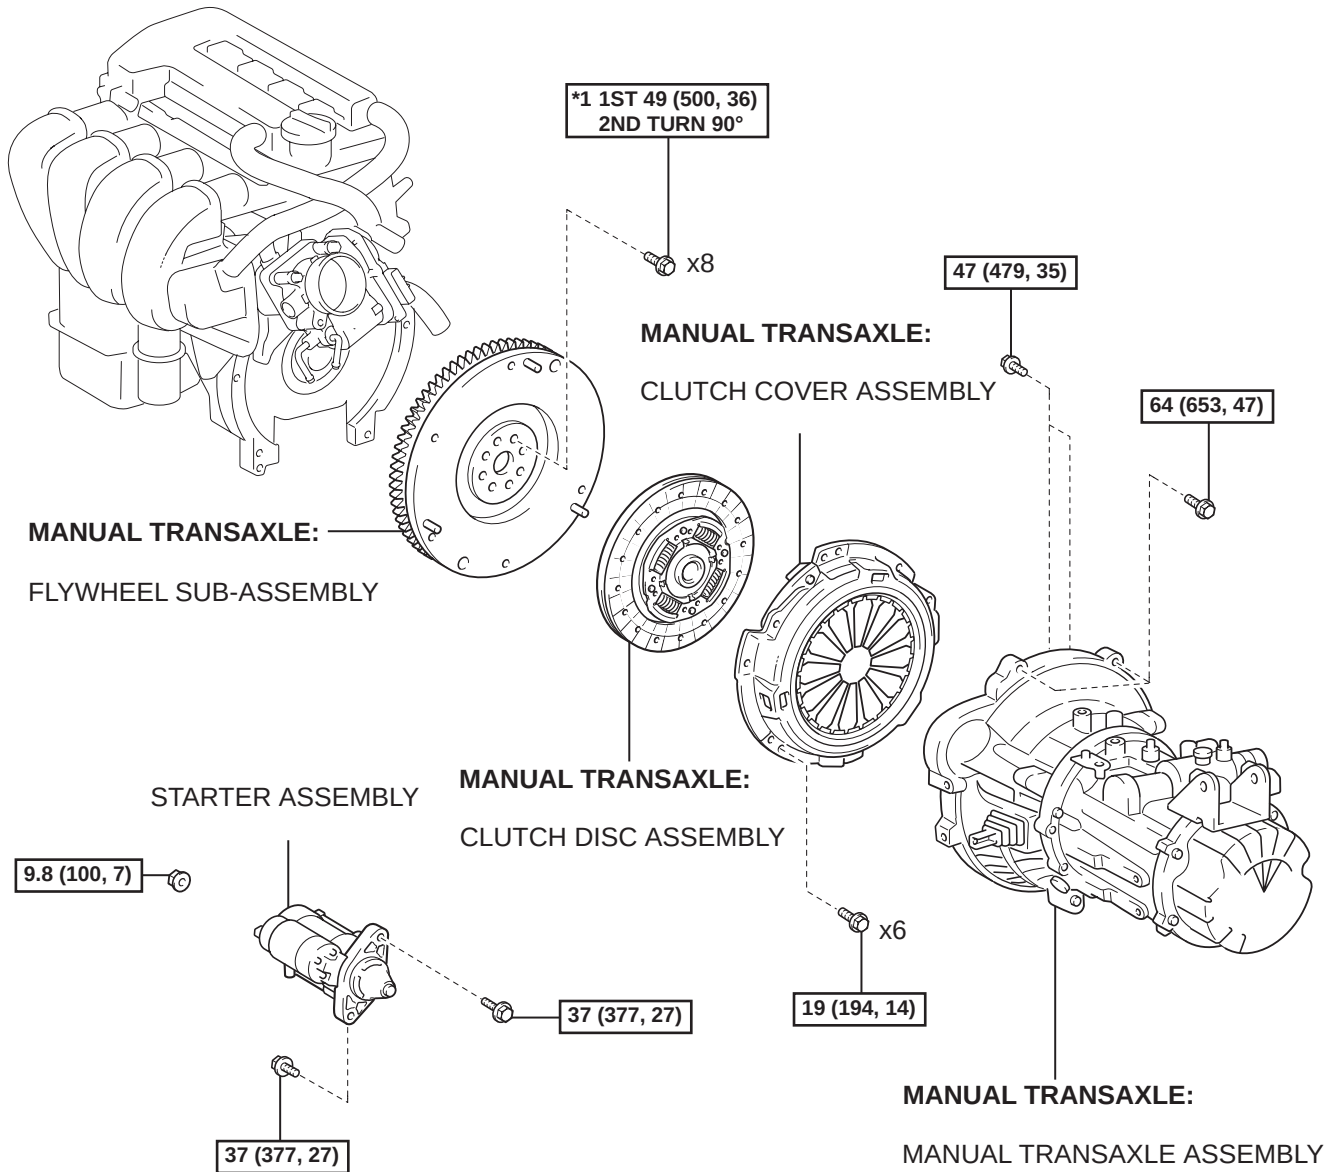


N*m (kgf*cm, ft.*lbf) : Specified torque

*1: See paragraph INSTALLATION

EM

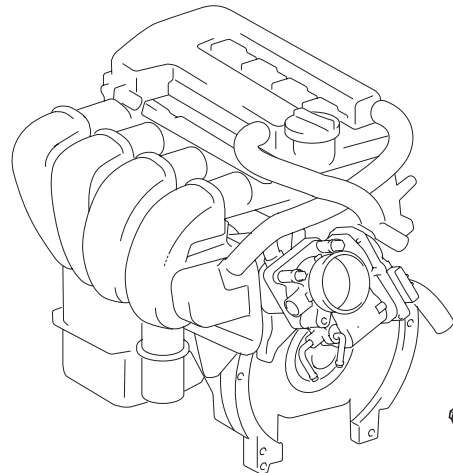


AUTOMATIC TRANSAXLE:
DRIVE PLATE SPACER FR

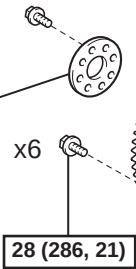

28 (286, 21)


STARTER ASSEMBLY

9.8 (100, 7)

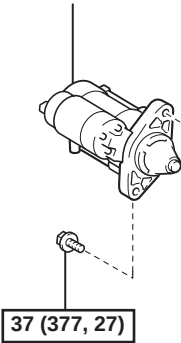


37 (377, 27)

AUTOMATIC TRANSAXLE:
DRIVE PLATE & RING
GEAR SUB-ASSEMBLY

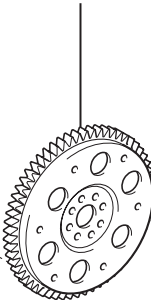


88 (897, 65)

 AUTOMATIC TRANSAXLE:
DRIVE PLATE SPACER RR




46 (469, 34)

64 (653, 47)

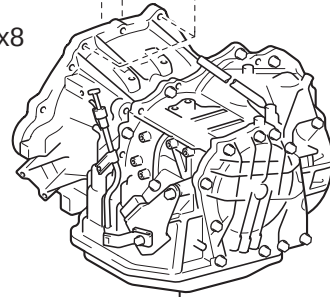

AUTOMATIC TRANSAXLE:
AUTOMATIC TRANSAXLE ASSEMBLY


N*m (kgf*cm, ft.*lbf) : Specified torque

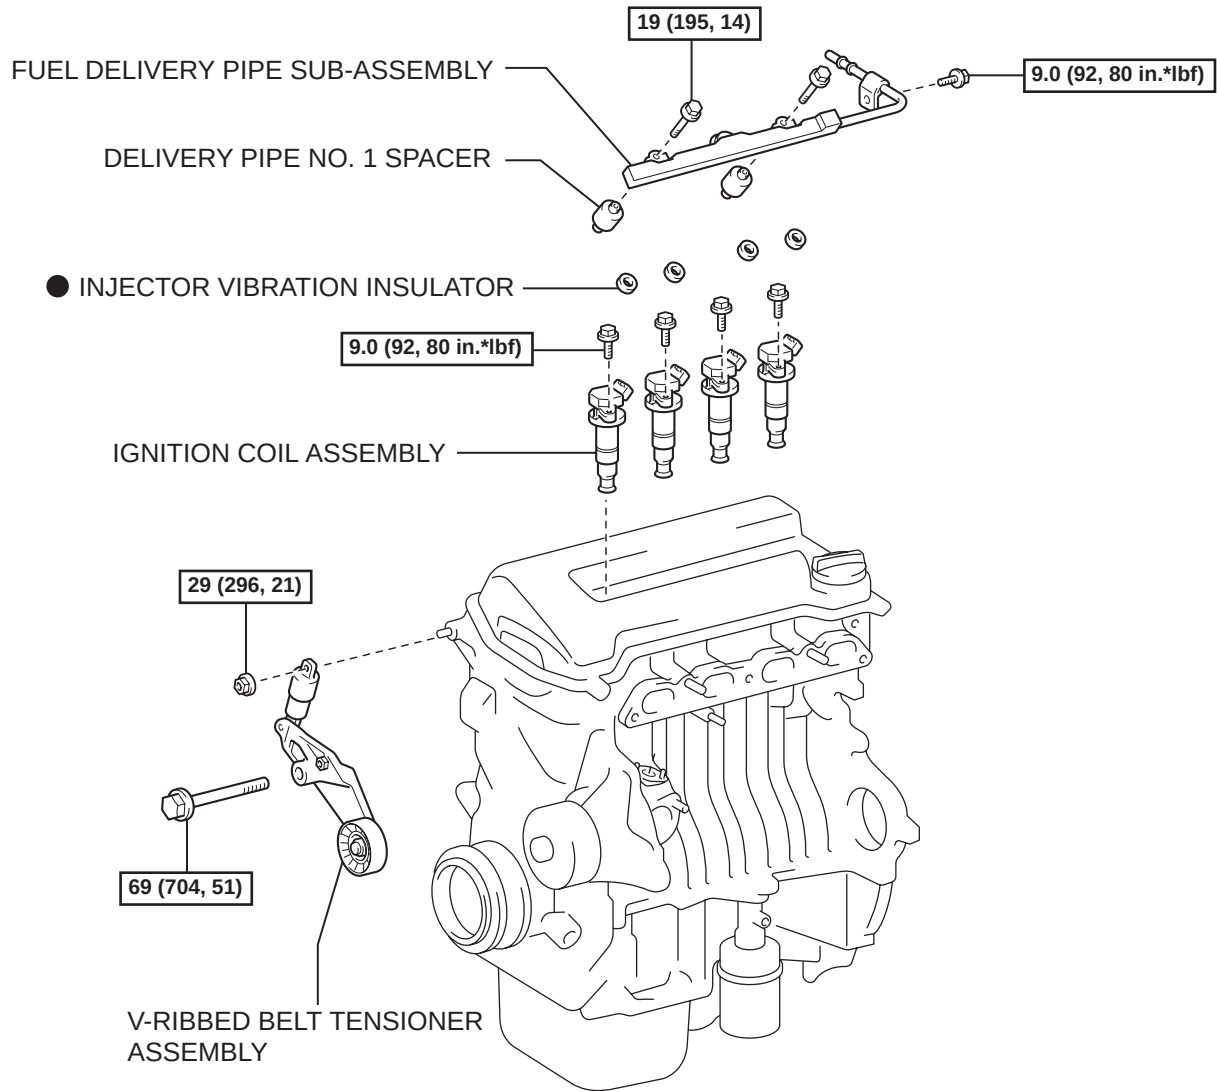

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

EM

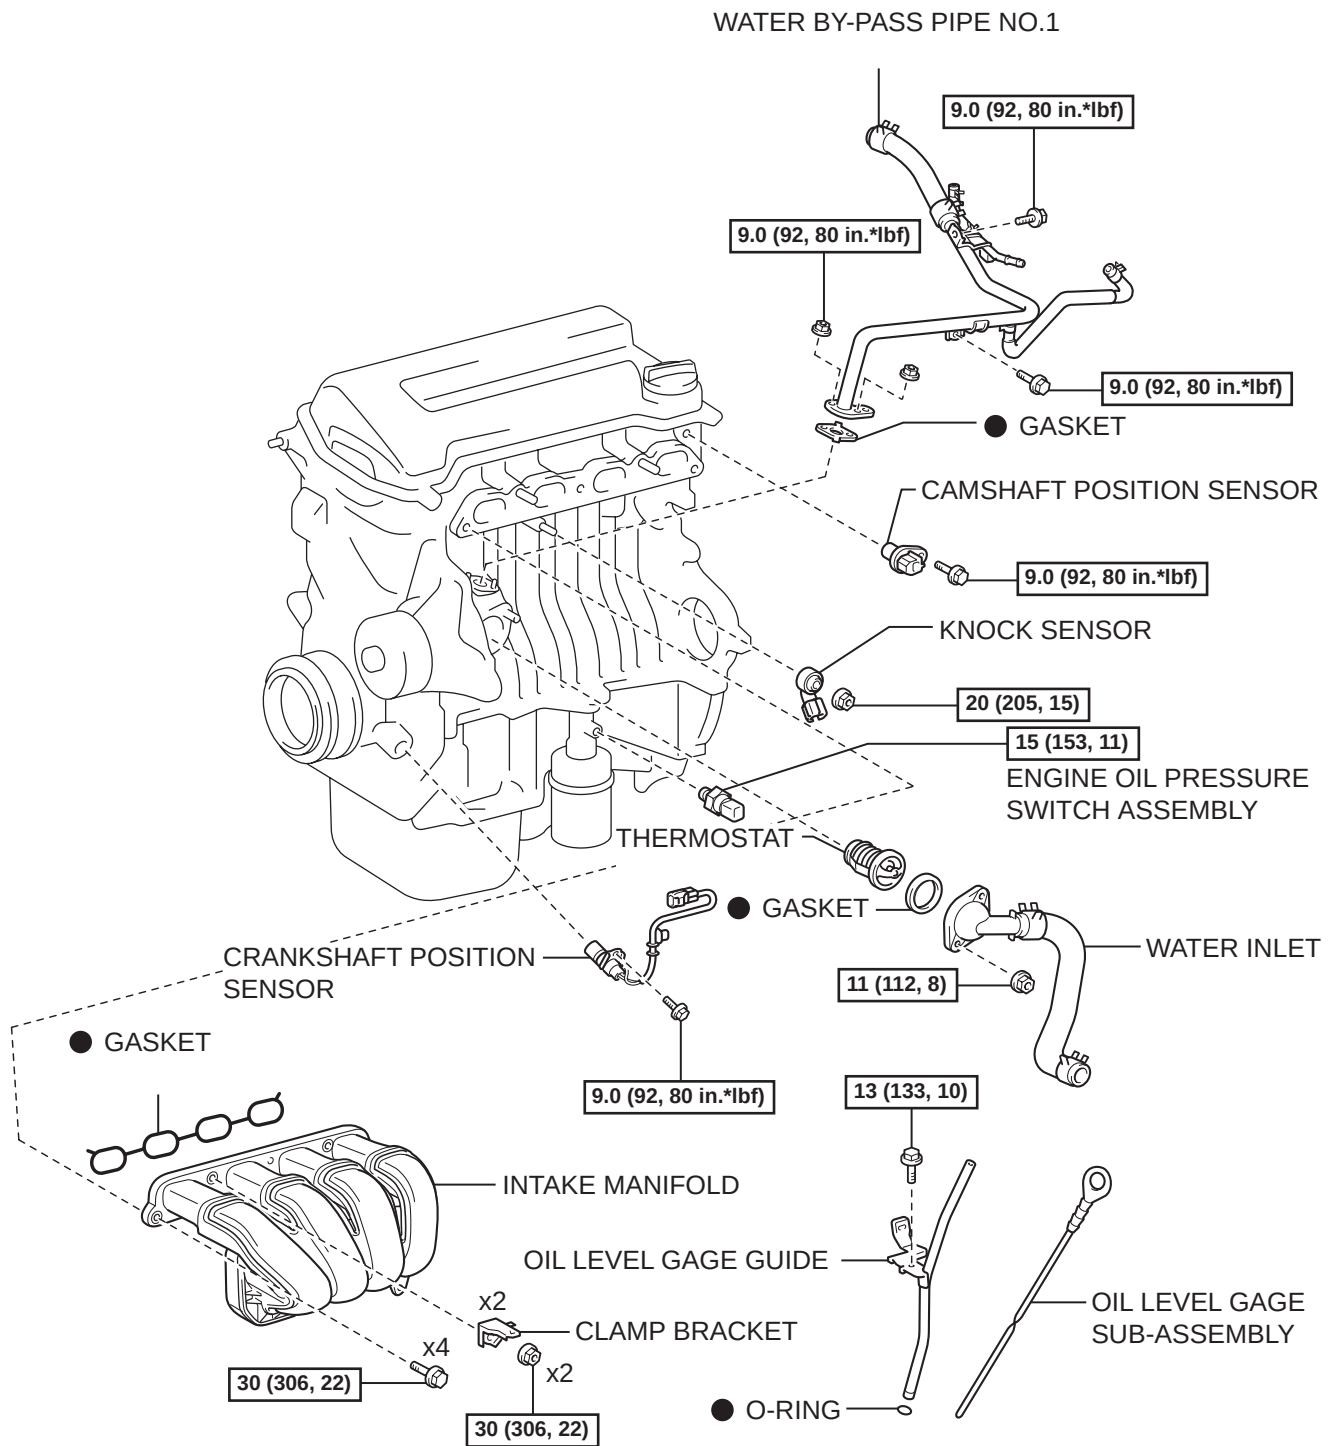

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

EM

cardiagn.com

