


REMOVAL


1. DISCONNECT BATTERY NEGATIVE TERMINAL

2. REMOVE HEATED OXYGEN SENSOR

- Using a clip remover, remove the clip [A].
- Pull off the floor carpet front [B].

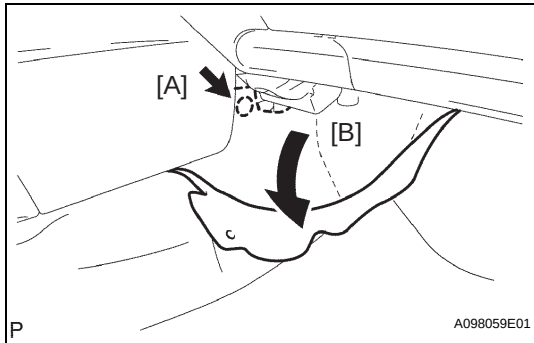


- Disconnect the heated oxygen sensor connector [C].
- Remove the grommet [D], then pull the connector to the outside of the vehicle.

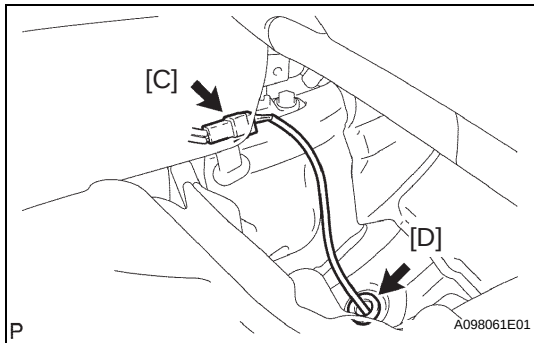

- Using SST, remove the heated oxygen sensor.
SST 09224-00010

3. REMOVE EXHAUST PIPE ASSEMBLY TAIL

- Remove the tail pipe assembly with 2 bolts and 2 springs.

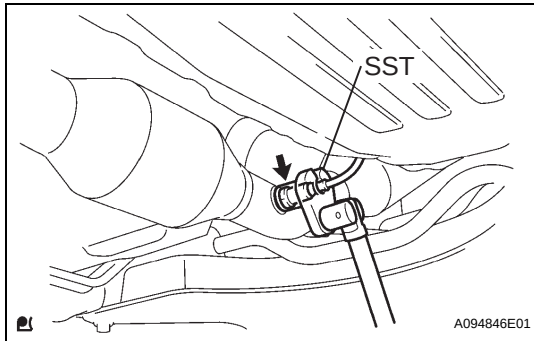

4. REMOVE FLOOR PANEL BRACE FRONT

- Remove the 2 nuts and floor panel brace front.

5. REMOVE EXHAUST PIPE ASSEMBLY FRONT

- Remove the exhaust pipe front.

